

ASSEMBLY INSTRUCTIONS

Description: Accent Bench

Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Left Front Legs	1
P2	Right Front Legs	1
P3	Left Back Legs	1
P4	Right Back Legs	1
P5	Accent Bench	1

Hardware List


Item	Description	QTY
H1	Bolts φ5/16*2-1/8"	8
H2	Lock Washers φ5/16"	8
H3	Flat Washers φ5/16"	8
H4	Allen Wrench φ5/16"	1

DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:


Step 1. Assemble the bench on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. To locate the hardware, please turn the bench upside down, you will find the components beneath the fabric cover that is secured by a Velcro strap underneath the bench. Lift the strap upwards, legs and hardware box could be located beneath the fabric cover.

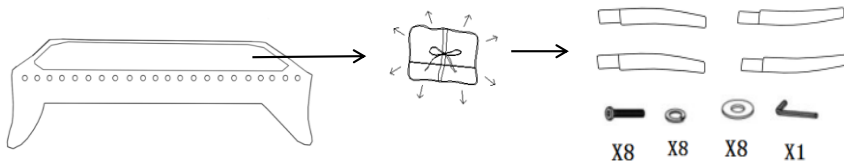

Step 2. Using bolts (H1), lock washers (H2), flat washers (H3), connect legs (P1, P2, P3, P4) to bench (P5). Tighten bolts (H1) with Allen Wrench (H4).

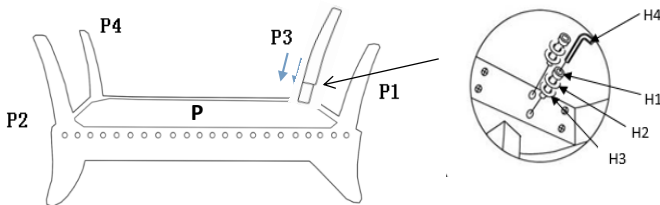

Step 3. Place bench upright on a level surface. Assembly is complete.

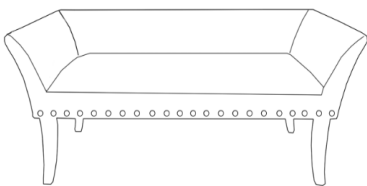

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY,

AND ENSURE STABILITY

Thank you for your purchase