

FARBERWARE[®]

Farberware is a registered trademark of Farberware Licensing Company, LLC
Manufactured and sold pursuant to a license from Farberware Licensing Company,
LLC © 2020 Farberware Licensing Company, LLC. All rights reserved.

(rev. 06/30/21 MD)

FARBERWARE®



FMG13SS

1.3 Cu. Ft. Sensor Microwave Oven **1.3 Cu. Pies. Horno de Microondas** **Micro-ondes de 1.3 pi. cu.**

Instruction Manual
Manual de Instrucciones
Manuel d'utilisation

Visit www.nostalgiaproducts.com for more products.

CONTENTS

SAFETY	2
IMPORTANT SAFEGUARDS	3
ADDITIONAL IMPORTANT SAFEGUARDS	3
INTRODUCTION	5
GROUNDING THE UNIT	6
PARTS & ASSEMBLY	7
PROGRAM SETTINGS	8
HOW TO OPERATE	9
CONTROL PANEL	9
HELPFUL TIPS	13
CLEANING & MAINTENANCE	14
RETURNS & WARRANTY	15

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can cause serious injury to you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hertz

Rated Output: 1100 Watts, Rated Input: 1500 Watts

1.3 Cubic Feet



THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY.

Refer to www.nostalgiaproducts.com/user-manuals/ for the most updated manual.

IMPORTANT SAFEGUARDS


A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.




When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
5. Close supervision is necessary when any appliance is used by or near children.
6. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
7. Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
9. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
10. DO NOT use the appliance for other than its intended use.
11. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
14. NEVER leave unit unattended while in use or when plugged into an outlet.
15. Extreme caution must be used when moving an appliance containing hot food.
16. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

ADDITIONAL IMPORTANT SAFEGUARDS

Operating Safety Precautions

1. Avoid contact with moving parts.
2. Check appliance for presence of foreign objects prior to use.
3. NEVER put any metal objects, bowls or utensils in the microwave oven during cooking.
4. Some products, such as whole eggs and sealed containers/closed glass jars, may explode and should not be heated in this oven. Foods like potatoes, sausages or chestnuts should be peeled or pierced before cooking.
5.  NEVER put anything living into the microwave oven for risk of severe injury or death.

6. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. Do not cover or block any openings on the appliance.
8.  PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY:
 - a. Do not attempt to operate this oven with the door open; open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
 - b. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
 - c. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
 - d. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
9.  To reduce the risk of fire in the oven cavity:
 - a. Do not overcook food. Carefully attend appliance when paper, plastic or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - c. If materials inside the oven ignite, keep oven door closed, turn oven off and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
 - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
 - e. Avoid built-up grease, which is flammable, by cleaning microwave with a damp cloth after use. DO NOT place inside of a dishwasher to clean.
10.  Liquids, such as water, coffee or tea, are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.
11. To reduce the risk of injury to persons:
 - f. Do not overheat the liquid.
 - g. Stir the liquid both before and halfway through heating it.
 - h. Do not use straight-sided containers with narrow necks. Use a wide-mouthed container.
 - i. After heating, allow the container to stand in the microwave oven at least for 20 seconds before removing the container.
 - j. Use extreme care when inserting a spoon or other utensil into the container.
 - k. If the oven light fails, consult an authorized service technician or electrician.
 - l. This appliance must be properly grounded. See Grounding Instructions for information on how to ground this appliance.

Instructions for the Electrical Cord and Plug

1. ELECTRICAL SHOCK HAZARD: Failure to follow these instructions can result in death, fire, or electrical shock.
 - Plug into a grounded 3 prong outlet.
 - DO NOT remove ground prong.
 - DO NOT use an adapter.
 - DO NOT use an extension cord.
2. This unit **MUST** be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This unit is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
3. **WARNING:** Improper use of the grounding plug can result in a risk of electric shock. **If the plug does not fit fully into the outlet, contact a qualified electrician. Do not attempt to modify the plug in any way.**
4. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
5. The manufacturer does not recommend using this machine in countries that do not support 120V AC even if a voltage adapter, transformer, or converter is in use.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the FARBERWARE 1.3 CU. FT. SENSOR COOKING MICROWAVE OVEN!

This smart humidity sensor microwave oven has 8 sensor menu buttons, 30 seconds or 1-3 minutes of express cooking, time / weight defrost and more for an easy and convenient cooking experience!

Features include:

- Powerful 1100 watt oven with 1.3 cu. ft. capacity
- 8 one-touch sensor cooking menus
- Time or weight defrost options
- LED interior oven lamp
- 10 adjustable microwave power levels
- 1-3 minutes express cooking
- 30 second express cooking
- Memory function
- Child safety lock

GROUNDING THE UNIT

This appliance must be grounded. This microwave oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded in accordance with the National Electrical Code and local codes and ordinances. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current.



WARNING: Improper use of the grounding plug can result in a risk of electric shock.

ELECTRICAL REQUIREMENTS

The electrical requirements are a 120 volt 60 Hz, AC only, 15 amp. or more protected electrical supply. It is recommended that a separate circuit serving only this appliance be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. Should you only have a 2-prong outlet, have a qualified electrician install a correct wall receptacle. A 3-prong adapter may be purchased and used temporarily if local codes allow. Follow package directions. A short power-supply cord is provided to reduce risk of becoming entangled in or tripping over a longer cord.

EXTENSION CORD

If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the microwave oven. The marked rating of the extension cord should be AC 115-120 volt, 15 amp. or more. Be careful not to drape the cord over the countertop or table where it can be pulled on by children or tripped over accidentally.

NOTE: If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person. Nostalgia Products™ cannot accept any liability for damage to the oven or personal injury resulting from failure to observe the correct electrical connection procedures.

RADIO OR TV INTERFERENCE

Should there be any interference caused by the microwave oven to your radio or TV, check that the microwave oven is on a different electrical circuit, relocate the radio or TV as far away from the oven as feasible or check position and signal of receiving antenna.


PARTS & ASSEMBLY

Your MICROWAVE OVEN is fully assembled. Before using, remove all packing materials from inside the oven. Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surfaces, broken or loose door hinges and latches and dents inside the oven or on the door. If there is any damage, DO NOT operate the oven. Return damaged items to the store where it was purchased.

PARTS



CONTROL PANEL & PROGRAM SETTINGS

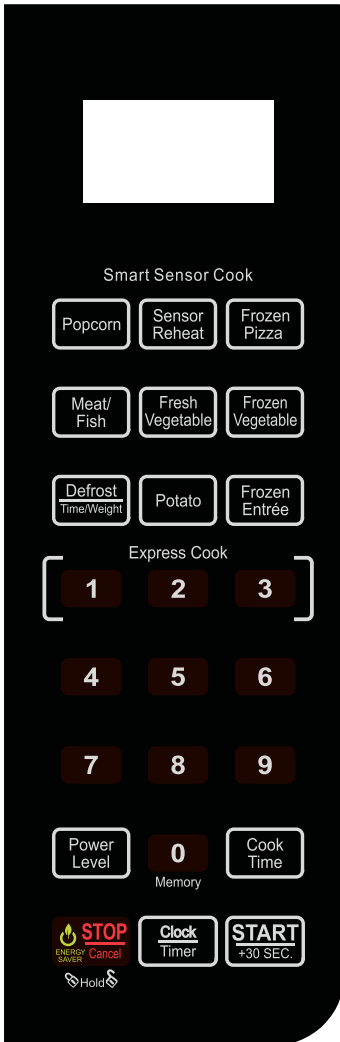

CONTROL PANEL

- Auto Menu: Popcorn
- Defrost by time/weight
- Sensor Menus: Potato, Meat/Fish, Frozen Pizza, Fresh/Frozen Vegetable, Sensor Reheat, Frozen Entrée
- Kitchen Timer/Clock
- Start/+30 Seconds
- Memory
- Lock/unlock
- Stop/cancel/ECO mode


HOW TO OPERATE

CHOOSING A LOCATION

Select a level surface that provides enough open space for intake/outlet vents. A minimum of 3 inches (7.5 cm) is required between the oven and any adjacent walls. One side must be open.

1. Leave a minimum clearance of 12 inches (30cm) above the oven.
2. Do not remove the legs from the bottom of the oven.
3. Blocking the intake and/or outlet openings can damage the oven.
4. Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label. **WARNING** – Do not install oven over a range cook-top or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

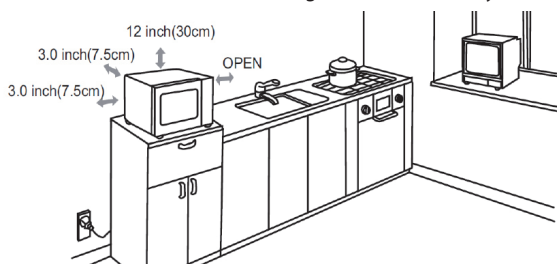

AFTER PLUGGING IN

As soon as the microwave is plugged into the outlet, the screen will display "00:00" and the buzzer will ring once.

SETTING THE CLOCK

- While the LED Display reads "00:00", press "CLOCK/TIMER" and hold 3 seconds to set clock. This unit has a 12-hour clock.
- When the number blinks, press the number pads to enter clock time. (01:00-12:59)
- Touch "CLOCK" or "START/+30Sec." to finish the clock setting.
- The clock will display current time and ":" will blink.

NOTE: If the clock is not set, the current time will not display when powered.

CONTROL PANEL

KITCHEN TIMER

1. Touch "CLOCK/TIMER" once and the screen will display "00:00".
2. Press the number pads to enter time.(0:01-99:99).
3. Touch "START/+30 SEC." to confirm setting.
4. When the timer is done, the buzzer will ring 5 times and the display will show the current time.

NOTE: Kitchen timer is different from the clock. Kitchen timer is a timer only.

MICROWAVE COOKING

1. In standby mode, press "TIME COOK" button once.
2. Use number buttons to set cooking time. The longest time is 99 minutes and 99 seconds.
3. Press "POWER LEVEL" button once, PL10 will display.
4. Press number buttons to insert power level.
5. Touch "START/+30 SEC." to start cooking.

EXPRESS COOKING

1. In standby mode, touch "START/+30 SEC." to cook with 100% power for 30 seconds. Each touch will add 30 seconds.
2. During cooking, if you press "START/+30 SEC." it will add an additional 30 seconds to cooking timer. The longest cooking time is 99 seconds and 99 minutes.
3. Touch 1-3 number pads to cook with 100% power for 1-3 minutes.

NOTE: This function will not work under DEFROST and AUTO MENU cooking.

DEFROST BY TIME

1. Touch "DEFROST TIME/WEIGHT" button once.
2. Use number buttons to set defrosting time. The longest time is 99 minutes and 99 seconds.
3. Touch "START/+30 SEC." to start defrosting.

DEFROST BY WEIGHT

1. Touch "DEFROST TIME/WEIGHT" twice.
2. Use number buttons to set food weight (0.3-6.3 oz.).
3. Touch "START/+30 SEC." to start defrosting.

NOTE: When the defrosting time passes 2/3, the oven will beep as a reminder to turn food over.

MULTI-STAGE COOKING

You can program up to two separate cooking sequences for each cooking program.

NOTE: AUTO MENU and EXPRESS COOKING cannot be set as one of the multi-stage.

Example: if you want to cook food for 5 minutes under PL8 power, then cook in PL5 power for 7 minutes you would follow these steps:

1. In standby mode, press "TIME COOK" button once, 00:00 will display.
2. Press "5" to insert 5 minutes.
3. Press "POWER LEVEL" once, PL10 will display.
4. Press "8" to select PL8 power level.
5. Press "TIME COOK" again, press "7" to insert 7 minutes.
6. Press "5" to select PL8 power level. Touch "START/+30 SEC." to start cooking

AUTO MENU

POPCORN

1. Touch "POPCORN" to choose popcorn menu.
2. Touch "POPCORN" repeatedly to choose the weight (1.75, 3 or 3.5 oz.).
3. Touch "START/+30 SEC." to start cooking.

SENSOR MENUS

1. In standby mode, put the food in the oven, press the menu key.
Sensor menus includes "FROZEN PIZZA", "MEAT", "FISH", "FROZEN ENTREE", "SENSOR REHEAT", "FROZEN VEGETABLE", "FRESH VEGETABLE" and "POTATO".
2. Press "START/+30SEC" to start the sensor cooking function and no need to set cooking time or select portions. When the microwave oven is detecting the moisture within the cavity, the screen will display "----". Once finished detection, the oven will automatically set cooking program and display the remaining cooking time.

Menu	Weight	Initial Temp.	Additional Instructions
Sensor Reheat	8~12 oz	5°C	When sensor time finishes, cooking time counts down. Now you can mix it and then continue reheating.
Frozen Pizza	6~12 oz	18°C	If the weight is over 12 oz, please set additional cooking time manually.
SC-1 Fish	4~16 oz	5	Arrange in single layer. Cover with lid or vented plastic wrap. Cover the film before cooking and leave a space near the edge of the container in order to let the steam out. When cooking time counts down, press STOP/CANCEL to pause and open the oven door to mix and then continue to cook.
SC-2 Meat	8~24 oz	5	Break apart in glass bowl or colander. Cover with lid or vented plastic wrap. Juices should be clear when done. Drain. When cooking time counts down, press STOP/CANCEL to pause and open the oven door to mix and then continue to cook.
Fresh Vegetable	4~16 oz	Room Temp.	All pieces should be the same size. Wash thoroughly, add 15 ml water per 125g vegetables, and cover with a lid or vented plastic wrap. When cooking time counts down, press STOP/CANCEL to pause and open the oven door to mix and then continue to cook.
Frozen Vegetable	6~16 oz	18°C	Wash thoroughly, add 15ml water per 125g vegetables, and cover with a lid or vented plastic wrap. When cooking time counts down, press STOP/CANCEL to pause and open the oven door to mix.
Potato	1~4 potatoes (6~8 oz each)	Room Temp.	Pierce each potato with a fork 6 times around its surface. Place potatoes around the edge of a paper-towel-lined turntable. Do not cover. If additional time is needed, continue to cook manually. Please let stand for 5 minutes in the oven after finishing to avoid burning.
Frozen Entrée	8~32 oz	18°C	Be careful when removing the film cover after cooking. Remove facing away from you to avoid steam burns. If additional time is needed, continue to cook manually. Cover the film before cooking and leave a spacing near the edge of the container in order to let the steam out. When cooking time counts down, press STOP/CANCEL to pause and open the oven door to mix.

NOTE:

When using sensor cook menus to reheat or cook foods, you should do this in order to get the best results:

- a. The room temperature should not be over 35 °C.
- b. The weight of food should be over 4oz(110g).
- c. Keep the cavity, glass tray and cooking utensils dry before putting the food in the oven.
- d. If the reheated food was covered by a lid, it must have a vent hole to release the steam. Sealed utensil is forbidden.

During sensor cooking process, the following points must be done:

- a. Keep the door closed if the remaining cooking time does not show on the screen.
- b. When the remaining cooking time displays and starts count down, you can open the door to mix the food, turn over or replace the food.
- c. Please let the food cool for a while after cooking has completed.
- d. During sensor cooking progress, if the time has not counted down, do not open the oven door or press "STOP/CANCEL" button, otherwise the sensor will make mistakes.

MEMORY FUNCTION**To store the program:**

1. In standby mode, press "0/MEMORY" button once, twice or 3 times.
The display shows code "1", "2" or "3".
2. Input the microwave cooking program following steps in **MICROWAVE COOKING** on page 10.
3. Press "START/+30 SEC." button to confirm. Code "1", "2" or "3" will display on the screen.

To start the program:

You can start the program immediately after step 3. Press "START/+30 Sec." when code "1", "2" or "3" displays. Cooking starts.

Or you can start the program in standby mode:

1. In standby mode, press "0/MEMORY" button repeatedly to select program code "1", "2" or "3".
2. Press "START/+30 SEC." button to start cooking.

CHILD SAFETY LOCK

The safety lock prevents unsupervised operation by children.

To set: In standby mode, press and hold "STOP/CANCEL" button for 3 seconds, the oven will auto enter child lock mode and the lock indicator light will turn on.

To cancel: In child lock mode, press and hold "STOP/CANCEL" button for 3 seconds to cancel the program.

INQUIRING FUNCTION

In the microwave cooking state, press "POWER" to inquire microwave power level, and the current microwave power will be displayed. After five seconds, the oven will turn back to the previous state. In multi-stage state, the inquiring way can be done the same way as above.

In the microwave cooking state, press "CLOCK" to inquire the current time.

COOKING END REMINDING FUNCTION

When cooking is over, the buzzer will sound 5 "beep" to alert user the cooking is finished.

HELPFUL TIPS

CAROUSEL ROTATION

If the Glass Carousel inside of your microwave oven makes noise during cooking or does not seem to be rotating properly, stop the cooking process immediately by pressing the STOP/CLEAR button and make sure that:

- A) The Glass Carousel is properly aligned on the Carousel Wheel and Hub.
- B) There is no excess food or debris lodged underneath the Glass Carousel.

SPLATTERING

Some foods when cooked in the microwave oven may splatter inside of the microwave oven causing messes. It is recommended that you use a paper towel, wax paper or microwave safe lid to loosely cover open dishes that may splatter. It is not recommended that you use plastic wrap to cover foods while cooking in the microwave oven.

FOODS

- **Eggs:** Cooking eggs with yolk intact can cause eggs to explode. It's best to puncture yolks before cooking. Never cook eggs inside of shell, or reheat whole, hardboiled eggs.
- **Nuts:** Do not cook dry nuts or seeds inside of the shell.
- **Potatoes, apples, squash, hot dogs and sausages:** Puncture the skin to allow steam to escape, or these foods could explode during cooking
- **Popcorn:** Only microwave popcorn that is especially packaged for microwave oven cooking. Follow the directions on the packaging exactly. Never exceed the maximum cooking time on packaging.
- **Baby Food:** Never heat baby food in its container. Transfer the baby food to a microwave safe container before cooking. Check temperature before serving.
- **General:** NEVER use the microwave oven for deep fat frying or for drying wood, gourds, herbs or wet paper.

MICROWAVE SAFE COOKWARE

The following cookware is safe for microwave oven cooking:

Microwave browning dish — Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.

Microwaveable plastic wrap — Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly on the food.

Paper towels and napkins — Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.

Glass and glass-ceramic bowls and dishes — Use for heating or cooking.

Paper plates and cups — Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and could ignite.

Wax paper — Use as a cover to prevent spattering.

Thermometers — Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

Limited Use:

Aluminum foil — Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful. You should keep distance of 1 inch (2.54cm) between aluminum foil and cavity.

Ceramic, porcelain, and stoneware— Use these if they are labeled "Microwave Safe". If they are not labeled, test them to make sure they can be used safely.

Plastic — Use only if labeled "Microwave Safe". Other plastics can melt.

NEVER use the following in your microwave oven

Glass jars and bottles — Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.

Paper bags — These are a fire hazard, except for popcorn bags that are designed for microwave use.

Styrofoam plates and cups — These can melt and leave an unhealthy residue on food.

Plastic storage and food containers — Containers such as margarine tubs can melt in the microwave.

Metal utensils — These can damage your oven. Remove all metal before cooking.

Note:

Should you wish to check if a dish is safe for microwaving, place the empty dish in the oven and microwave on HIGH for 30 seconds. A dish which becomes very hot should not be used.

CLEANING & MAINTENANCE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. If the light bulb burns out, please contact customer service to have it replaced.
11. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
12. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

1.3 Cu. Ft. Sensor Microwave / FMG13SS

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Englewood Marketing LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: 844-918-0509
Email: CustomerService@emllc-USA.com

One-Year Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only expressed warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is valid for the original retail purchaser or gift recipient from the date of initial retail purchase and is not transferable.

Keep your original sales receipt as proof of purchase is required to make a warranty claim.

IMPORTANT: This warranty does not cover damages resulting from use not in conformity with the printed directions, accident, misuse or abuse, alteration, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.) This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

Englewood Marketing LLC excludes all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim or if service is required, please call our CUSTOMER SERVICE NUMBER.

For faster service, please have the model, type, and series numbers ready for the operator to assist you.

Customer Service Number
Englewood Marketing LLC
In the US 844-918-0509
Email: CustomerService@emllc-USA.com

This warranty does not apply to re-manufactured merchandise.

Please read the operating instructions carefully. Failure to comply with the operating instructions will void this warranty.