
 

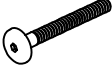


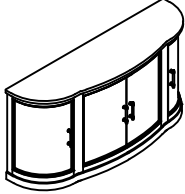




ASSEMBLY INSTRUCTIONS


SERVER

A Server  1 pc	B Front Leg (Under the Server)  3 pcs	C Rear Leg (Under the Server)  2 pcs	D Bolt 5/16 x 2-1/4"  10 pcs
E Lock Washer 5/16" x 12mm  10 pcs	F Flat Washer 5/16" x 19mm  10 pcs	G Allen Wrench 4mm  1 pc	H Anti-Tip Kit  1 set

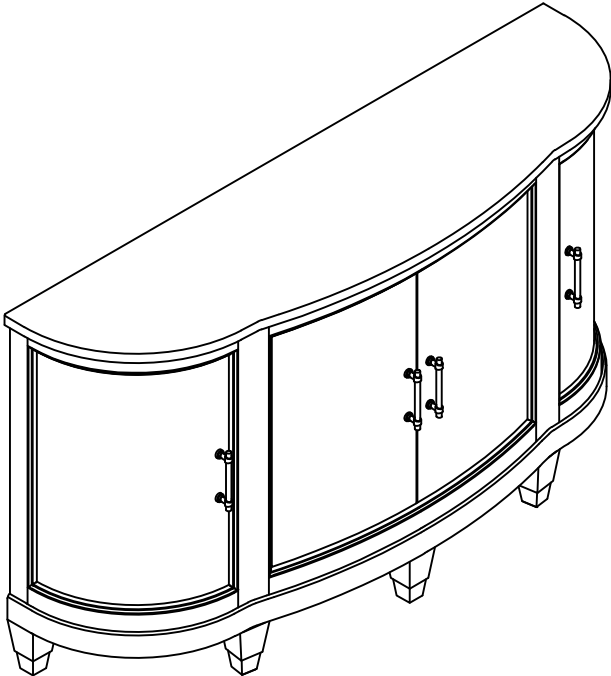


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Place the Server (A) upside down on the ground. Attach the Front & Rear Leg (B & C) using Bolt (D), Lock Washer (E) and Flat Washer (F) with Allen Wrench (G).

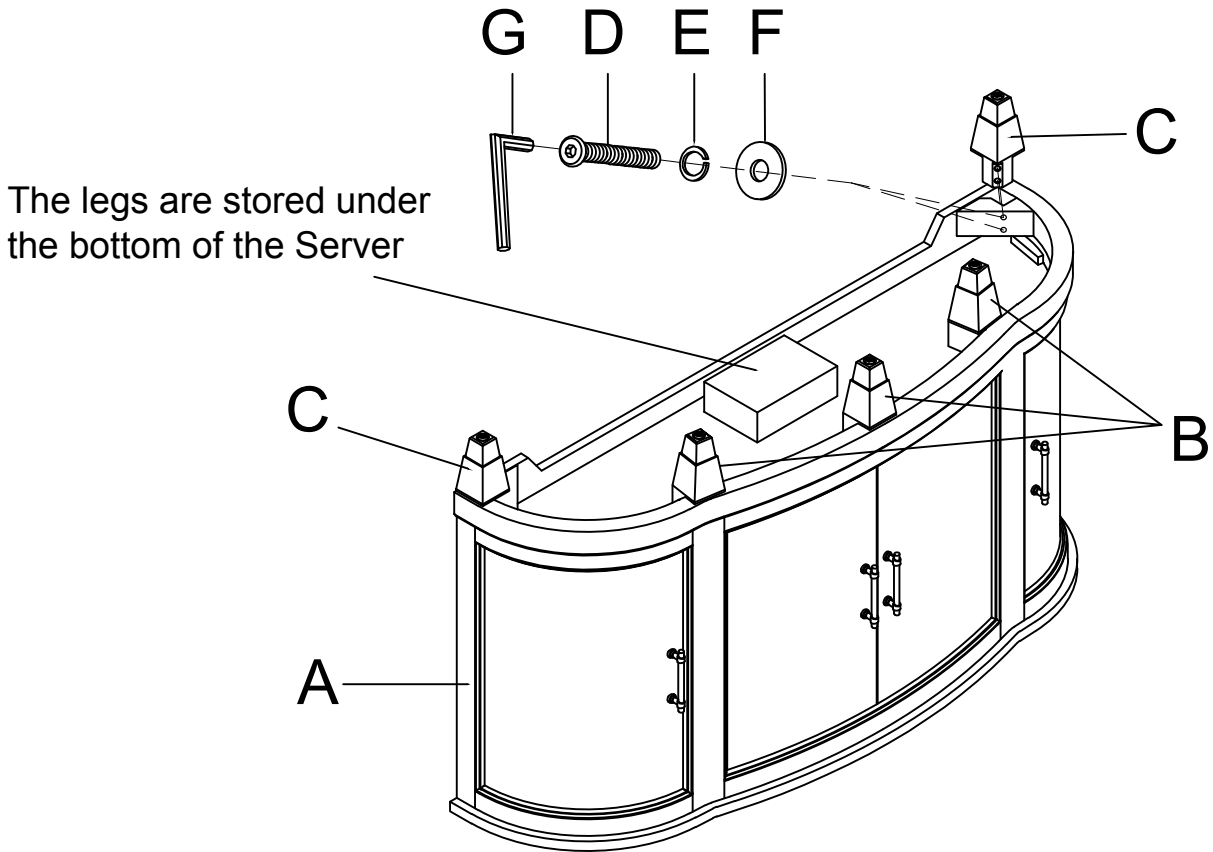

2**PARTS IDENTIFICATION**


#1 SERVER 1 PC

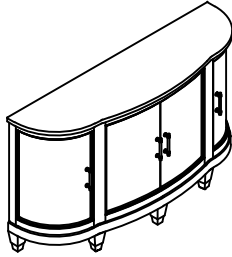**HARDWARE IDENTIFICATION**

#A		STRAP	1 PC
#B		BRACKET	2 PCS
#C		3/4" SCREW	1 PC
#D		1-1/2" SCREW	1 PC

This Anti-Tip Kit (H) must be attached to a wall stud using the 1-1/2" Screw (#D) enclosed.

1. Attach a Bracket (#B) securely to the back top rail of the Server (#1) using the 3/4" Screw (#C) provided, through the smaller hole.
2. Locate the other Bracket (#B) on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 1-1/2" Screw (#D) provided through the smaller hole.
3. Place the furniture into position so both mounting Bracket (#B) are vertically in line.
4. Lace the end of the restraint Strap (#A) through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Confirm that the Strap (#A) is securely laced and locked.

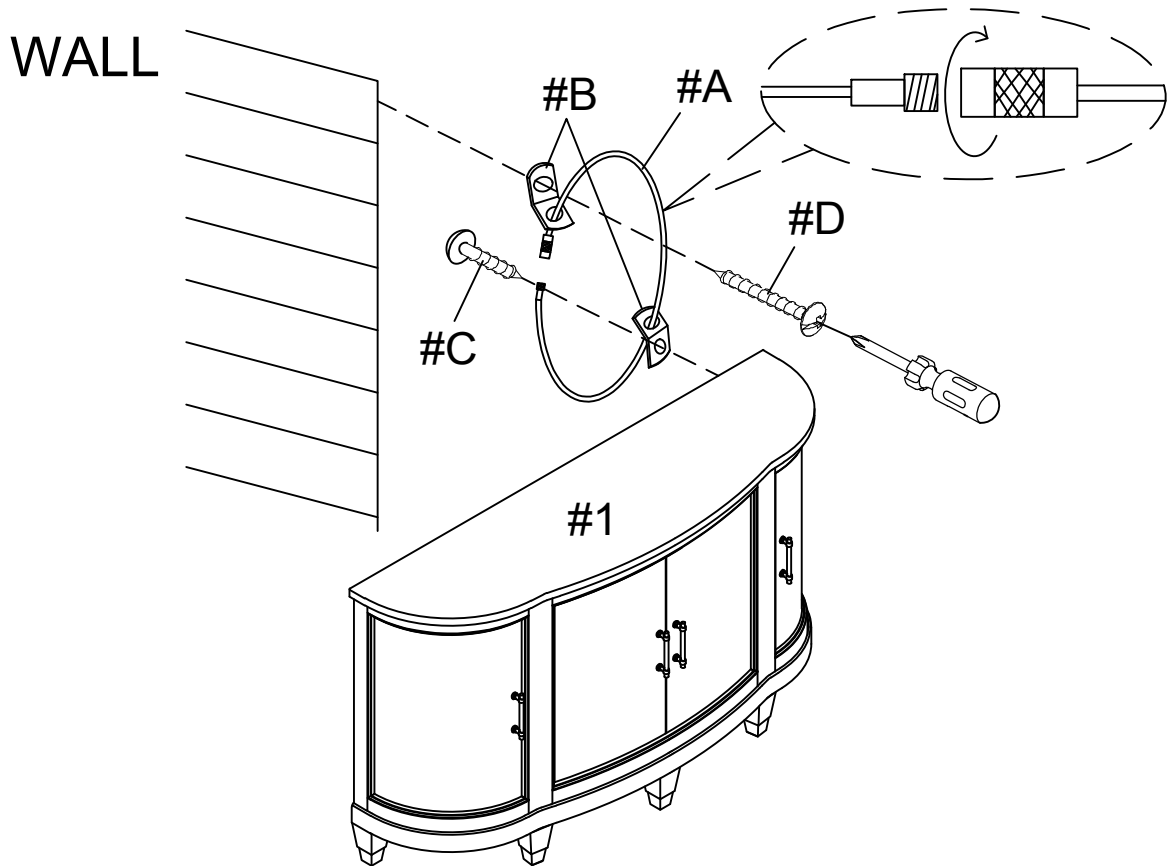**Cleaning & Care**

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.