 


# Assembly Instructions

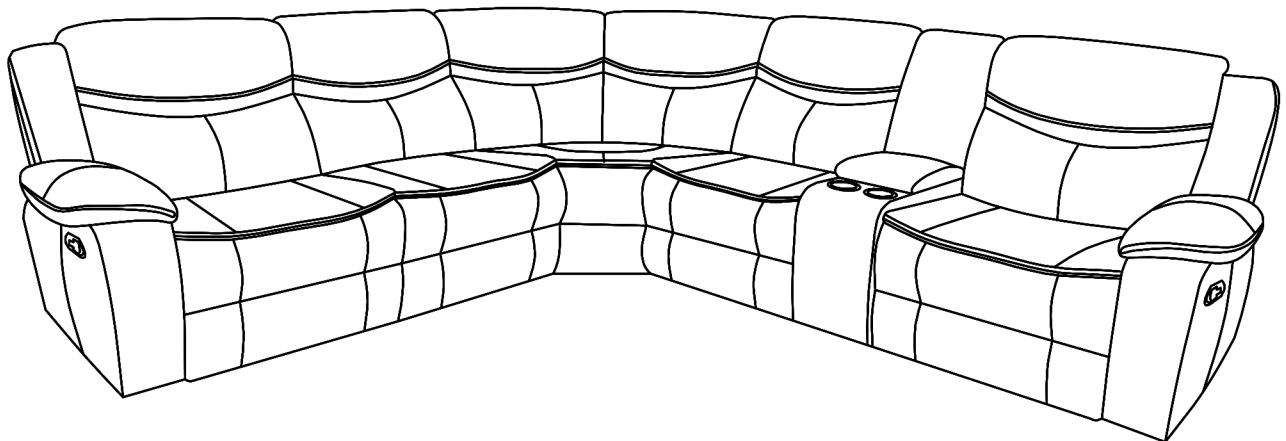

## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY



DIFFICULT

No Tools Required For Assembly

 


2 PERSONS RECOMMENDED


# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

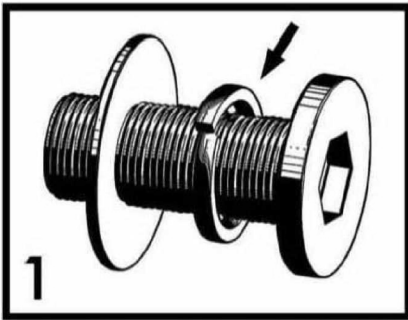

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

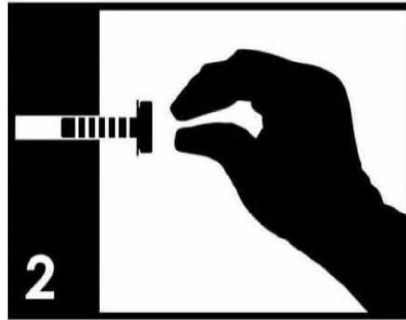

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

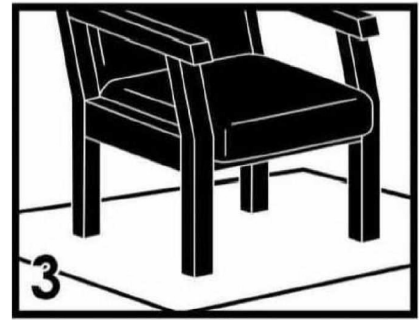

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

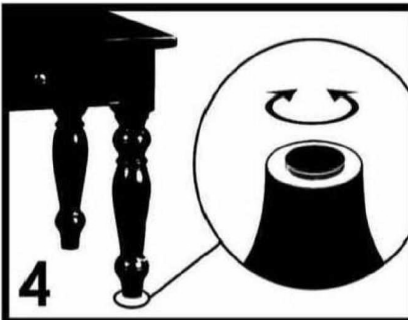

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

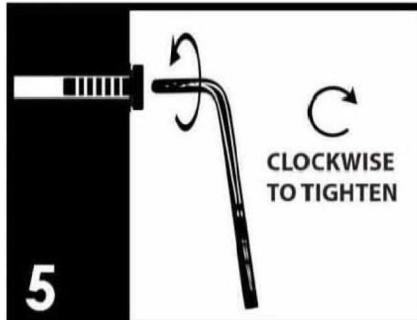

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

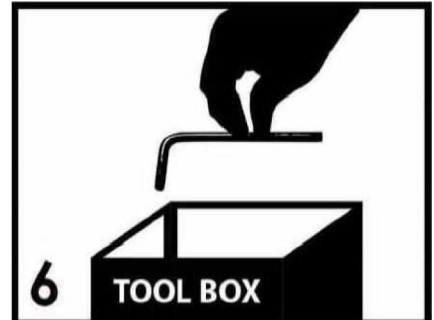


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

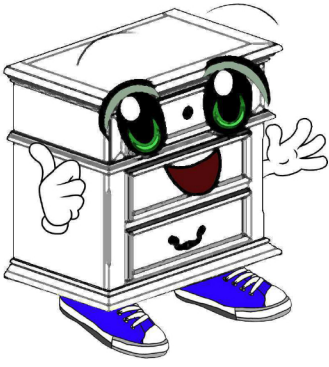 


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

## Parts List



 
#1 x 1pc  
Left Loveseat




#3 x 2pcs  
Back Cushion



 
#5 x 2pcs  
Corner Cushion



#7 x 1pc  
Right Cushion

 


#9 x 1pc  
Right Loveseat

 

#2 x 1pc  
Left Cushion


 
#4 x 1pc  
Left Side Cushion



#6 x 1pc  
Corner



 
#8 x 1pc  
Console Coughion




#10 x 1pc  
Right Side Cushion



Slide left cushion (#2) and back cushion (#3) to the sliders on the left loveseat (#1) until you hear a click. Once you hear a click, the cushions are secured.

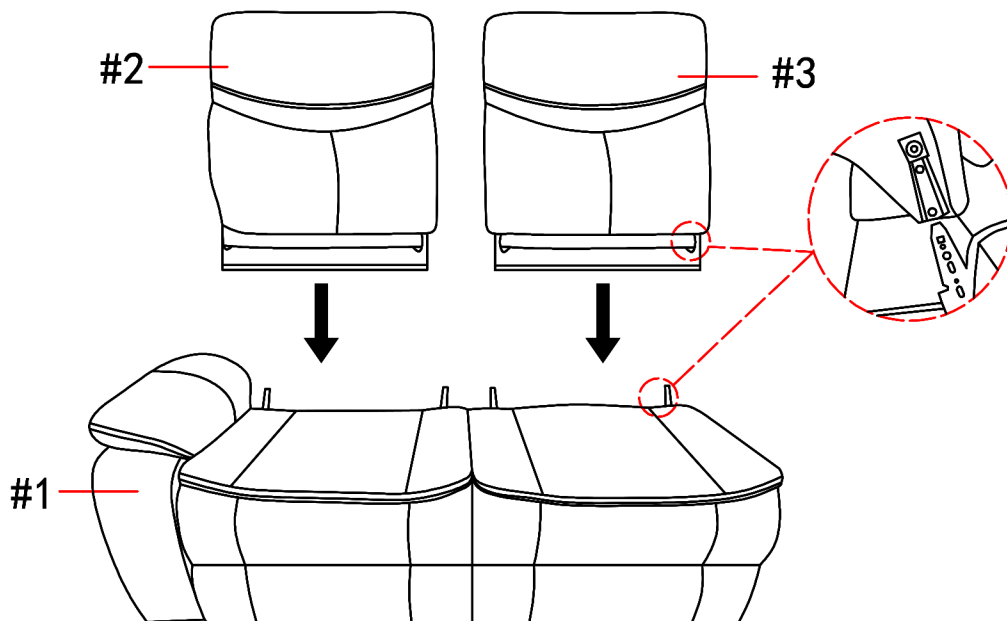

 
Slide left side cushion (#4) to the left cushion (#2) to secure the left side cushion (#4).

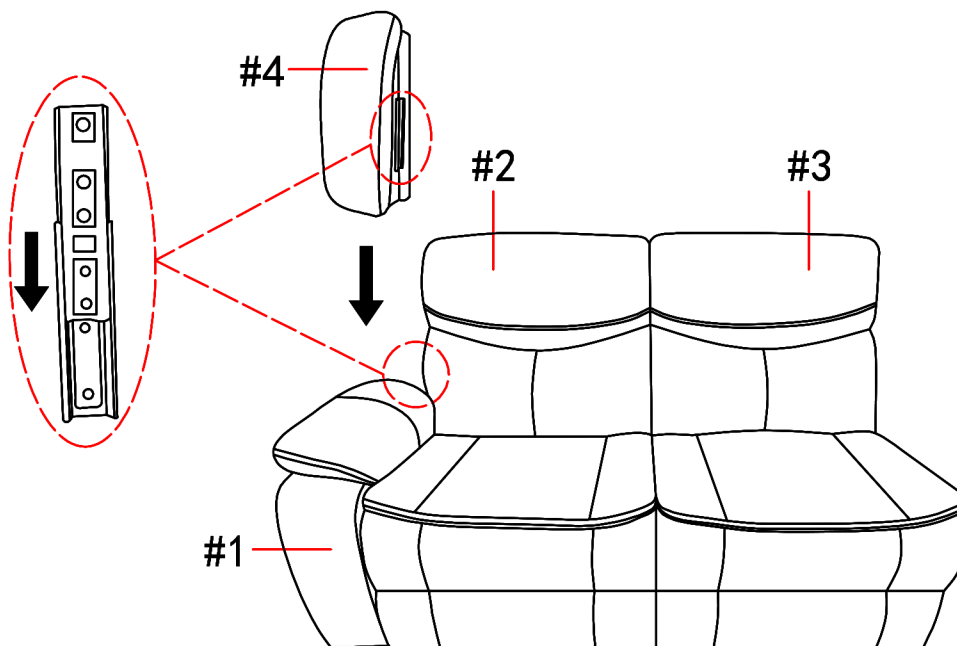






### Left Loveseat Completed

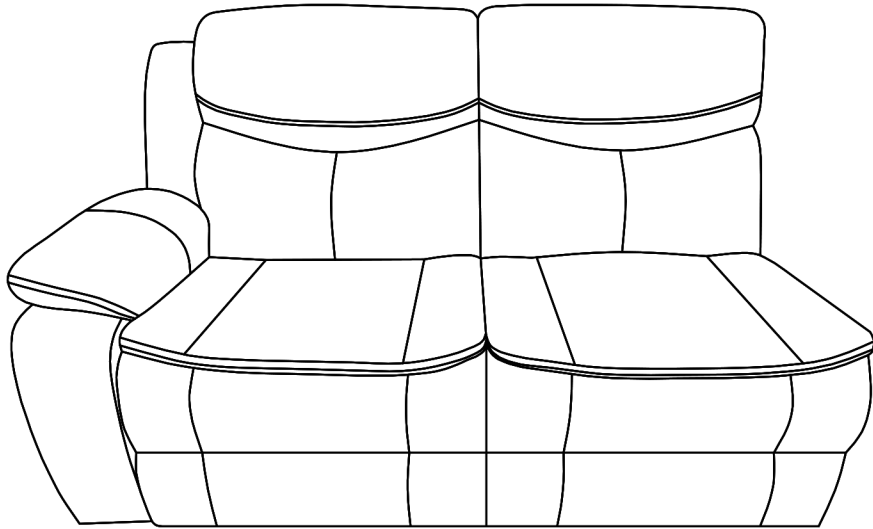 


 Pull the lever on the loveseat to elevate the recliner.

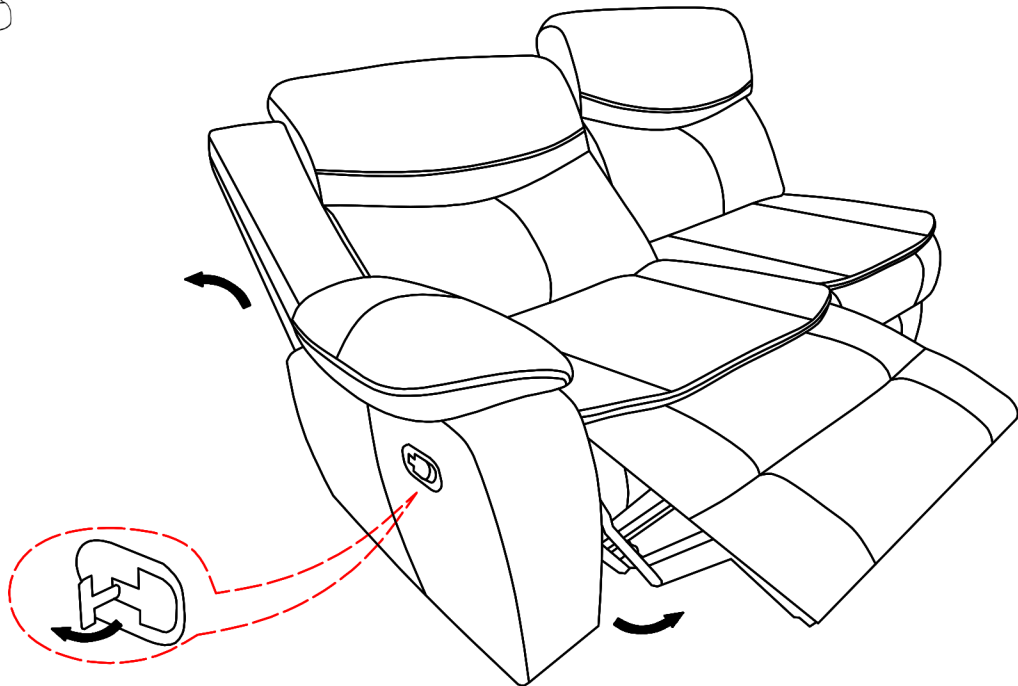




 Attach corner cushions (#5) to the corner (#6) by sliding the cushions (#5) to the slider until the sliders' click.

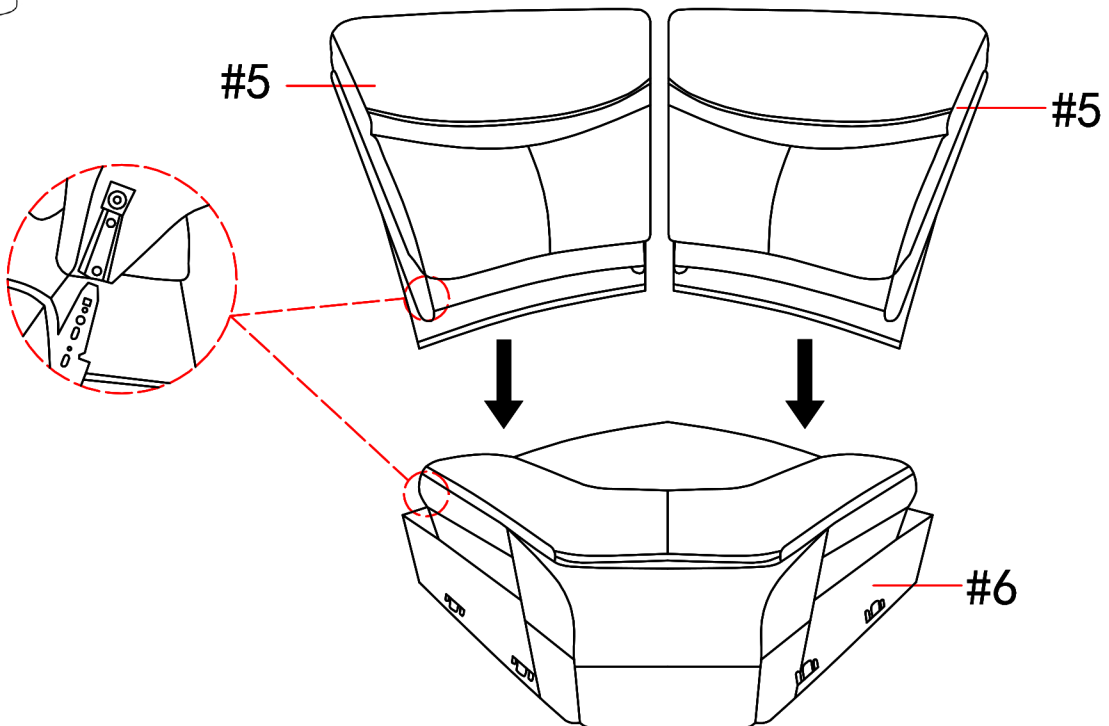


Corner Seat Completed

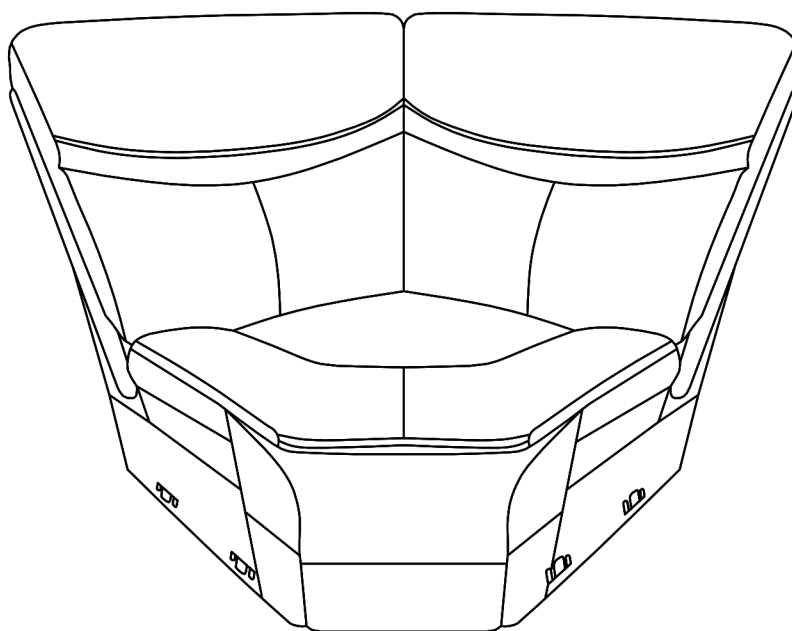 




 Attach cushions (#3,7,8) to the right loveseat (#9) by sliding the cushions (#3,7,8) to the sliders until you hear a click.

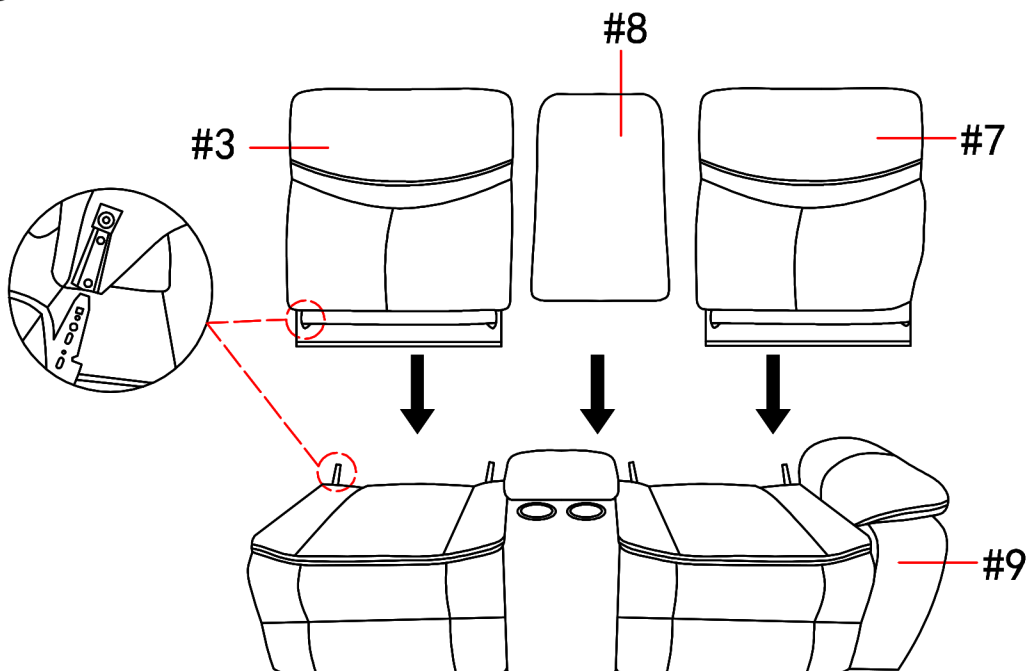


 Slide right side cushion (#10) to the slider on the right cushion (#7).

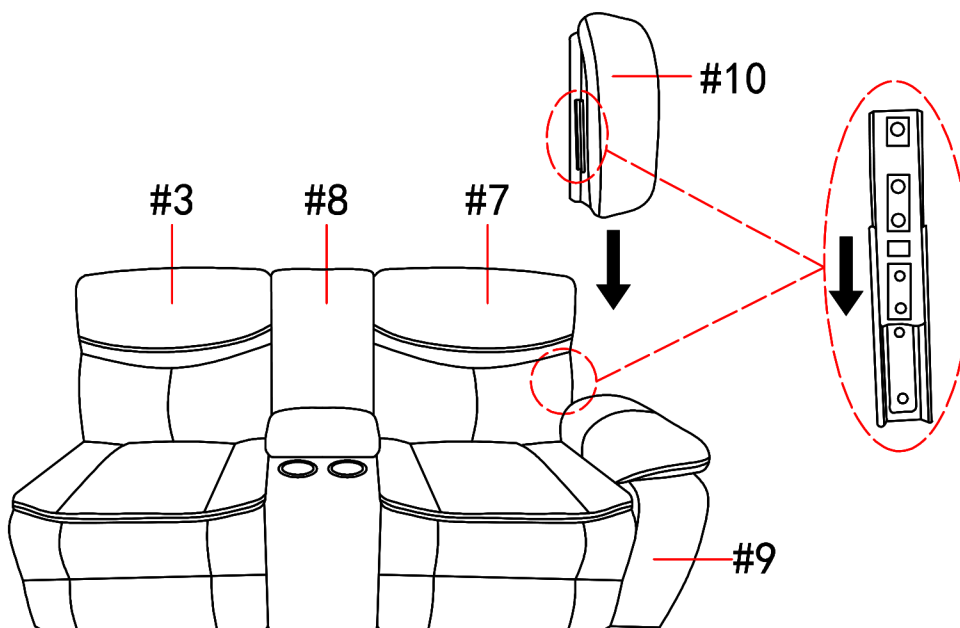




## Right Loveseat Completed

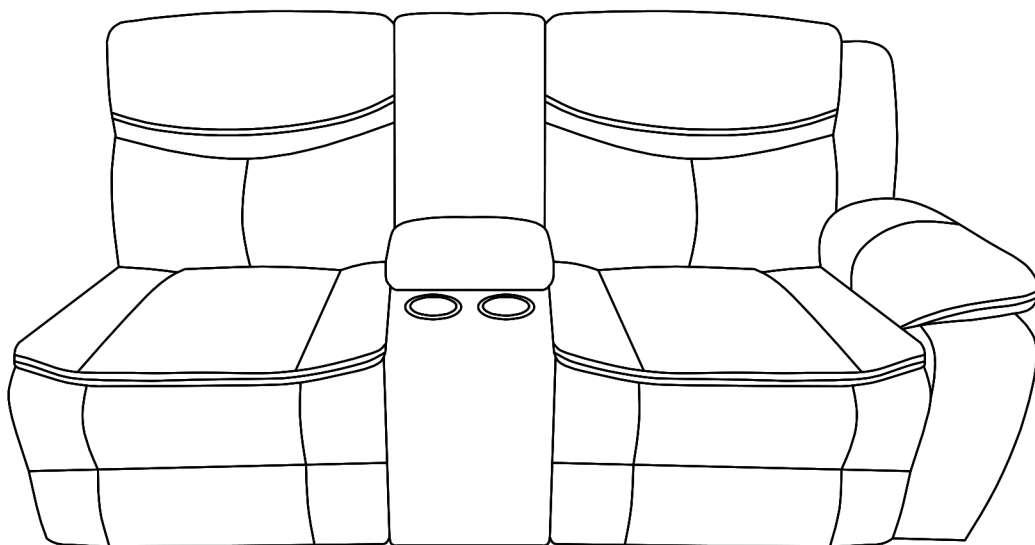 


## Pull the lever to elevate the recliner.

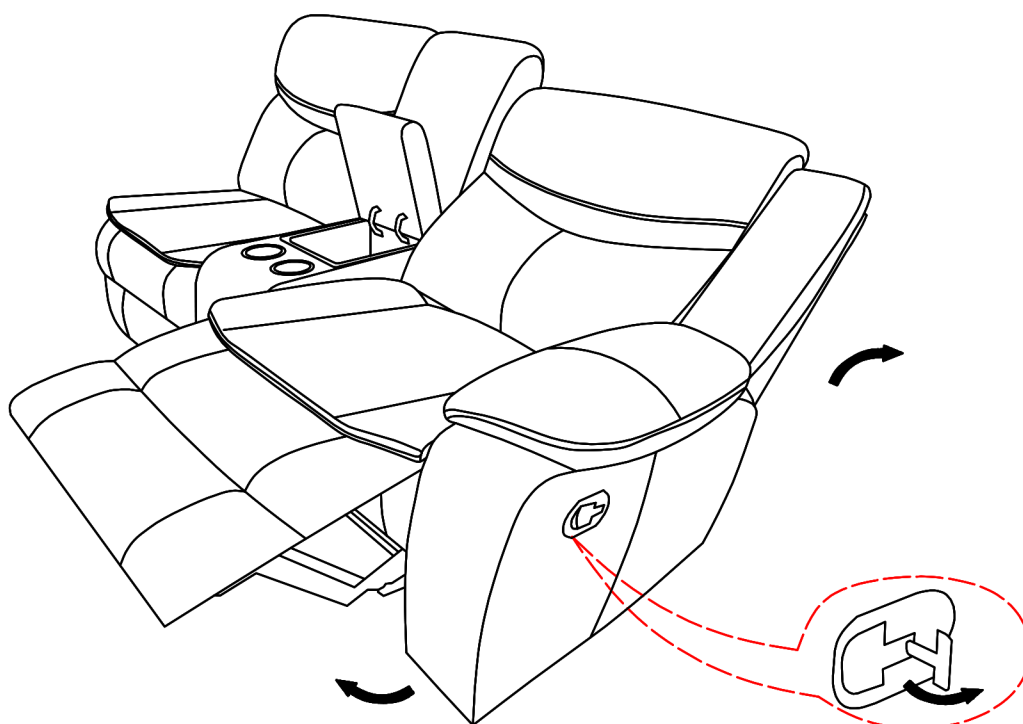 




 Attach left loveseat to corner seat by hooking onto each other.

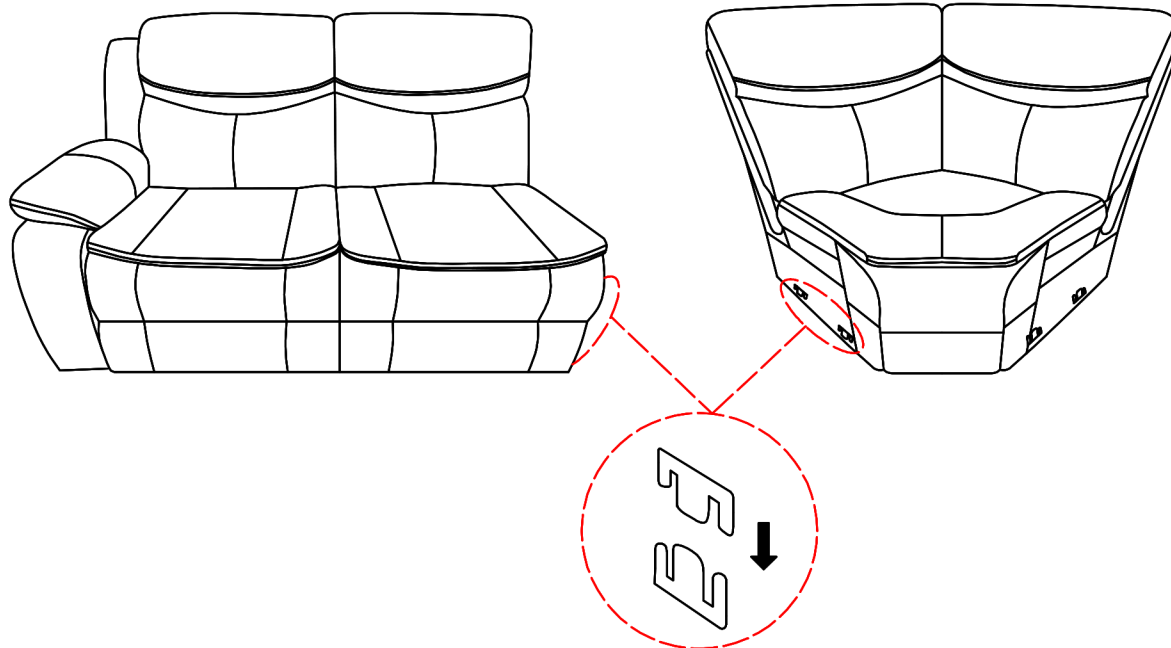

 Attach right loveseat to corner seat by hooking onto each other.

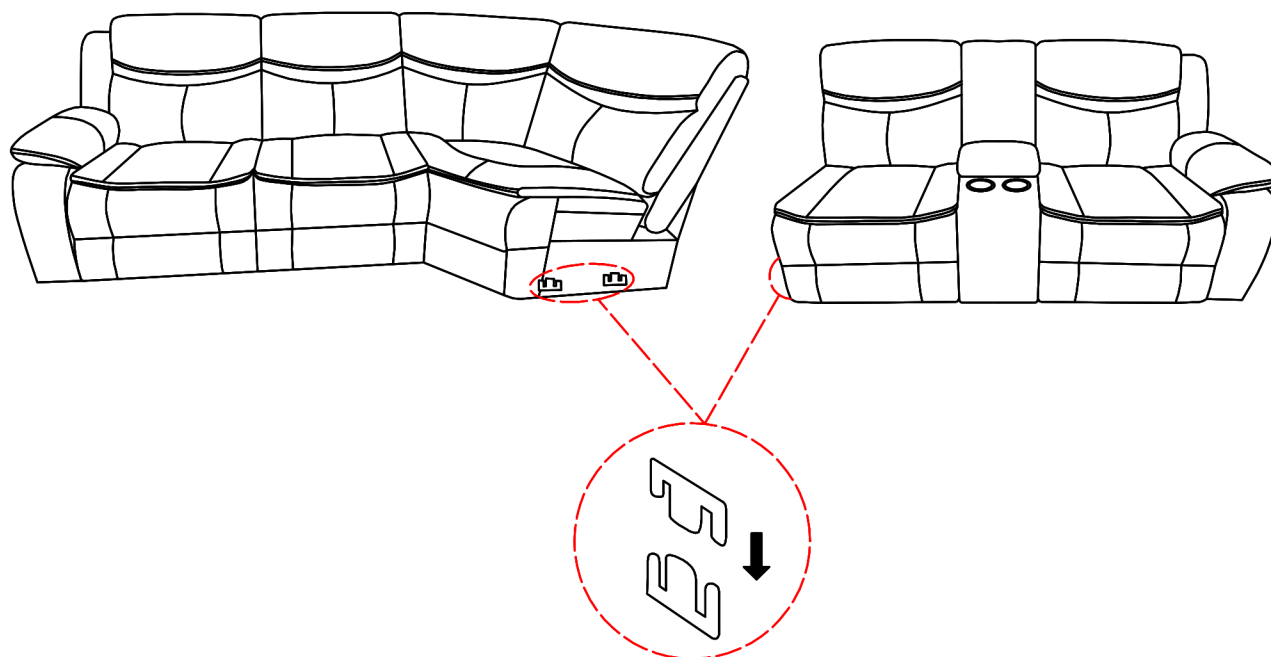



Assembly Completed

