 


ASSEMBLY INSTRUCTIONS

PDBD321

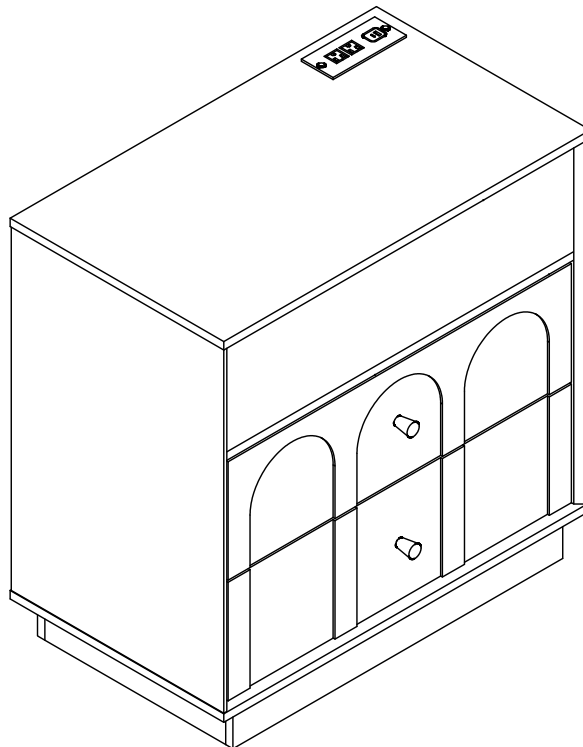

ATTENTION

Prior to assembly, please check and count all parts and hardware regarding to the list on page 3-4 of the instruction. If there is any part missing or damaged, please send us messages with the part name and number or send us pictures, we will send you the replacement asap.

If you have any questions about the product or assembly, please kindly contact us at anytime, we will solve your problem asap.

Service E-mail: cservice7@yeah.net

Be sure to provide your order ID so we can assist you better.



IMPORTANT INFORMATION

READ CAREFULLY.

 
KEEP THIS INFORMATION FOR FURTHER REFERENCE.

GENERAL GUIDELINES

If you have any questions about the product or assembly, please kindly contact us (cservice7@yeah.net) at any time, we will solve your problem asap.

NOTES BEFORE YOU START

1. If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.
2. Open and assemble the item in the area you plan to keep it to avoid excessive heavy lifting.
3. Assemble the product in a spacious space, and on a soft, clean surface to avoid damage and scratches.
4. **TWO PEOPLE** are recommended for ease in the assembly of this product.
5. Ensure all parts and hardware are available before assembly, If you find any part is damaged or missing, please email us (cservice7@yeah.net), we will send you the replacement asap.
6. Follow each step in the manual to ensure the proper assembly.
7. You will use the following tools: a Phillips head screwdriver and rubber hammer.
The wood dowels may need to be gently tapped in lightly with a rubber hammer.



(not included)



 
(not included)

8. We don't recommend using the electric screwdriver. If you use the power screwdriver to tighten the screws, please be slow down, and stop if the screw is already tightened, excessive screwing may damage the screw and product surface.















WARNINGS

1. Please be careful and slowly when opening and assembling the product, especially keep the parts and packaging away from children to avoid accidental injury.
2. Please avoid using aggressive chemicals/cleaners to avoid damaging the product surface.
3. Don't push or pull the product to avoid damaging your floor.
4. Don't throw away any packing materials and accessories until assembly is complete.

Exploded Drawing

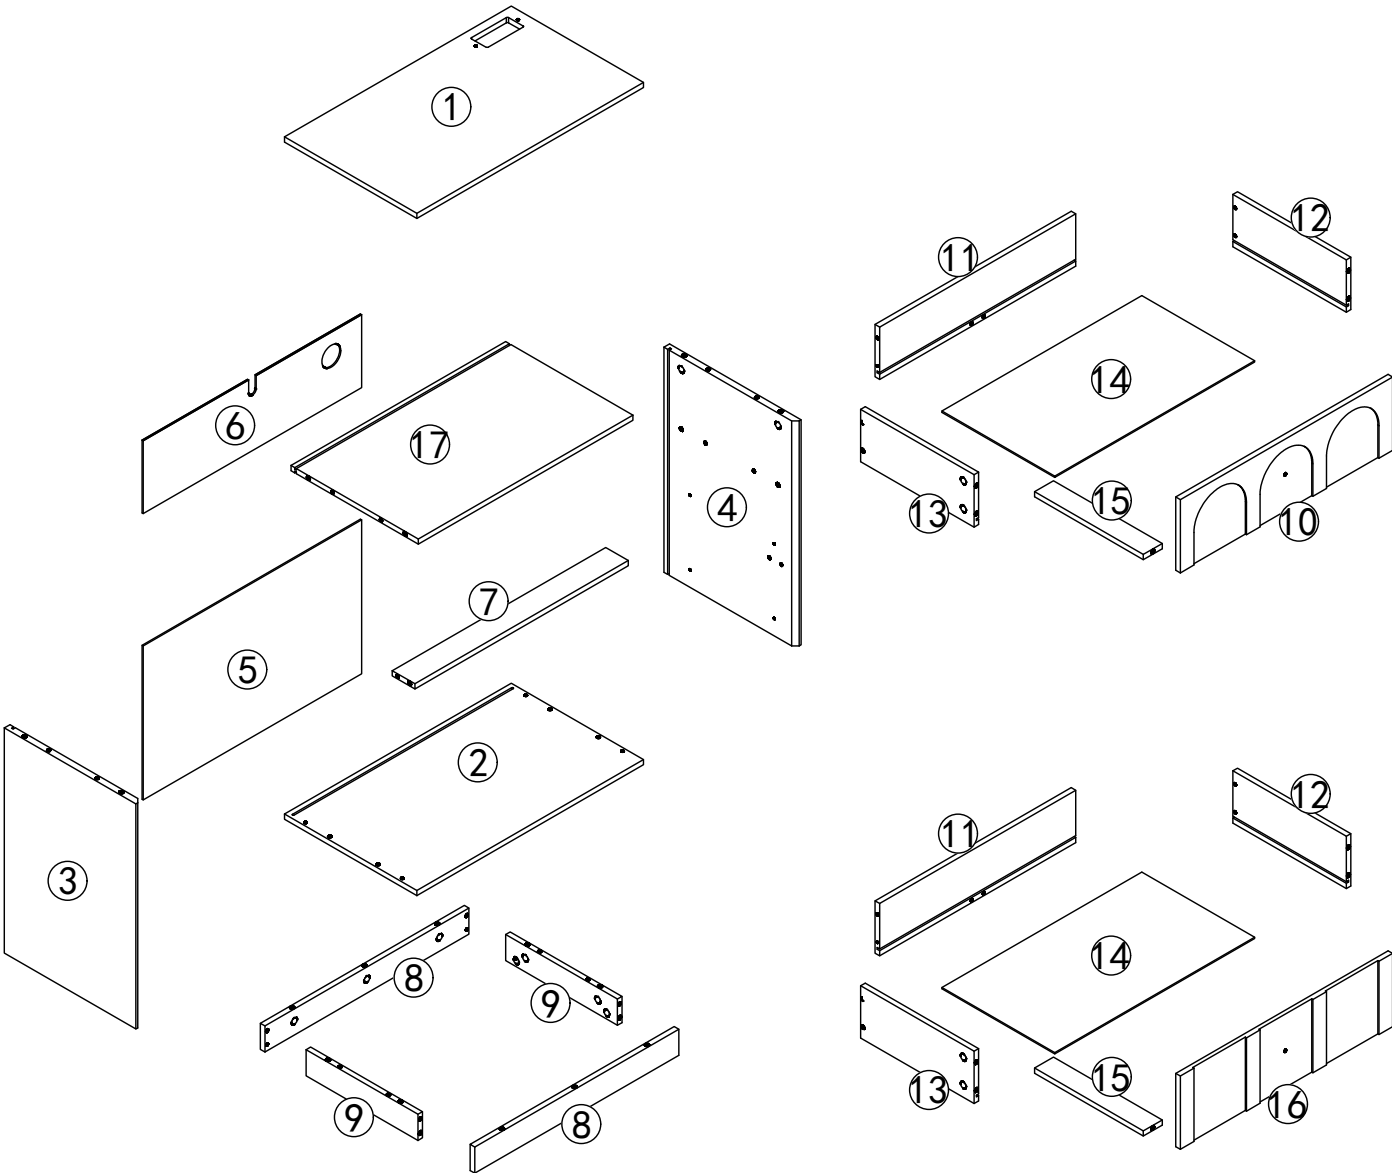


HARDWARE LIST

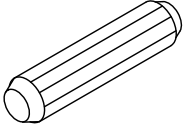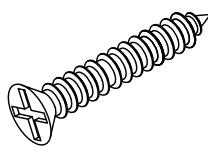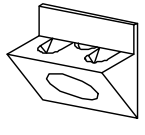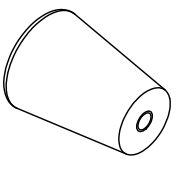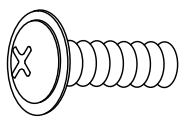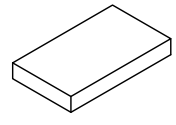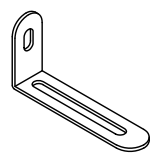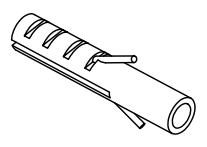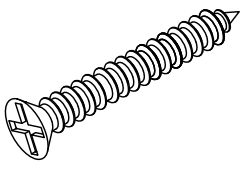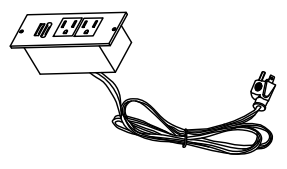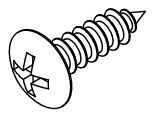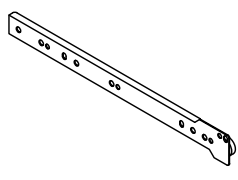              Ⓐ  M6*35mm 34PCS spare:4	Ⓑ  Ø15*9.5mm 34PCS spare:4	Ⓒ  Ø6*30mm 22PCS spare:2	Ⓓ  Ø20mm 8PCS spare:1
Ⓔ  M4*35mm 16PCS spare:3	Ⓕ  M3.5*12mm 38PCS spare:4	Ⓖ  12PCS spare:2	Ⓗ  2PCS
Ⓘ  M4*15mm 2PCS	Ⓙ  30*10*5mm 8PCS spare:2	Ⓚ  1PC	Ⓛ  1PC
Ⓜ  M4*40mm 1PC	Ⓝ  1PC	Ⓞ  M3.5*12mm 1PC	ⒸⓁ  300mm 2PCS


HARDWARE LIST

 CR

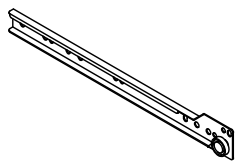


300mm
2PCS

 DL

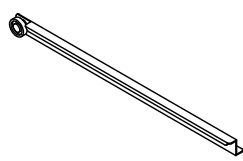

300mm
2PCS




 
DR

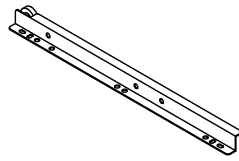

300mm
2PCS

CAM LOCK/BOLT FASTENING INTRODUCTION

    
(You will use it during assembly)

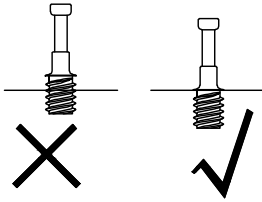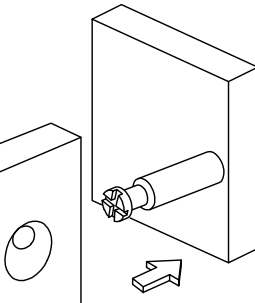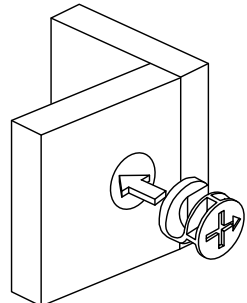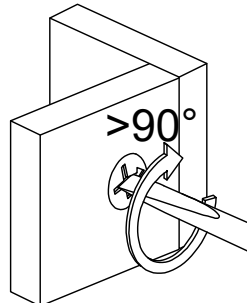1 	2 	3 	4 
1.Screw cam bolt into the threaded anchor gently. (Attention:don't screw cam bolt too deep or too shallow.)	2.Please connect the two boards you want connect by inserting cam bolt.	3.Insert the cam lock into the round hole of the board. (Attention:point the arrow on the top of the cam lock to the outer edge.)	4.Turn the cam lock clockwise until it is firmly tightened.



SLIDE INTRODUCTION

(You will use it during assembly)



 
You can find CR/DR/CL/DL is engraved on the slide.

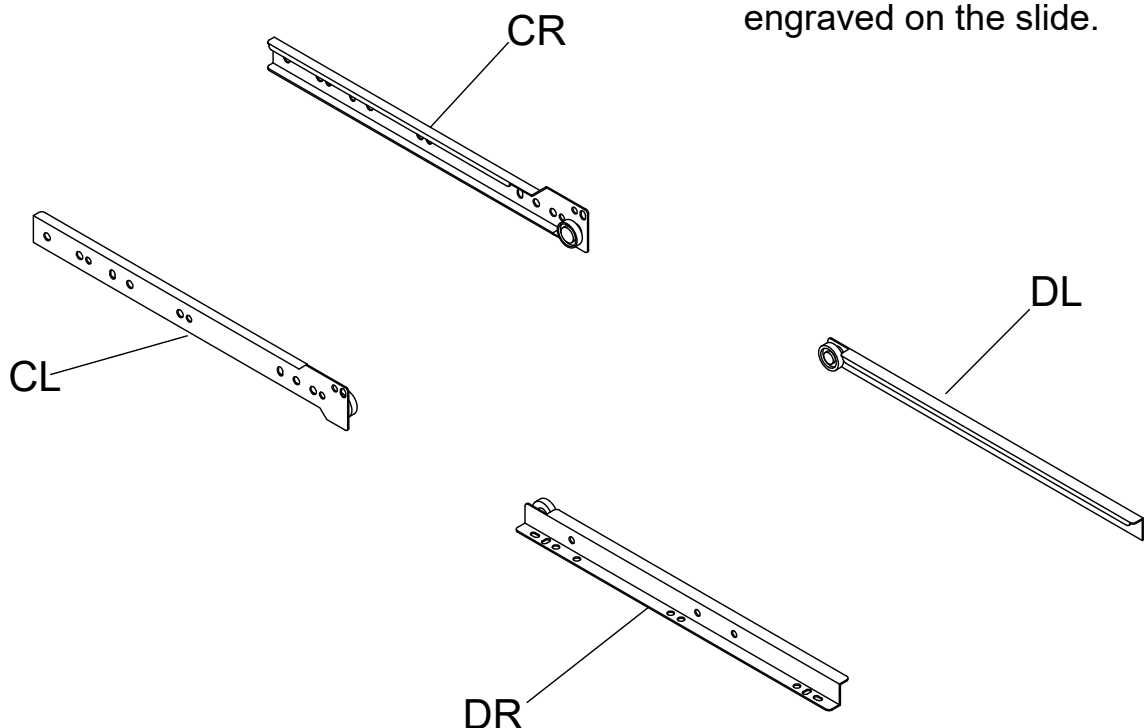

  
STEP 1

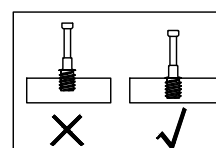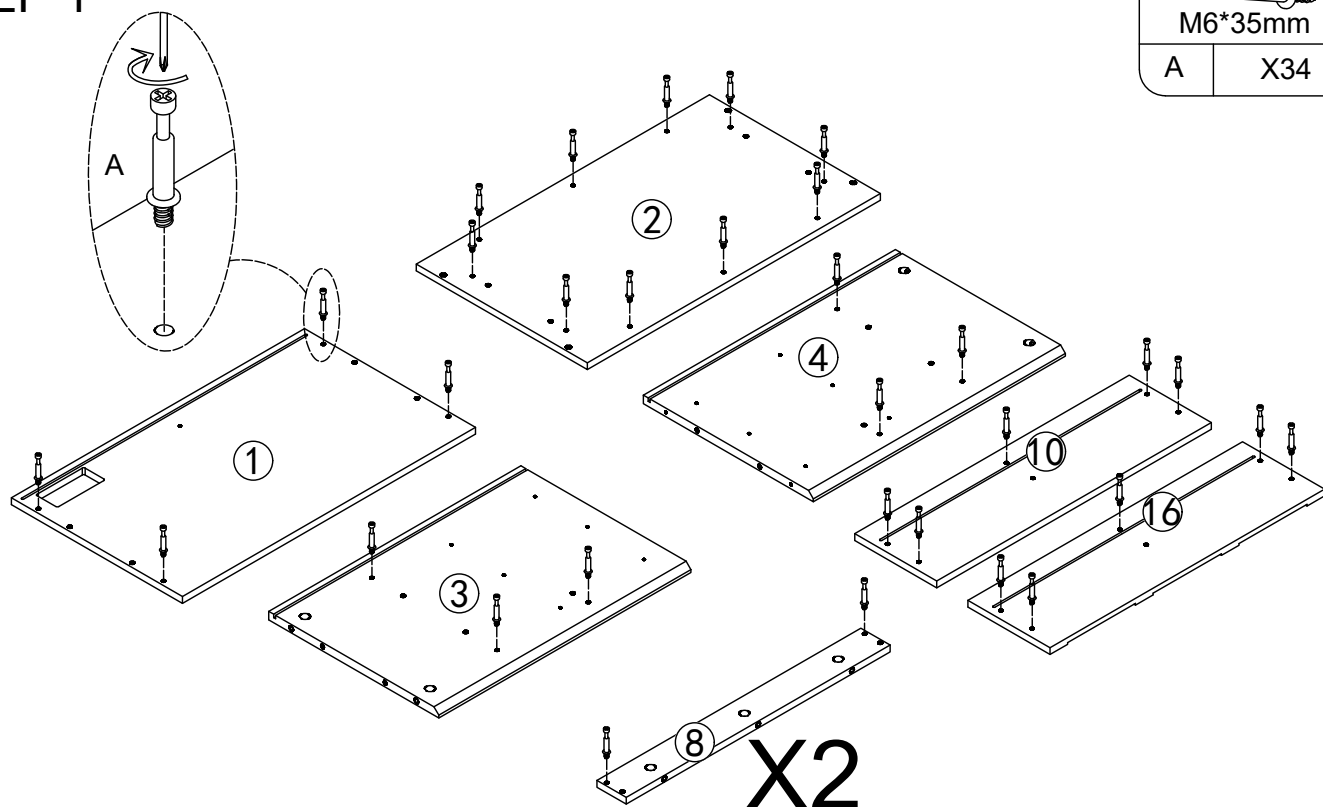

   STEP 2


 M3.5*12mm		 300mm		 300mm	
F	X12	CL	X2	CR	X2

 Please note the position of the guide rail holes for the locking screws in the figure

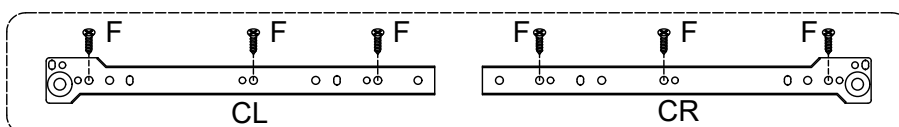


NOTE:rollers
face downward

 CL
300mm

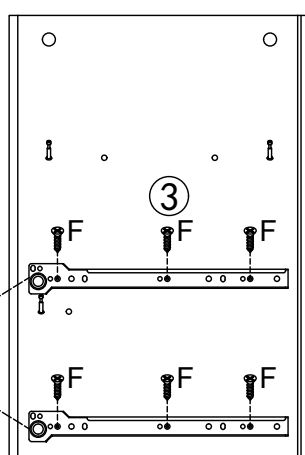


NOTE:rollers
face downward

 
CR
300mm

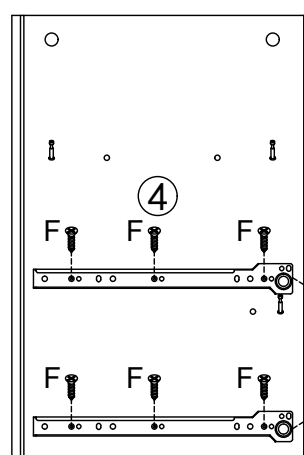

 
STEP 3

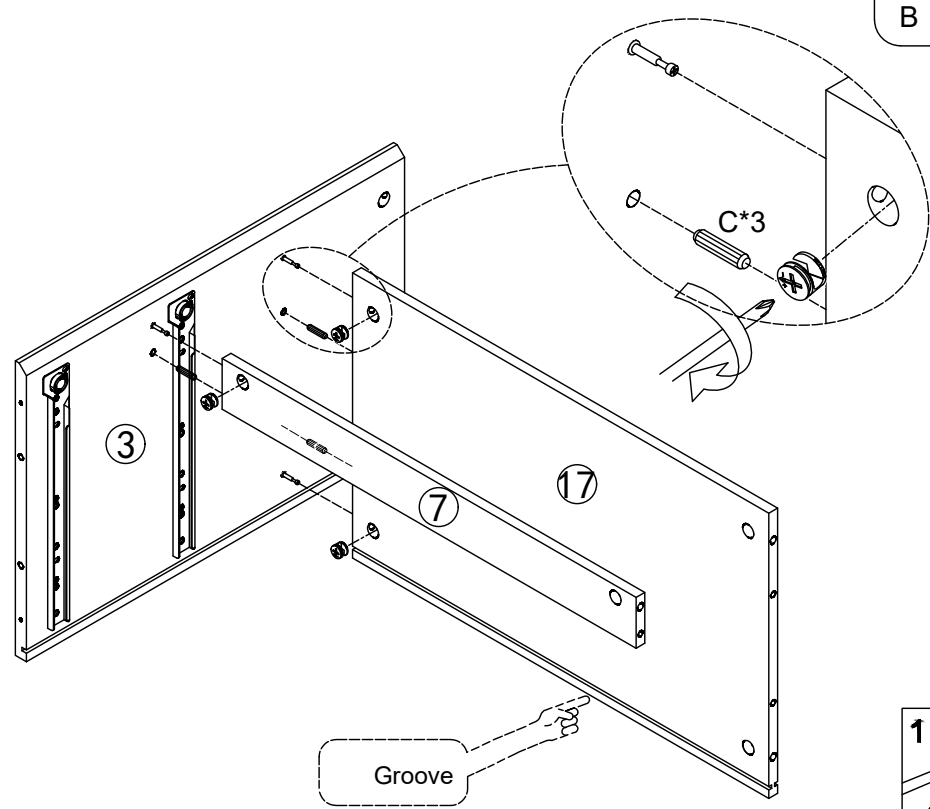


 Ø15*9.5mm		 Ø6*30mm	
B	X3	C	X3

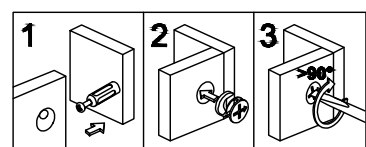 

 
STEP 4

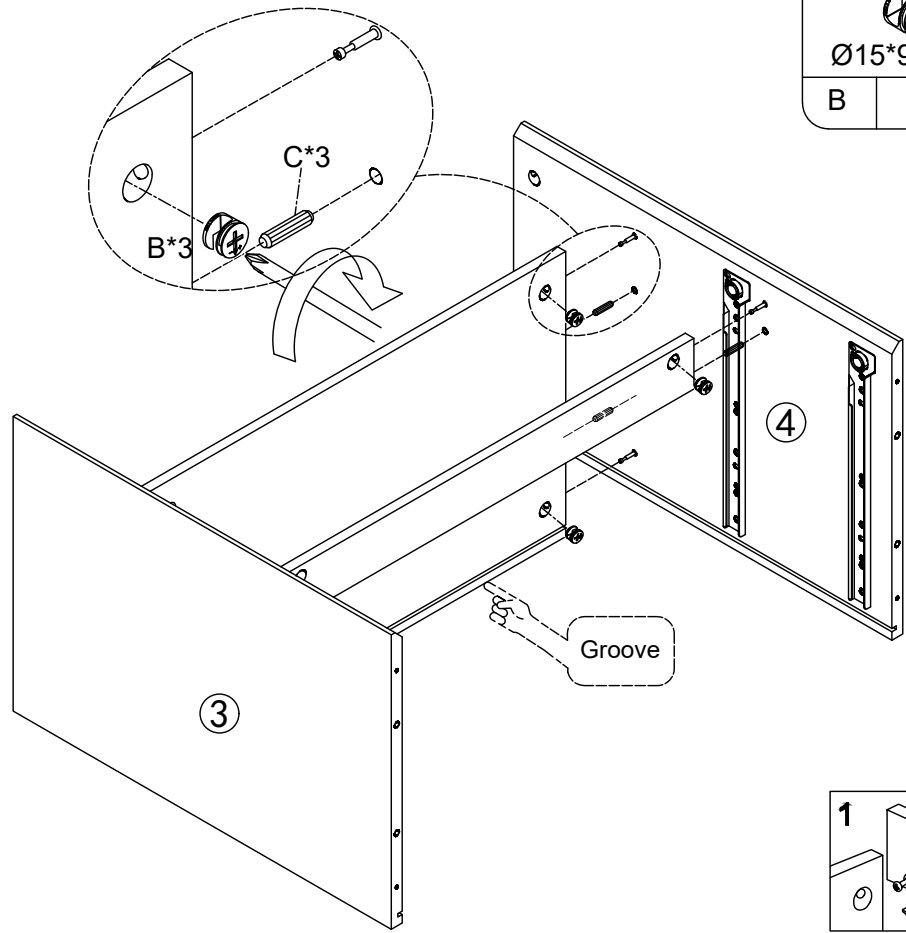

 Ø15*9.5mm		 Ø6*30mm	
B	X3	C	X3

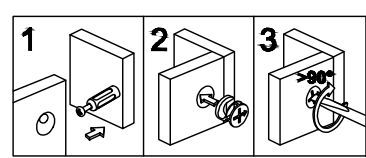 


 STEP 5

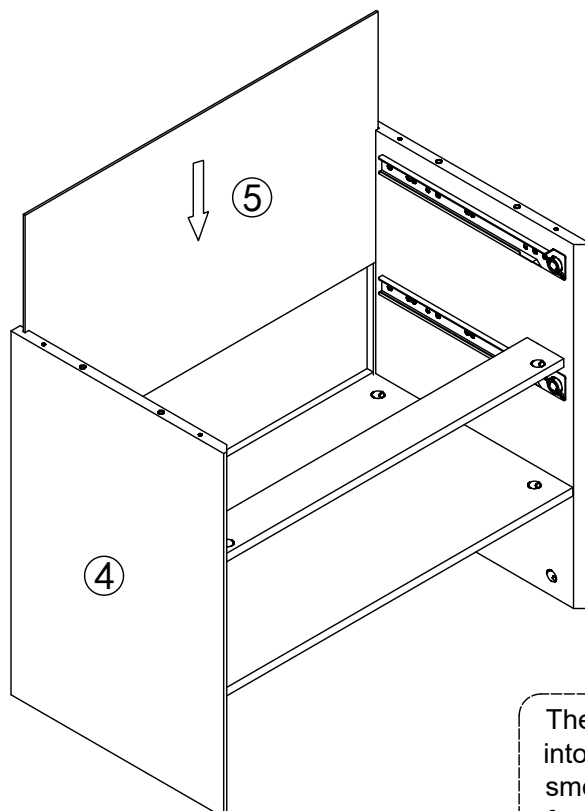

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

 
STEP 6

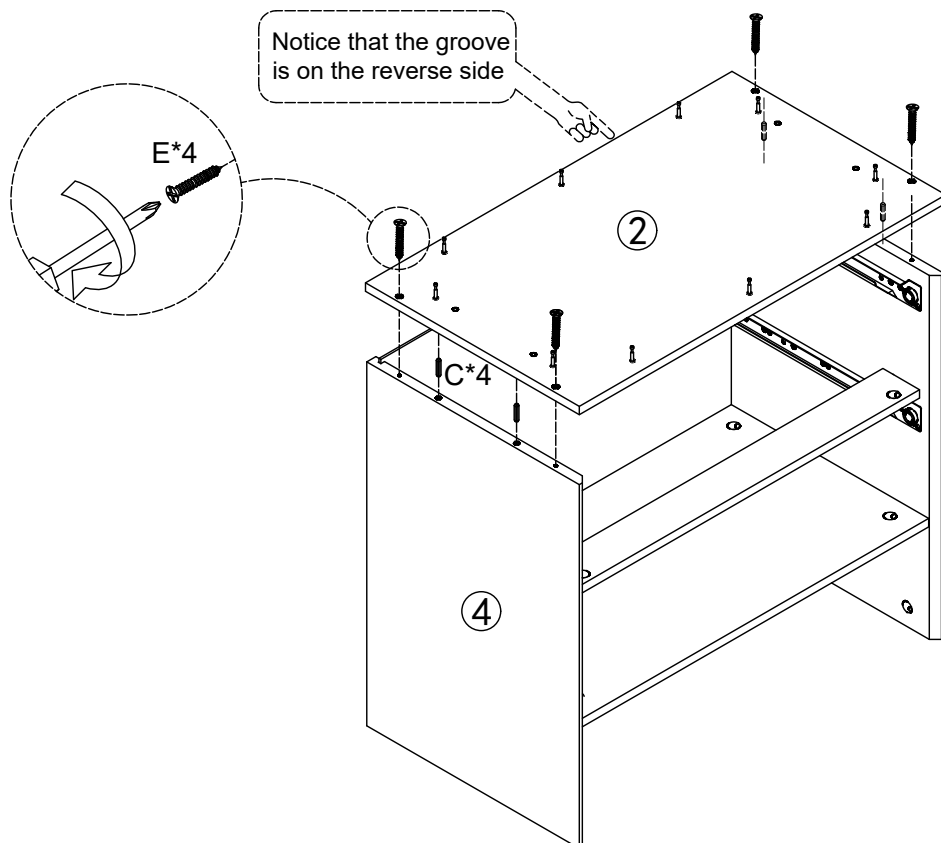


 Ø6*30mm		 M4*35mm	
C	X4	E	X4

STEP 7

			
Ø15*9.5mm		Ø6*30mm	
B	X4	C	X4


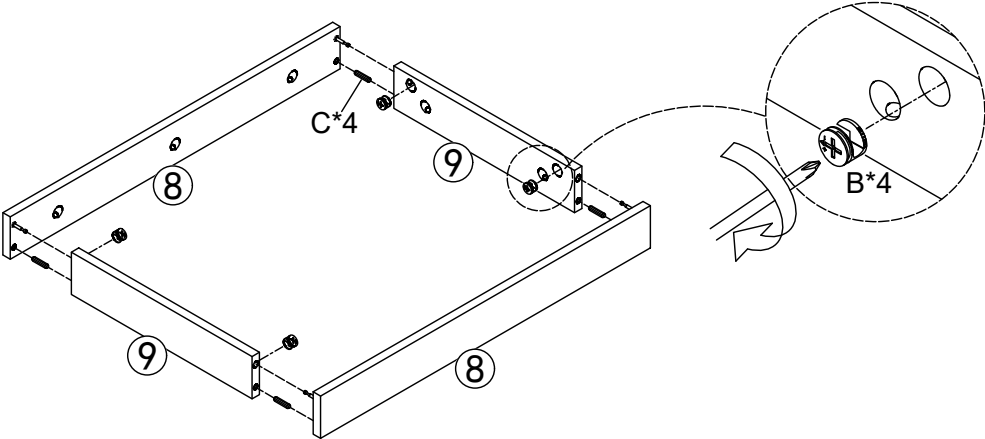 


 Note:The cam lock holes on panel 9 should face inward.





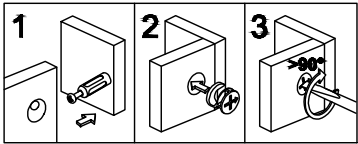


STEP 8


			
Ø15*9.5mm		Ø6*30mm	
B	X10	C	X4

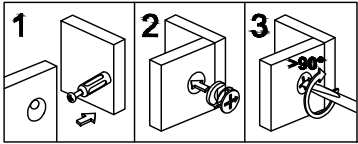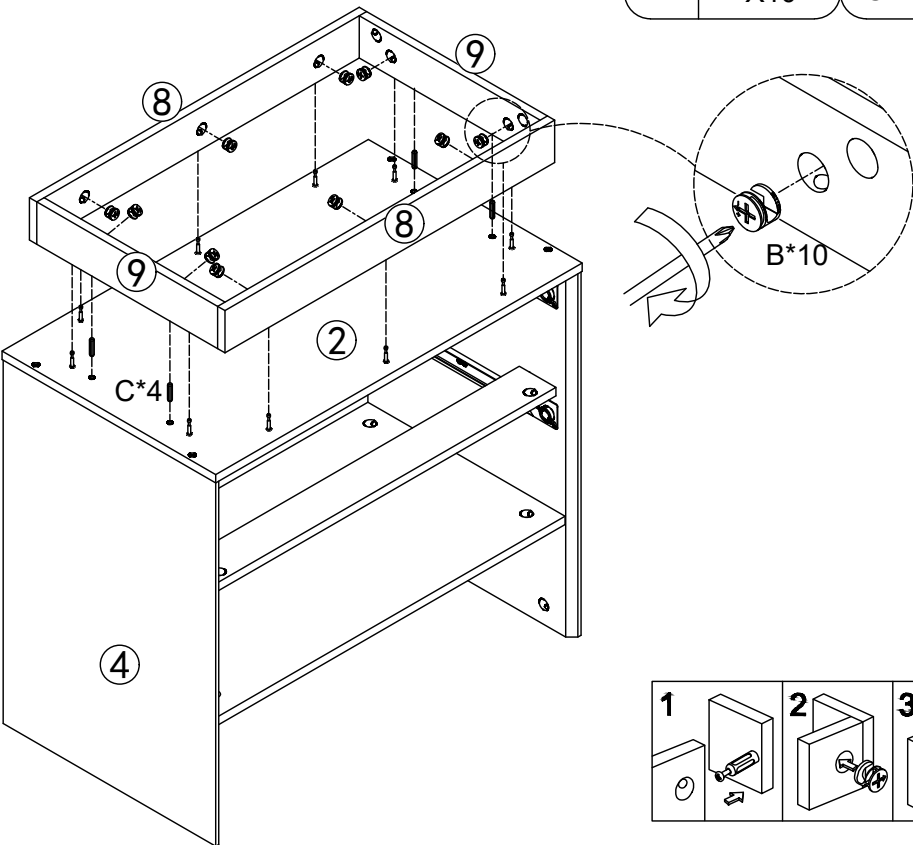  

     STEP 9

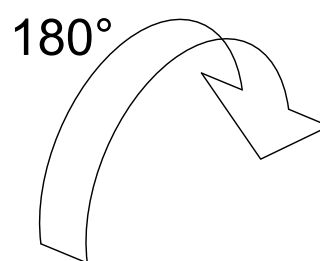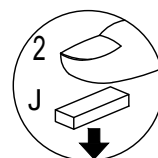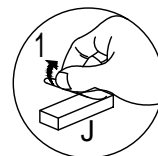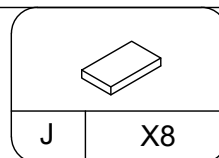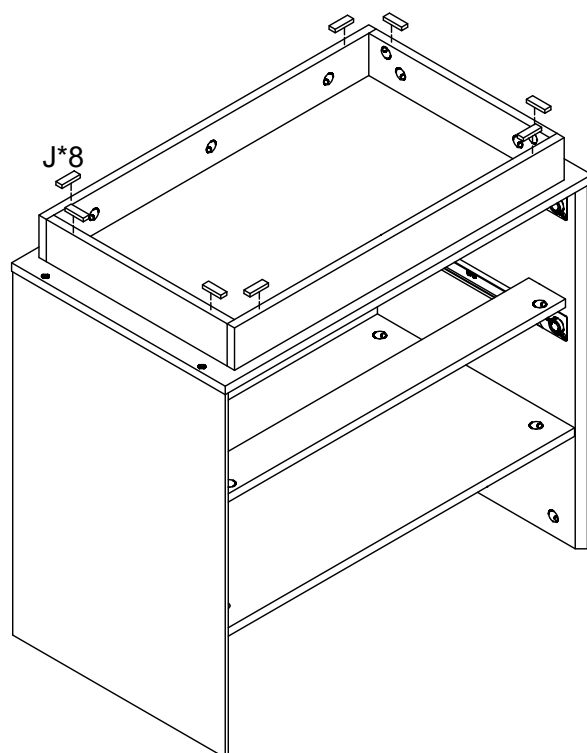

 
STEP 10

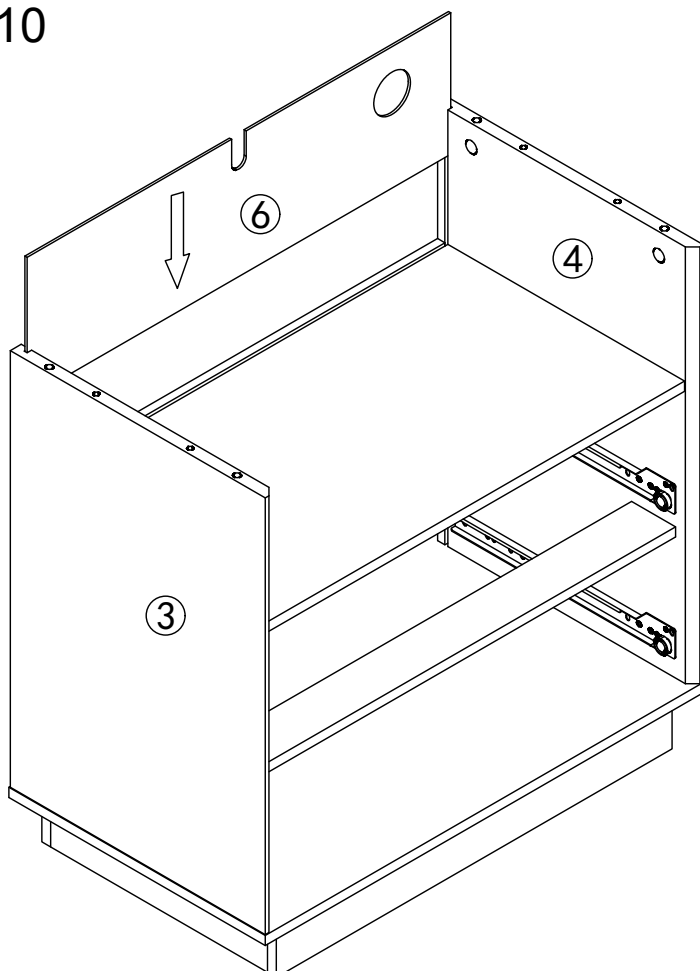

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

STEP 11

 M3.5*12mm			
O	X1	K	X1



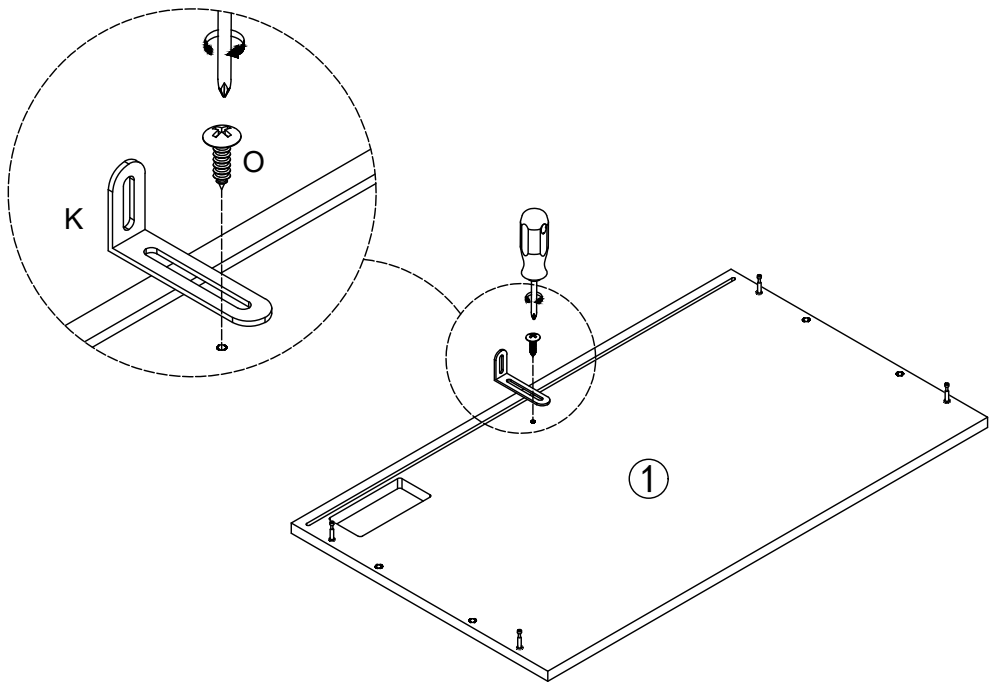 


Note: Just tighten the screw(O) to 90%, and tighten screw 100% after you lock the Nightstand to the wall in step 15.

STEP 12


 Ø15*9.5mm		 Ø6*30mm	
B	X4	C	X4

   Notice that the groove is on the reverse side

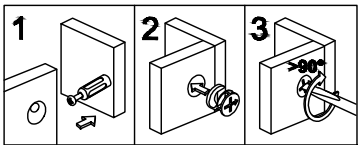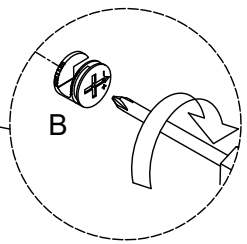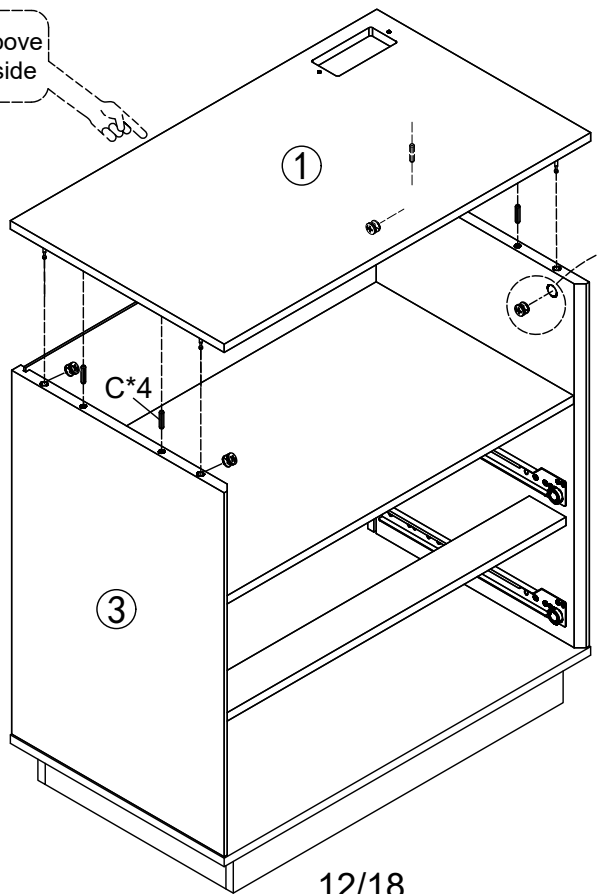


STEP 13

 M3.5*12mm			
F	X2	N	X1

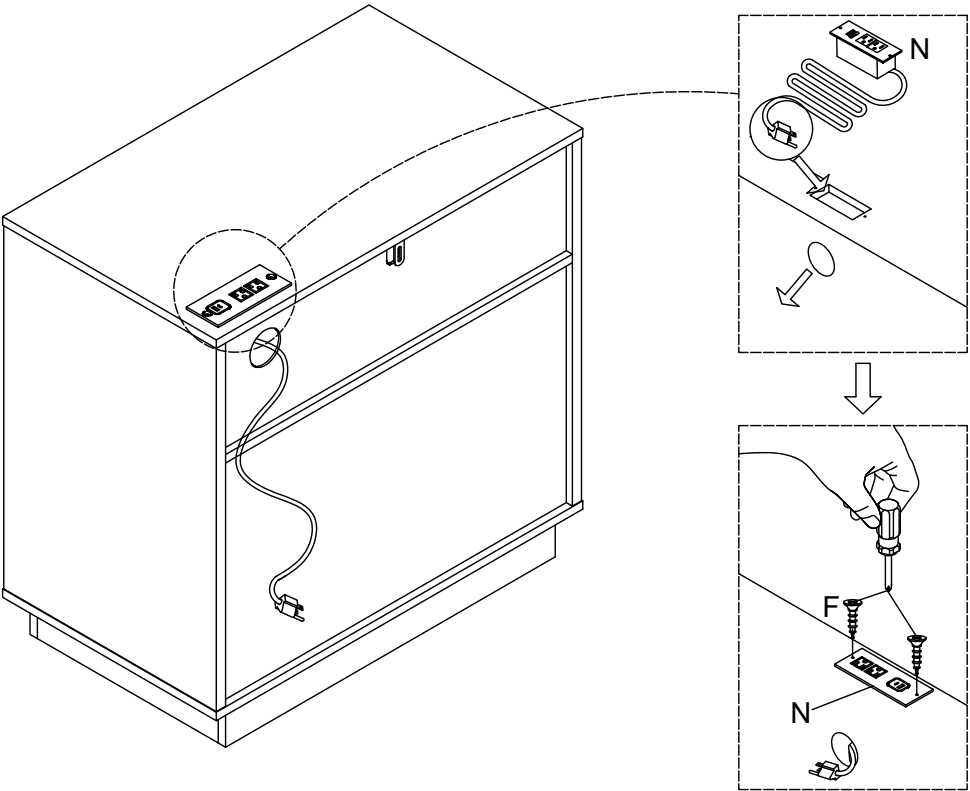 


STEP 14


 M3.5*12mm			
F	X12	G	X12

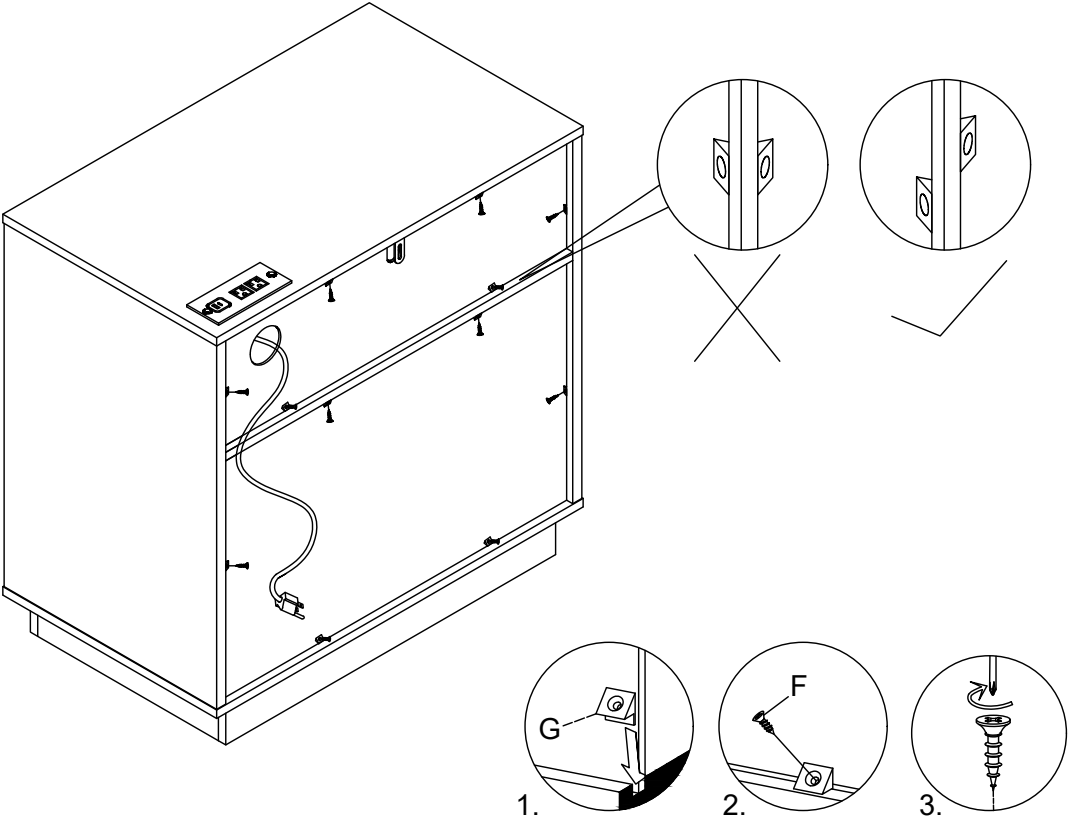 

 STEP 15

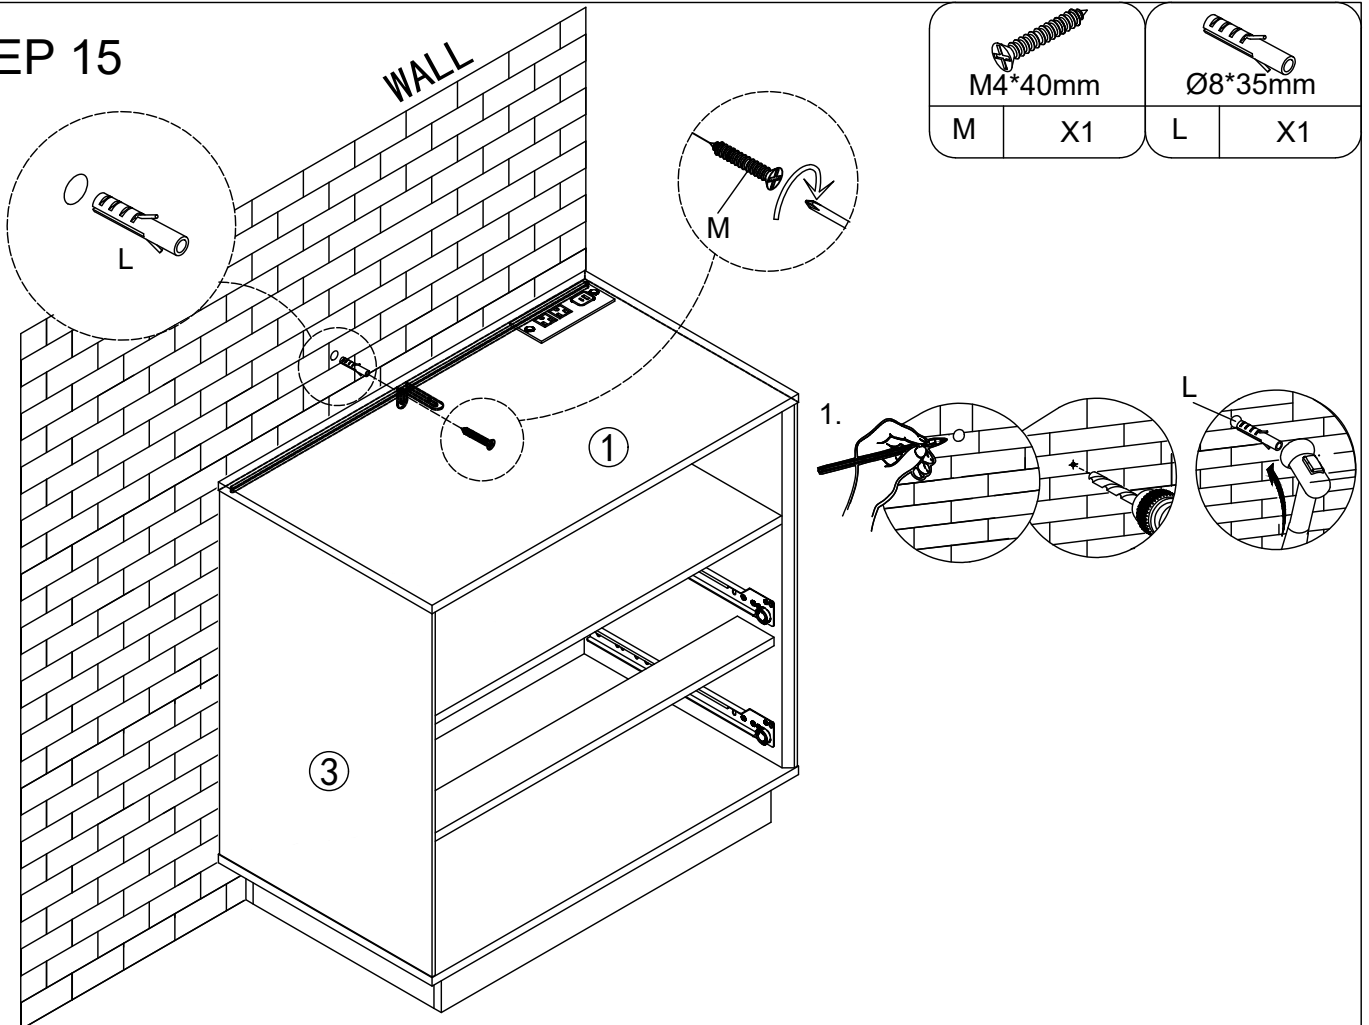


 STEP 16

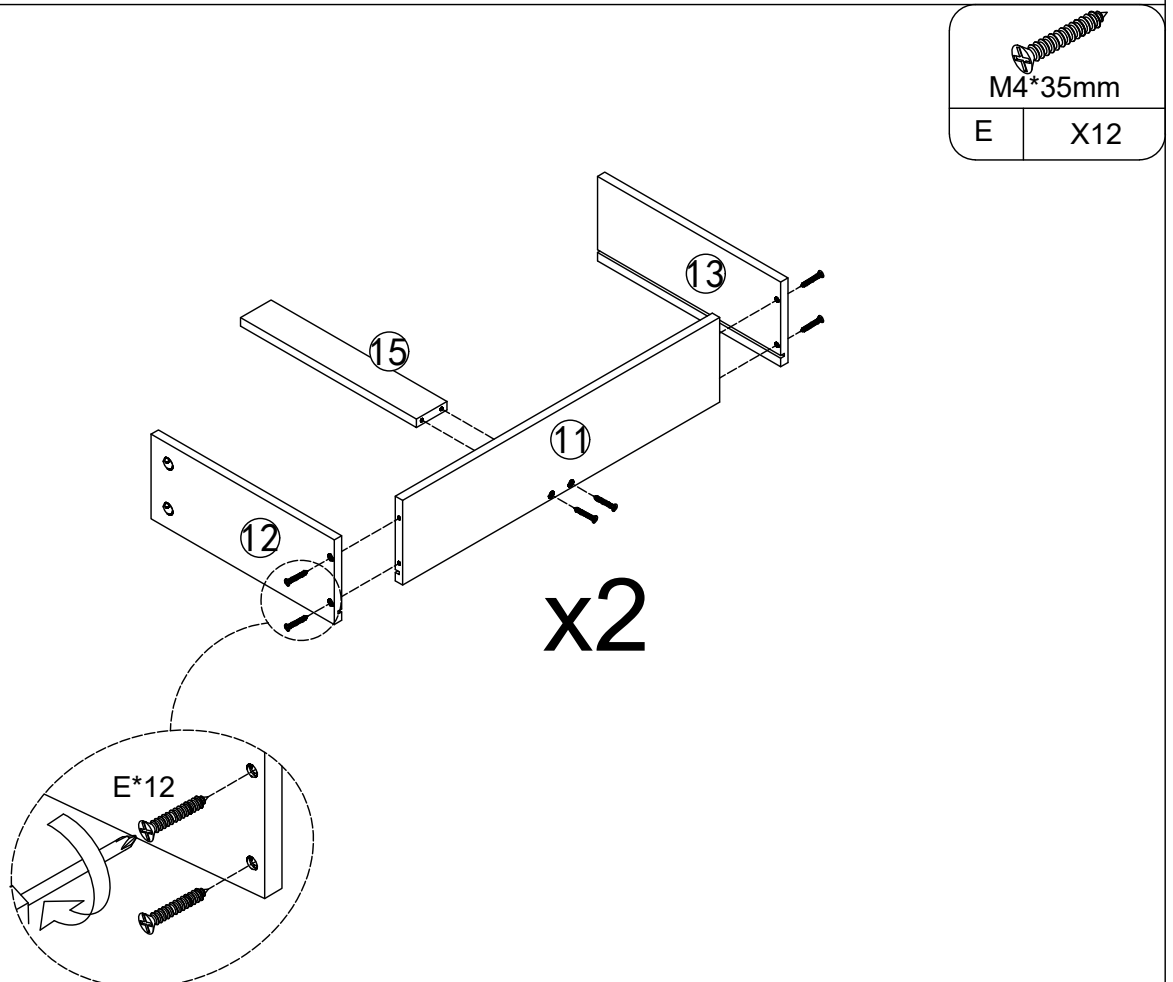


STEP 17

 The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


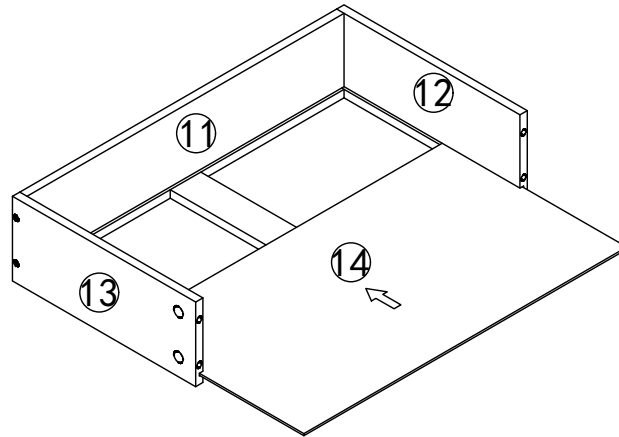


x2

 STEP 18

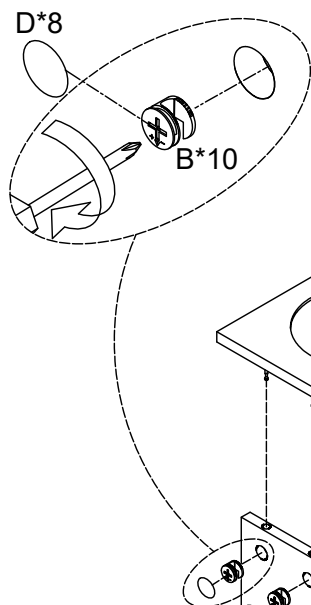


			
Ø15*9.5mm		Ø20mm	
B	X10	D	X8

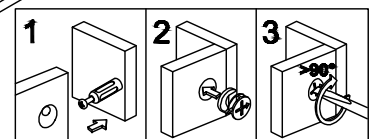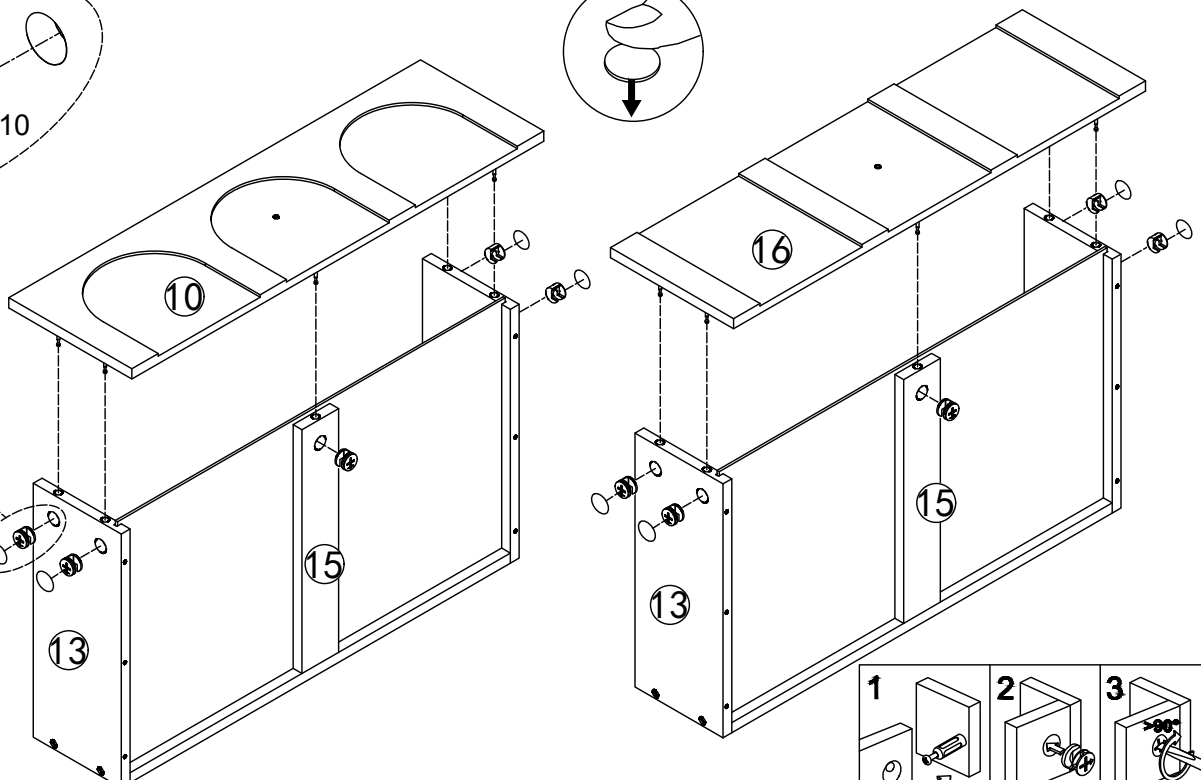  


STEP 19

					
M3.5*12mm		300mm		300mm	
F	X12	DL	X2	DR	X2

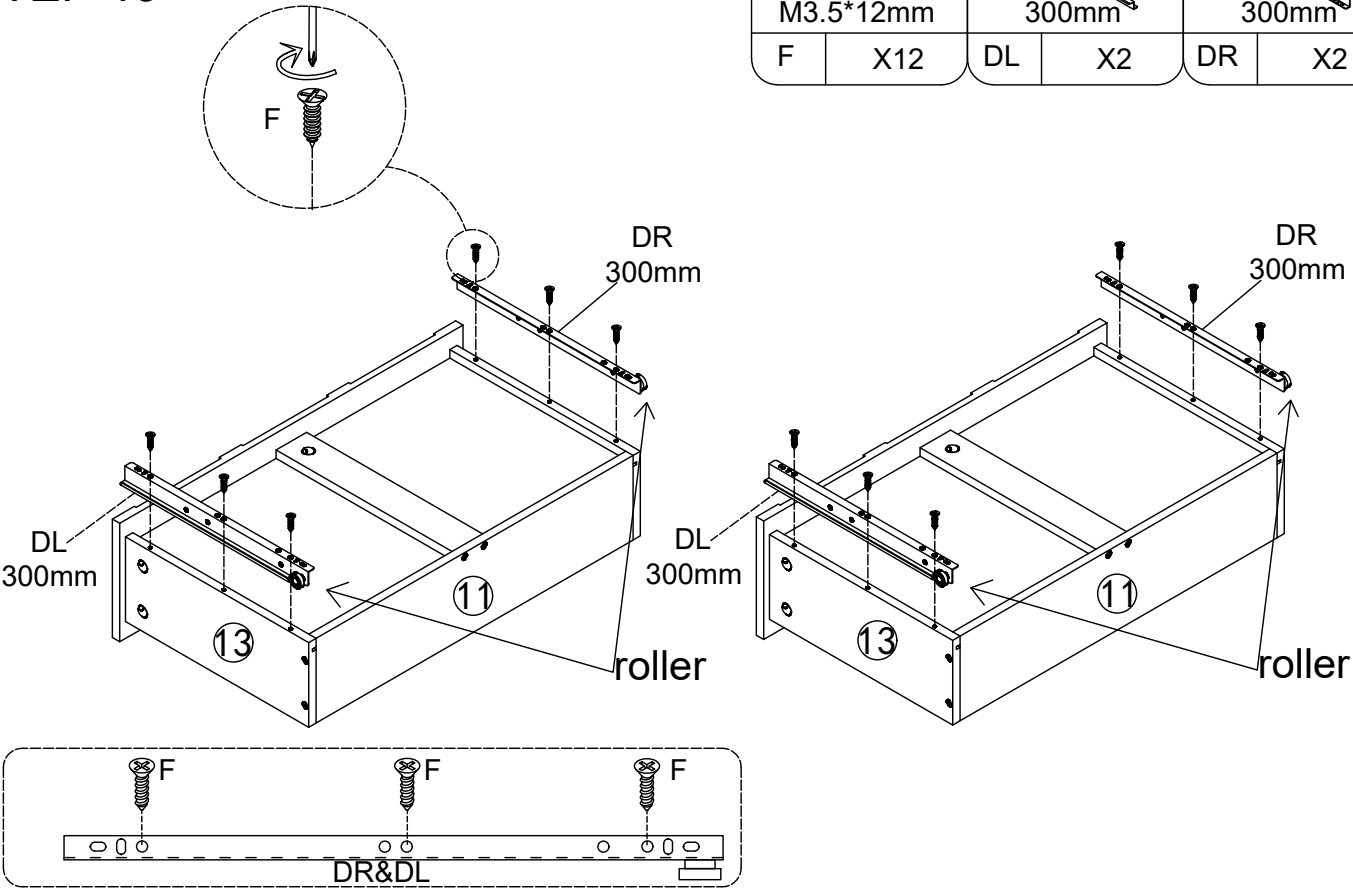 


STEP 20


			
M4*15mm			
I	X2	H	X2

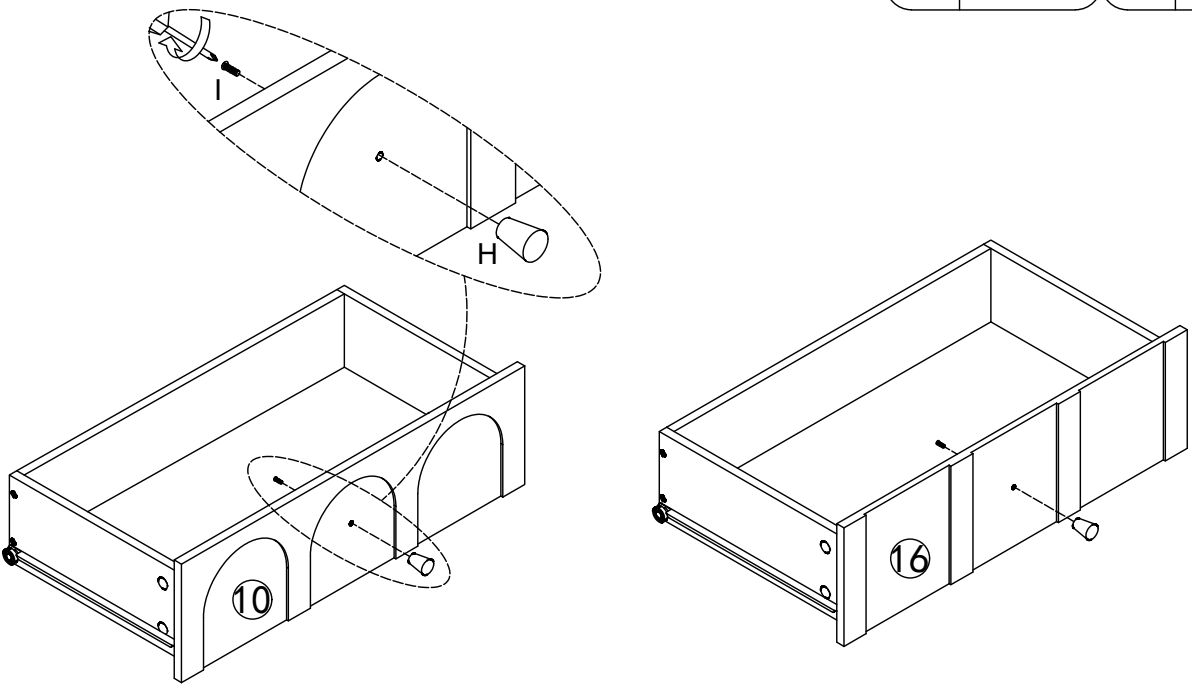 

 STEP 21

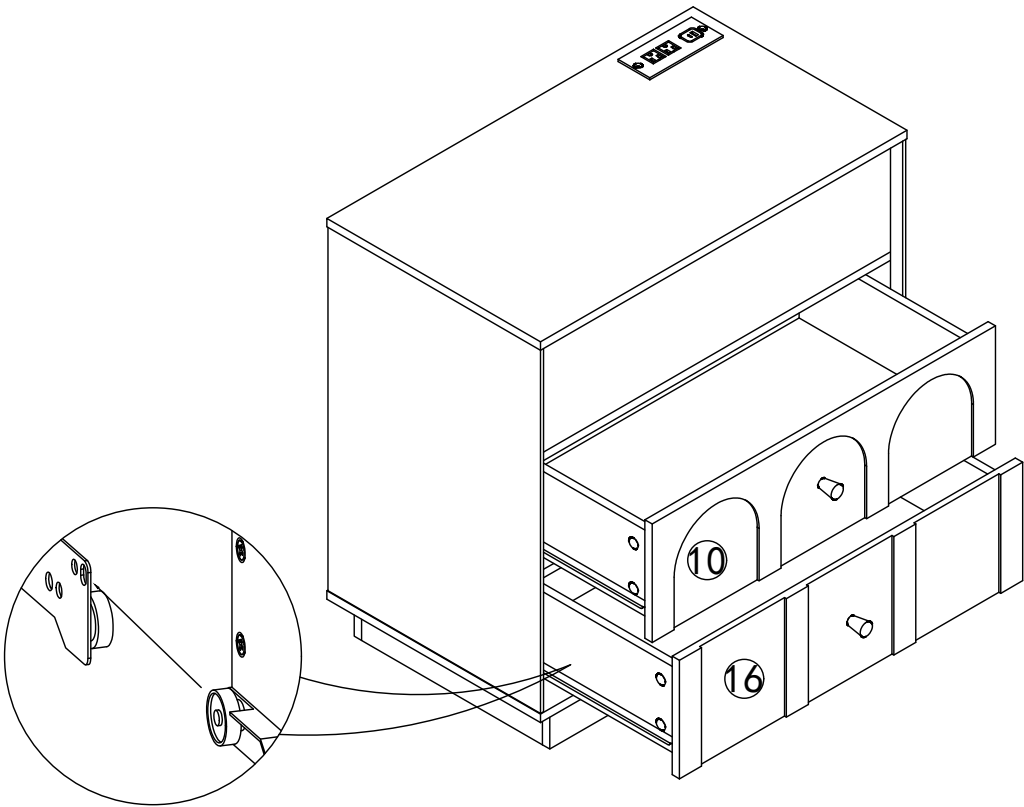

 STEP 22

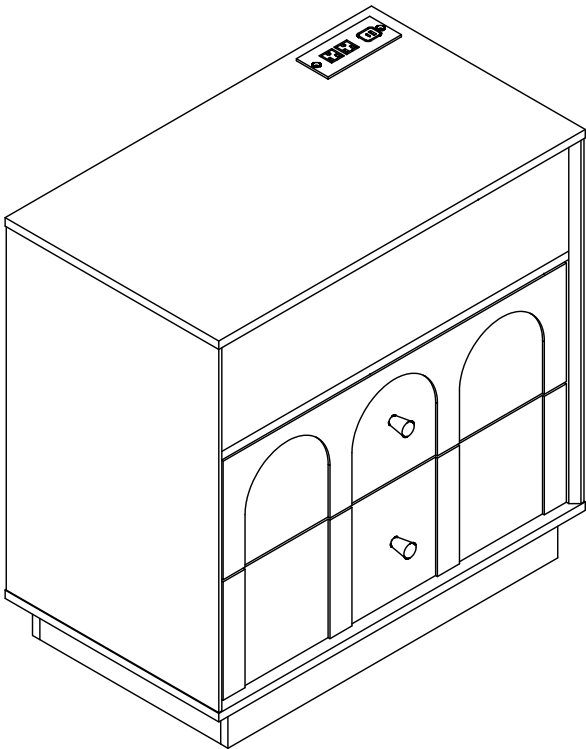

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

⚠ ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

⚠ WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!