



CR3044A
Piper Bluetooth Speaker
Instruction Manual



Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 6 p.m., EST, Monday – Friday
1-888-CROSLEY
www.crosleyradio.com

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Speaker
- USB-C Cable

Please contact Crosley Customer Service if there is any accessory missing from the package. **Retain the original packaging materials for exchange or return purposes.**


Specifications

Power Source	DC Output 5V 1A
Power consumption	5W
Speaker	4Ω 5W
Playing Time	Up to 28 hours (50% volume)
Charging Time	3 – 4 hours
Battery Capacity	1200 mA/h
Bluetooth Version	5.3

Note:

- *Design and specifications are subject to change without notice.*

Product Description

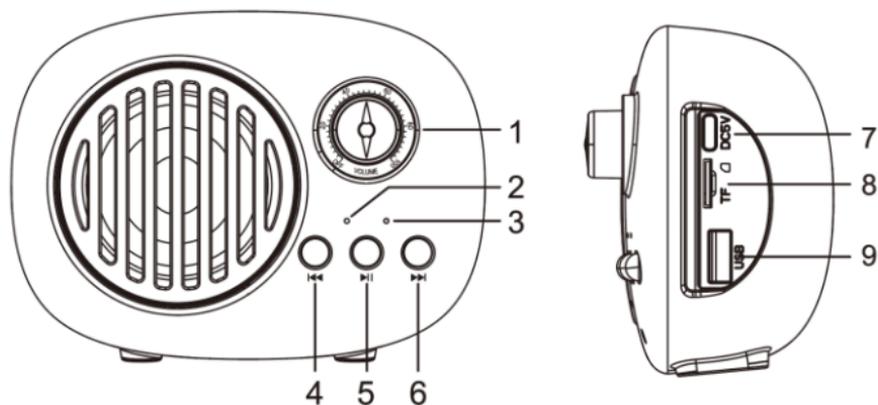

1. On/Off-Volume Knob
2. Microphone
3. LED Indicator
4. Backward Skip Button
5. Play/Pause/Mode Button
6. Forward Skip Button
7. Power Jack
8. Micro SD Slot
9. USB slot

Initial Setup

Essential Setup

1. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
2. Connect the USB-C Cable to the Power Jack of the unit.

Charging/Power Source

1. This unit has a built in rechargeable battery.
2. Connect to a PC, Laptop or 5V USB adaptor with the provided USB-C cable.
3. The LED Indicator will be red when charging and will go off when fully charged.

Bluetooth Operation

1. Rotate the On/Off Volume Knob to turn on the power.
2. Press and hold the Mode button repeatedly to select the Bluetooth mode, you will hear an activation sound from the unit.
3. The LED indicator will start flashing blue.
4. Turn on the Bluetooth feature of your audio device, search for “CROSLEY CR3044A” and pair.
5. Once your device is successfully paired with the unit you will hear a short confirmation sound from the unit.
6. Play and stream music from your device to the unit.
7. To forward skip, press the Forward Skip Button in and release.
8. To backward skip, press the Backward Skip Button in and release.
9. To pause the playback, short press the Pause button.

Note: Bluetooth version – 5.3

USB/Micro SD Playback

1. Insert a USB device into the USB port or a Micro SD memory card into the Micro SD card slot.
2. Press and hold the Mode button repeatedly to select the USB or SD mode.
3. To forward skip, press the Forward Skip Button in and release.
4. To backward skip, press the Backward Skip Button in and release.
5. To pause the playback, short press the Pause button.

Note:

- Only use 32 GB or smaller USB or Micro SD memory card

Twin Connected Mode

To Connect

1. Turn on both speakers by rotating the On/Off Volume Knob.
2. Press and hold the forward skip button on each speaker separately.
3. You will hear a confirmation notification showing they are paired.
4. Connect your Bluetooth.
5. There will be a confirmation notification from one speaker showing they are paired with your Bluetooth device.

Note: The function indicator will be blue.

Note:

This speaker will be the Primary and the other will be secondary.

This connection only works on Bluetooth mode.

To Disconnect

To disconnect the speakers from the Twin Connected Mode, press and hold the forward skip button on one of twins-connected speakers. You will hear a confirmation notification showing they are disconnected.

Other Operation

Bluetooth Calling

When your smartphone is paired with speaker, the speaker will ring when an incoming call is received.

1. When there is an incoming call:
 - a. Press the play/pause button to answer the call and speak through the microphone on the unit.
 - b. Double click the play/pause button to reject the call.
2. During the call, press play/pause button to hang up the call.
3. Double click the play/pause button to call the last incoming phone number.

Bluetooth Disconnection

To disconnect the current Bluetooth pairing, press and hold the backward skip button.

Troubleshooting

There is no power

- No power at the power outlet.
- The battery needs to be charged.

There is no sound

- Make sure the volume is turned up.
- Make sure the volume on your third party device is turned up.

FCC Statements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Modern Marketing Concepts Inc. dba Crosley Brands, declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<http://crosleybrands.com/euDoC>