
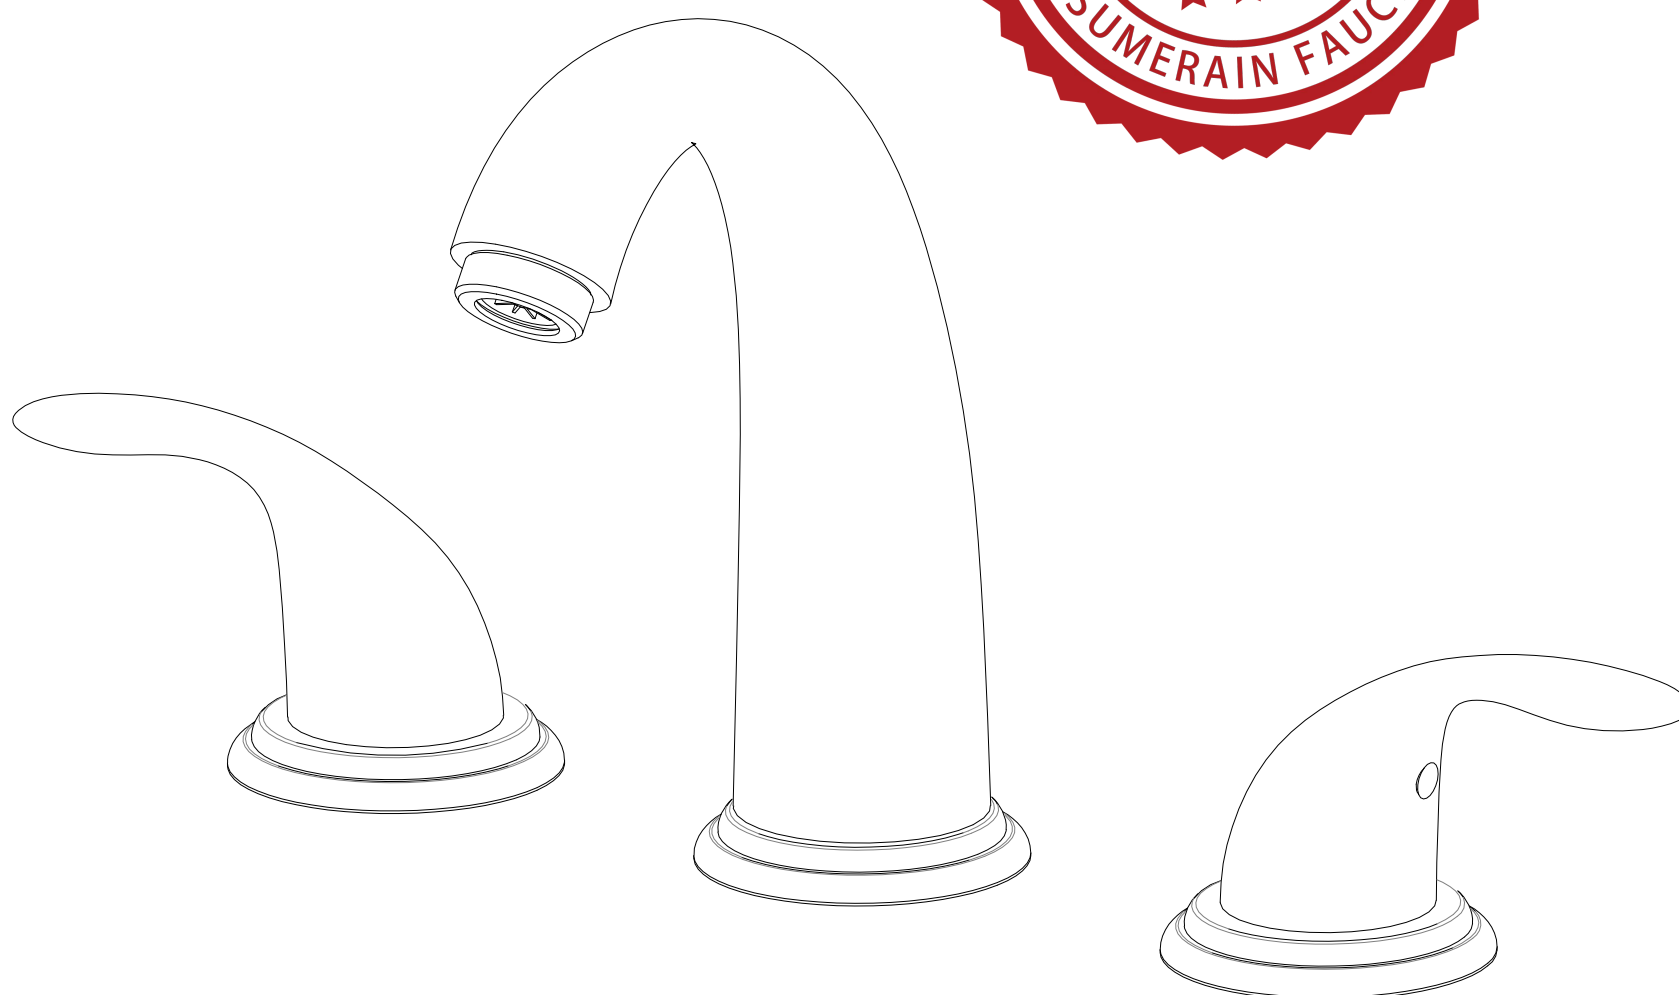



INSTALLATION GUIDE

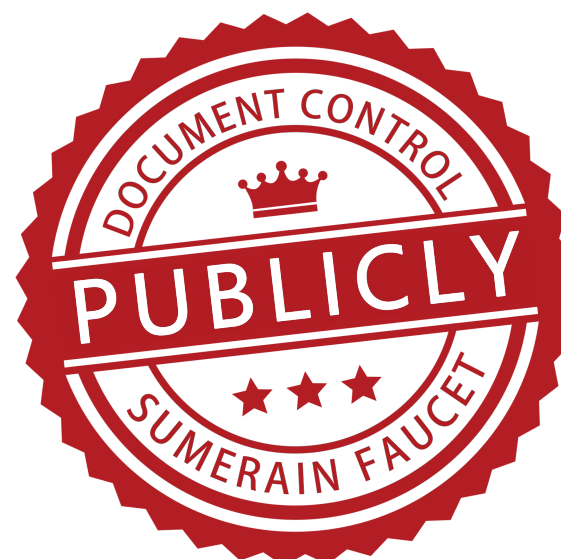


ROMAN BATHTUB FAUCET

CUSTOMER CARE LINE: +1-866-203-0866


TOOLS RECOMMENDED

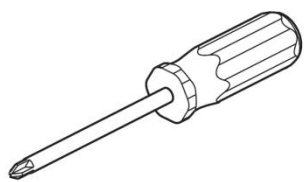

Phillips screwdriver

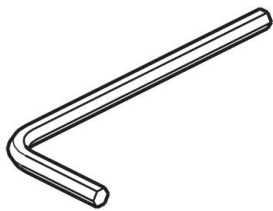


Allen wrench

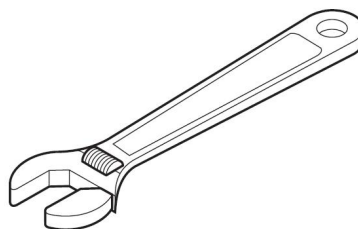

Adjustable wrench



Channel locks

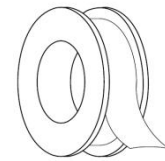

Teflon tape

1. BEFORE PROCEEDING



WARNING: Before proceeding with any operation, please read all instructions thoroughly. If you are uncertain about installing this product, please consult a professional! This product should be installed in accordance with all local and state plumbing and building codes. It is recommended to seek professional assistance.

2. SHUT OFF WATER SUPPLY


Locate the water supply inlets and shut off the corresponding water supply valves, typically found near the water meter. If replacing an existing unit, remove the old unit and thoroughly clean the mounting surface.

3. CHECK THE COMPONENTS OF THE BOX


Upon opening the box, check to ensure that all the following items are included.

4. INSTALLATION HOLES INSPECTION

Verify that the mounting hole sizes and positions are correct. The recommended mounting hole diameter is 1-1/4 inches. The maximum deck thickness should not exceed 1-1/4 inches.

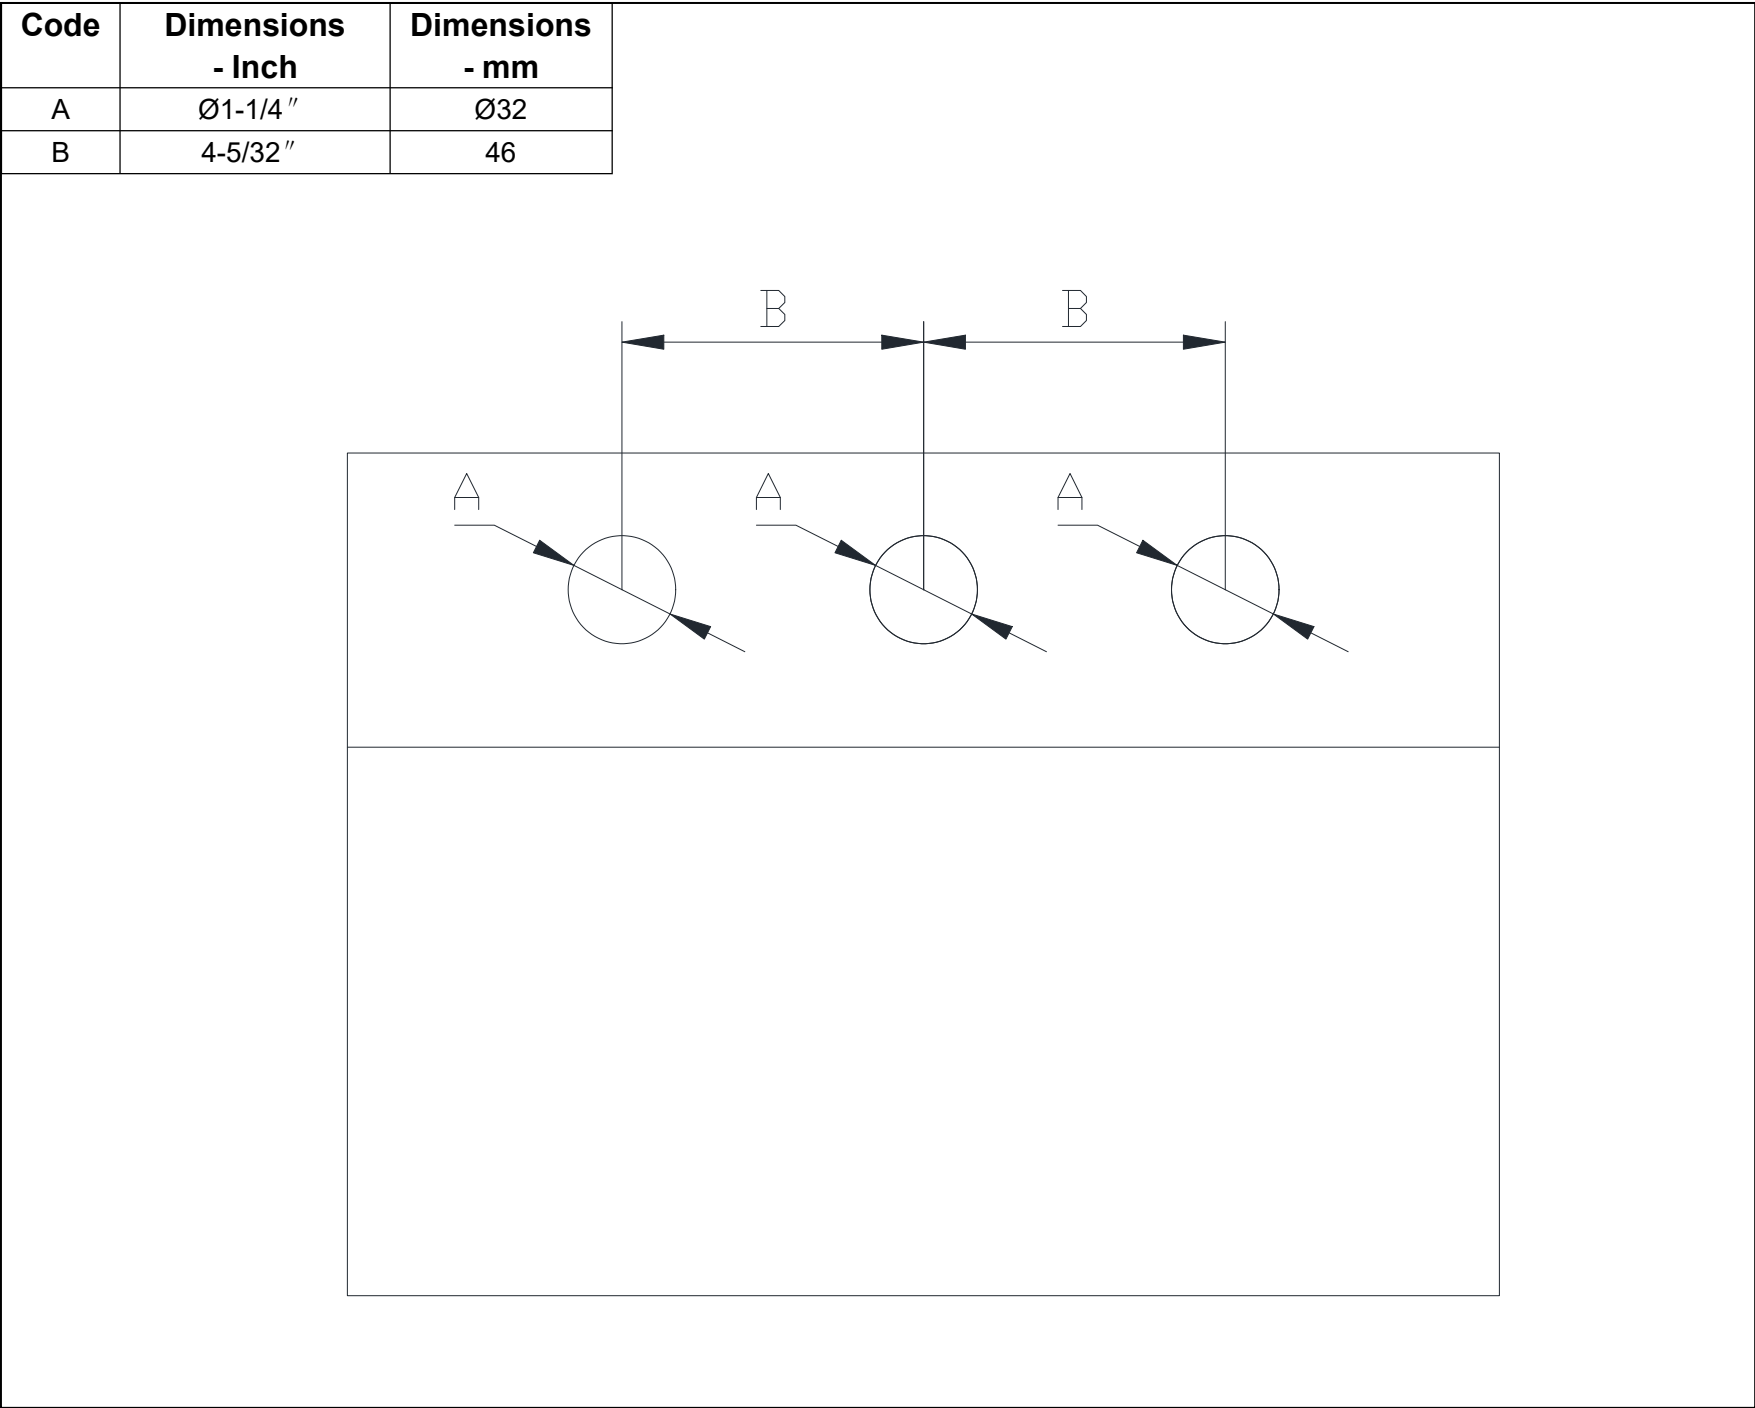

Code	Dimensions - Inch	Dimensions - mm
C	Max:1-1/4"	Max:32

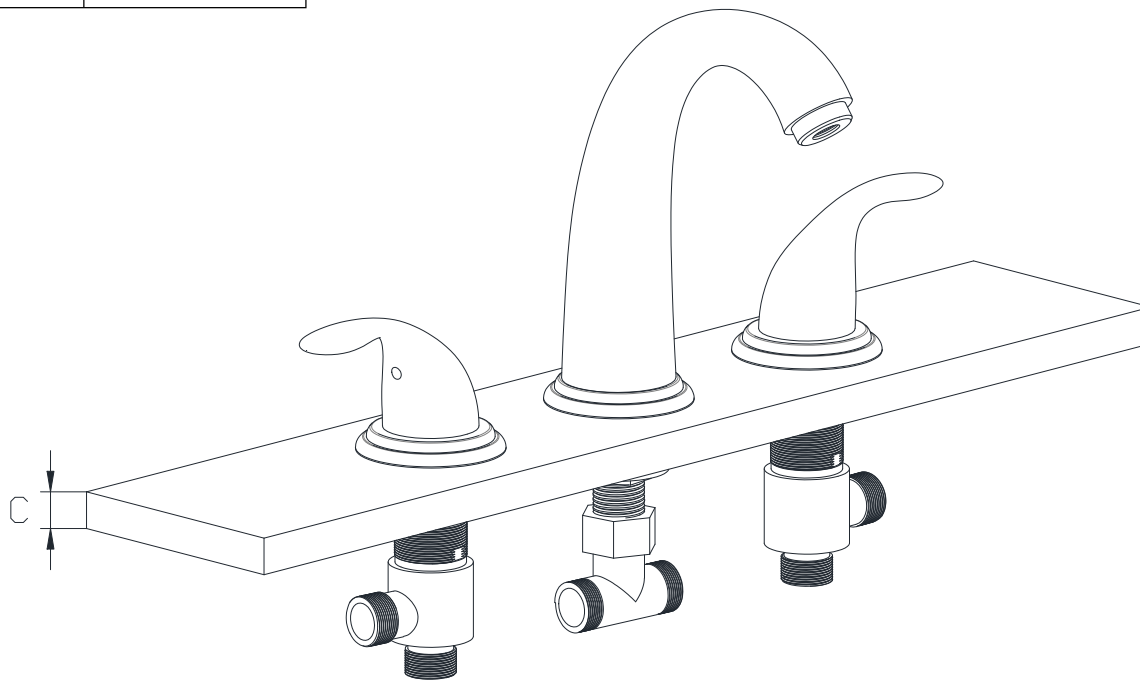


5. INSTALLATION

5.1 Before connecting the faucet, turn on your shut-off valve to clean the hot and cold water supply pipes. Let the water flush out any dirt and debris for 3-5 minutes. Once done, turn off the water supply again.




3~5 Min

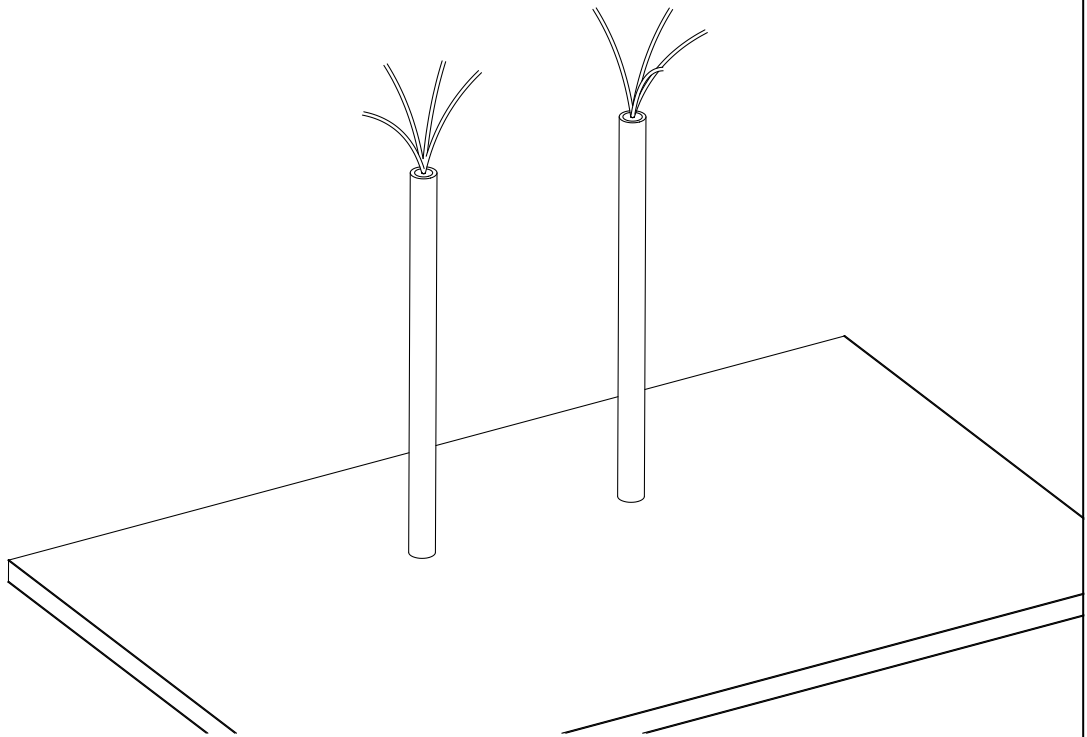


5.2 Place the spout into the hole on the mounting surface. From underneath, attach a rubber washer to the spout shank and secure it with a lock nut using a screwdriver.




5.3 Disassemble the hot and cold water valve assembly in preparation for the next installation step. Remove the screw cover from the handle and unscrew the set screw inside counter-clockwise with an Allen wrench. Then, remove the handle from the valve assembly.

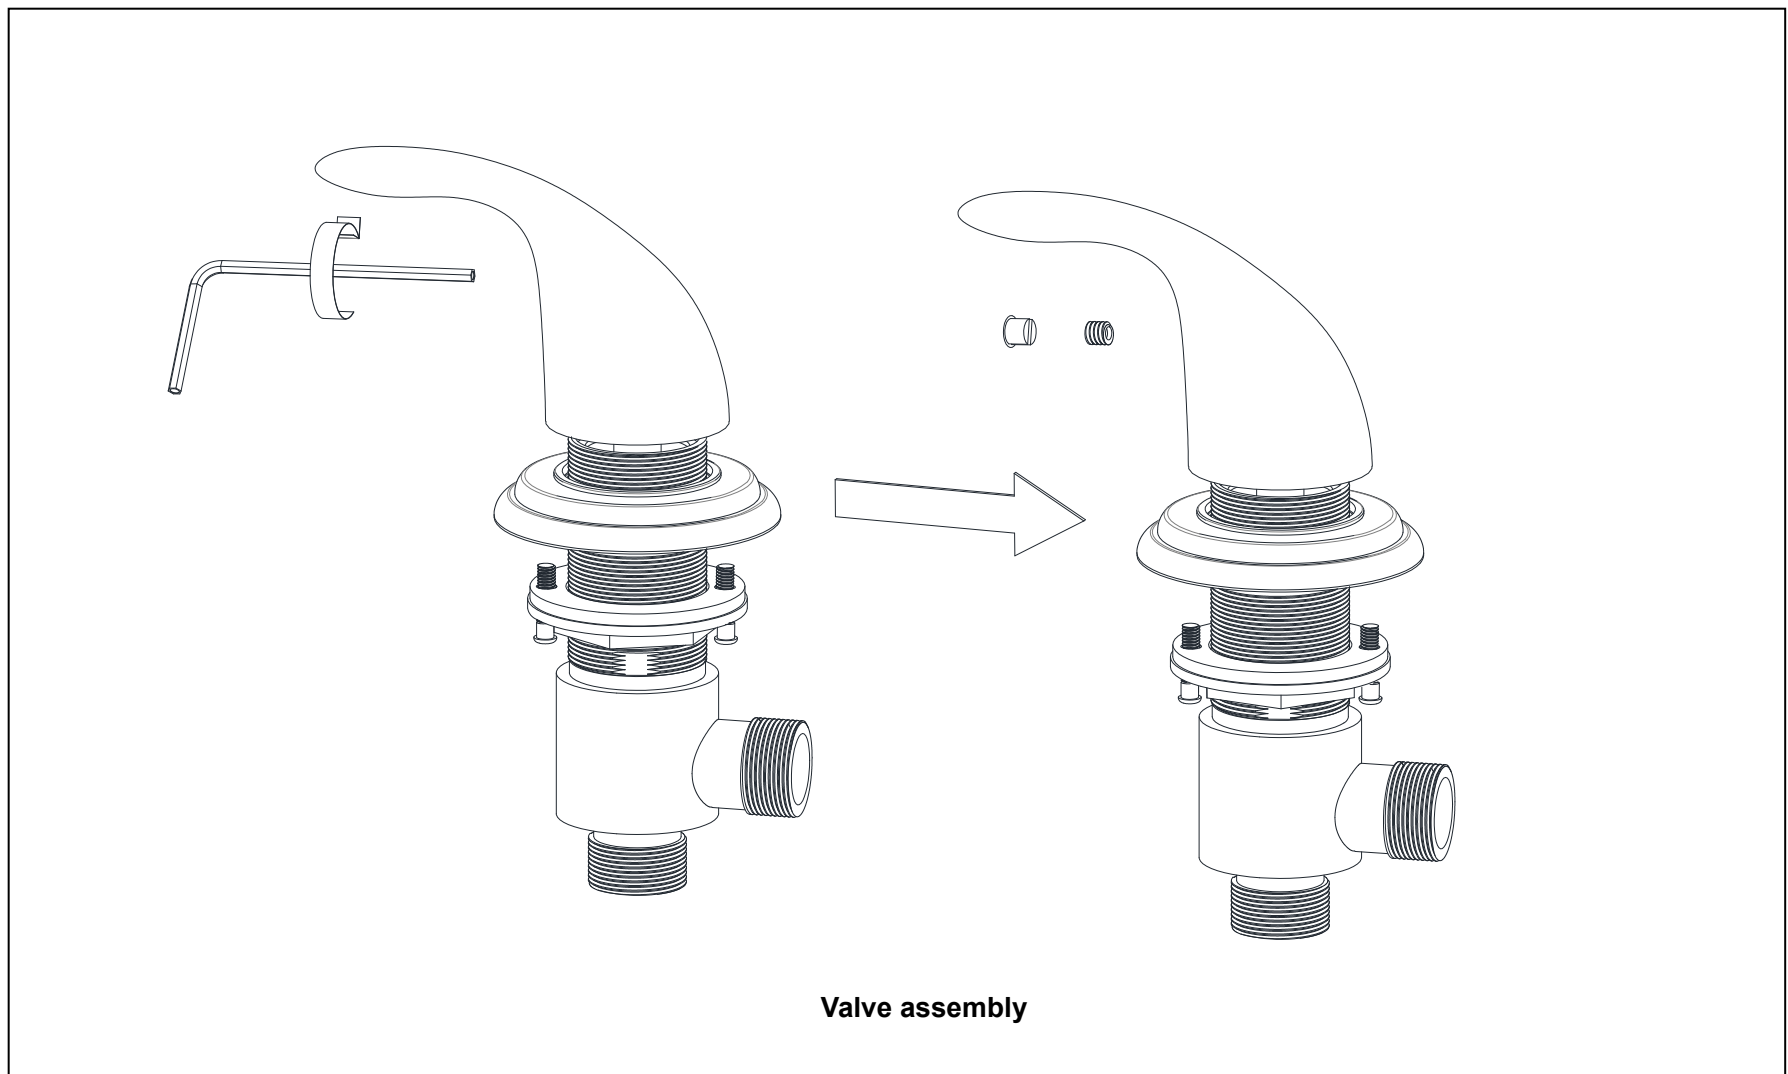


5.4 Position the valve body on the mounting surface and secure it from underneath with a rubber washer and lock nut using a screwdriver. Adjust escutcheons to the desired height as needed. Repeat this process for the cold valve assembly on the right.

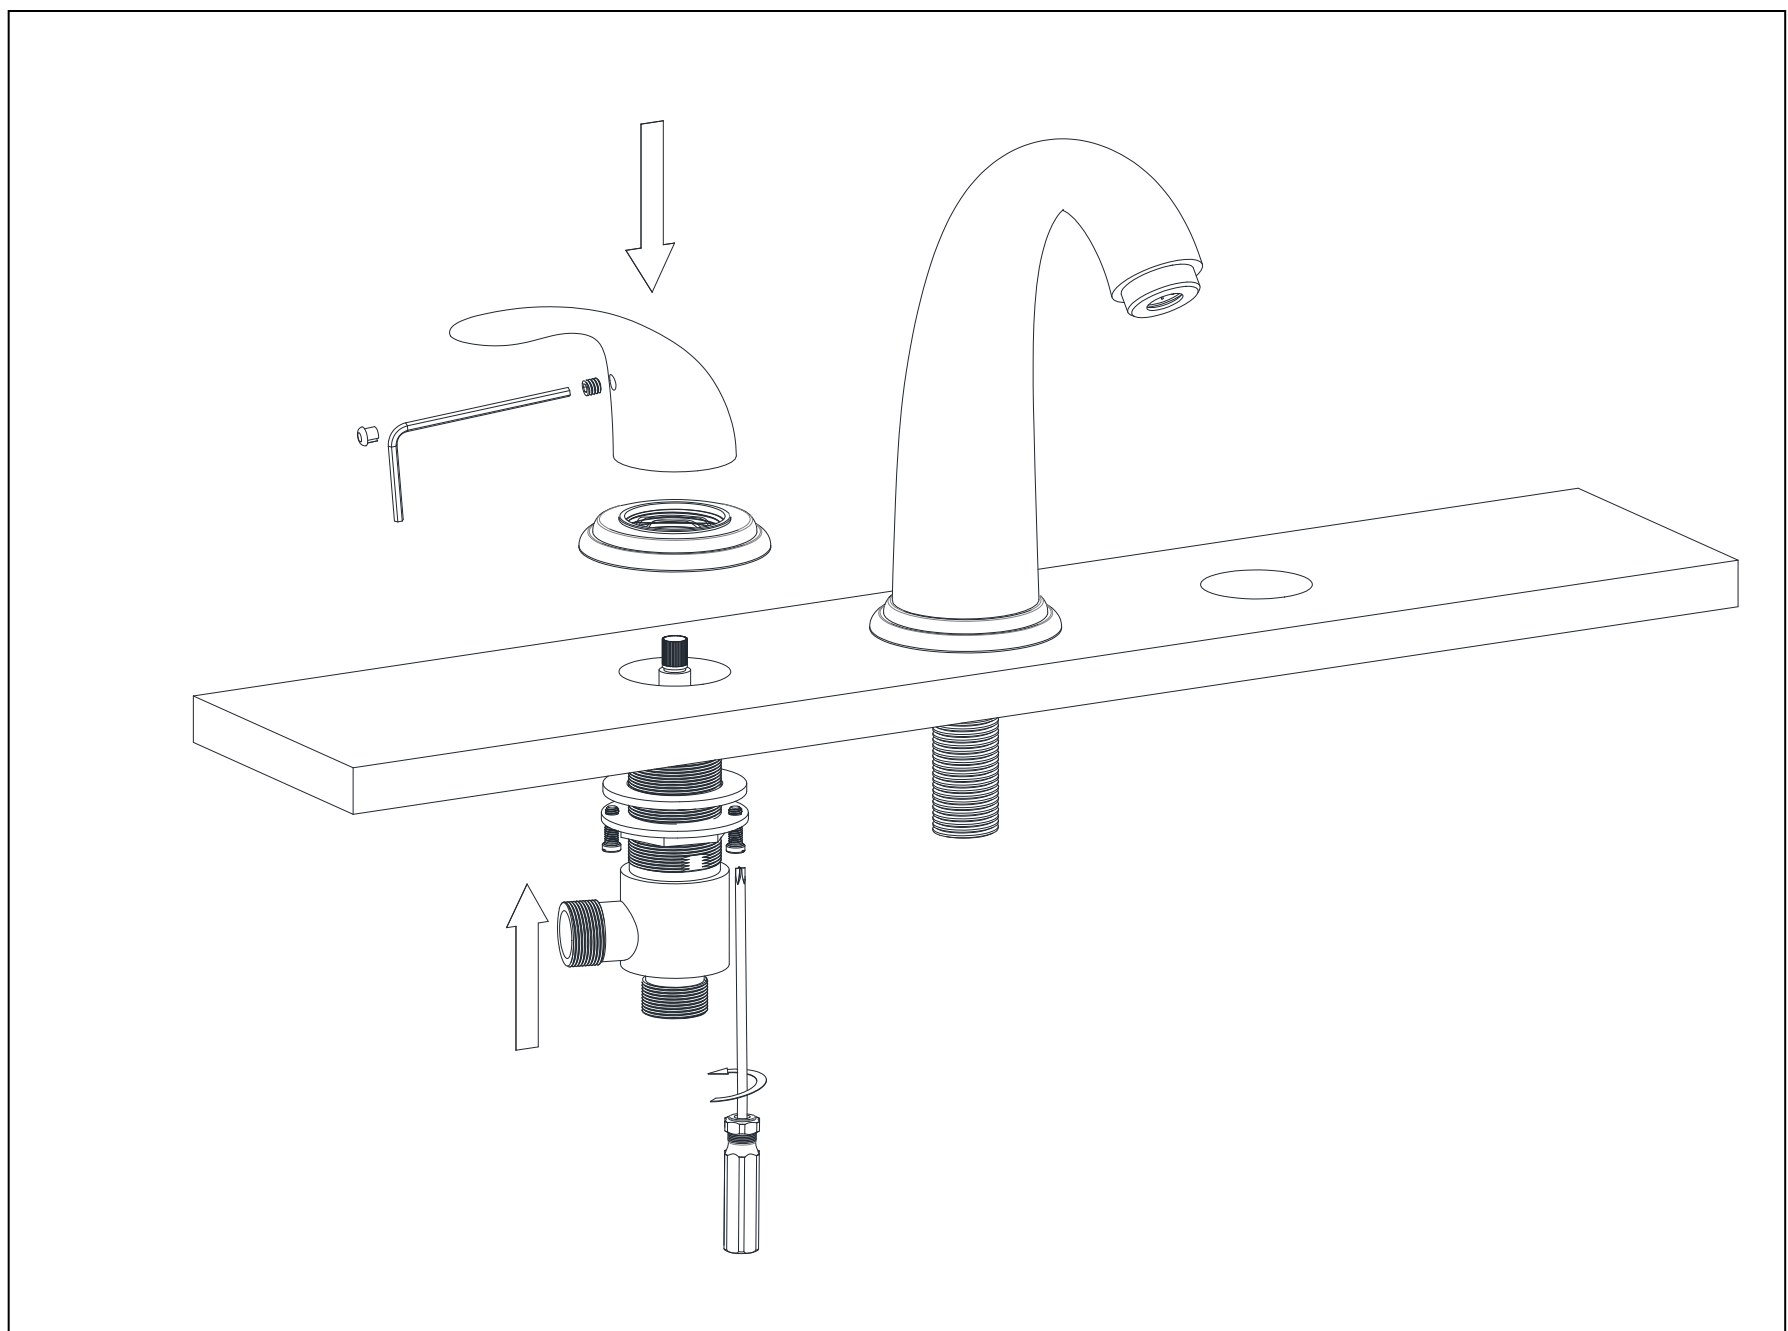


5.5 Insert the rubber washer into the T-tee to prevent water leaks.

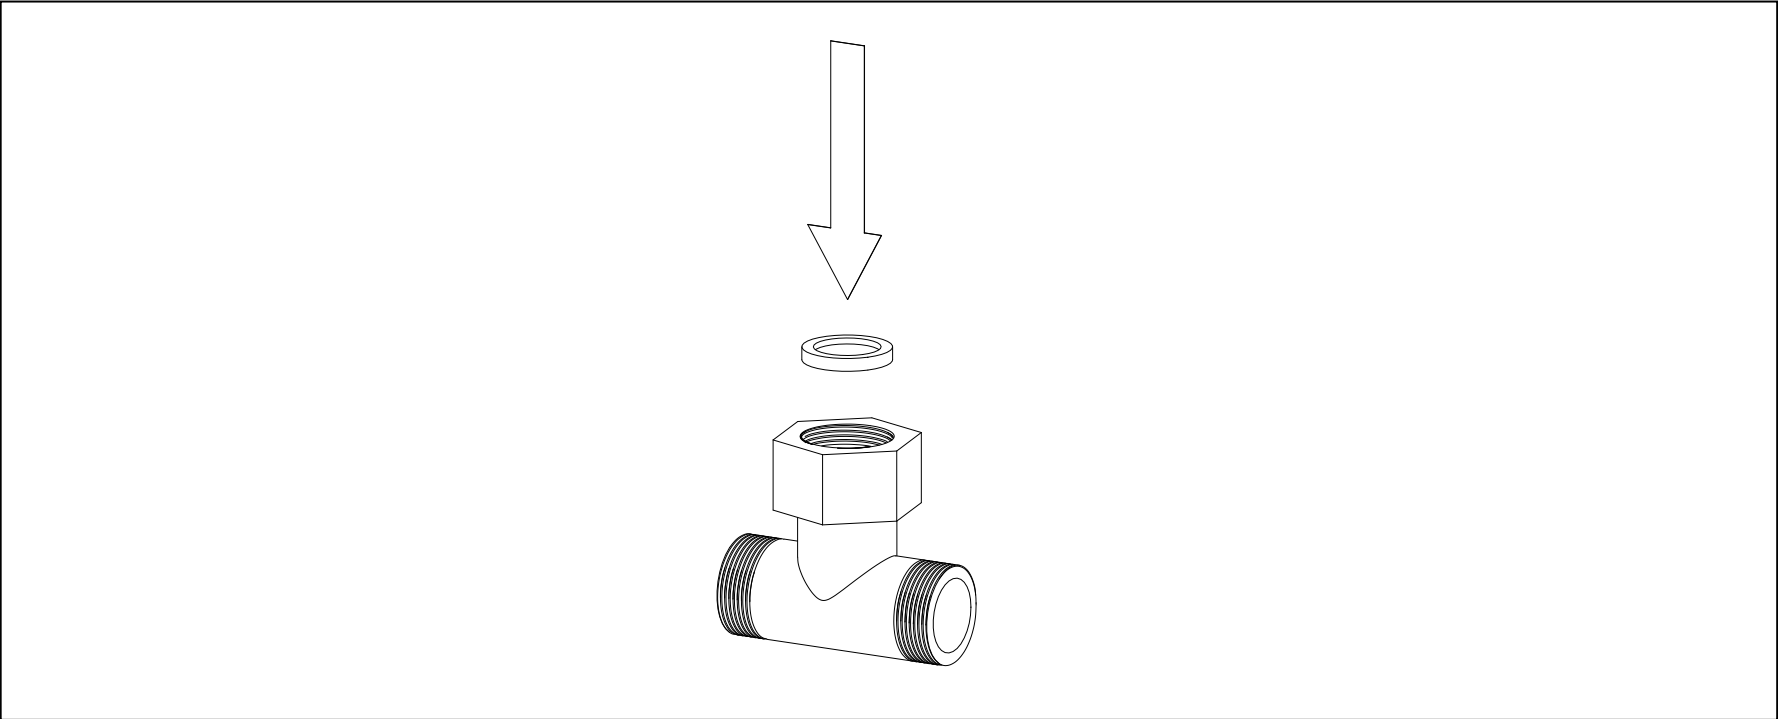



5.6 Screw the T-tee onto the spout shank.

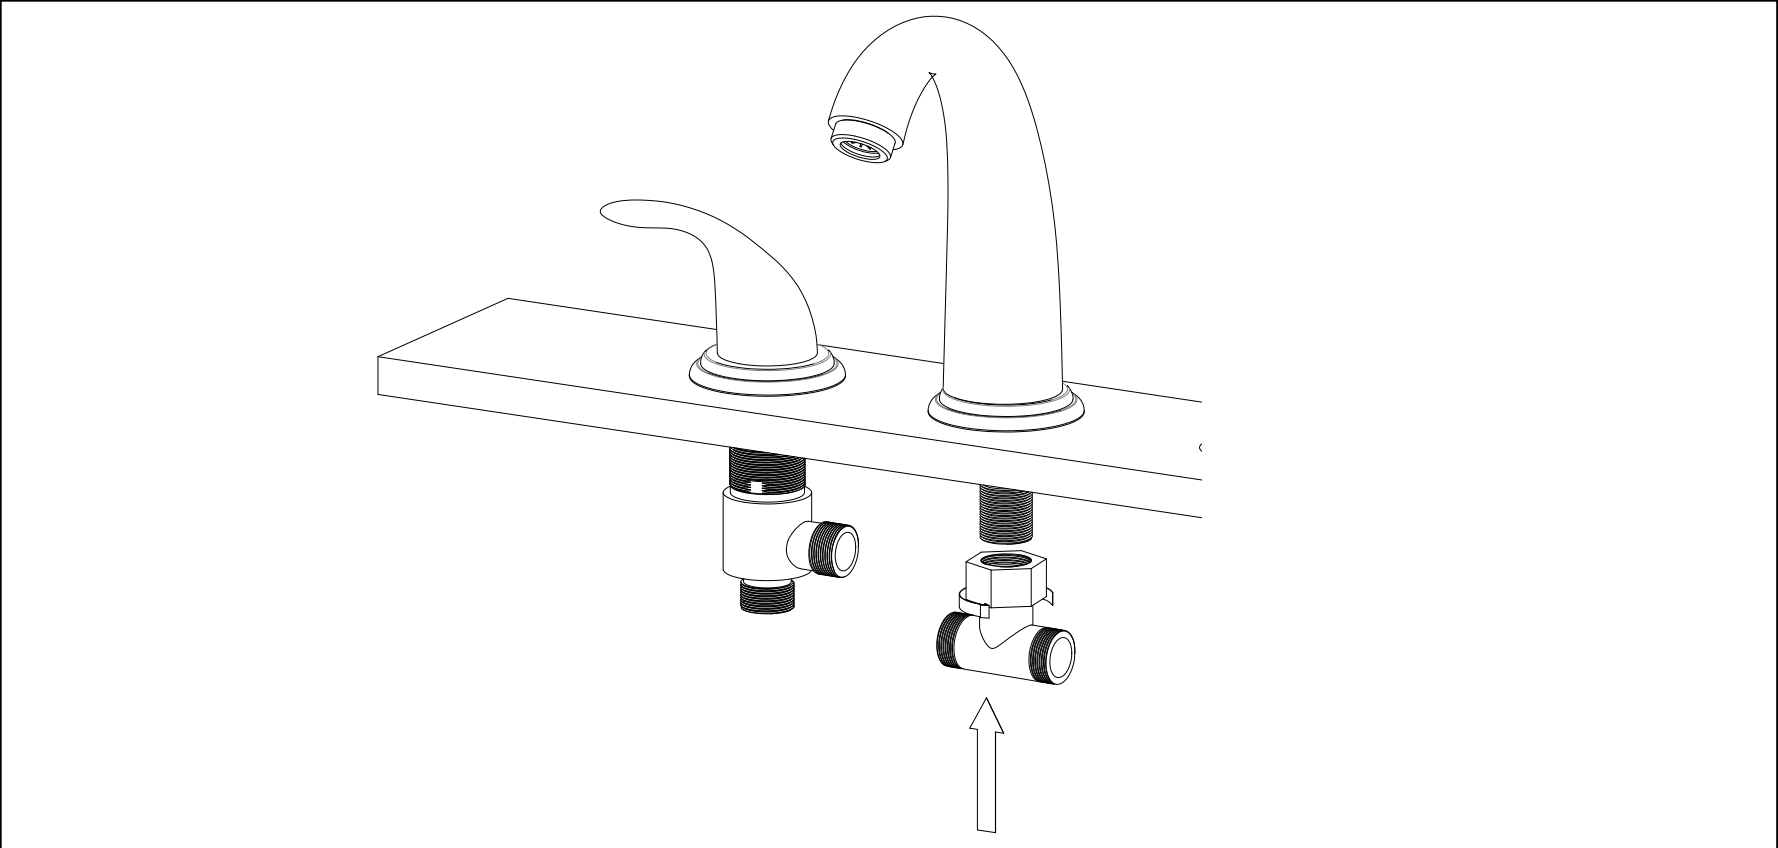

5.7 Connect the cold and hot water valve bodies to the T-tee using flexible hoses.

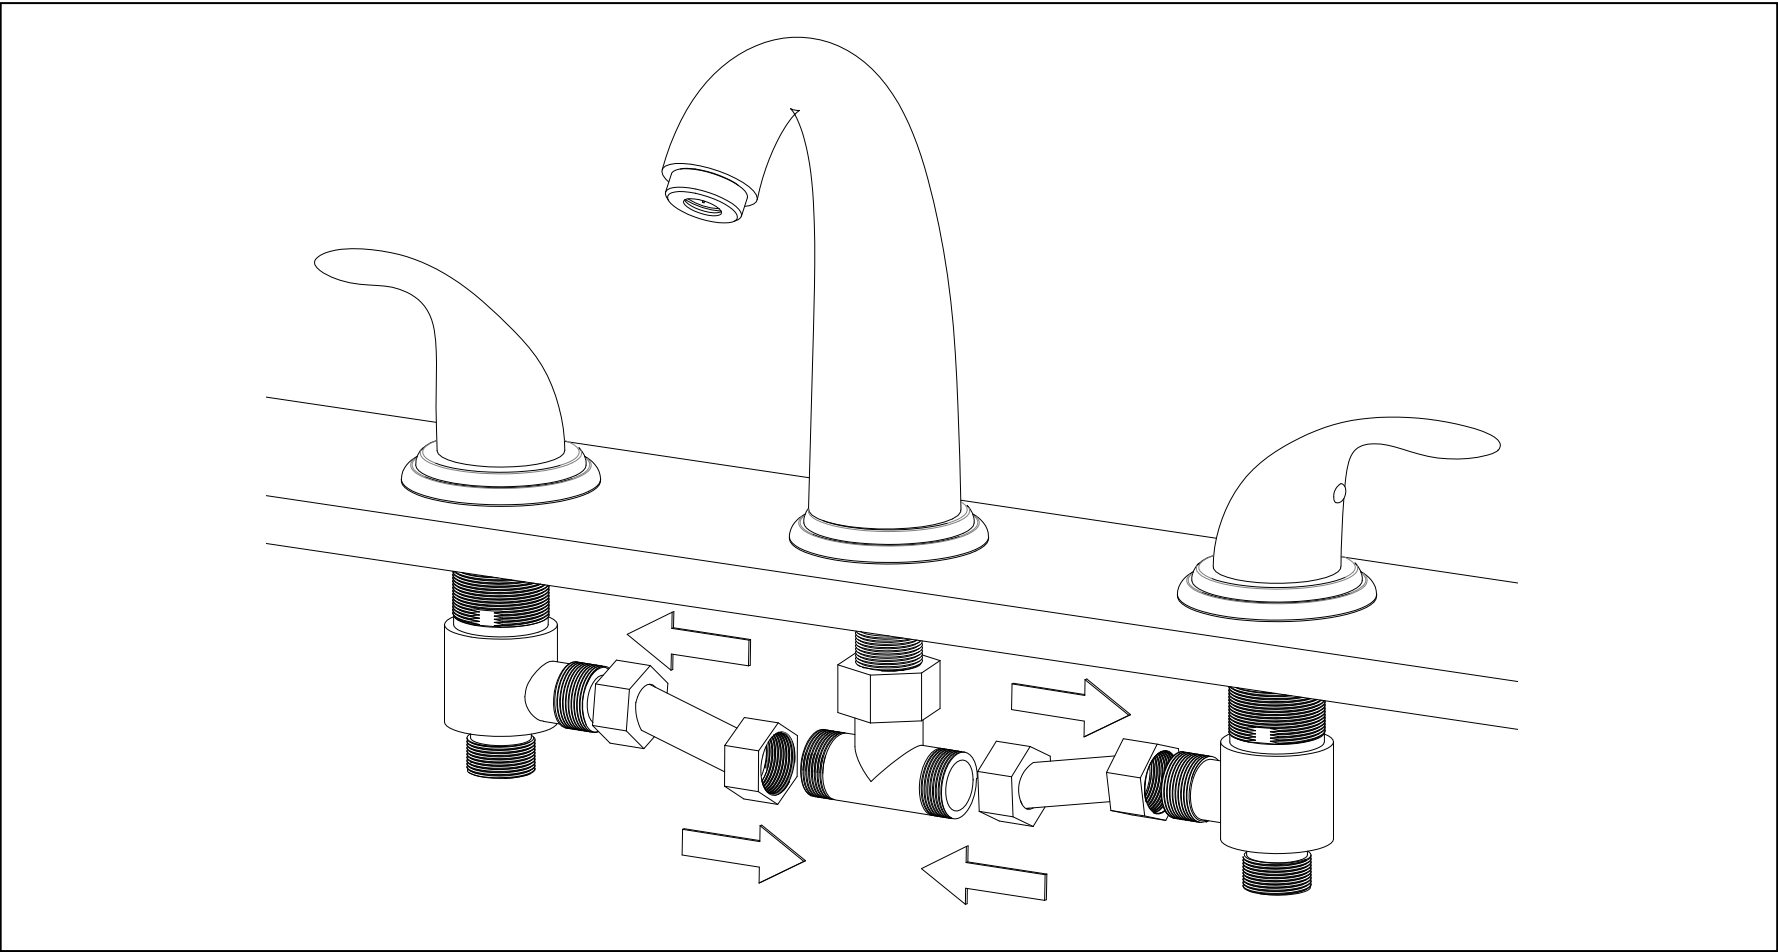

5.8 Individually connect the hot and cold water valve inlets to the stop valve using flexible hoses. The water inlet connections for both valve bodies are G1/2" (1/2 BSPP). Customers in the US and Canada may require an NPT-to-BSPP adapter for proper connection. If the appropriate hose for connecting the faucet to your stop valve is unavailable, contact Sumerain for assistance.

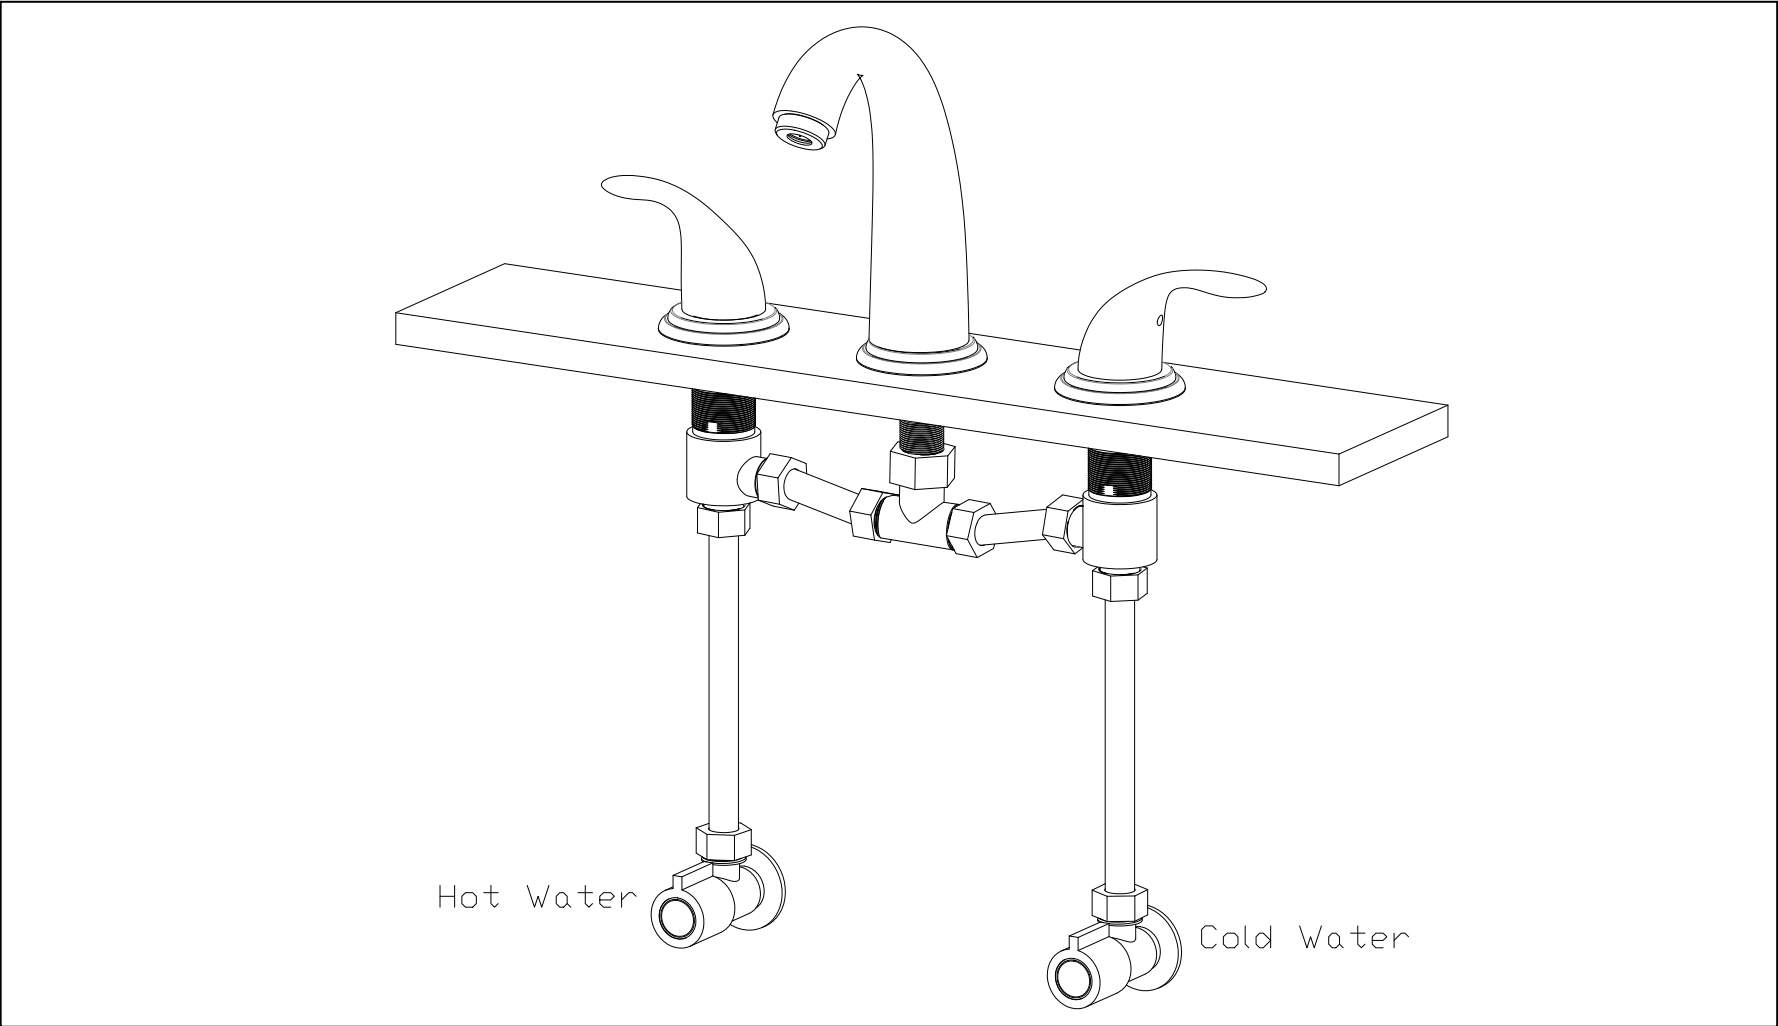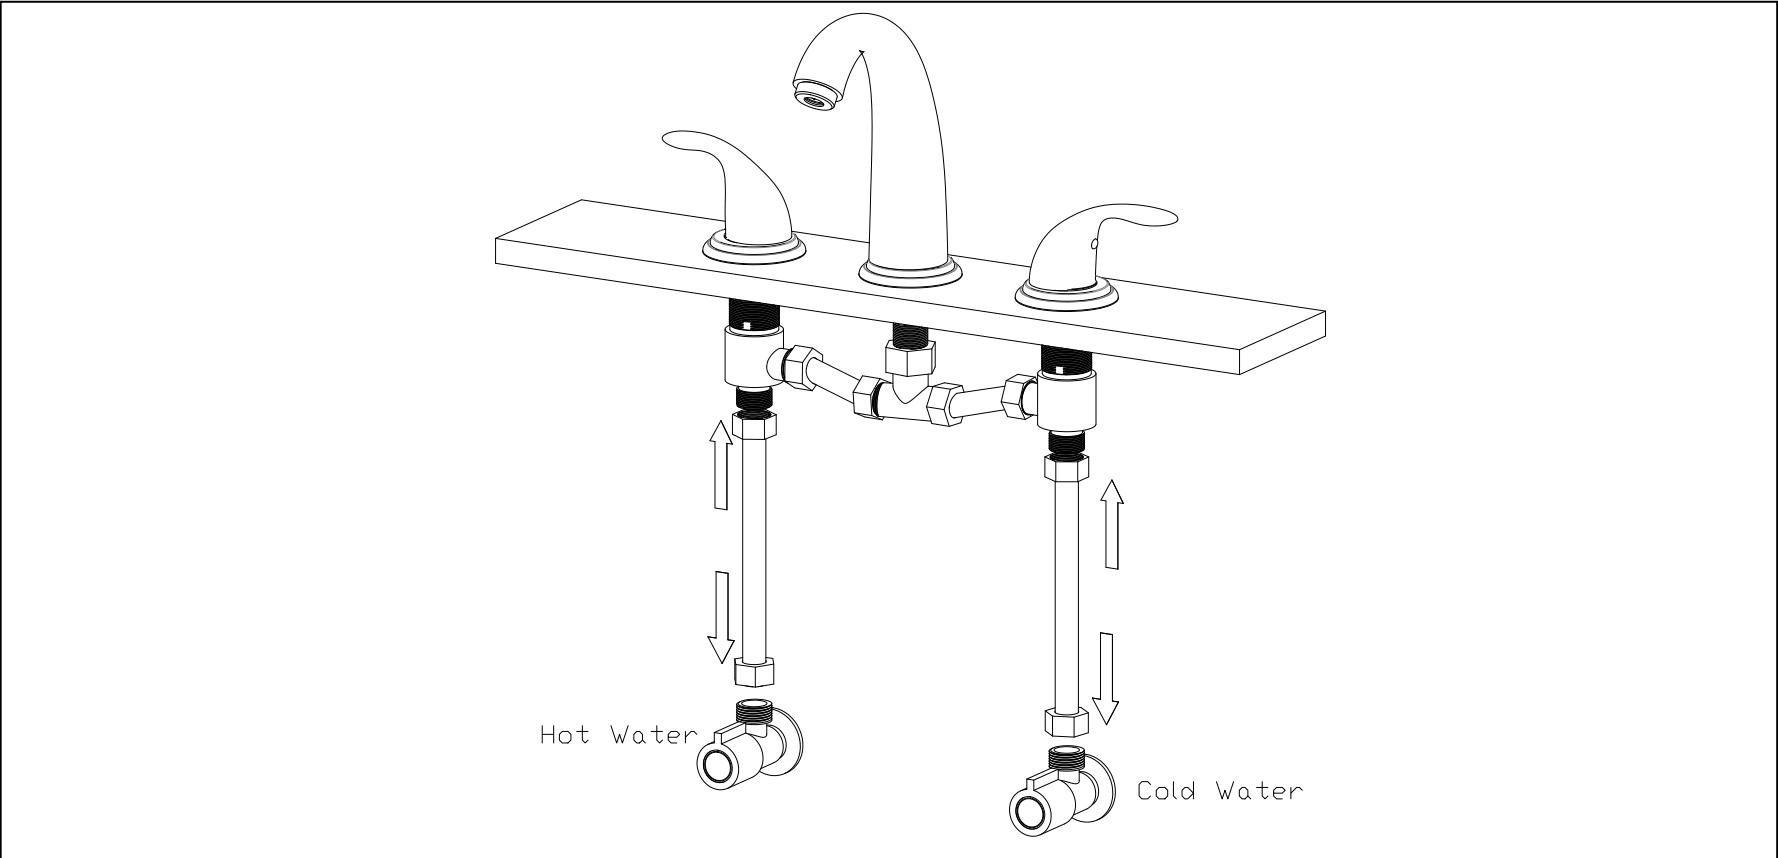

6. INSPECTION

Turn on the hot and cold water supply and check all connections to ensure there are no leaks anywhere.

INSTALLATION COMPLETED



North America	Europe	Asia
SUMERAIN INTERNATIONAL GROUP INC	SUMERAIN EUROPE SUPPORT TEAM	HONGKONG SUMERAIN SANITARY INDUSTRY CO., LIMITED
Add: 1400 Summit Ave, Suite A, Plano, TX 75074, USA	Add: Flottwellstr.15 10785 Berlin, Deutschland	Add: ROOM 14 2/F WELLBORNE COMMERCIAL CENTRE NO.8 JAVA ROAD NORTH POINT HK
Tel: +1-866-203-0866	Tel: +49 (0)30/23975898	Tel: +86-750-2731579
E-mail: support@sumerain.com	E-mail: support@sumerain.com	E-mail: support@sumerain.com