
Assembly Instructions

Dining Table

Before assembling, please read this instruction carefully and keep for future reference:

- 1. Refer to parts inventory for guidance and ensure you have all pieces before starting
- 2. Please check the condition of all the parts. If any damage or missing parts is found, please contact us immediately.
- 3. Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- 4. Be careful of the heavy board.
- 5. Handle with care and place all parts on a soft, clean and flat surface such as a carpet to prevent damaging/scratches.
- 6. Recommended # number of people needed for assembly: 2

List of parts/hardware:

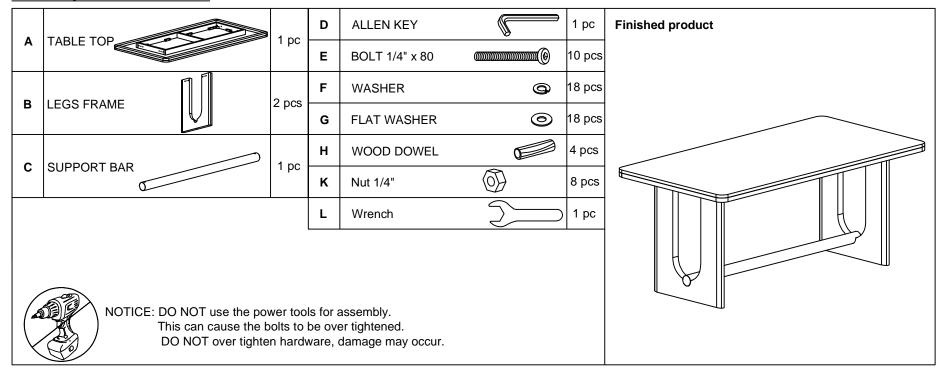


Maximum load capacity:


	MAX Load Capacity
Total weight capacity	180 LBS

Disclaimer: Install the Elys Dining Table unit following instructions provided. We and its related companies are not responsible for injury or damage resulting from incorrect installation or use. Product are for use only as Dining Table under included MAX Load Capacity and are not designed for any different purposes. Max load capacity only applies when all the legs are installed correctly and stand evenly on the floor.

Installation Steps:

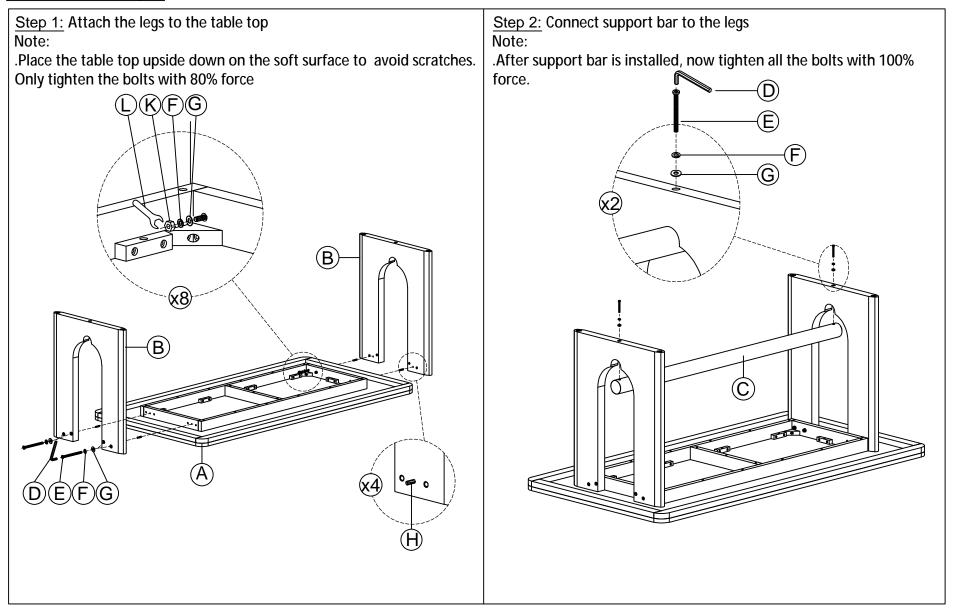

Installation Steps:

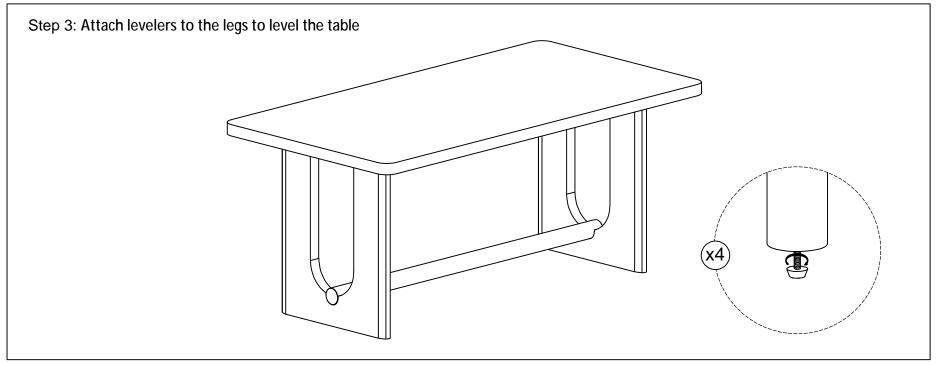

Care instructions:

- 1. Hardware may loosen over time. Periodically check that all connections are tight. Wipe with a soft, dry cloth. To protect finish, avoid the
- 2. use of chemicals and household cleaners. Any liquid spilled onto the table should be cleaned up immediately with a damp cloth.
- **3. Do not** put hot items directly on furniture surface.
- 4. **Do not** place furniture under direct sunlight.
- 5. <u>**Do not**</u> place furniture near heating or cooling vents.
- 6. **<u>Do not</u>** write on furniture without a padded barrier to protect the surface.
- 7. **Do not** place furniture outside. For indoor use only.
- 8. <u>Not</u> for commercial use. For residential use only.
- 9. Stains may be removed with mild soap solution and damp cloth.
- 10. Children should not climb or jump on the furniture.