
  
4 PERSON  
ASSEMBLY



UP TO 15 MIN.  
ASSEMBLY

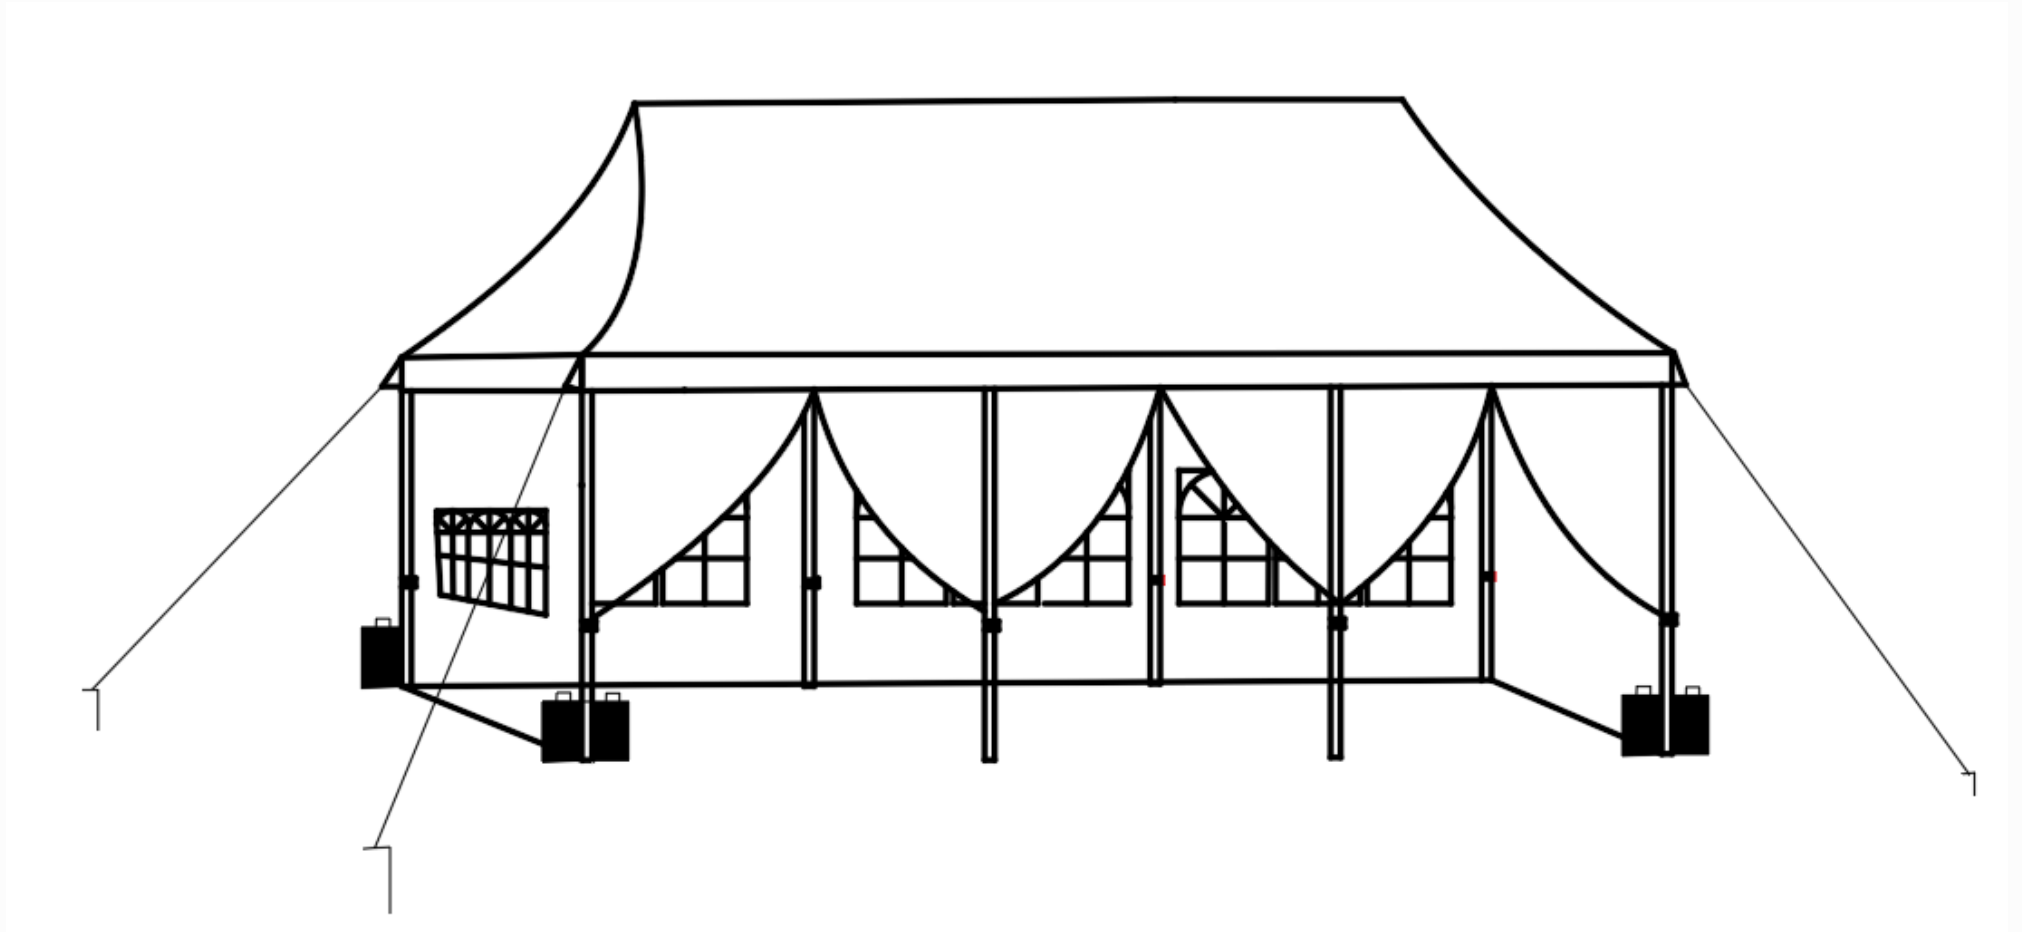


● English

## Pop-Up Canopy


### 1. OPENING THE POP UP GAZEBO

With a person on each end, lift and partially pull the Pop up Gazebo frame apart.

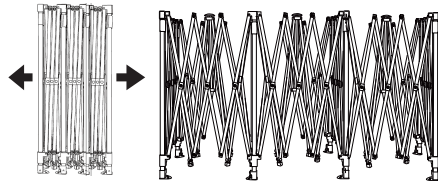


### 2. ATTACHING THE POP UP GAZEBO TOP

Unfold the Pop up Gazebo top and on top of the Pop up Gazebo frame. Secure the Pop up Gazebo top to the corners of the canopy frame using the velcro.

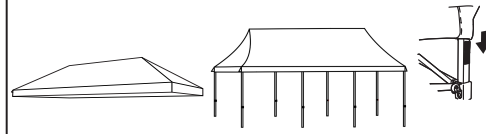


### 3. LOCKING THE FRAME

Engage the slider at each corner by pushing up with one hand while holding down the top of the leg with the other hand. A snap button will engage in the locating hole. Repeat this procedure on the other legs.

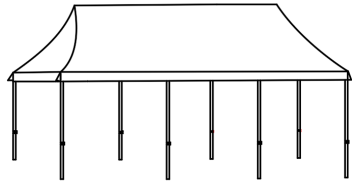


### 4. LOCKING THE CENTER FRAME

Push the center cross tube upwards to lock in the plastic piece is.

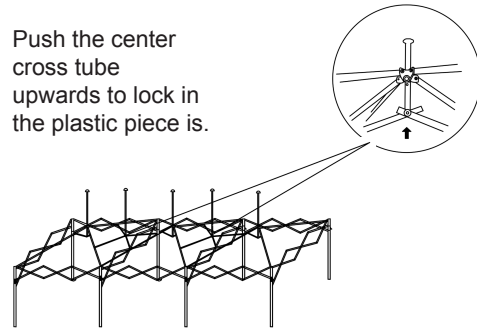


### 5. ADJUSTING THE POP UP GAZEBO HEIGHT

Press the red button on each leg and raise or lower to adjust the gazebo height.

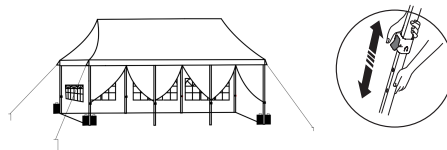


### 6. ATTACH THE SIDEWALLS

Attach the removable sidewalls by wrapping the Hook-and-loop fastener straps around the leg frames.

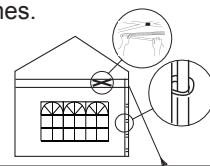


### 7. SECURING THE POP UP GAZEBO IN PLACE

Secure the Pop up Gazebo using the ropes and stakes. Attach the ropes to the ring at each corner and secure your Pop up Gazebo to the ground using stakes. Or simply push the stakes through the nail on each leg's foot plate into solid soil.

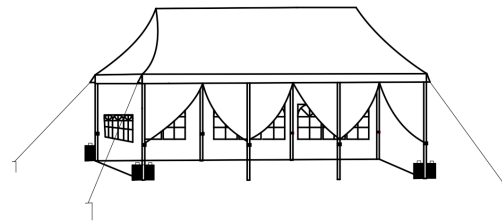


Canopy Frame × 1pcs

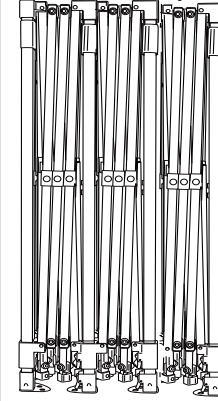

Canopy Top × 1pcs




Removable Rolling Bag × 1pcs

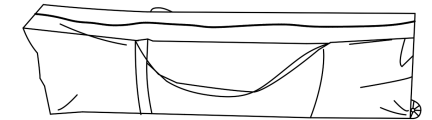


Sandbag × 4pcs



 Tent Stake × 12pcs




Rope × 4pcs

 

Zipper Sidewall × 3pcs



Sidewall with Window × 5pcs

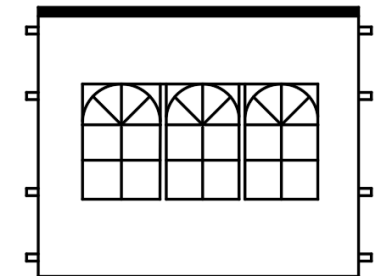

⚠ Warning! Do Not use under strong wind

MADE IN CHINA