

 
Assembly Instructions

DINING SET

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.

Caution: Please read the instructions thoroughly before assembly.







1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

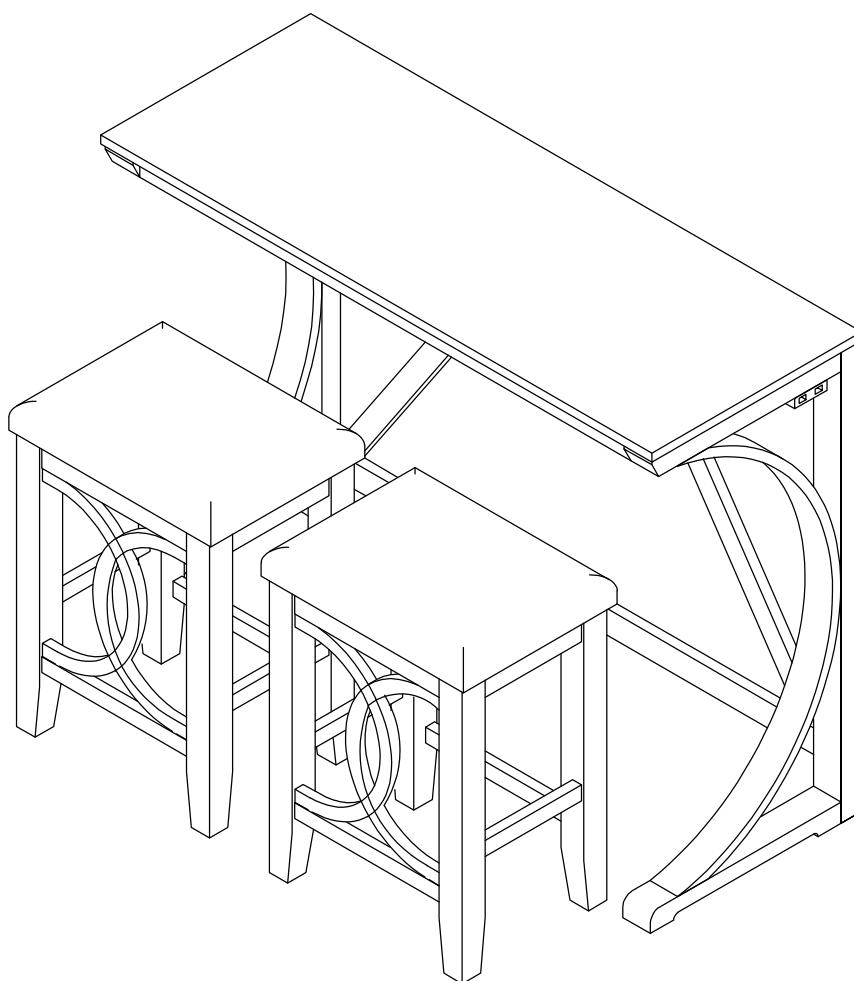



Assembly Instructions

DINING SET

      
PARTS LIST

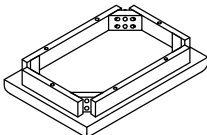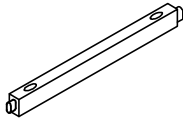NO.	COMPONENT	SKETCH	QTY.
A	SEAT CUSHION		2 PCS
B	BACK FRAME LEG		2 PCS
C	SHORT SIDE STRETCHER		4 PCS
D	LONG SIDE STRETCHER		2 PCS
E	FRONT LEG (RIGHT)		2 PCS
F	FRONT LEG (LEFT)		2 PCS

  HARDWARE LIST

NO.	COMPONENT	SKETCH	QTY.
1	FLAT WASHER 5/16" x 19 x 1MM DIA.		16 PCS
2	SPRING WASHER 5/16" DIA.		16 PCS
3	BOLT M8 x 50MM		16 PCS
4	WOOD SCREW #8 x 45MM		12 PCS
5	ALLEN WRENCH M4		1 PC

 ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

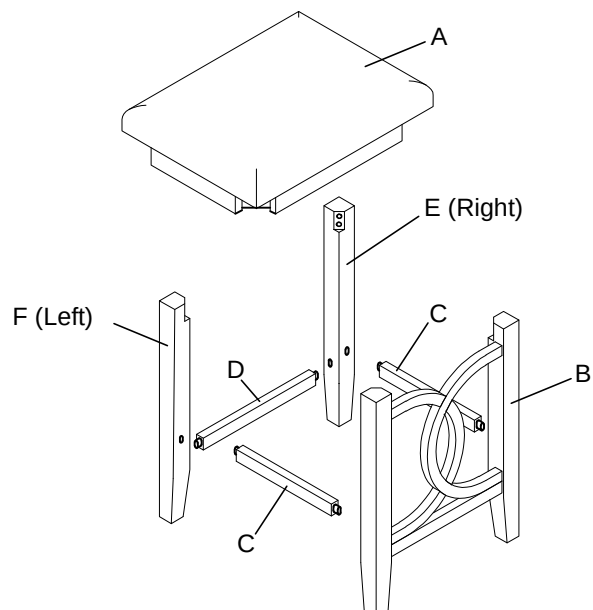

DINING SET

STEP 1

The diagram illustrates the first step of assembly: attaching the backrest (B) to the chair seat (A). A large arrow points down towards the seat. A circular inset shows the connection point where the backrest is attached to the seat. A circular inset labeled "X4" shows a close-up of the connection point, with numbered parts 1, 2, 3, and 5. Part 1 is a screw, part 2 is a washer, part 3 is a nut, and part 5 is a bolt. The inset shows the backrest being attached to the seat using these parts.

STEP 2

This diagram illustrates the second step of assembly. The main view shows a chair frame with a seat (A) and a backrest (B) that has a curved support. A horizontal bar (C) is being attached to the backrest. A circular inset provides a magnified view of the connection point, showing a hand using a screwdriver to tighten a screw (4) into a pre-drilled hole in the bar (C), which is being secured to a vertical frame member. The label 'X2' indicates that this step is repeated for the second side of the chair.

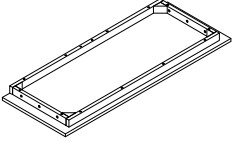
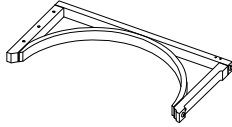
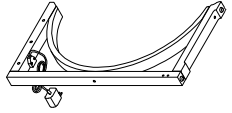
 
STEP 3

Diagram illustrating the assembly of the chair backrest (Step 3). The diagram shows the chair frame (A, B, C, D) and the backrest (E) being attached to the frame. The backrest is secured using screws (4) and a screwdriver (5). The assembly is shown in two views: a side view and a top-down view. The top-down view shows the backrest (E) being attached to the frame (A, B, C, D) using screws (1, 2, 3, 4, 5). The diagram is labeled "STEP 3" and "X4", indicating that the assembly is repeated four times.




Assembly Instructions


DINING SET

PARTS LIST

NO.	COMPONENT	SKETCH	QTY.
A	TABLE TOP		1 PC
B	FRAME LEG (LEFT)		1 PC
C	FRAME LEG (RIGHT)		1 PC
D	SUPPORT ROD		2 PCS
E	STRETCHER		1 PC

   HARDWARE LIST


NO.	COMPONENT	SKETCH	QTY.
1	FLAT WASHER 5/16" x 19 x 1MM DIA.		6 PCS
2	SPRING WASHER 5/16" DIA.		6 PCS
3	BOLT M8x 40MM		6 PCS
4	WOOD SCREW #8 x 45MM		6 PCS
5	ALLEN WRENCH M4		1 PC
	TIP KIT (2 SET)		2 PCS
			4 PCS
			2 PCS
			2 PCS

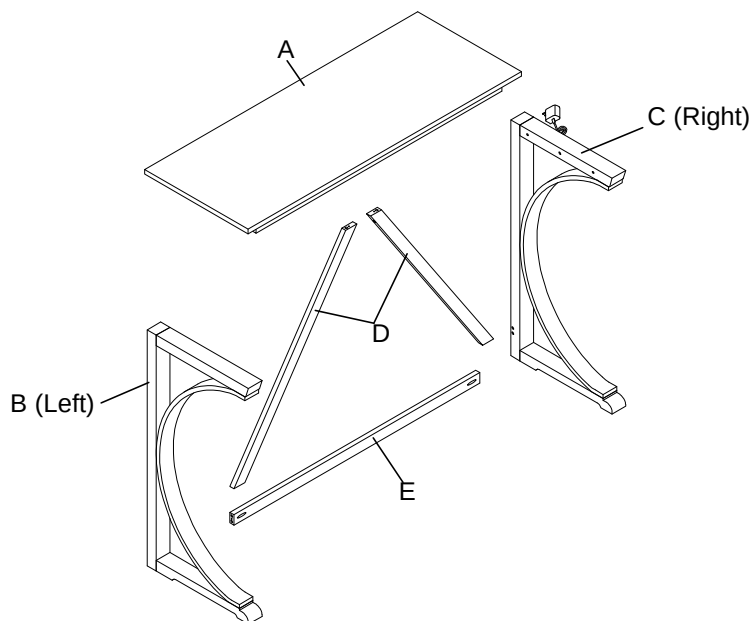 


Assembly Instructions

DINING SET

 STEP 1

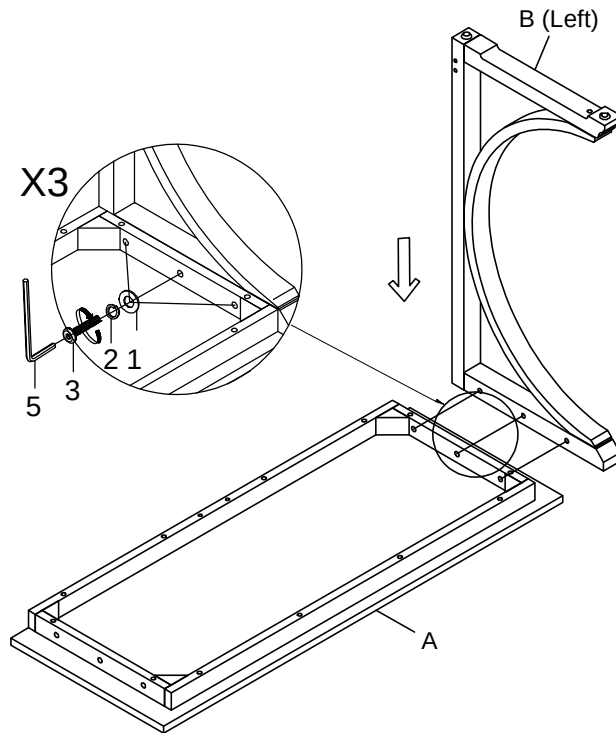

 
STEP 2

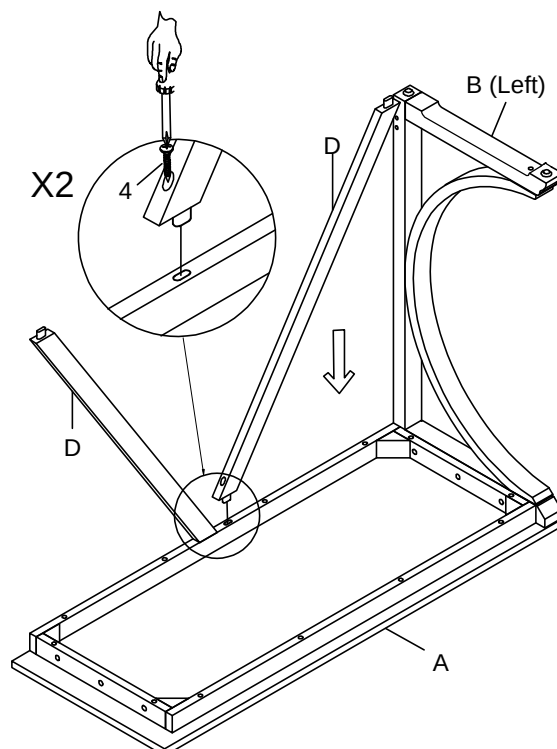


Assembly Instructions

DINING SET

 STEP 3

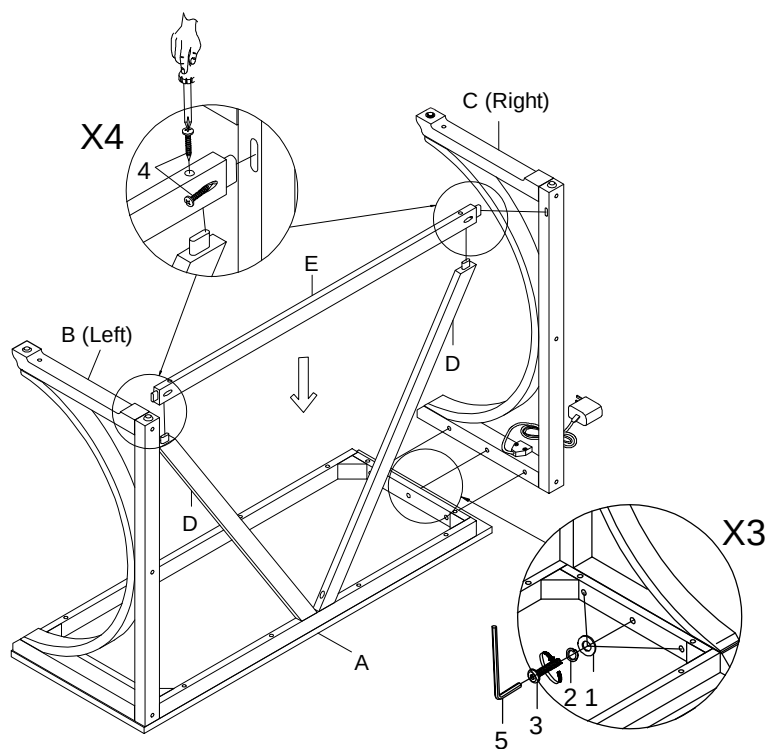

 STEP 4

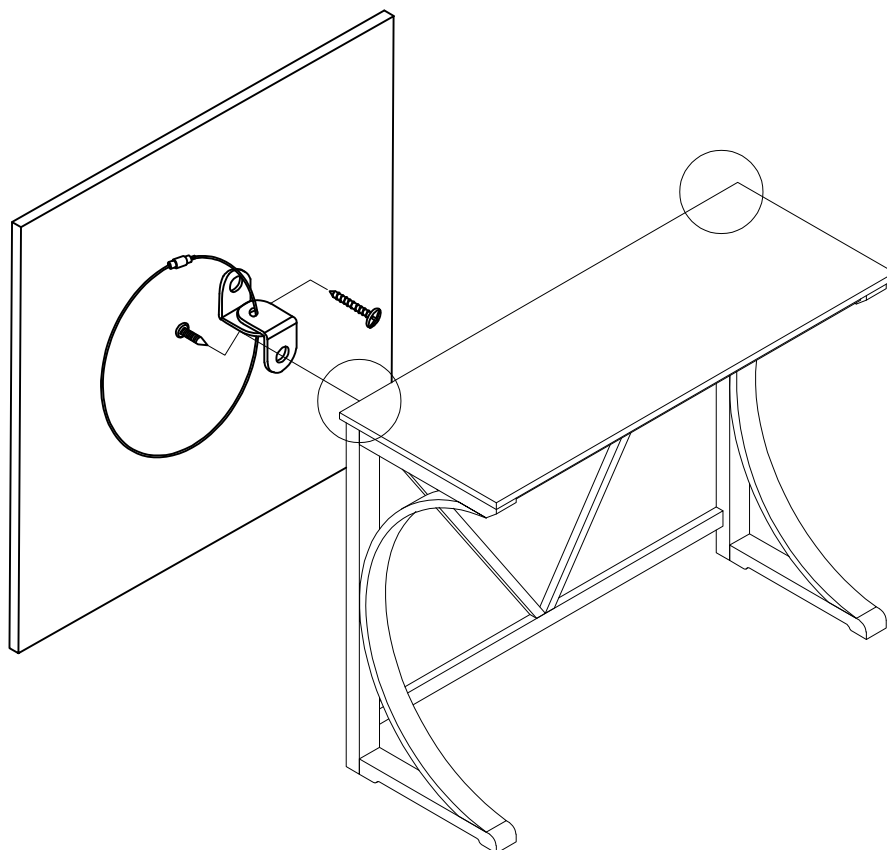

Assembly Instructions

DINING SET

