

ADULT ASSEMBLY REQUIRED

Model Number: 1491222
Sink/Dishwasher Combo

BIRD®IN®HAND

Woodworks, Inc.

Lancaster, Pennsylvania

A member of the School Specialty Family

Product Guide - General Instructions and Information

Customer Service:

P.O. Box 1579

Appleton, WI 54912-1579

Phone: 1-888-388-3224

Customer Care Website:

<https://help.schoolspecialty.com/s/>

Warning:

This product is for children.

Supervision is required at all times.

Warning:

Manufacturer is not responsible for modifications made to our products by customers.

Cleaning:

Use a mild soap and water solution. Be sure to wipe all water from the wood surface.

Important:


Do not discard these instructions. Keep for future reference.

STEP 1: Attach the supports to the counter top using the cam and dowels provided. Start by inserting two dowels into the top panel holes. Place a support over each dowel so that the large holes in the supports are facing each other.

STEP 2: Insert a metal cam into the large holes in the supports.

Important: Make sure the small arrow on the cam is pointing towards the drilled edge!

STEP 3: Tighten each cam using a #2 phillips head or straight tip screwdriver. Insert and turn the screwdriver clockwise until it stops. (Approximately 1 full turn) The cam arrow should now be pointing away from the counter top.

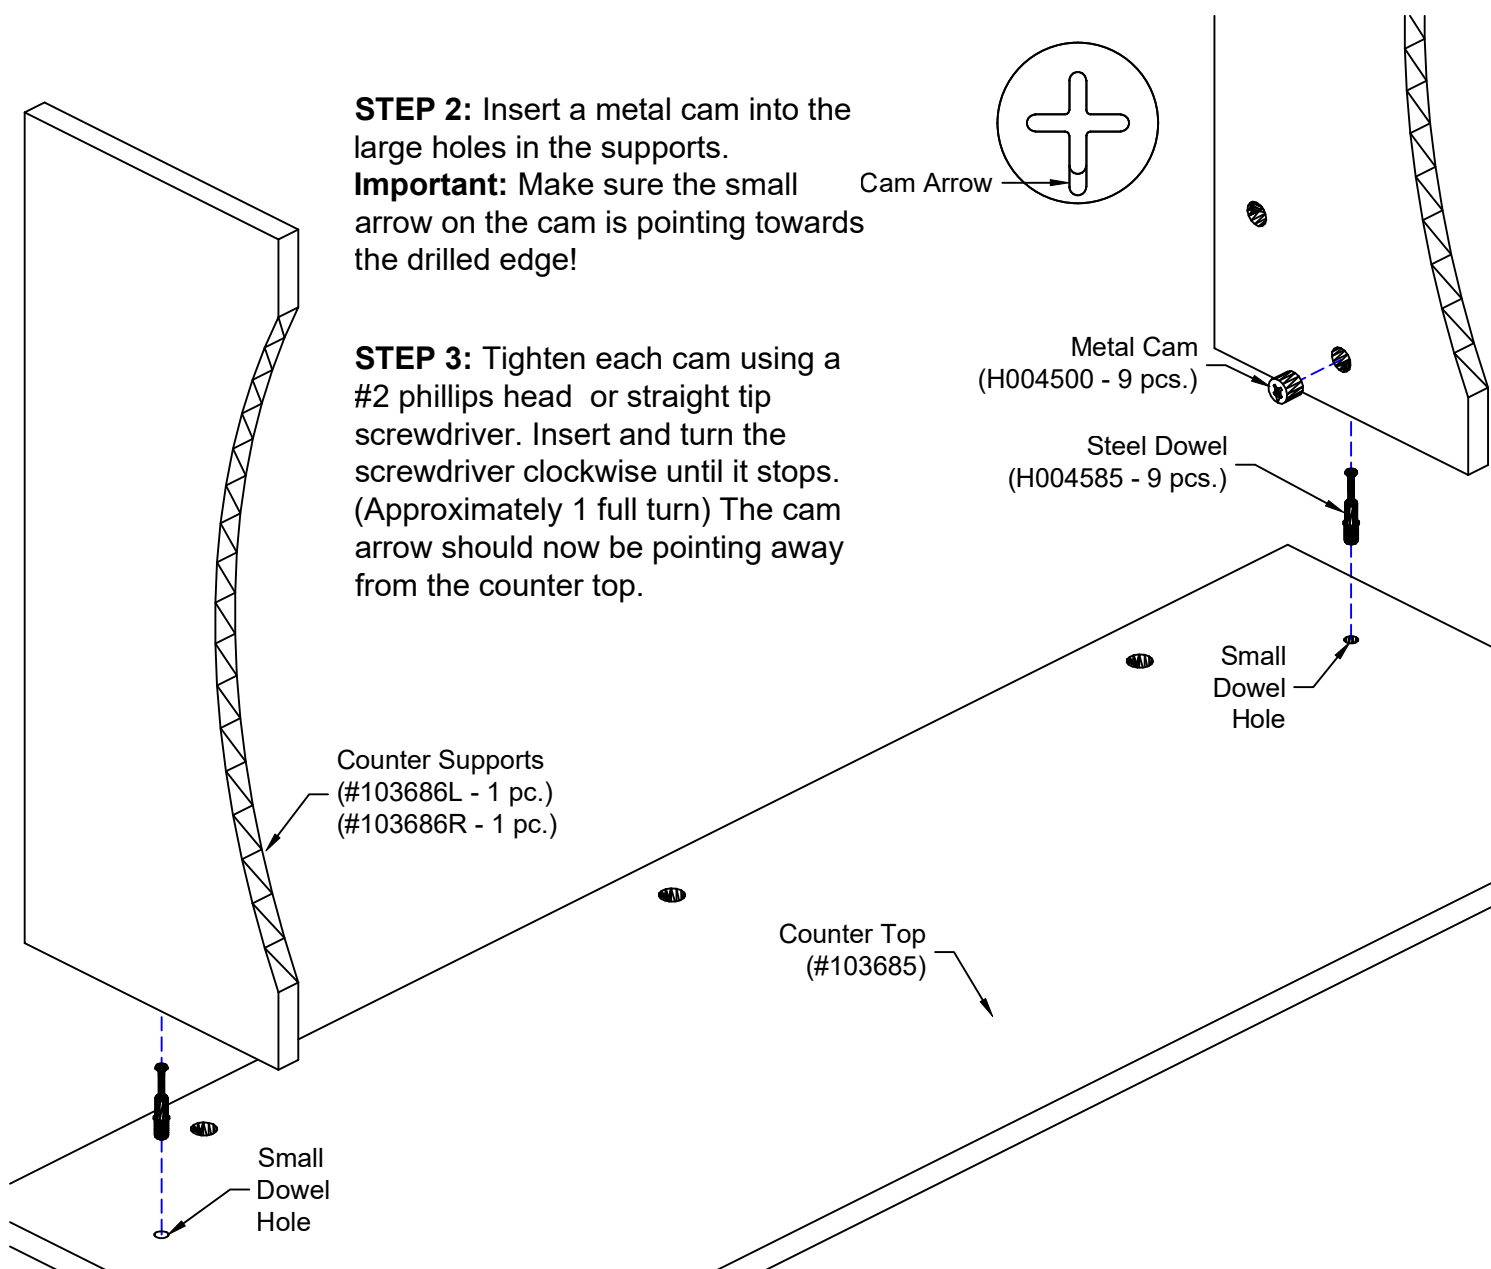

ADULT ASSEMBLY REQUIRED

BIRD•IN•HAND
Woodworks, Inc.

 
Lancaster, Pennsylvania
A member of the School Specialty Family

Product Guide - General Instructions and Information

STEP 4: Attach the counter assembly to the kitchen unit. To begin, **CAREFULLY** lay the kitchen unit on it's front face (shown below) so that the back panel is facing up. Insert the remaining 7 steel dowels into the holes of the back panel. Align the pre-drilled holes in the edges of the counter and support assembly over the dowels, and gently push down until the entire assembly is tight against the back panel.

STEP 5: Press the metal cams into the corresponding holes with the cam arrows pointing towards the back panel. Using a #2 phillips head or straight tip screwdriver, turn each cam clockwise approximately 1 full turn until tight. Once all of the cams are tight, lift and turn the entire kitchen unit so it's back on it's base.

IMPORTANT! Periodically check the counter and support cams for tightness! Do not use the kitchen unit unless counter is secured properly!

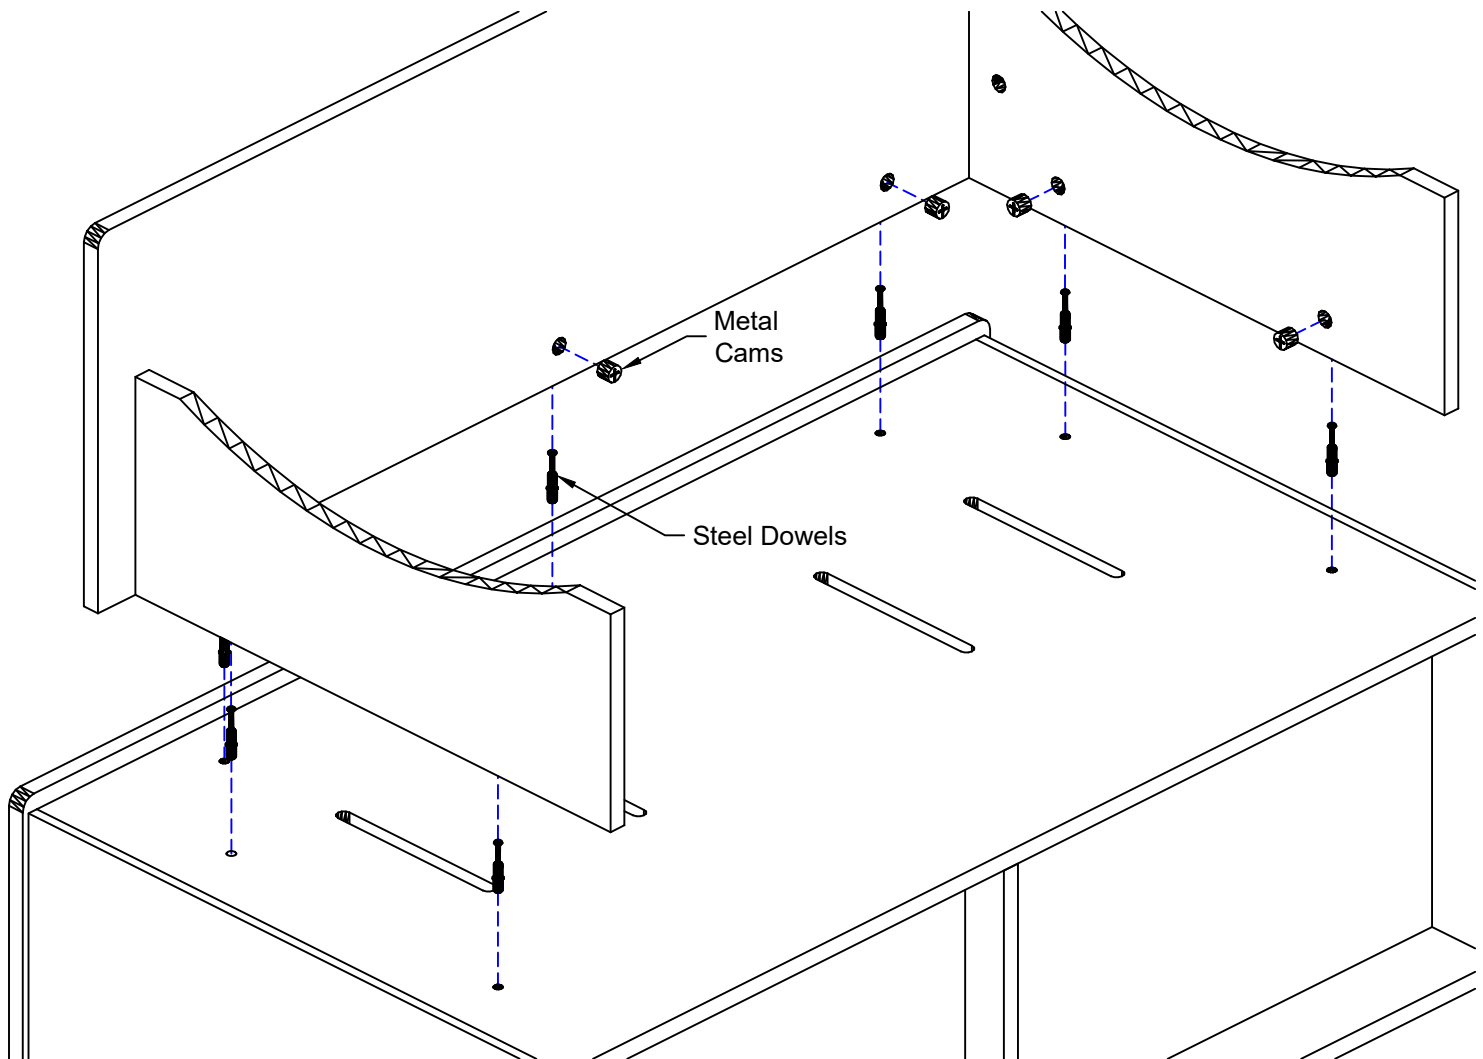

Other Replacement Parts:
Sink Bowl - #H001350
Faucet - #H001190
Dish Strainers: #H006220