 
 
 
 
 
 
 
 
 

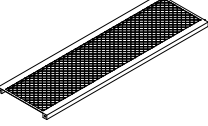 
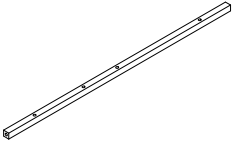 
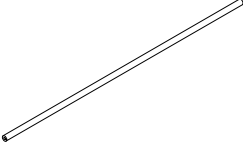 
 
 

Assembly Instructions


 
 

 


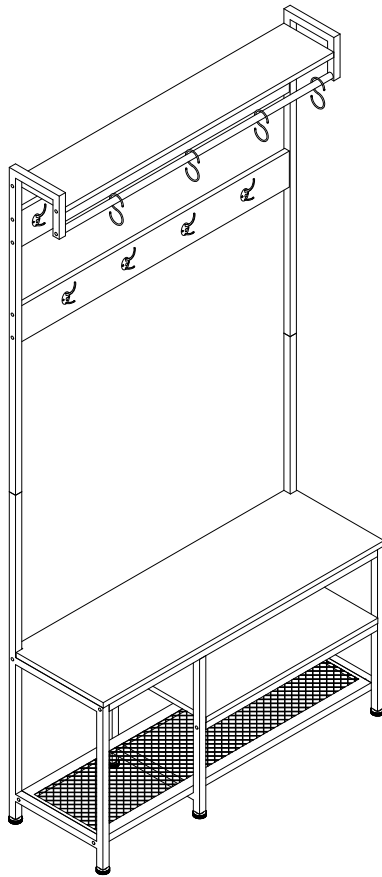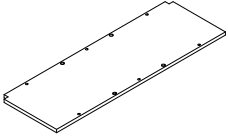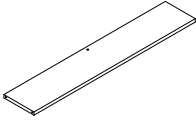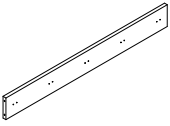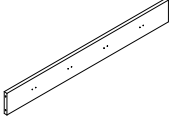




C240219S



Parts & Hardware List

				
1 1pc	2 1pc	3 1pc	4 1pc	5 1pc
				
6 1pc	7 1pc	8 1pc	9 2pcs	10 1pc
				1 1pc
11 2pcs	12 1pc	13 2pcs	14 2pcs	1 1pc


 
Parts & Hardware List

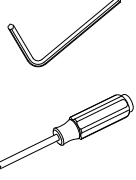 B 12pcs	 F 10pcs	 H 16pcs	 P 18pcs	 N 8pcs
 X 9pcs	 Y 4pcs	 Z 6pcs	 Z 1pc	

 
 
1

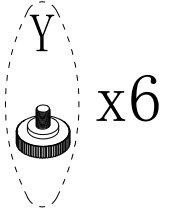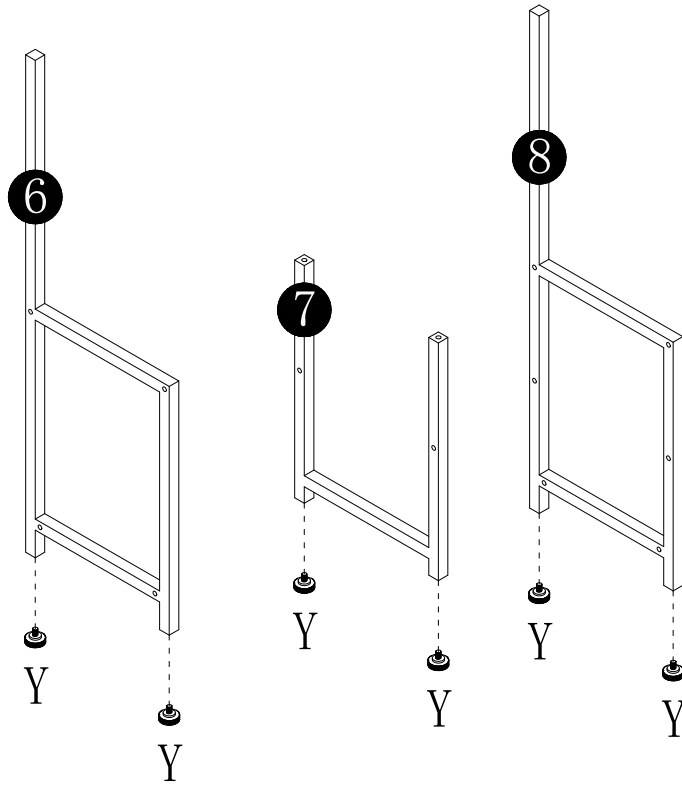



2

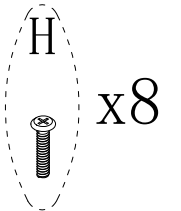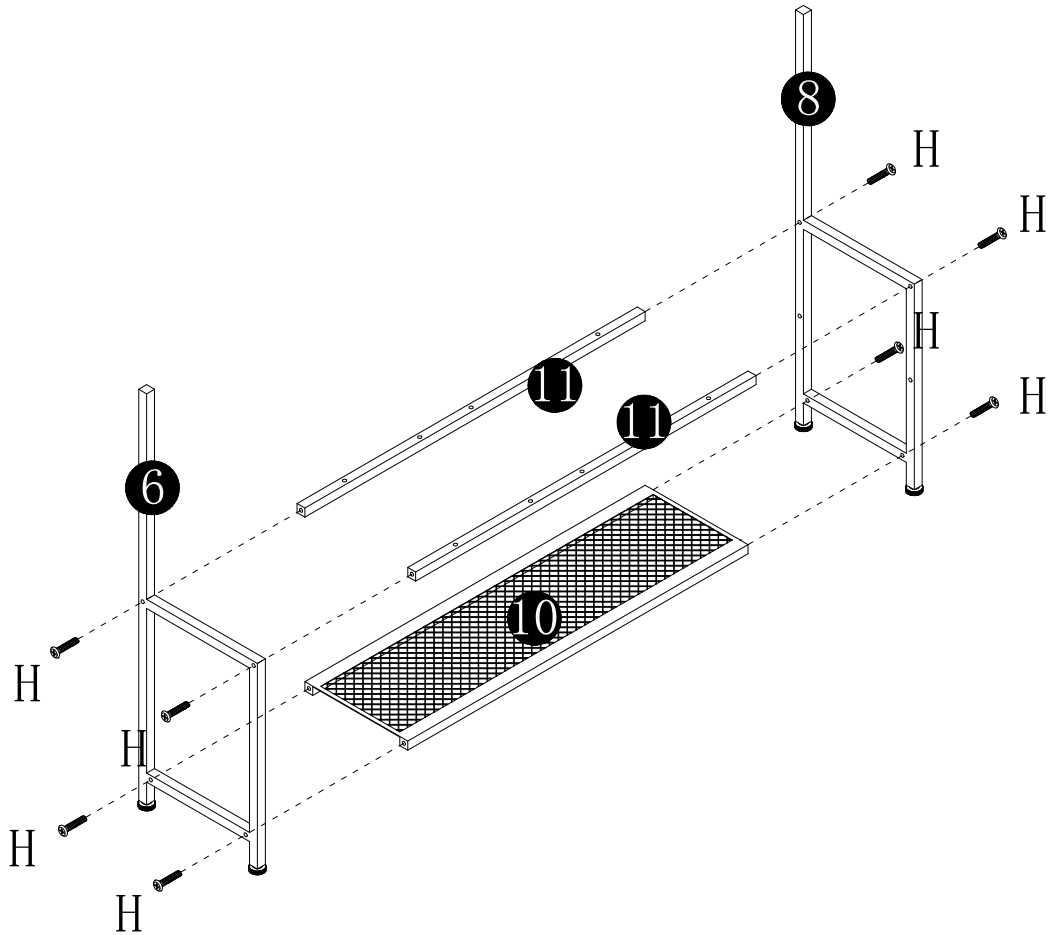  



3

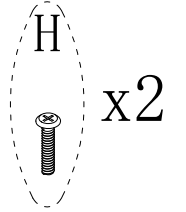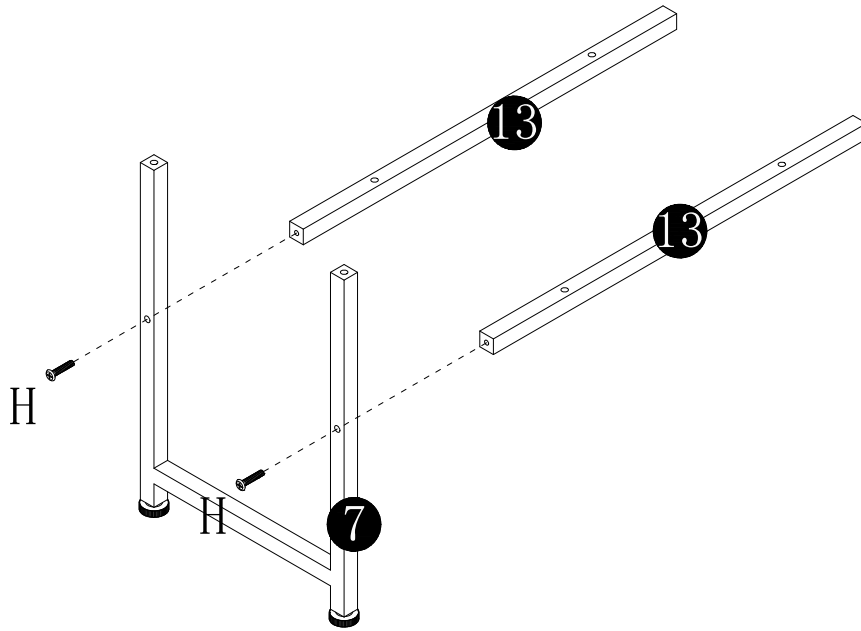  



4

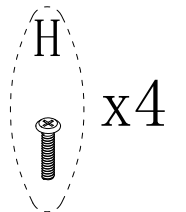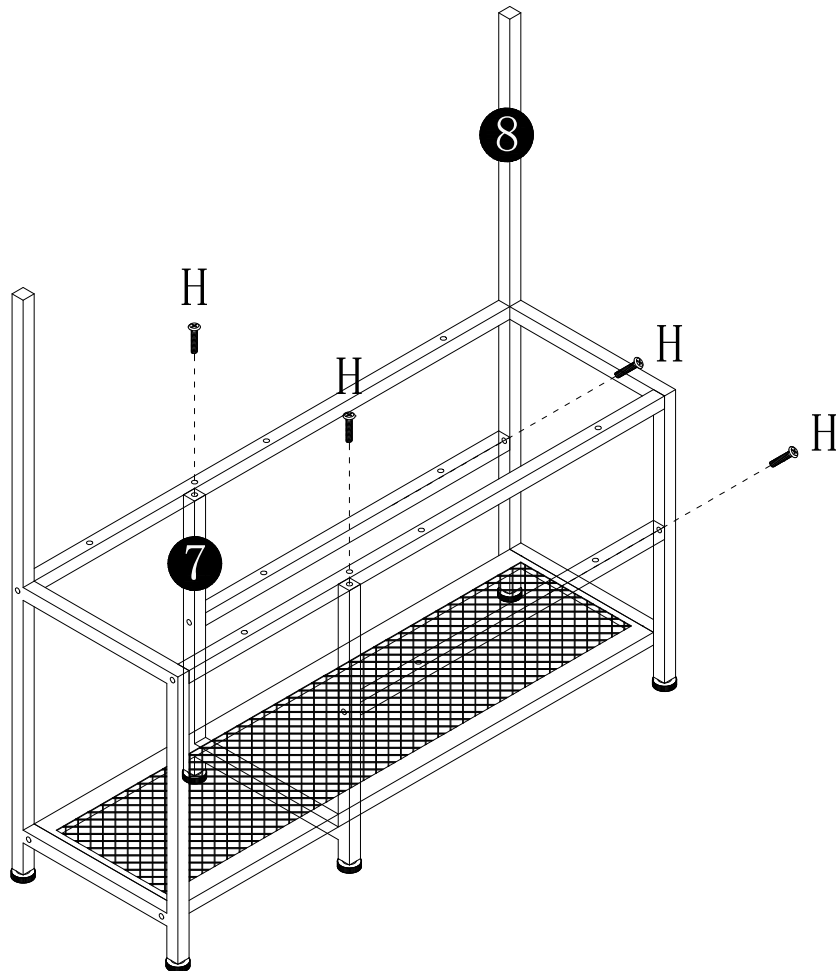  


5

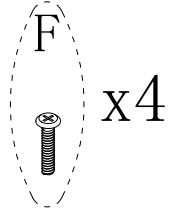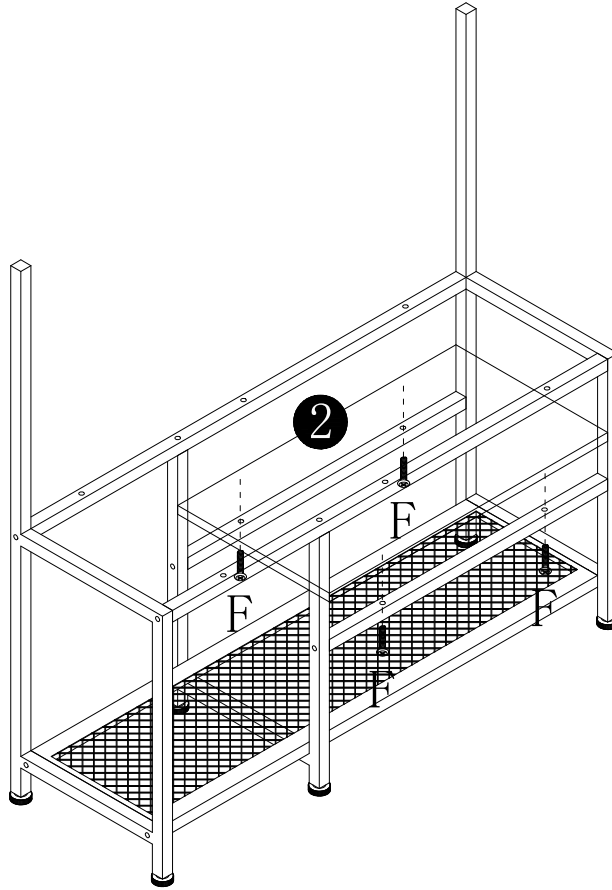  

6

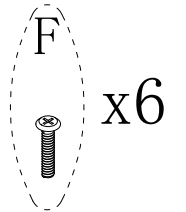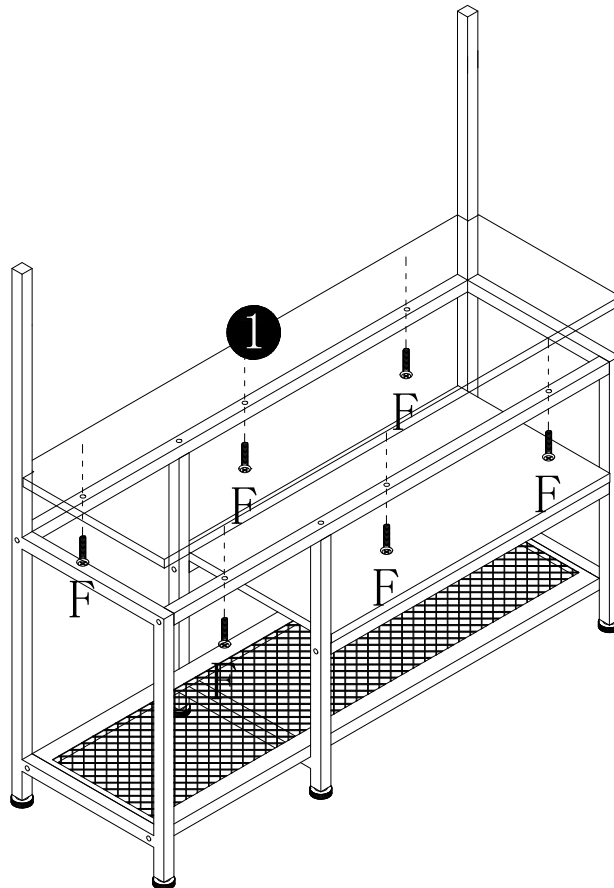  


7

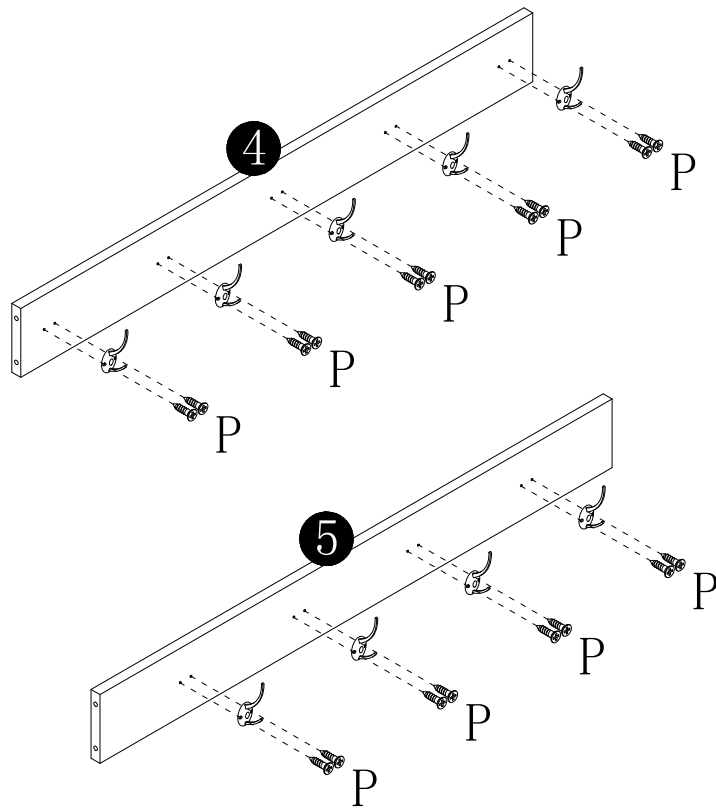 


- P x18
- K x9

 8

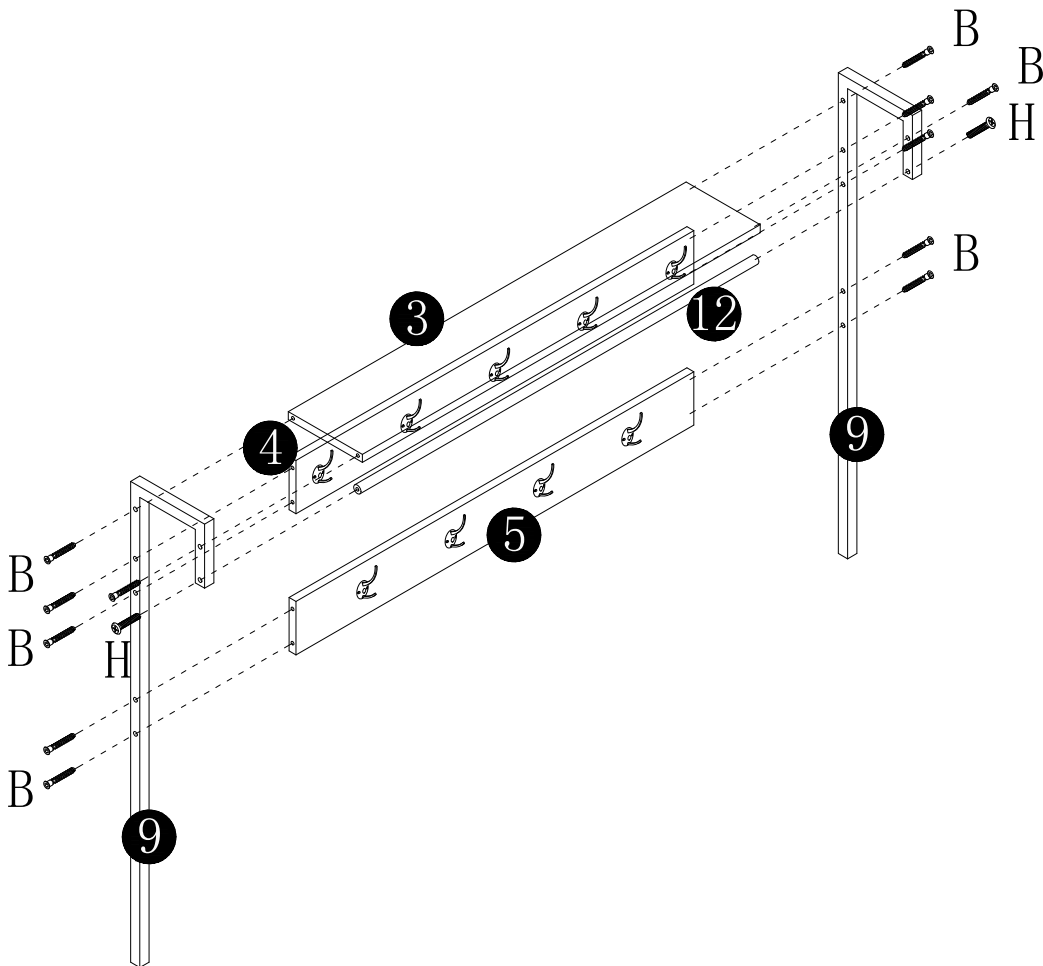


- B x12
- H x2

 9

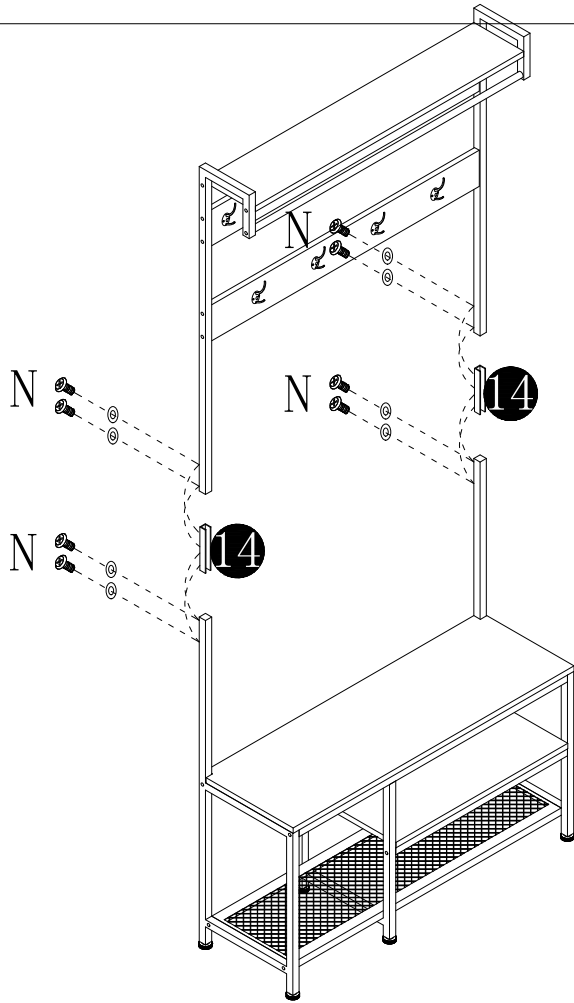

N
x8

 10

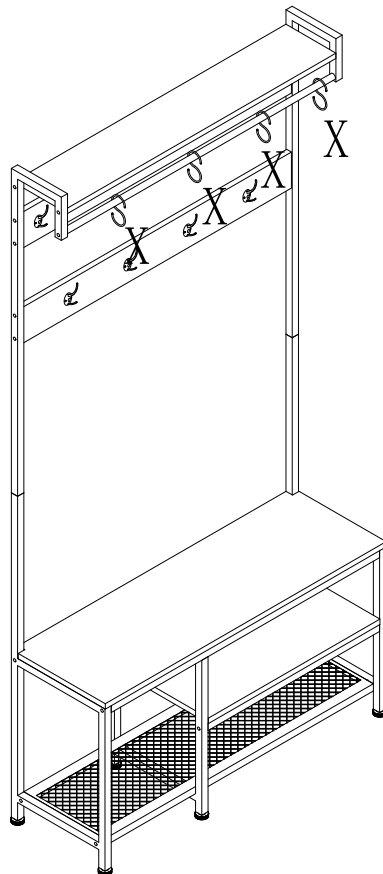

X
S
x4

