

# ASSEMBLY INSTRUCTIONS

 
---

DGHR-V2


FTLFTS-6061

FTLFTS-6062


FTLFTS-6063

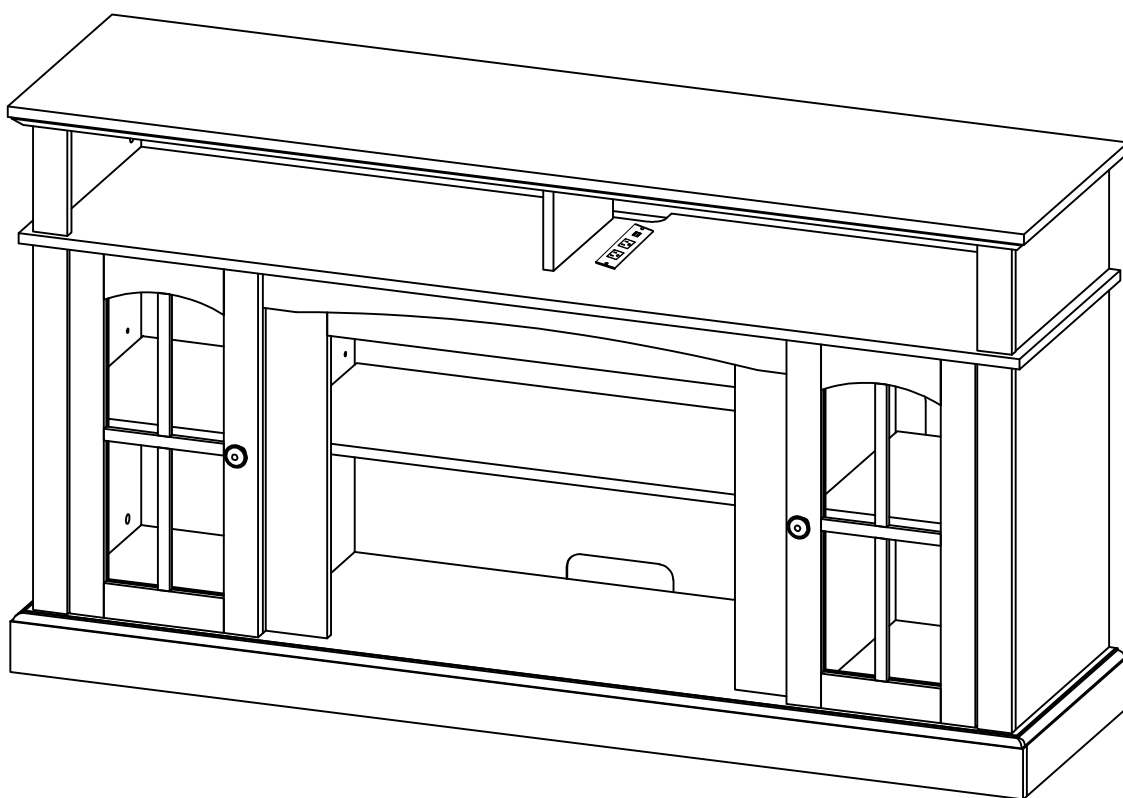


TV Stand

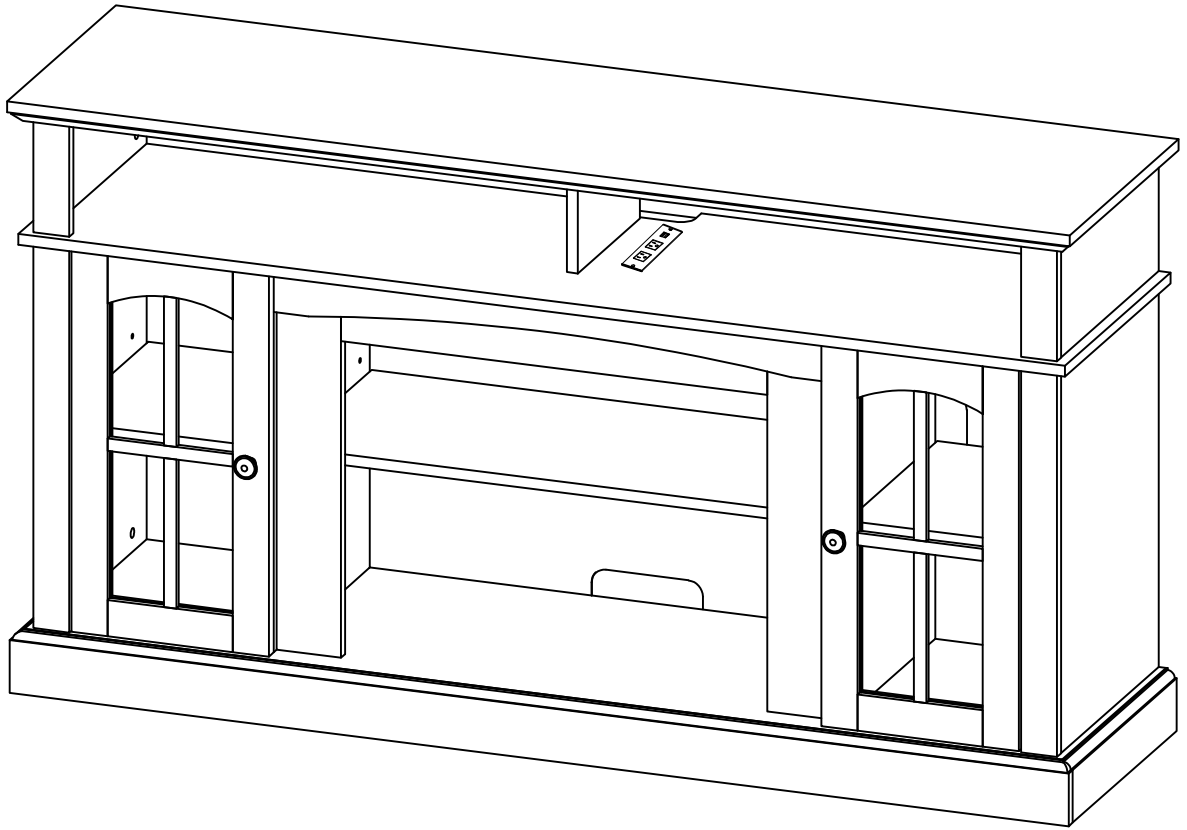 

Tools Needed (Not included)

 


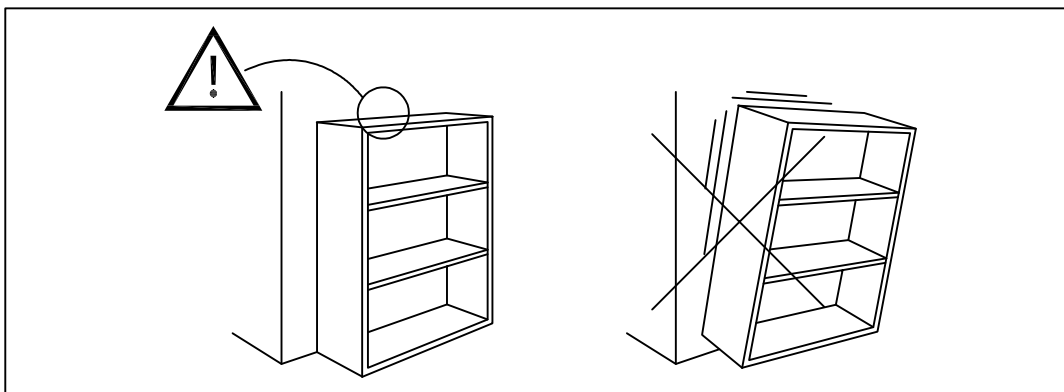 


### **Warning**

Serious or fatal crushing injuries may occur if the furniture tips over. The furniture must permanently be fixed to the wall using the provided anti-tipping device to prevent it from tipping over.

Different wall materials requires different types of fixing devices. Please use the appropriate fixing device to ensure the stability and load capacity of the furniture. If you are uncertain about which type of fixing device to use, please consult your local hardware store.

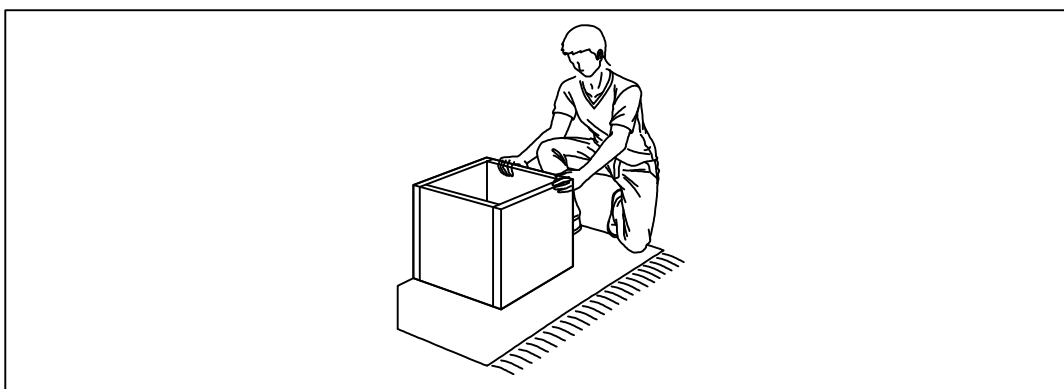


When assembling the furniture, please place it on an empty carton, carpet, or rug to prevent scratches or damage.

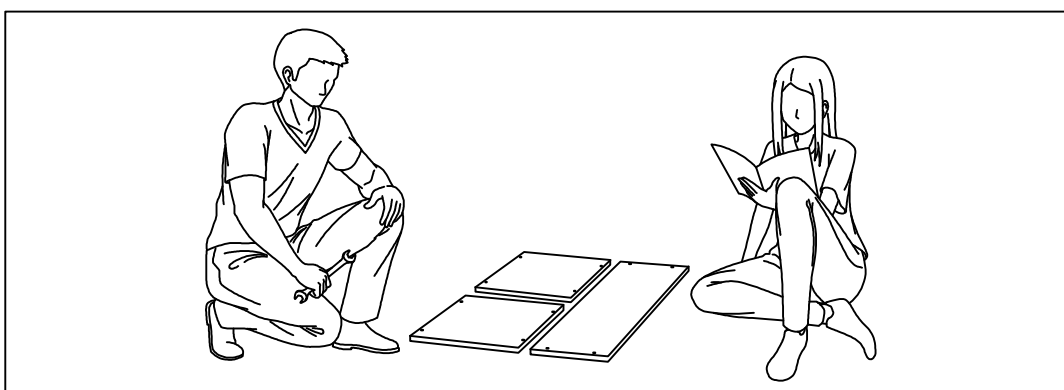


Assembly of this furniture requires two people. Ensure that no parts are missing or damaged before assembly.

# Explosion Diagram

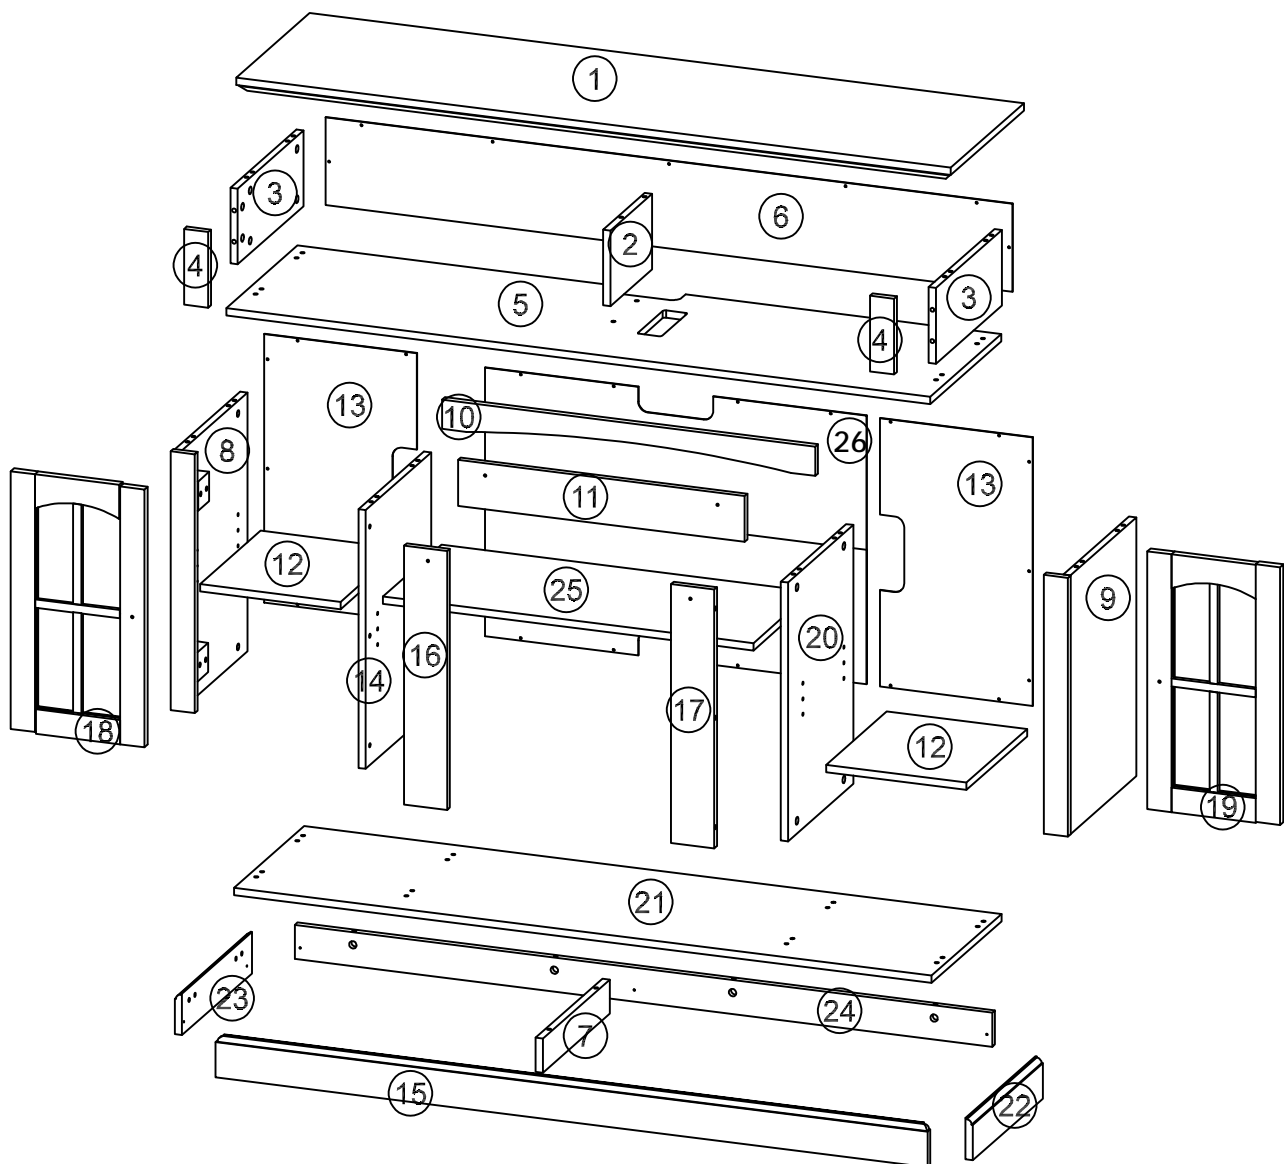





① x 1

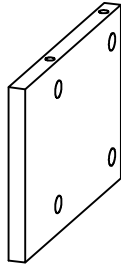


② x 1

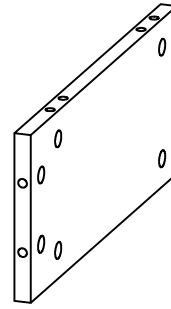 

③ x 2

 


④ x 2

 


⑤ x 1



 
⑥ x 1

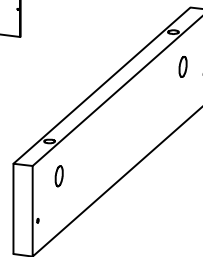

⑦ x 1

 


⑧ x 1

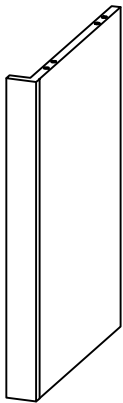 


⑨ x 1



 
⑩ x 1

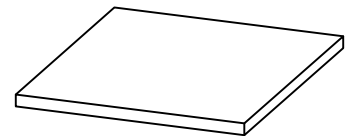


⑫ x 2

 

⑪ x 1

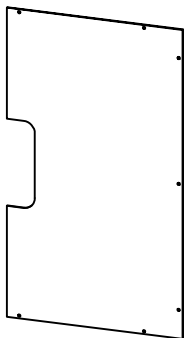 

⑬ x 2

 











⑭ x 1



⑮ x 1



          ⑯ x 1

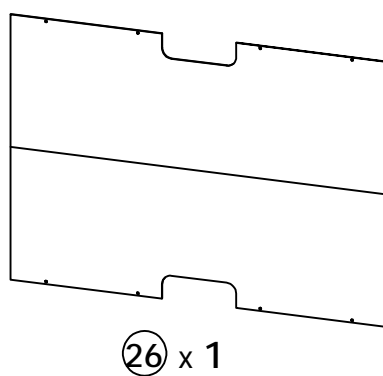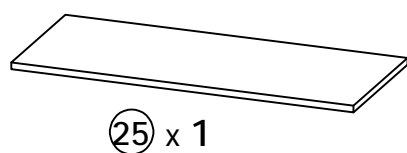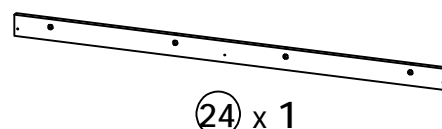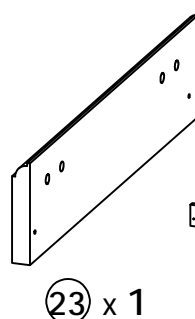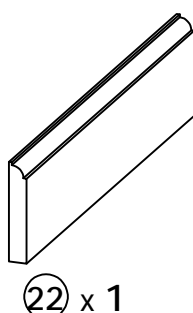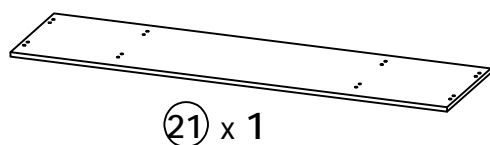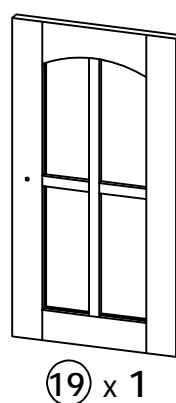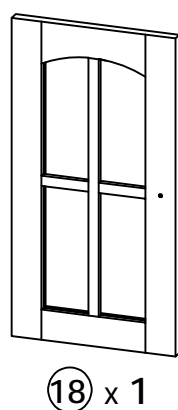



# PACKAGE CONTENT

 46x+2	 36x+2	 46x+2	 24x+2	 4x
 2x	 1x	 2x	 12x	 31x+2
 24x+2	 8x	 16x+2	 6x	 8x
 46x	 2x	 2x	 5x	 1x
			 7x	
			 2x	



  
T

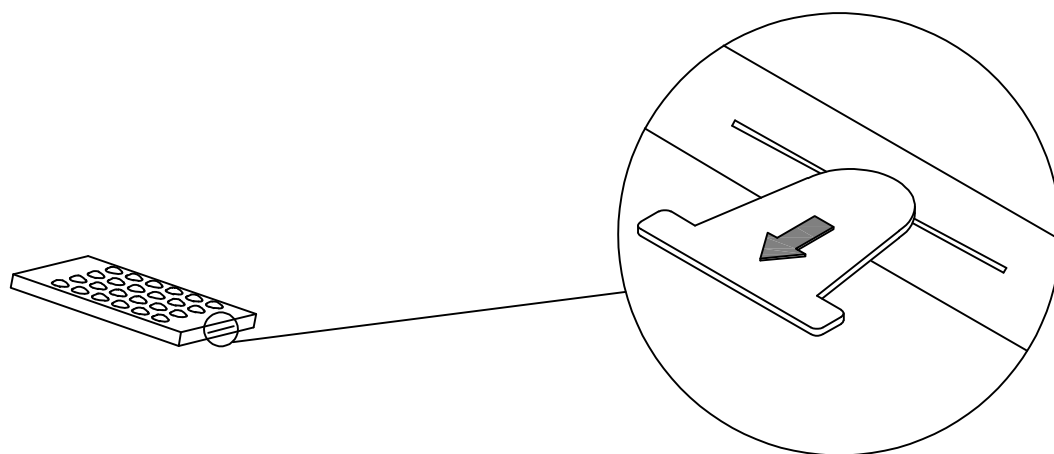


Remove the plastic piece before using the remote.



# 1

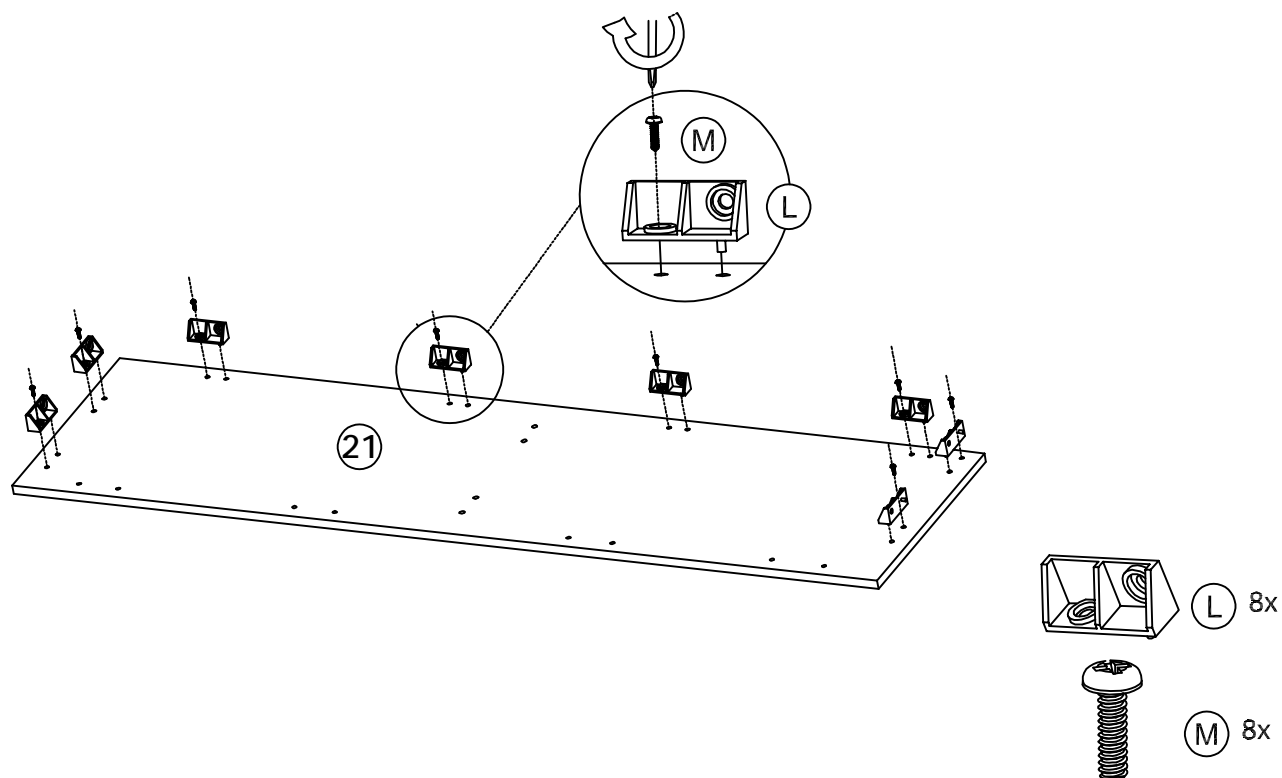 


# 2

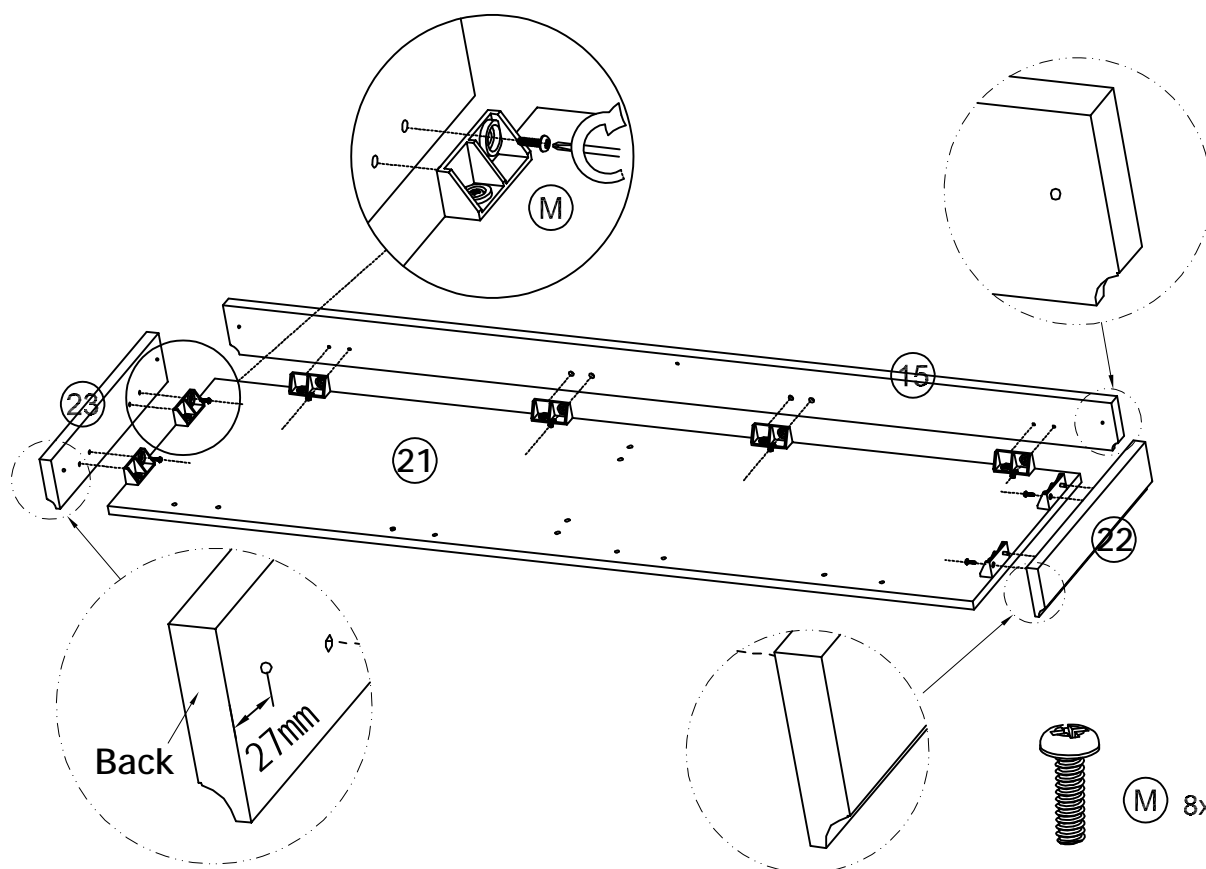 


Please distinguish the front and back of (22) & (23) panel.

# 3


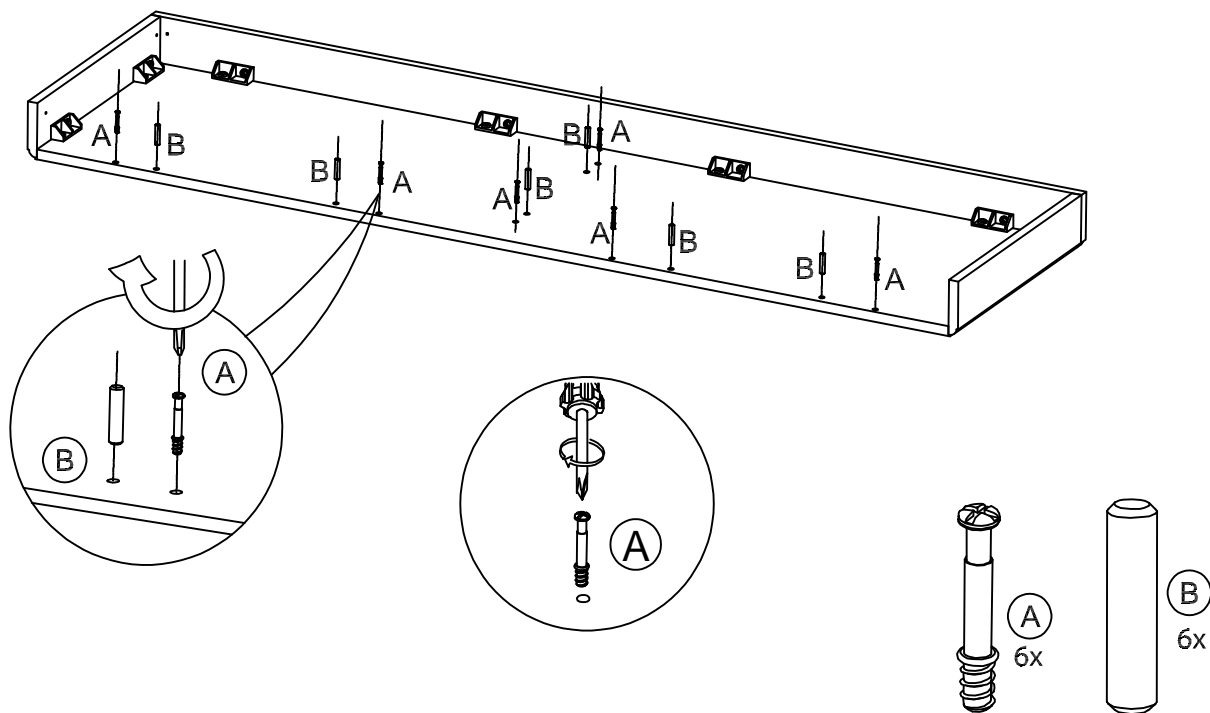 


# 4

 Caution: Ensure that the holes are on the same side.

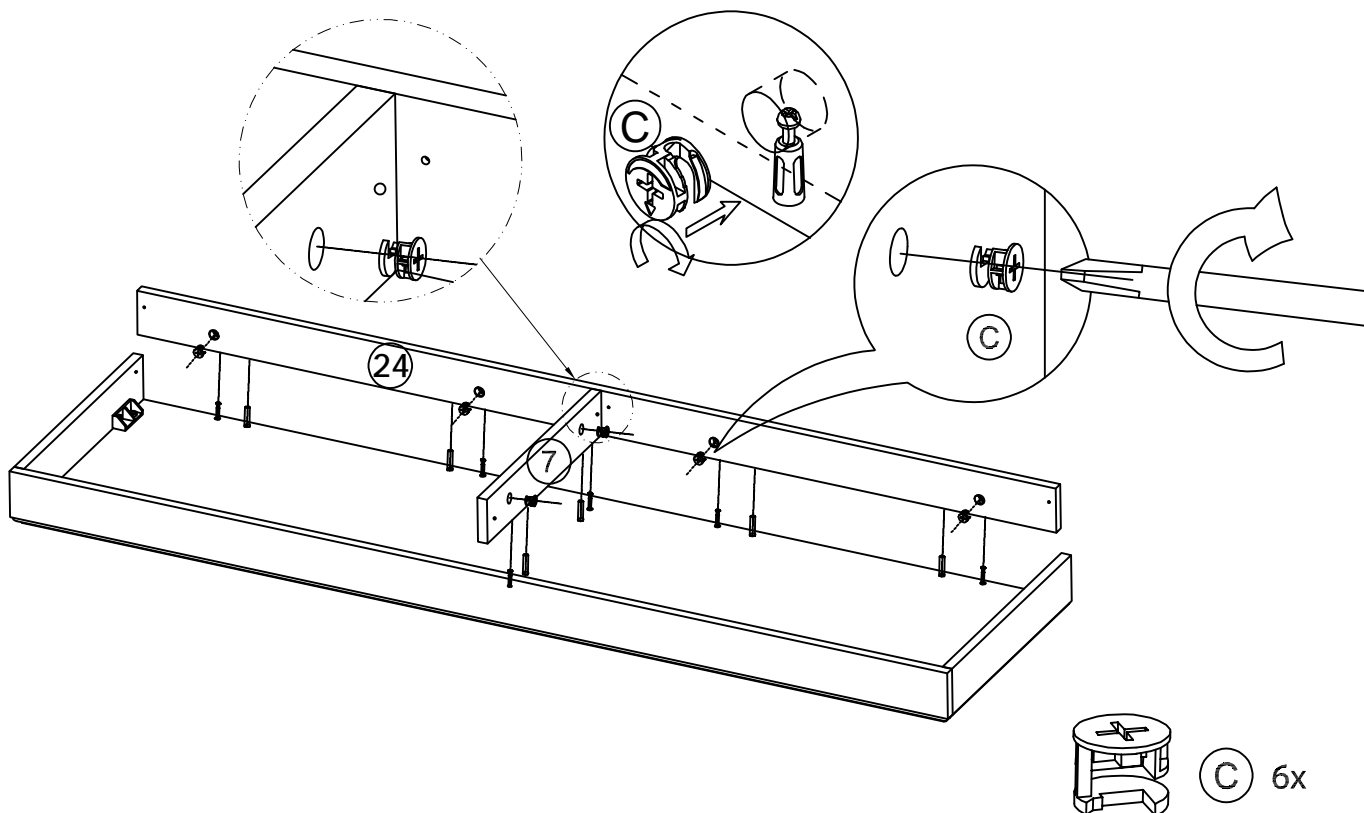

# 5

 
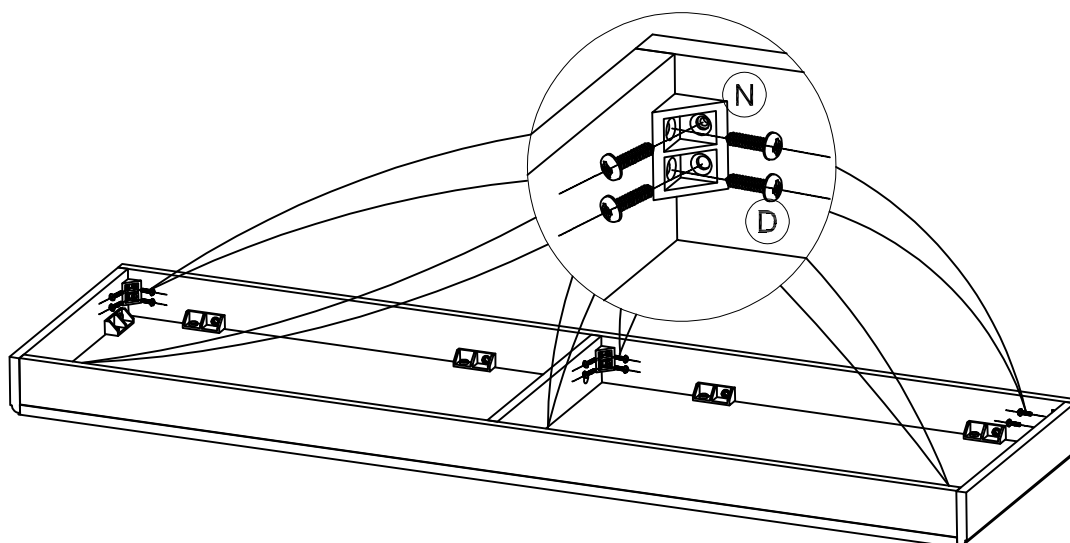 


(N) 6x




(D) 24x

# 6

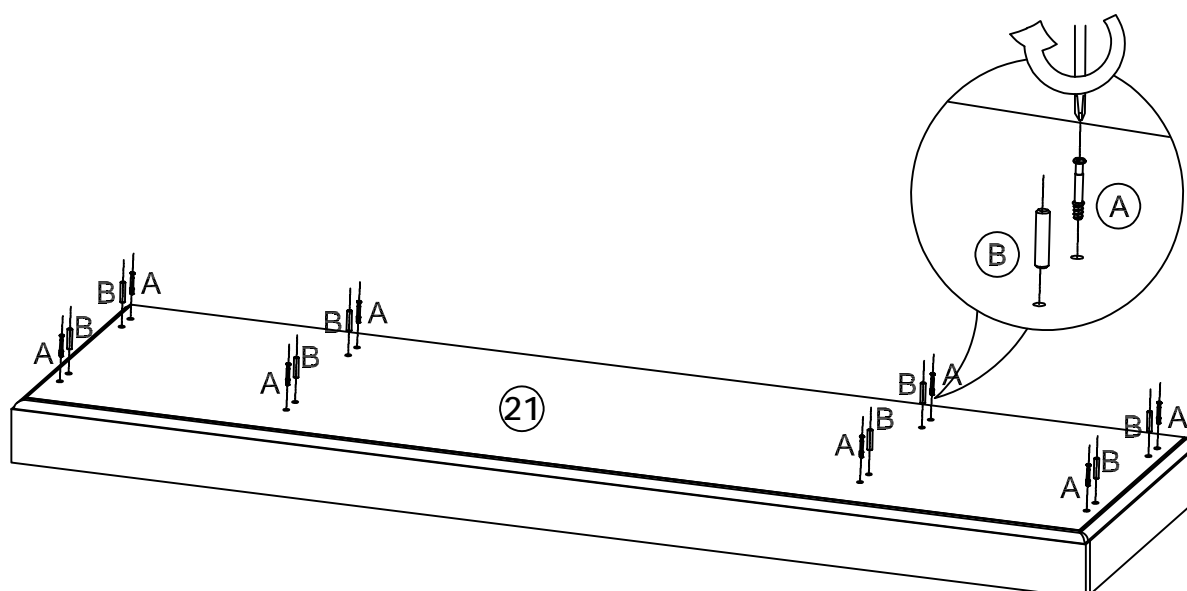  


 (A) 8x




(B) 8x

# 7

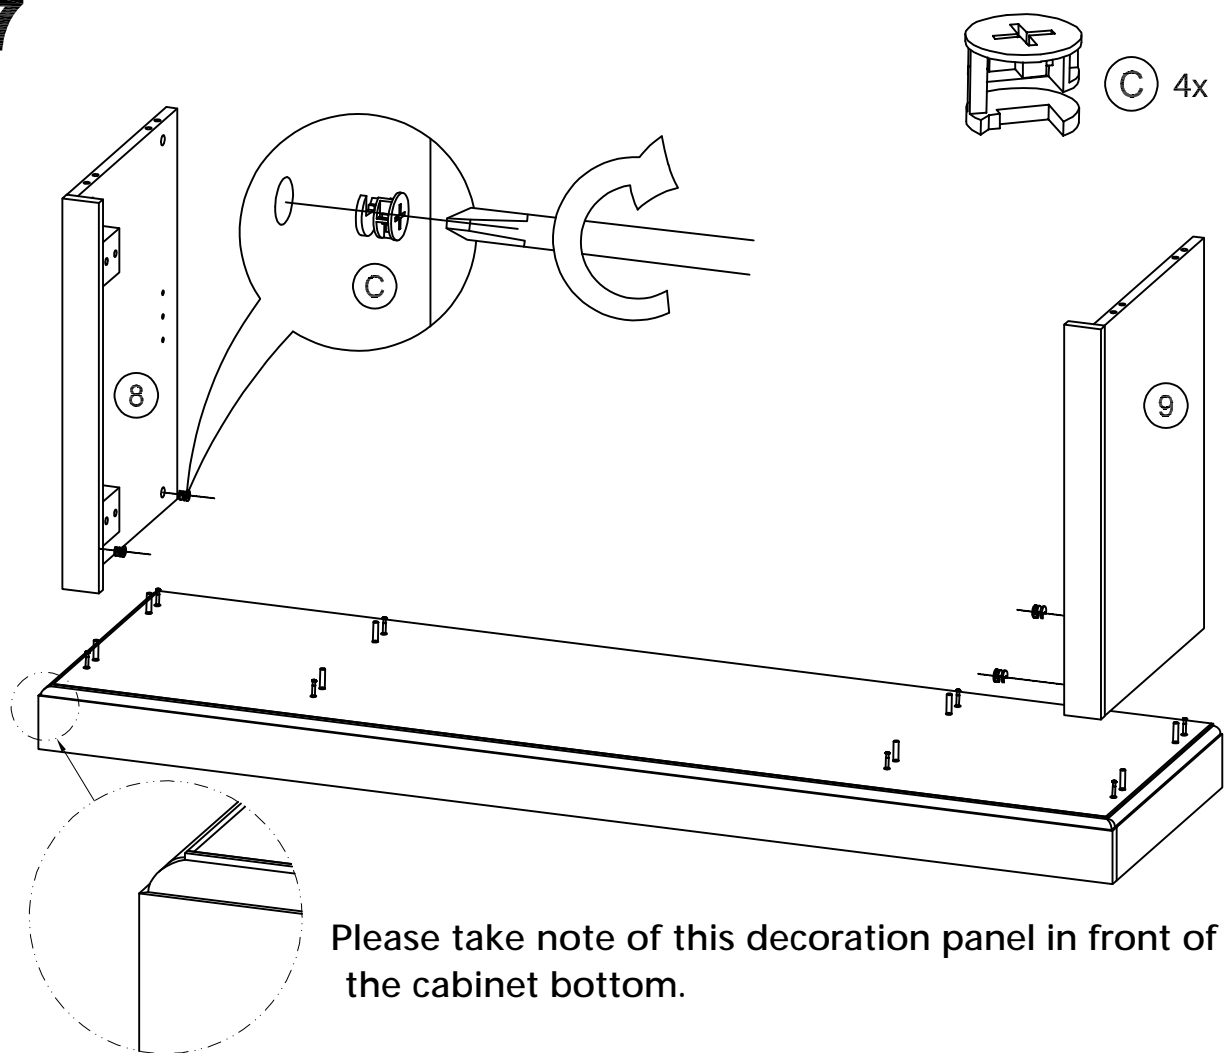 


# 8

 
Please take note of the correct connection holes of the 2 panels.

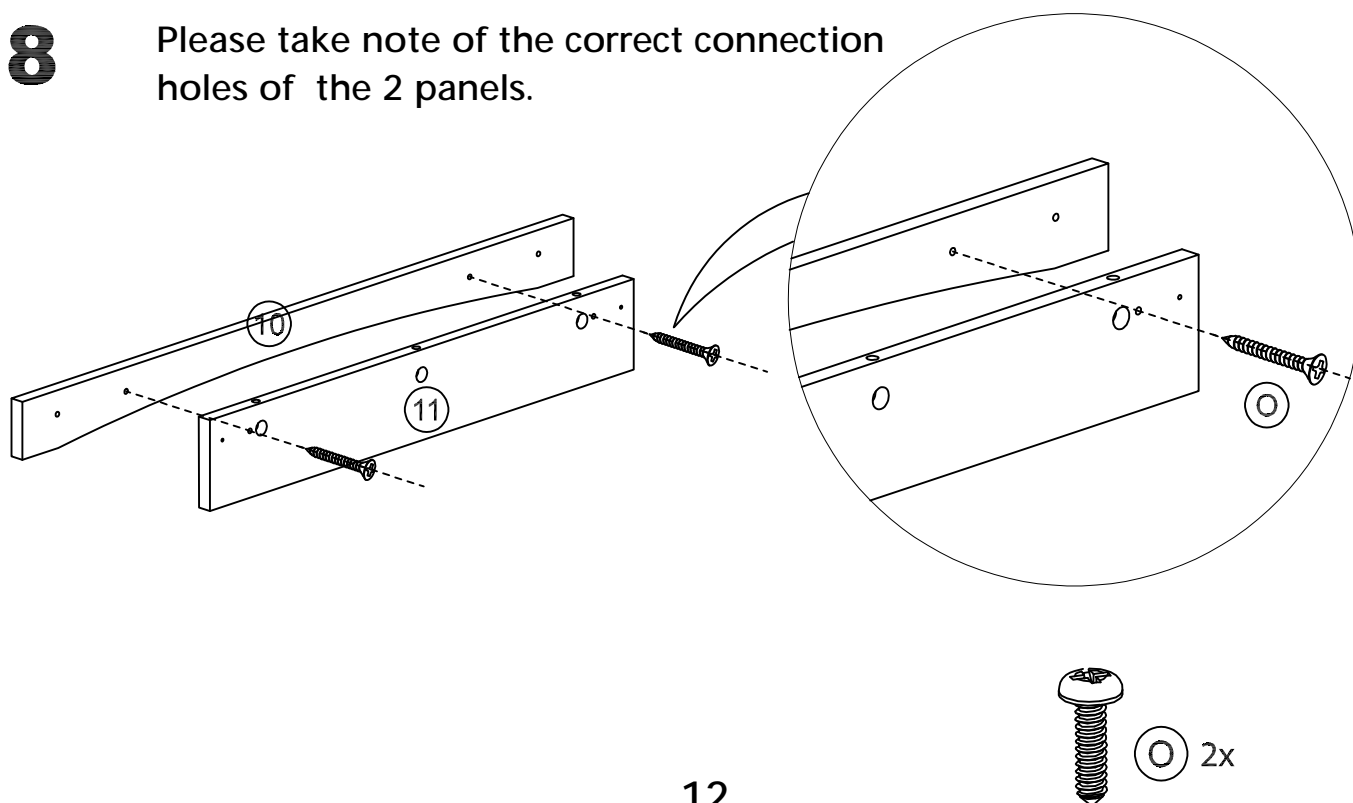


# 9

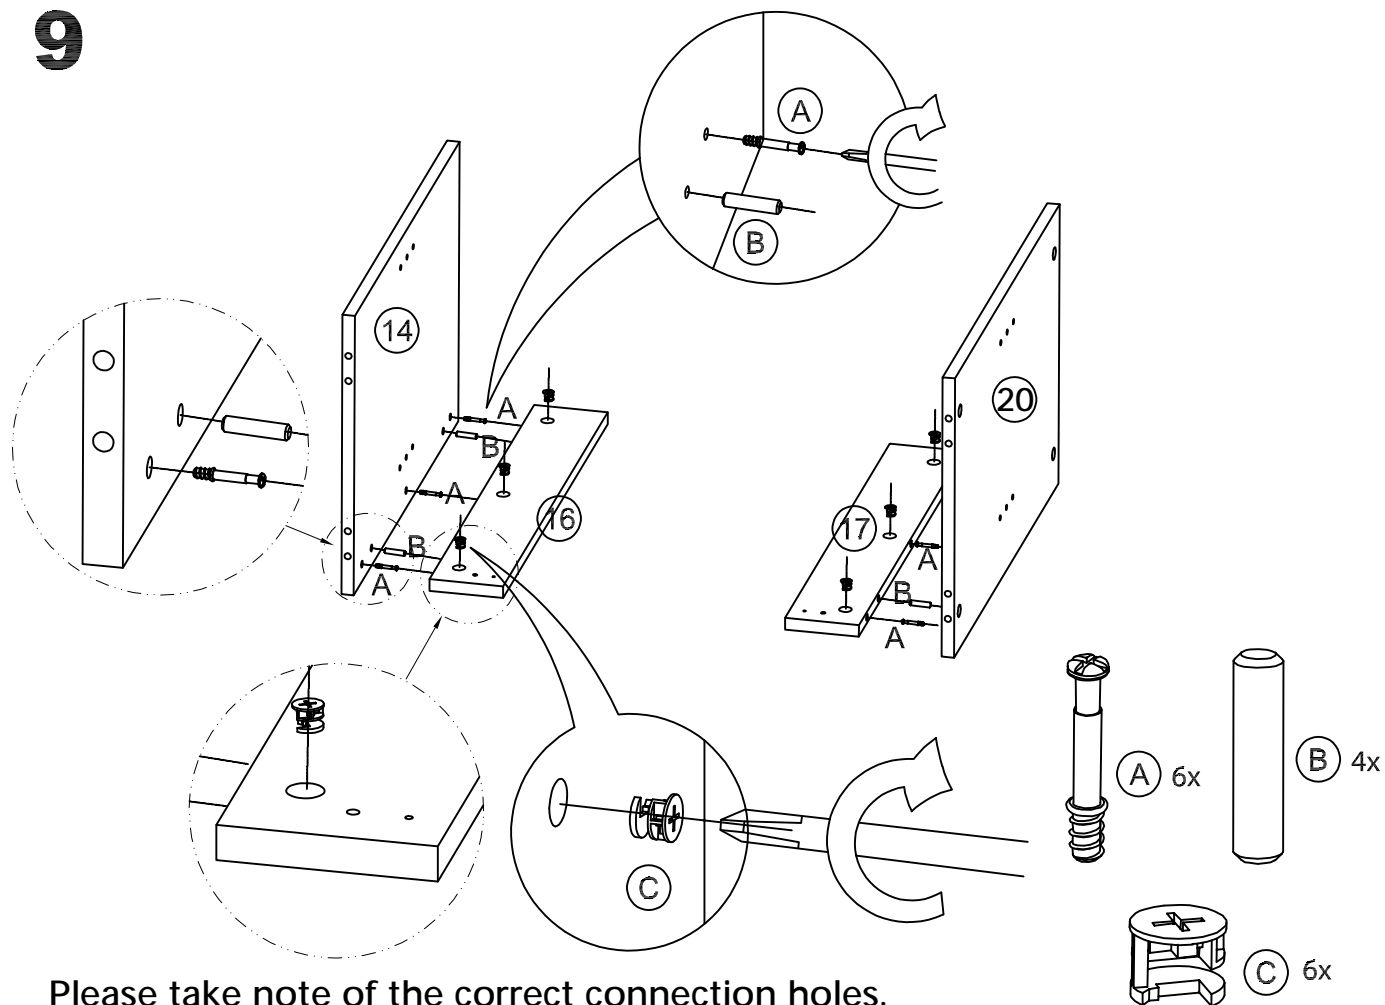 


# 10

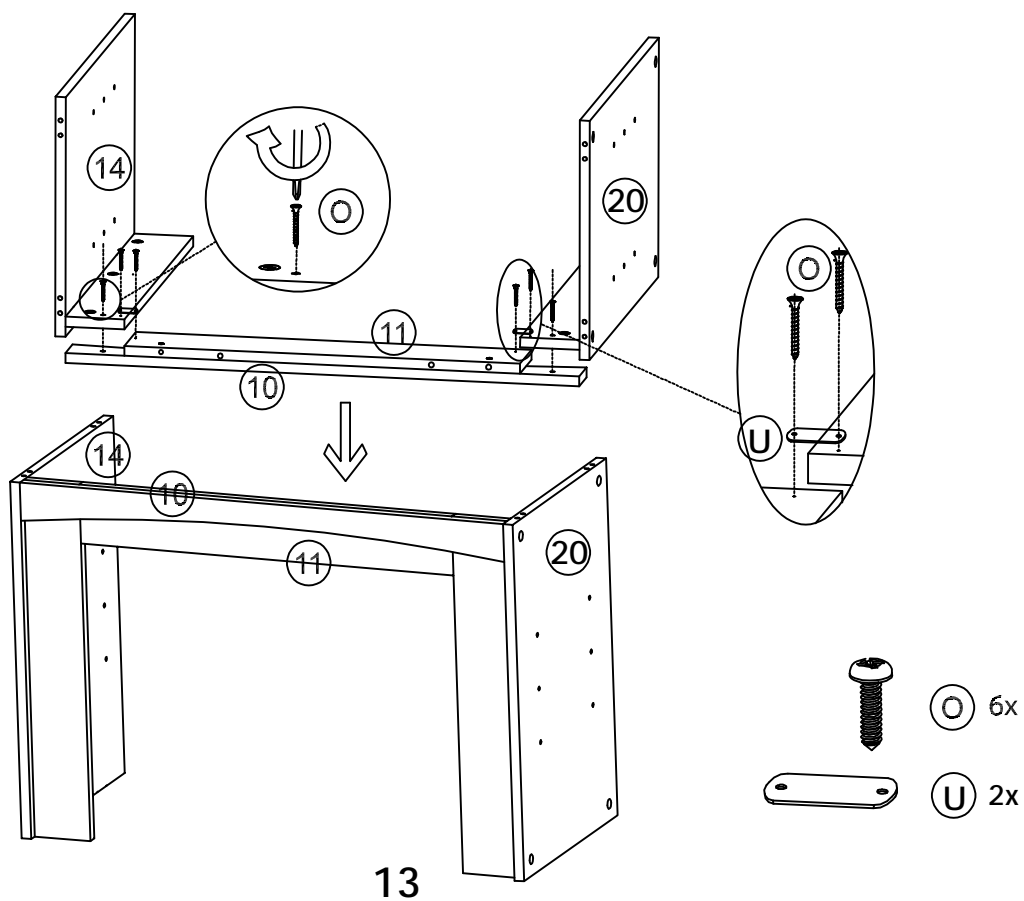 


# 11

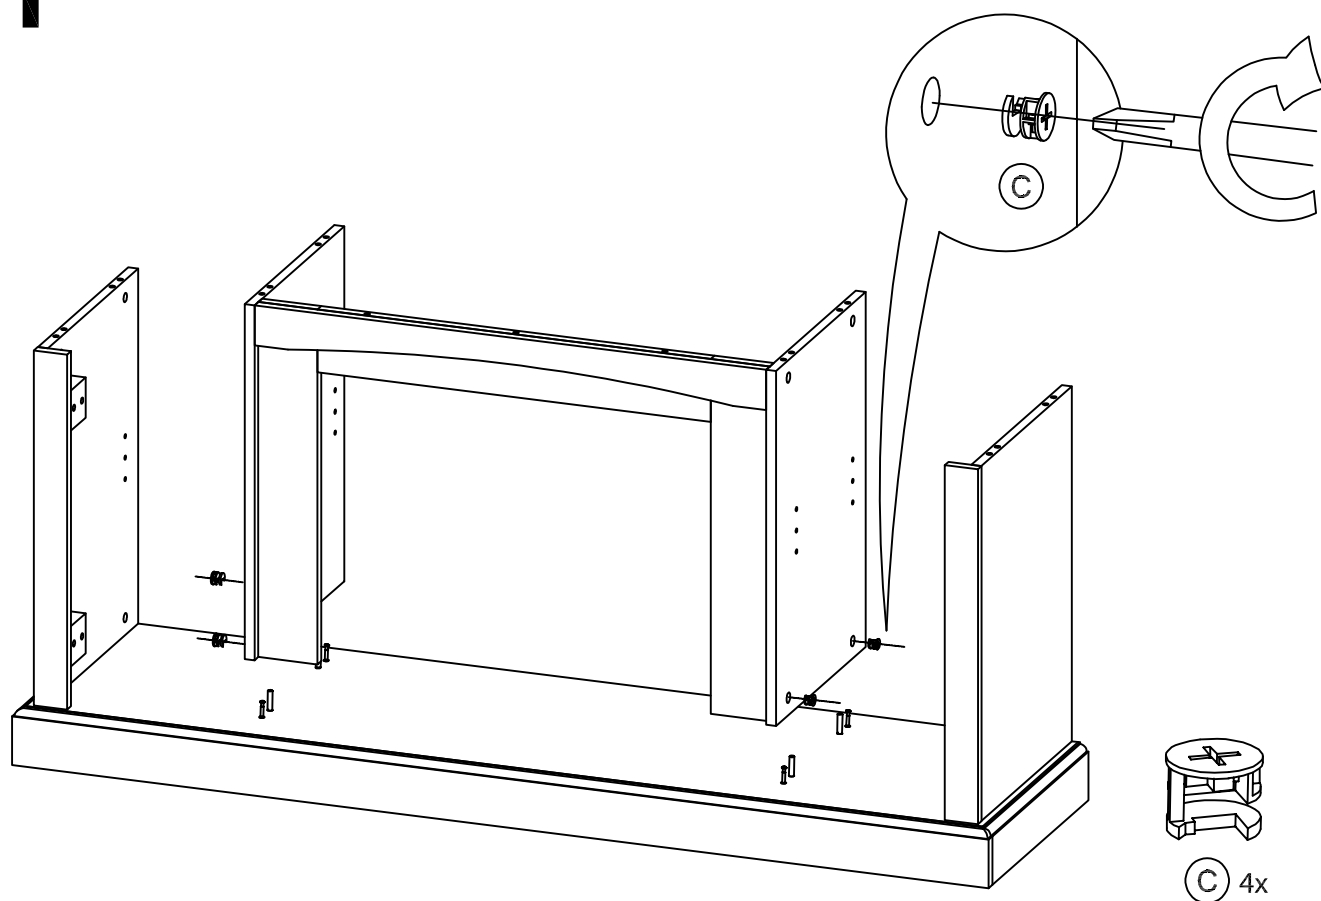 


# 12

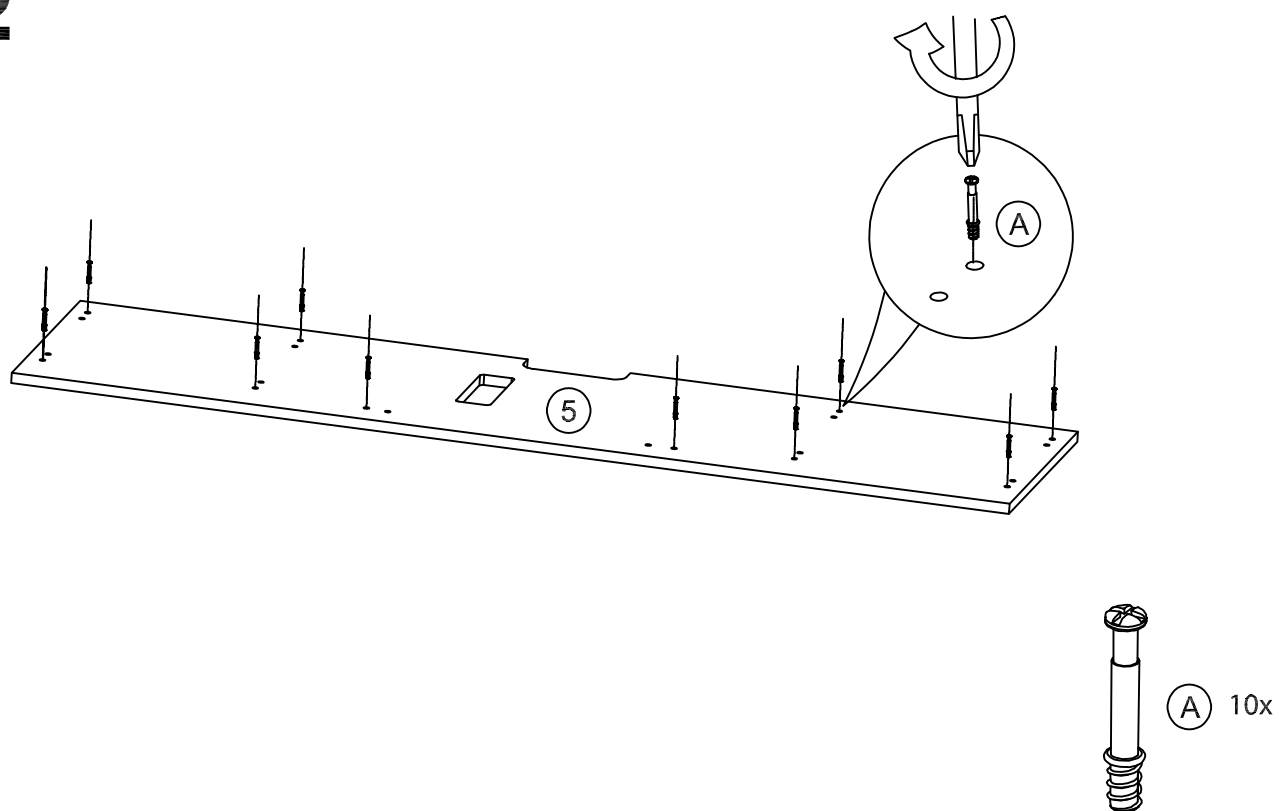 

# 13

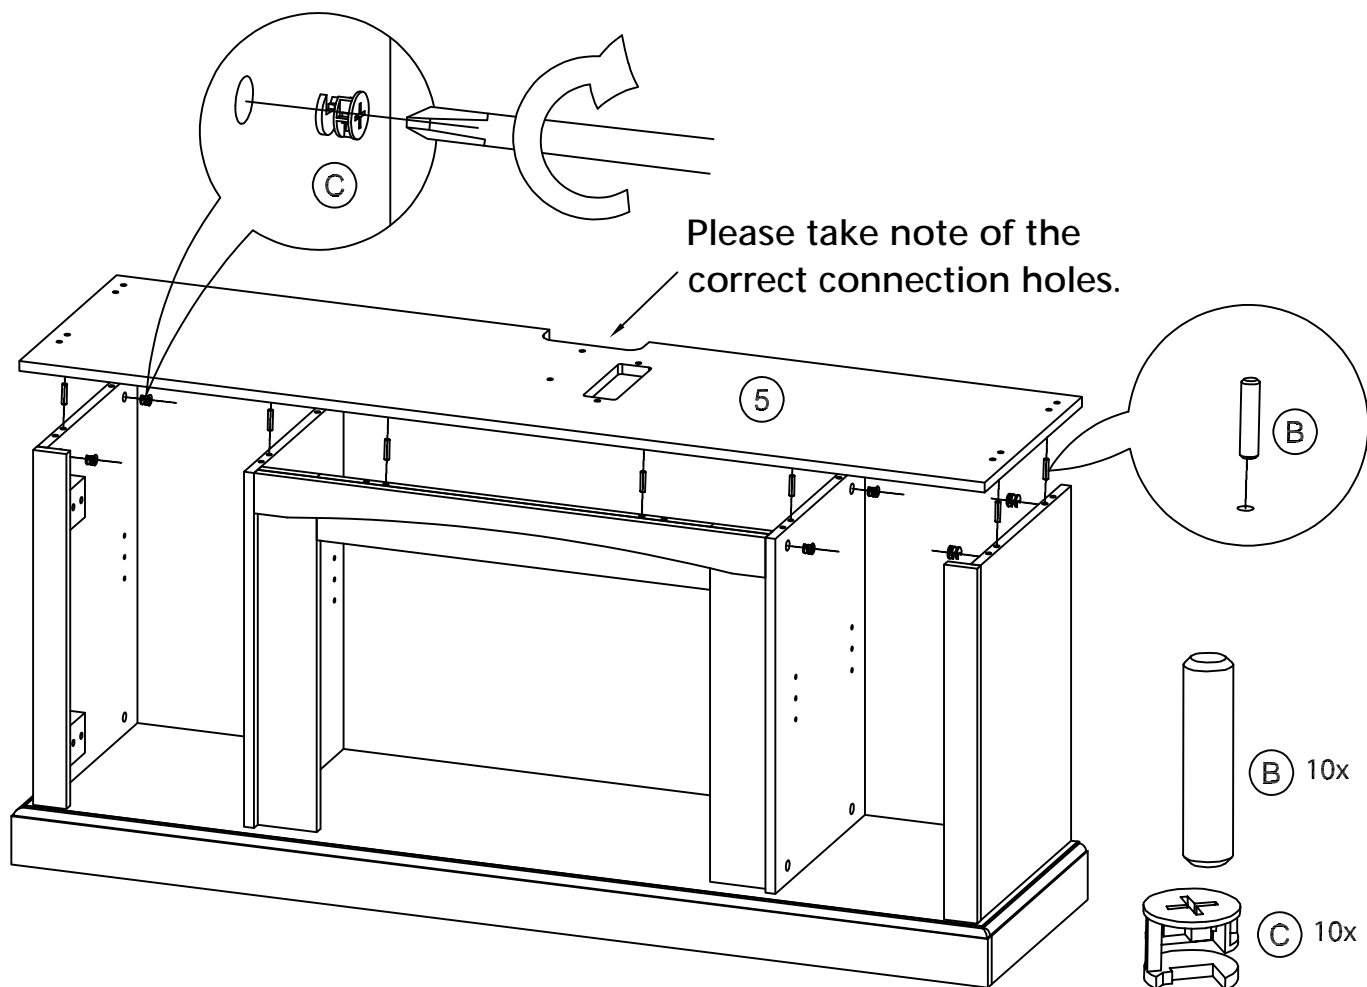 


# 14

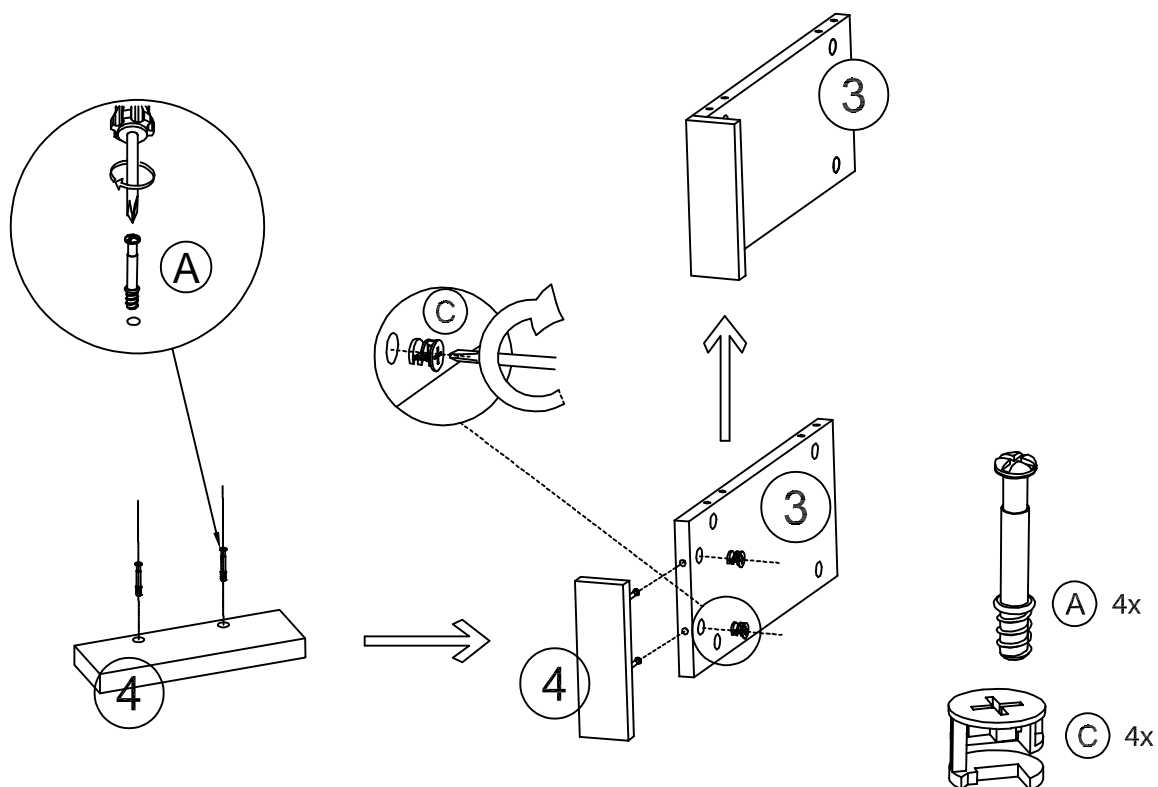 


15

# 15

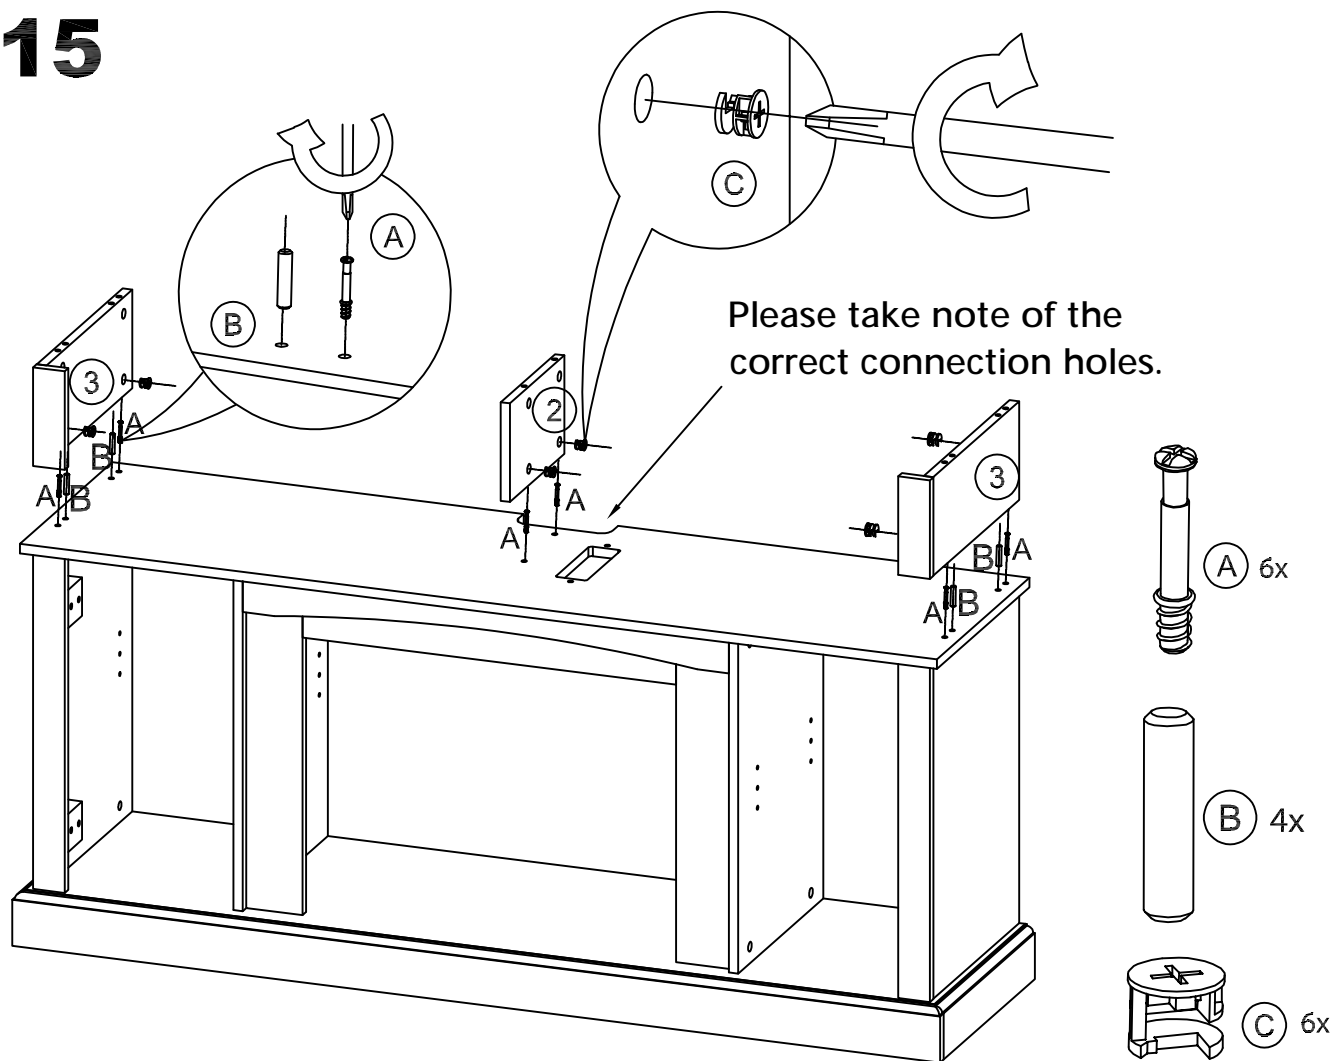 


# 16

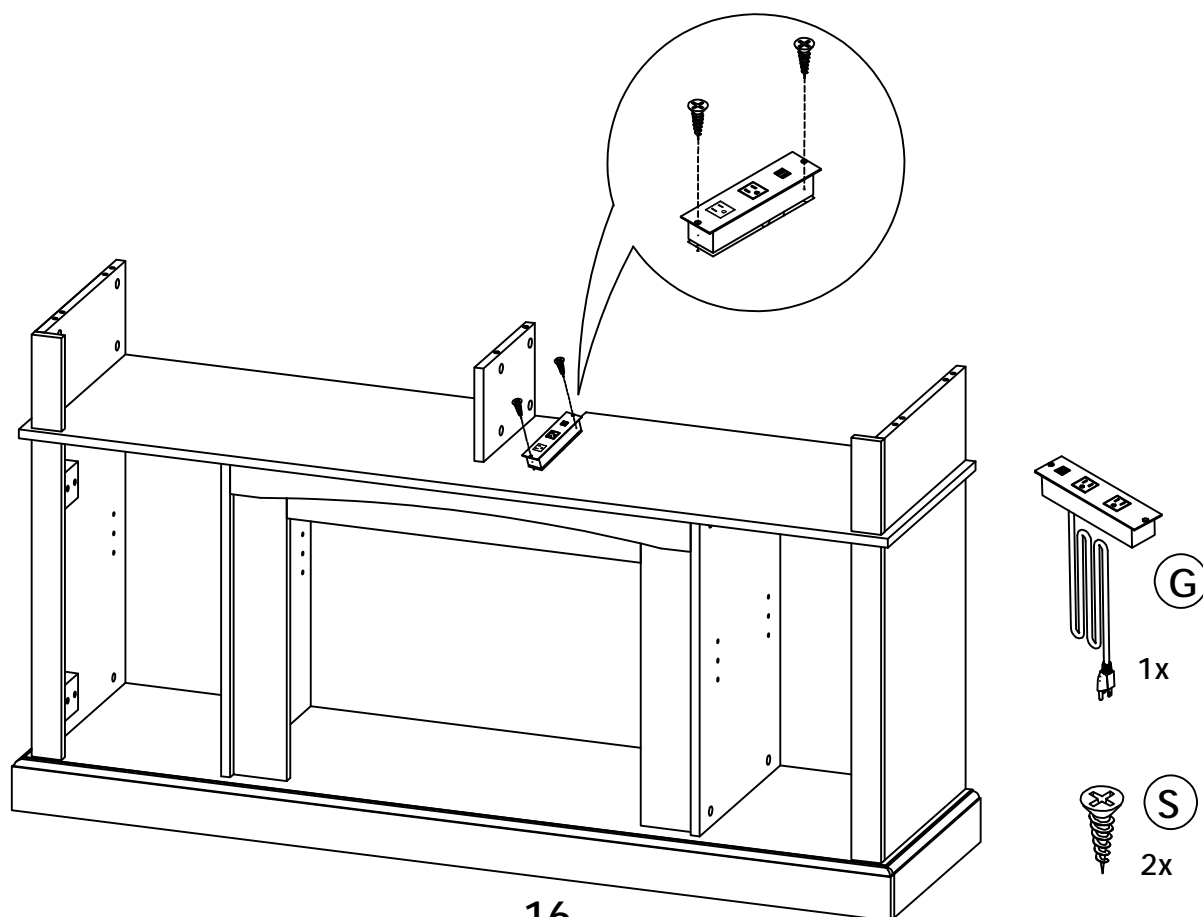 

16




# 17

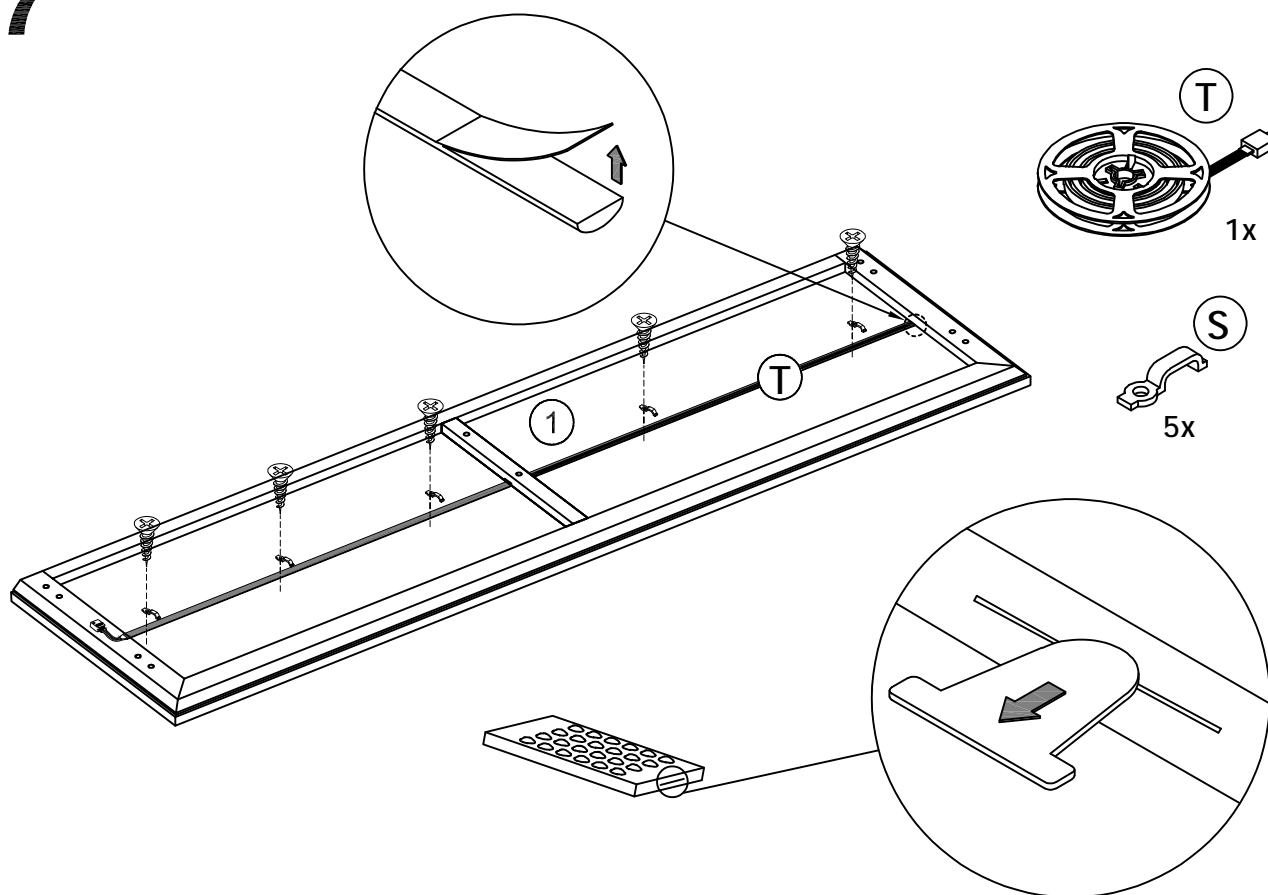 


Remove the plastic piece before using the remote.

# 18

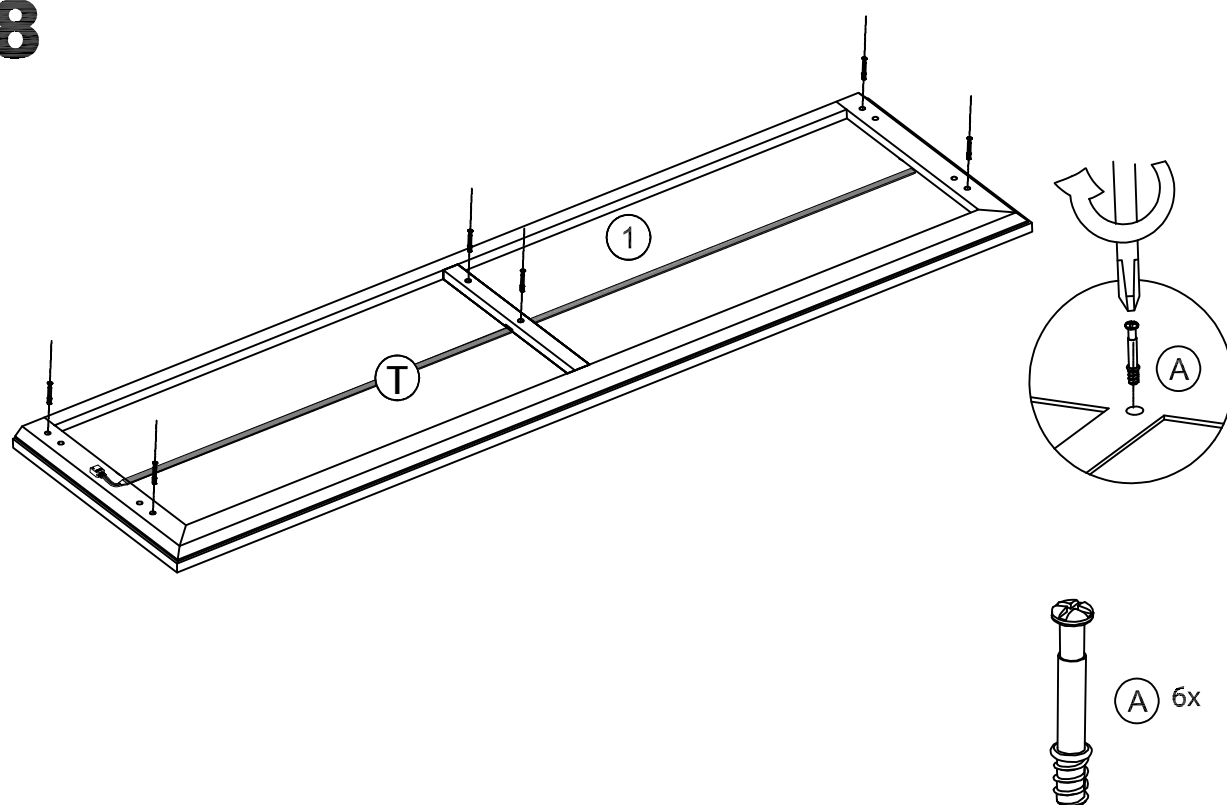 


# 19

 Please take note of this decoration panel in front of the cabinet top.

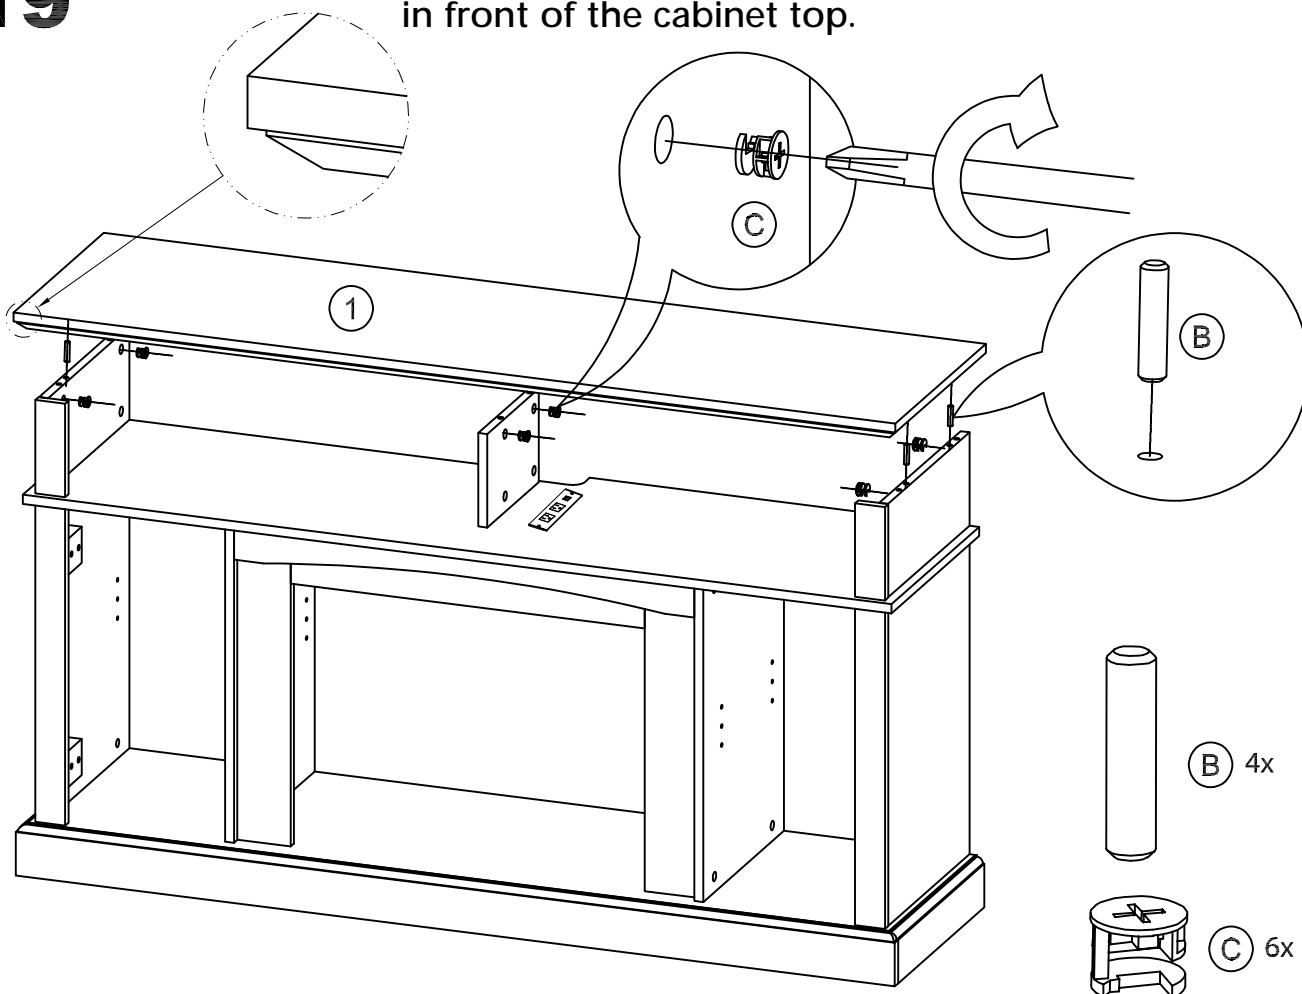


# 20

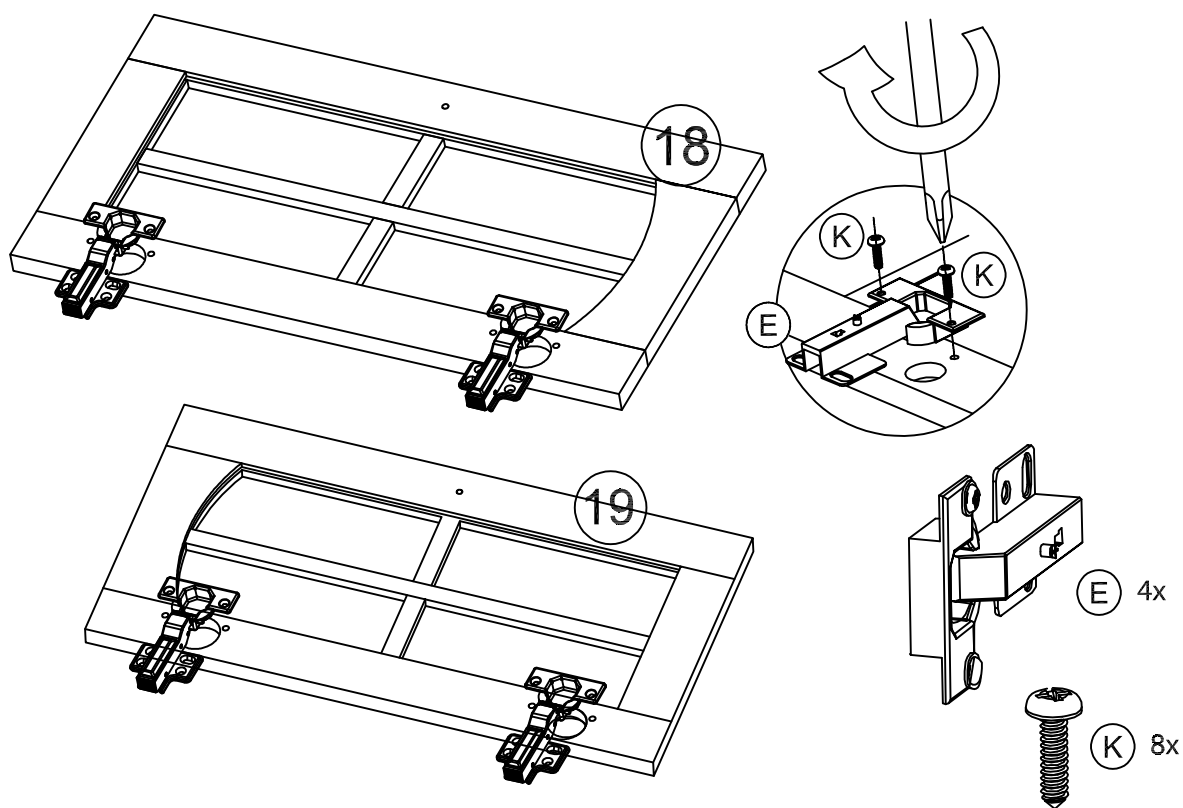 

18

# 21



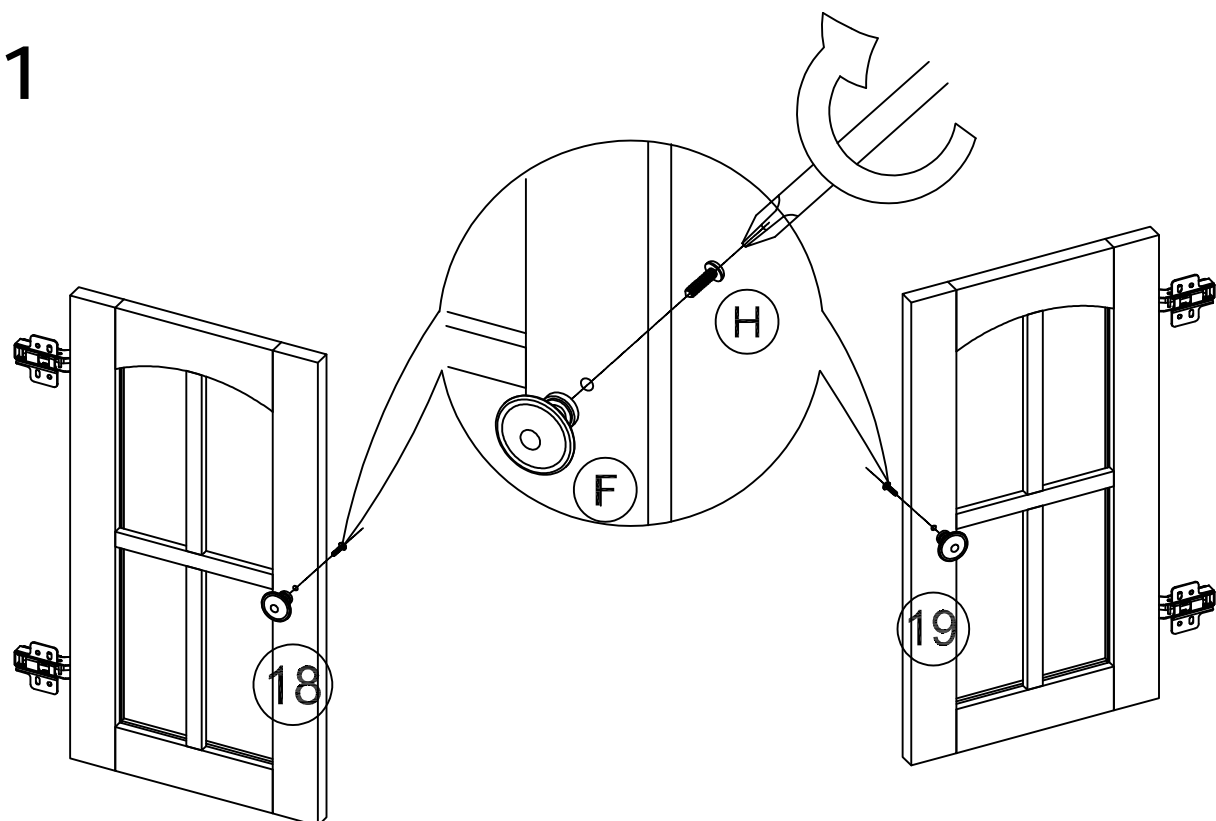 


(F) 2x



(H) 2x


# 22

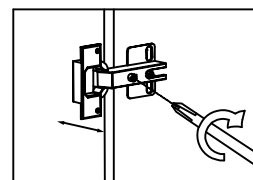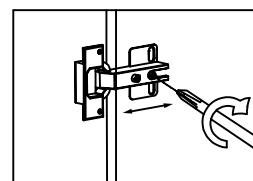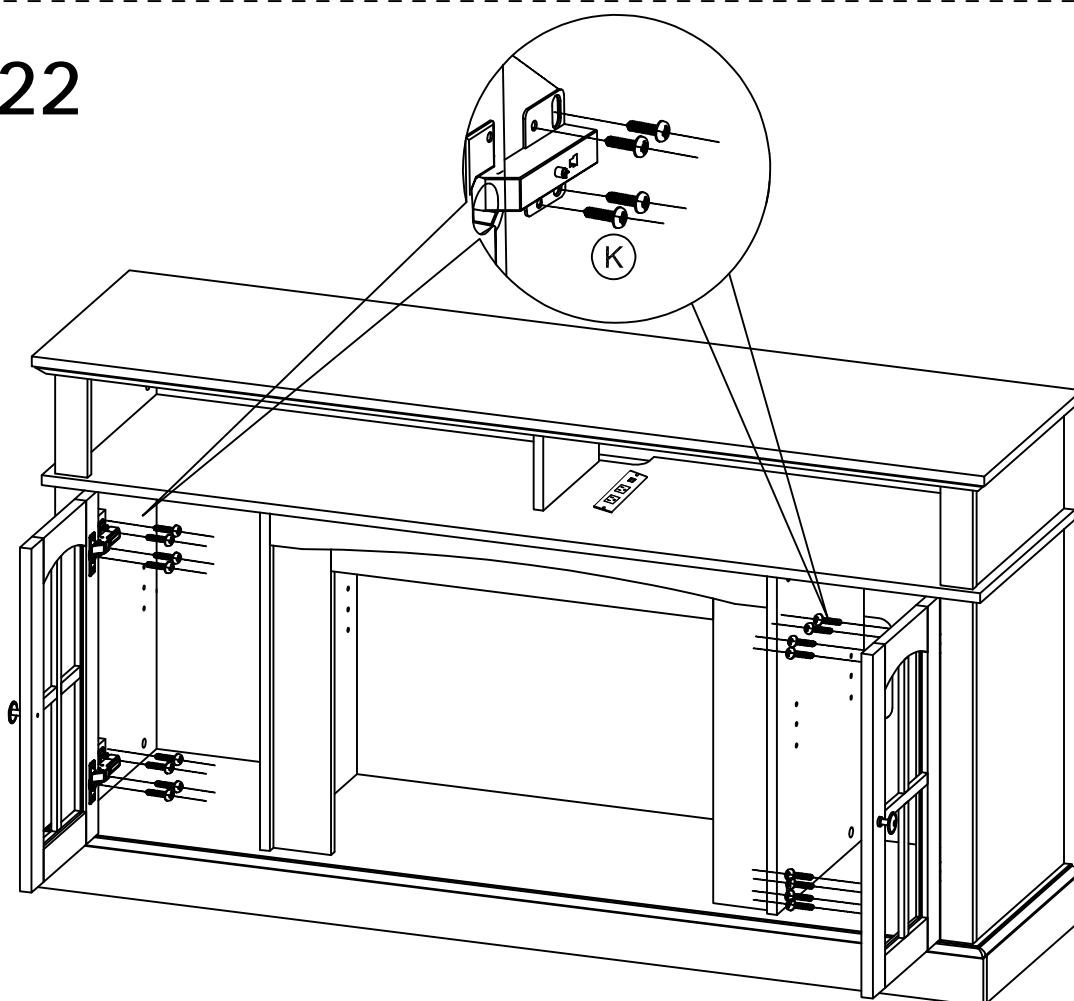   

(K) 16x


19

**If your door is too low or too high...**

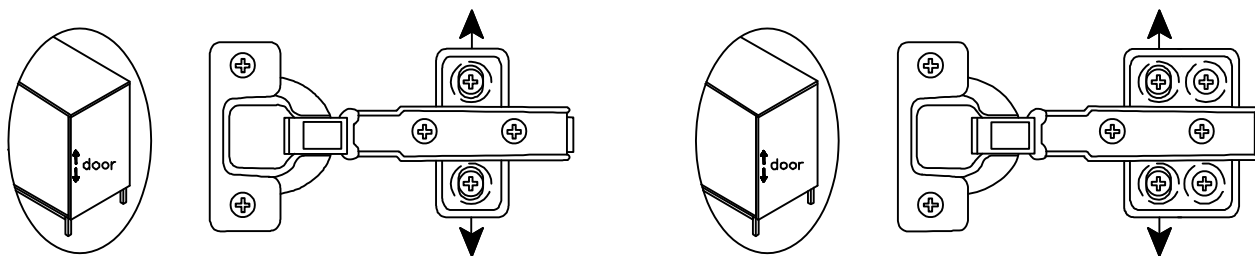 


Loosen the height screws, then move the door up or down to make it level.

**If the space between your doors is wide**

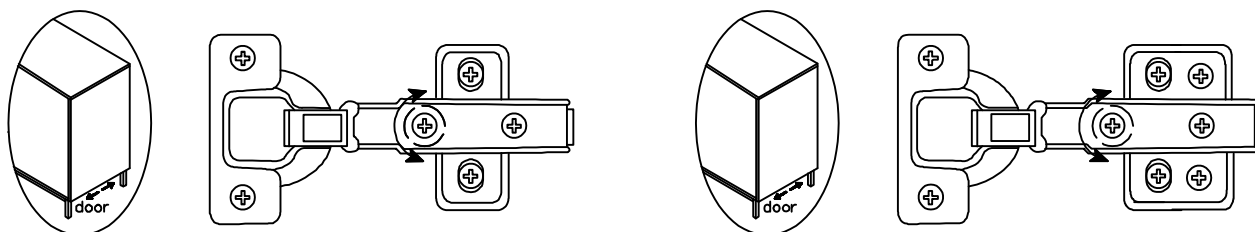 

Loosen the side-to-side screws, then screw counter-clockwise to make the gap wider or clockwise to close any gaps.

**If you need to adjust the depth of the doors...**

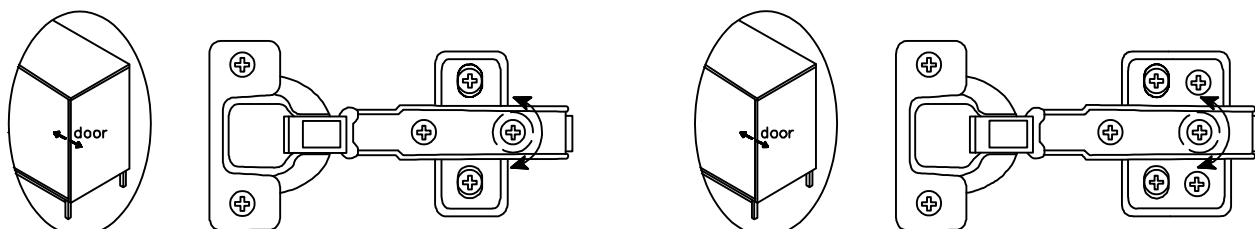

Adjust the in-and-out screws until the door is aligned with the side of the cabinet.



If you intend to use this product as a TV stand, continue the assembly instructions on Page 21.

If you intend to use this product as a fireplace mantel, continue the assembly instructions on Page 24.



---

## TV STAND ASSEMBLY


# 23

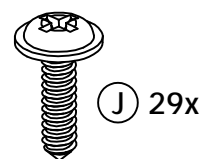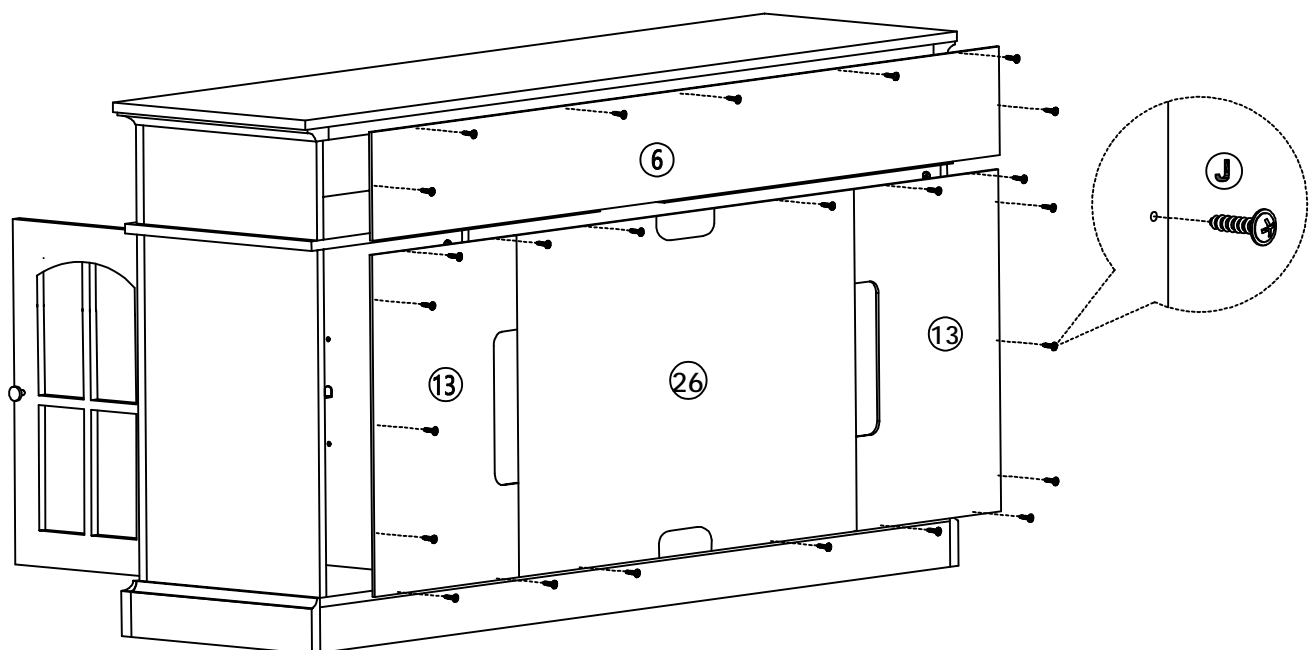



# 24

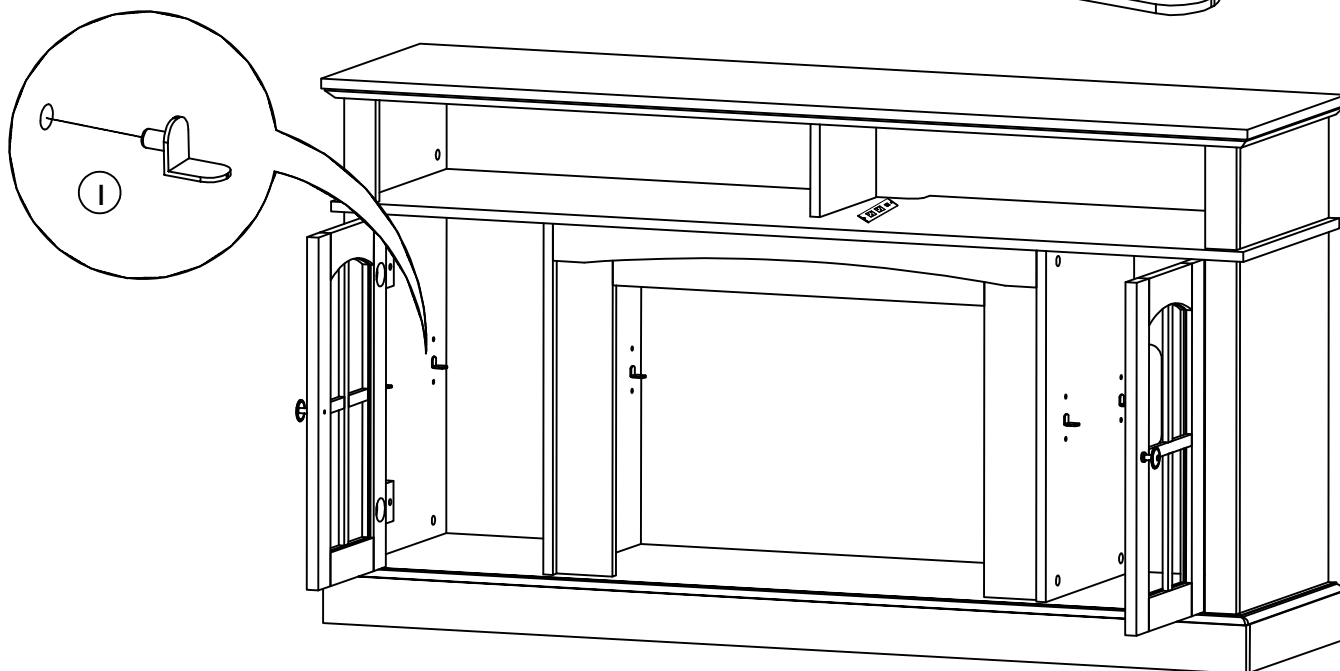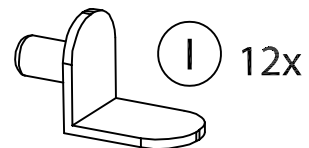  






# 25

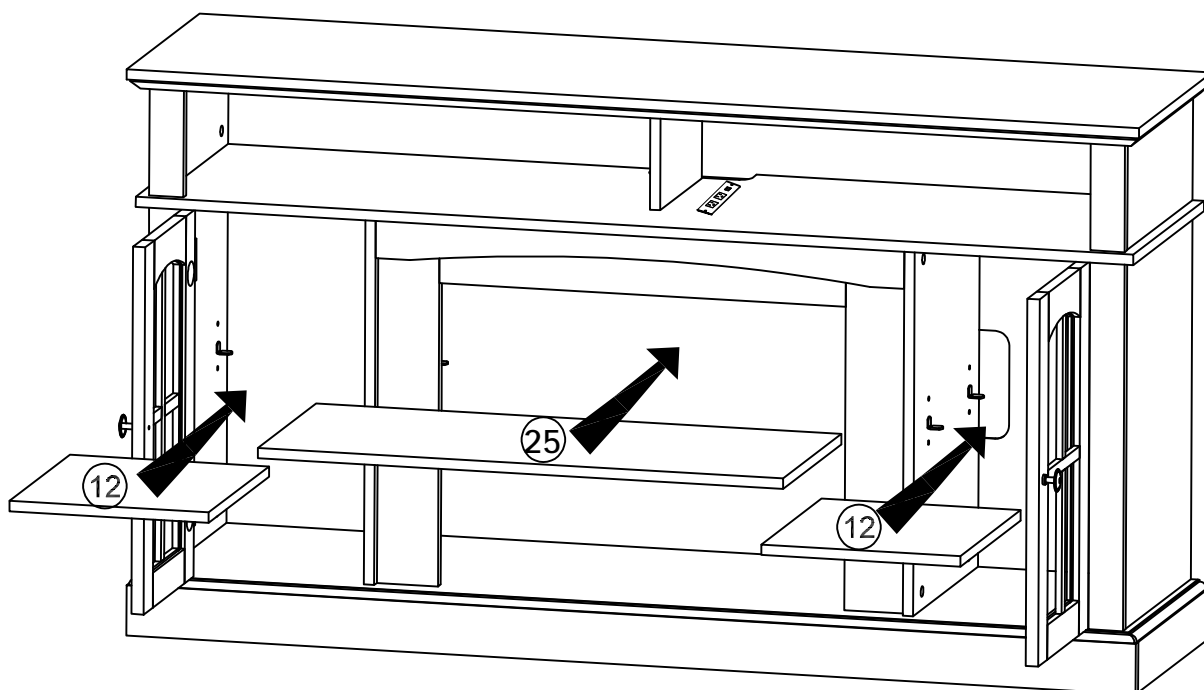 

# 26

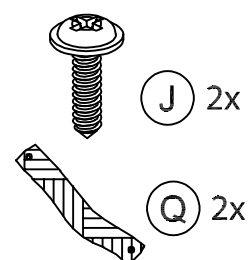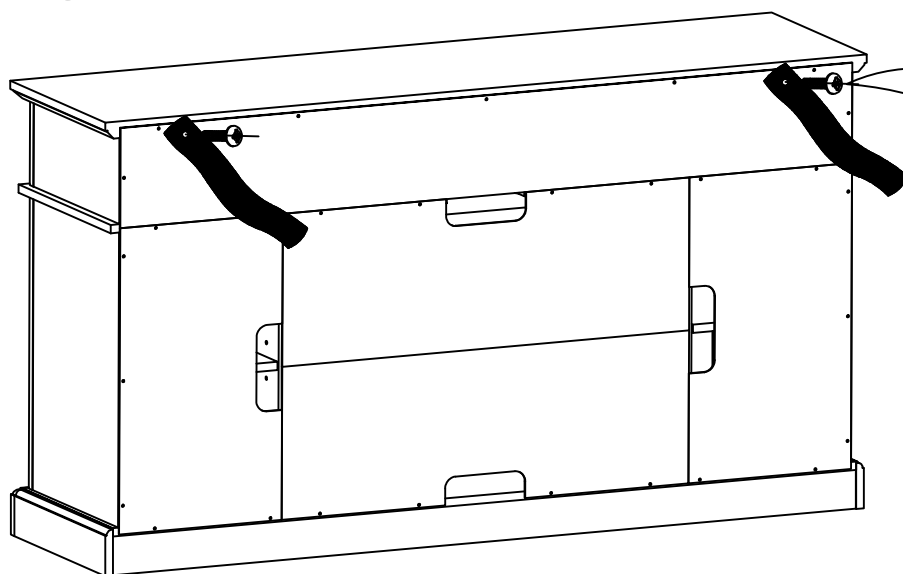  

# 27

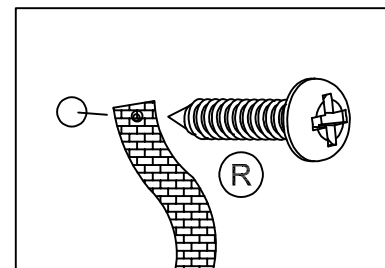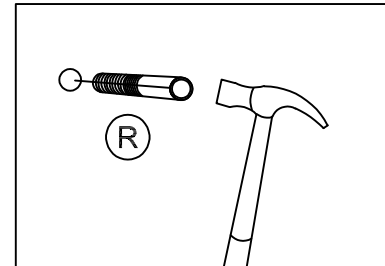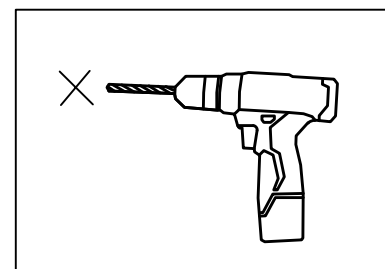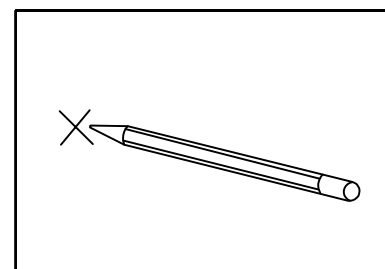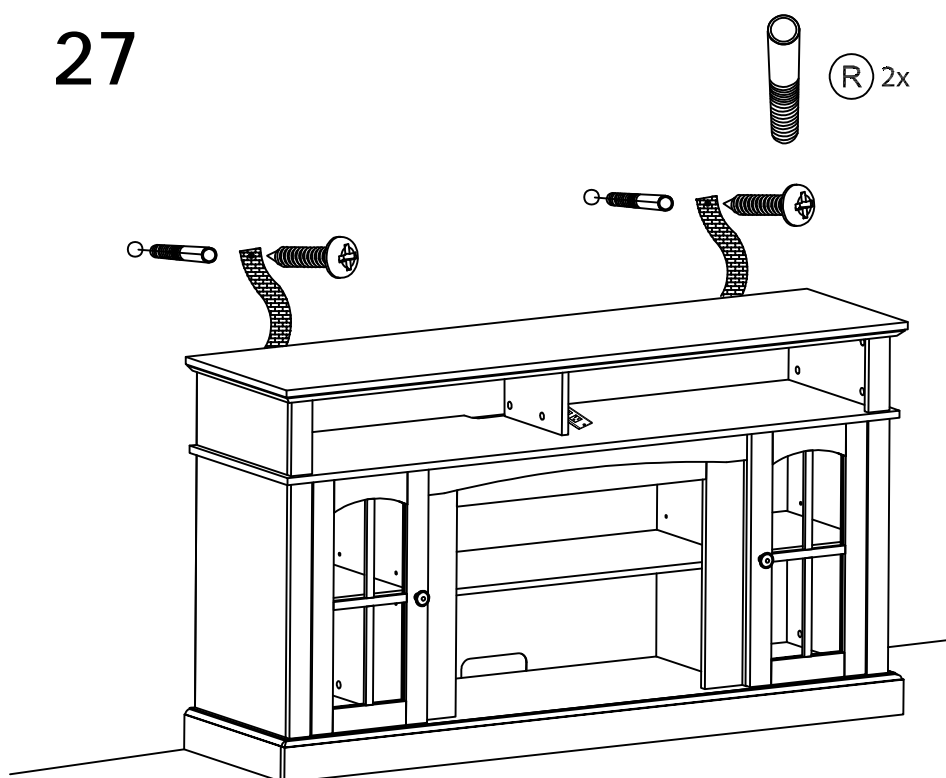     

The furniture must permanently be fixed to the wall using the provided anti-tipping device to prevent it from tipping over.


- Mark the drill positions on the wall with a pencil.
- Drill a small hole on the marked positions.
- Insert a wall anchor into the drilled hole.
- Fix the anti-tipping strap to the wall using the provided screws.

Note: Put the TV behind to the wood trim to prevent falling off.


## FINISH!

# FIREPLACE MANTEL ASSEMBLY

23

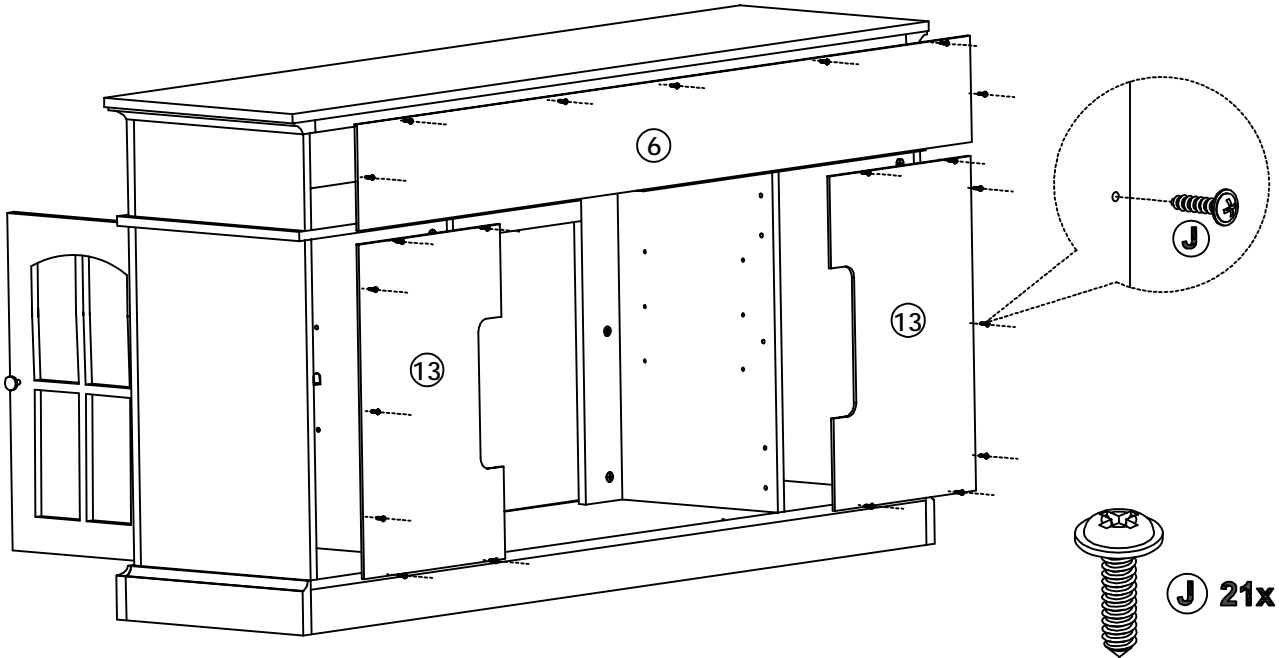


24

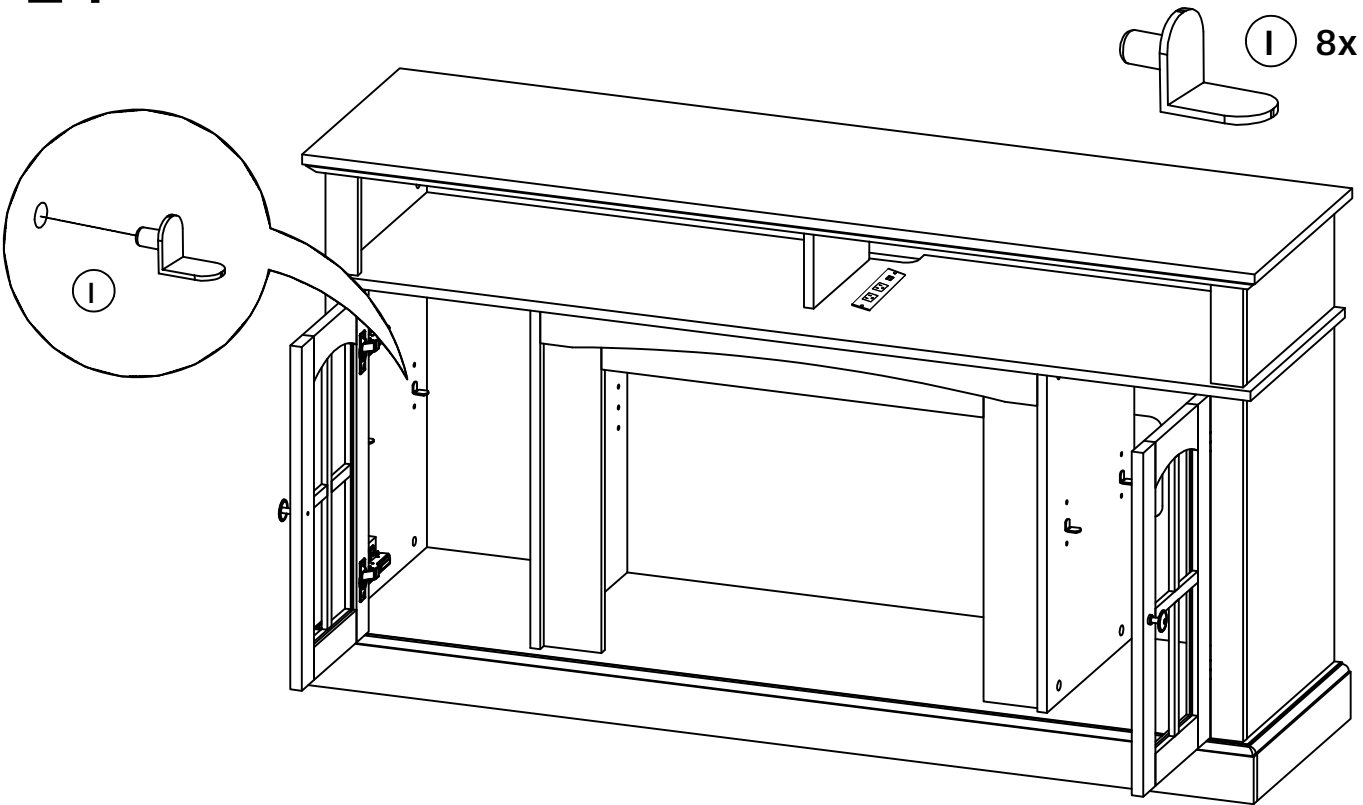






# 25

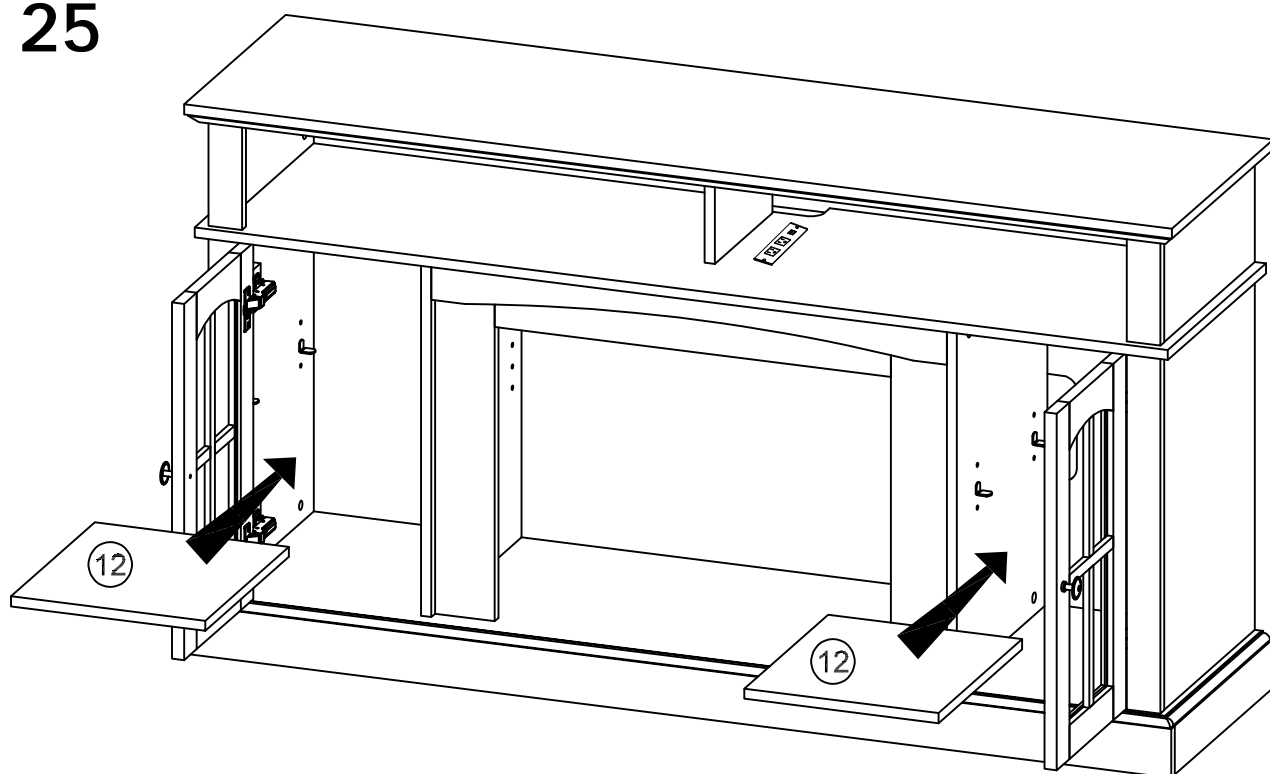 

# 26

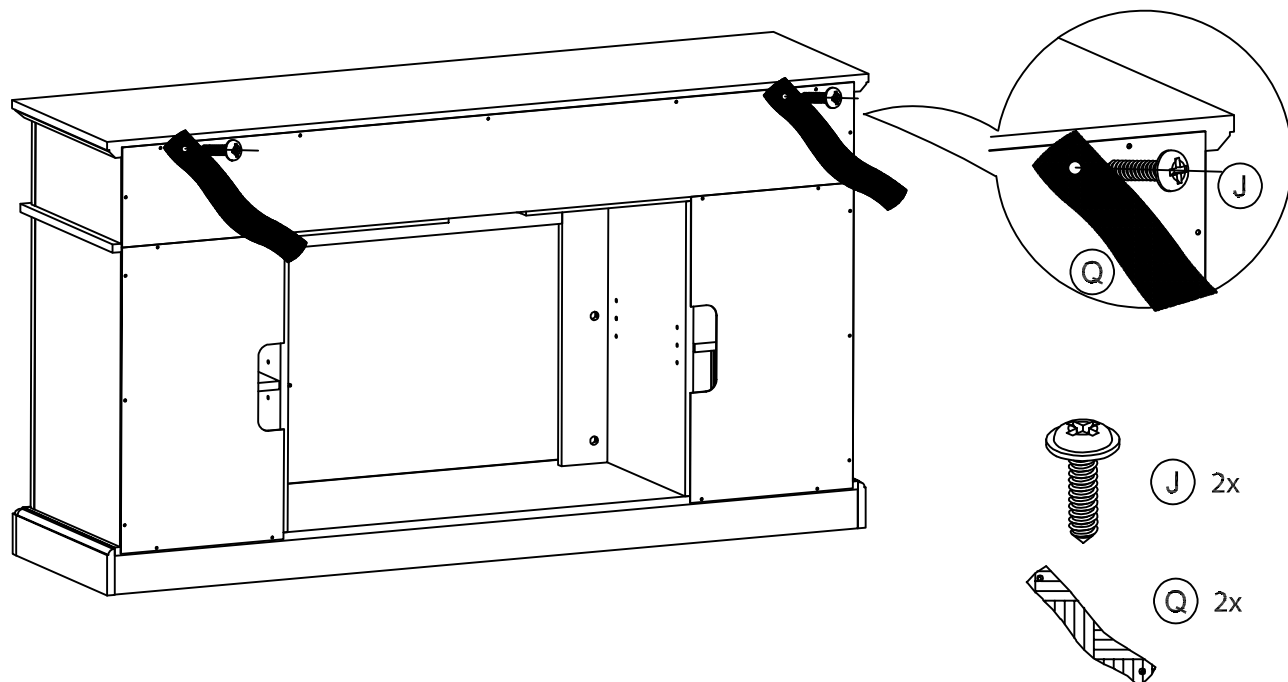 

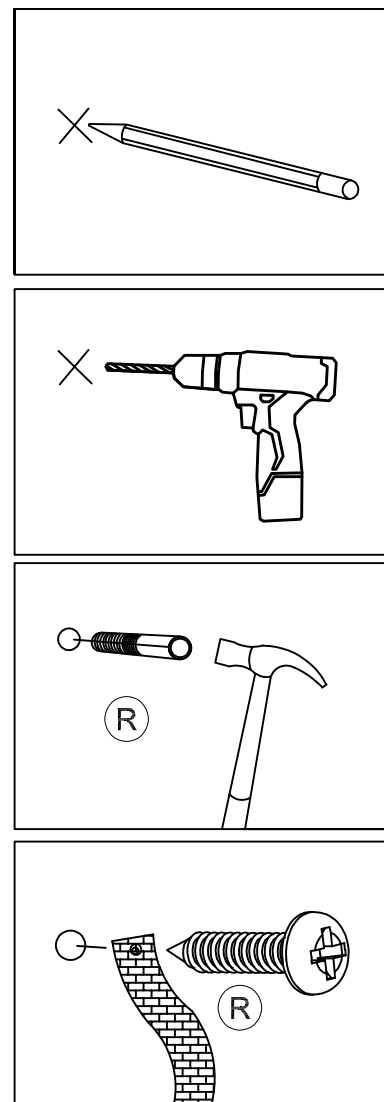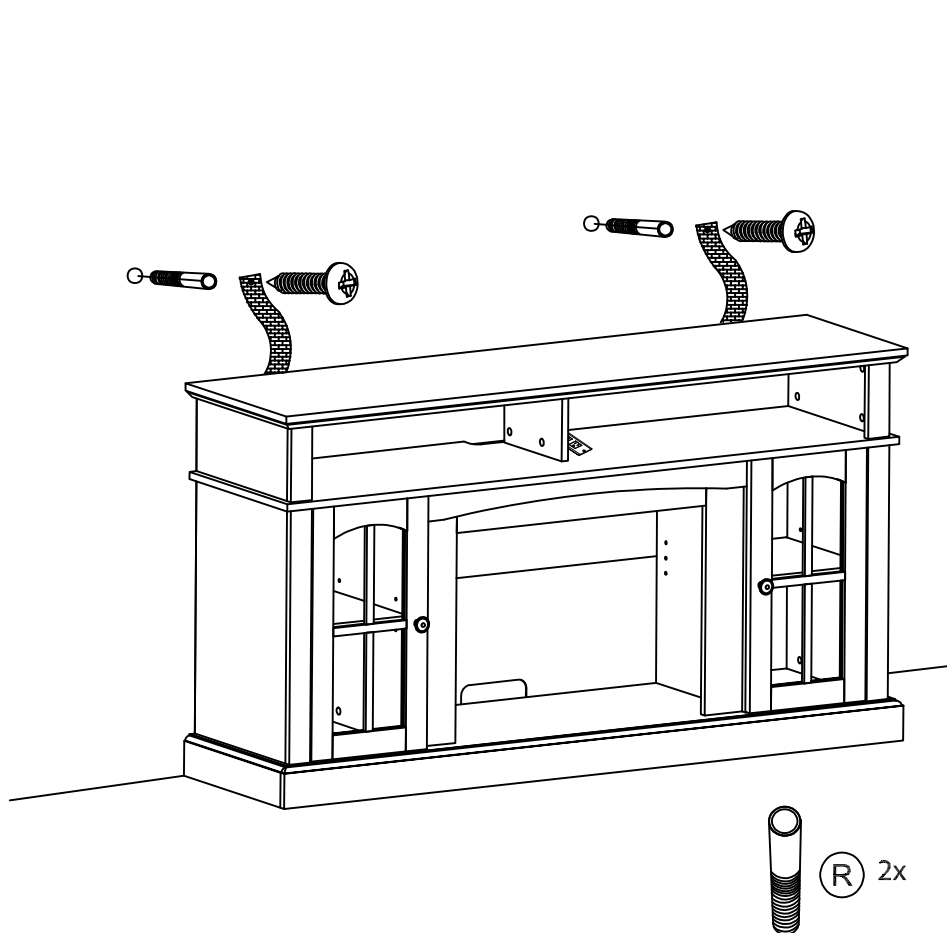  

The furniture must permanently be fixed to the wall using the provided anti-tipping device to prevent it from tipping over.

- Mark the drill positions on the wall with a pencil.
- Drill a small hole on the marked positions.
- Insert a wall anchor into the drilled hole.
- Fix the anti-tipping strap to the wall using the provided screws.

Note: Put the TV behind to the wood trim to prevent falling off.

## FINISH!