



**General Safety Instructions**

- Please read the instruction manual carefully before using this kettle.
- Please keep the instruction manual, warranty certificate, sales receipt and if possible, the carton with the inner packaging.
- This kettle is intended exclusively for private and not for commercial use.
- Switch the kettle off and remove the plug from the socket when the kettle is not in use. When you disconnect the power cord of the kettle, grasp and pull the plug, not the cord/cable.
- Switch the kettle off before cleaning.
- Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by a person who is responsible for their safety. Children should be supervised to make sure that they do not play with the appliance.
- Test the kettle and the cord/cable regularly for damage. Check if the kettle is operating properly. If there is damage of any kind or if the kettle is not operating properly, stop using the kettle and unplug it immediately.
- Do not attempt to repair the kettle yourself, only authorised and qualified personnel may repair this kettle.
- Keep the kettle and cord/cable away from heat, direct sunlight, water, moisture, sharp edges and the like.
- Use only original accessories, do not connect incompatible products.
- Do not use the kettle outdoors.
- The base and exterior of the kettle are not water-resistant, keep it dry at all times.
- Under no circumstances must the kettle be placed in water or any liquid or come in contact with liquid. Do not handle the kettle with wet or moist hands. Should the kettle become wet or moist, remove the main plug from the socket immediately.
- DO NOT touch the contents of the kettle.
- Use the kettle only for its intended purpose.
- The kettle is only to be used with the stand provided.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- Warning: If the kettle is overfilled, boiling water may be ejected.

**Special Safety Instructions for the Kettle**

- Use only cold water when filling the device.
- The water level must be between the MAX. and MIN. marks.
- Switch the kettle off before removing it from the base.
- Always make sure that the lid is tightly closed.
- The base and exterior of the kettle must never become wet.
- Kettle body used must match the kettle base.

**First Use of the Kettle**

- Before using the kettle for the first time, fill the kettle with cold water and boil it twice without any additives.
- Fill the kettle with water. Do not overfill. Use the water level indicator.
- Place the kettle on the base.
- Electric connection
  - Check if the voltage on your location is the same as that of the kettle. Details can be found on the label on the base of the kettle.
  - Only connect the kettle to a properly installed 110/120V 60Hz socket.
- Switch the kettle to position '1'. The control lamp on the water indicator shows that the water is being boiled.
- After boiling, the kettle switches off automatically.

**Cleaning**

Always remove the plug from the power supply before cleaning the kettle. The exterior of the kettle should be cleaned, if necessary, with a slightly damp cloth without additives. The calcium filter can be removed for cleaning.

**Power Supply:**  
110-120V 50/60Hz 1250-1500W

**Primer uso de la Tetera**

- Antes de utilizar la tetera por primera vez, llene la tetera con agua fría y hervia dos veces sin ningún aditivo.
- Coloque la tetera en la base.
- Conexión eléctrica
  - Verifique si el voltaje de su área es igual al de la tetera. Los detalles pueden encontrarse en la etiqueta en la base de la tetera.
  - Sólo conecte la tetera a un enchufe de 110/120V 60Hz correctamente instalado.
- Coloque la tetera en posición '1'. La lámpara de control del indicador de agua muestra que se está hirviendo agua.
- Después de hervir, la tetera se apagará automáticamente.

**Limpieza**

Si la tetera está sobrecargada, puede expulsar agua hirviendo. La tetera es sólo para ser usada con la base provista.

**Instrucciones Generales de Seguridad**

- Por favor lea cuidadosamente el manual de instrucciones antes de utilizar esta tetera.
- Asegúrese siempre de que la tapa esté cerrada herméticamente.
- La base y el exterior de la tetera no deben mojarse nunca.
- El cuerpo de la tetera debe siempre coincidir con la base de la tetera.

**Primer uso de la Tetera**

- Llene la tetera con agua. No llene en exceso. Utilice el indicador de nivel del agua.
- Coloque la tetera en la base.
- Conexión eléctrica
  - Verifique si el voltaje de su área es igual al de la tetera. Los detalles pueden encontrarse en la etiqueta en la base de la tetera.
  - Sólo conecte la tetera a un enchufe de 110/120V 60Hz correctamente instalado.
- Coloque la tetera en posición '1'. La lámpara de control del indicador de agua muestra que se está hirviendo agua.
- Después de hervir, la tetera se apagará automáticamente.

**Limpieza**

Si la tetera está sobrecargada, puede expulsar agua hirviendo. La tetera es sólo para ser usada con la base provista.

**Instrucciones Especiales de Seguridad para la Tetera**

- Utilice sólo agua fría cuando llene el dispositivo.
- El nivel del agua debe estar entre las marcas de MAX. y MIN.

**Manual de uso y cuidado**

**Precauciones importantes**

Este producto es para uso doméstico únicamente.