

Warning: Please read this instruction manual carefully before using the product.



GAUTION:When tightening the screws, tighten sequentially. Do not tighten any screws fully and then towards the next one. When every part is OK, then tighten all the screws.







serial number	schematic diagram	Specification	quantity	serial number	schematic diagram	Specification	quantity
A		M6x40	10	H		M4x20	2
B		ST5x40	28	I		M6	4
C	()	Ø 6x30	10	J	(j))))))>	M3.5x10	20
D	(1)))))))))))))))))))))))))))))))))	M6x25	10	K		M6	4
E	(۱)	M6x40	18	L	ſ	МЗ	1
F		M6x50	4	M	ſ	M4	1
G		M4x16	2				





































