 


Installation step instructions

1 The installation instructions for ceiling lights with different numbers of heads are the same.

Step 1




① Unscrew the nuts inside the cupula and remove the motor

② Unscrew side screws and remove the hanging board

Step 2

The orientation of light arm is aligned with the position point of cupula.

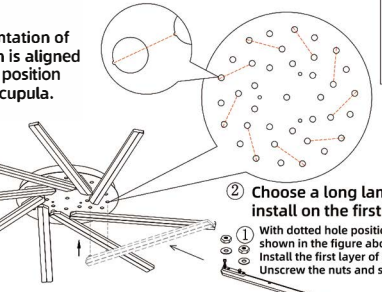


② Choose a long lamp arm to install on the first layer

① With dotted hole position as shown in the figure above, install the first layer of light arms

Unscrew the nuts and spacers


Note: According to the chassis installation diagram, install all long lamp heads first, and then install all short lamp heads.

Installation Tips

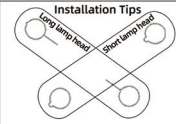

Step 3

The lamp arm shaft passes through the ceiling plate, Locking with nuts and spacers.

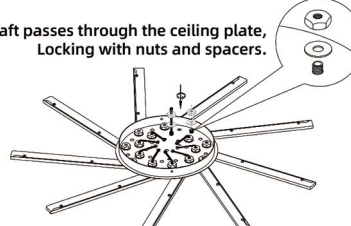


>> 01 <<

Note: The installation instructions for ceiling lights with different numbers of heads are the same.

Step 4

The orientation of light arm is aligned with the position point of cupula. Point to point forming a straight line as a pair of holes.

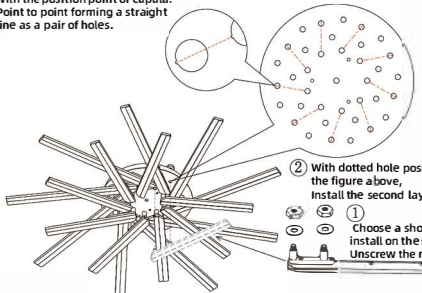


② With dotted hole position as shown in the figure above, install the second layer of light arms

① Choose a short lamp arm to install on the second layer

Unscrew the nuts and spacers


Note: According to the chassis installation diagram, install all long lamp heads first, and then install all short lamp heads.

Installation Tips

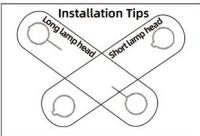


Step 5

The lamp arm shaft passes through the ceiling plate, Locking with nuts and spacers.

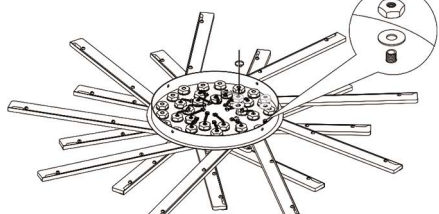

Step 6

 Find the triangular hole shown in the picture on cupula, then install three dental rods corresponding to the motor.



①


② The motor shaft passes through the ceiling plate, Locking with nuts and spacers.

Install the motor

>> 02 <<

Note: The installation instructions for ceiling lights with different numbers of heads are the same.


Step 7

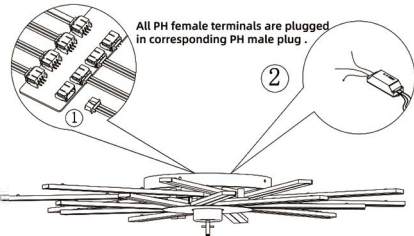

① All PH female terminals are plugged in corresponding PH male plug.

②


Step 8

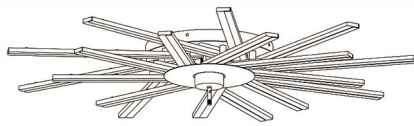

① Face the position of the middle column of motor, install the motor blades.

② Screw retaining ring of the blades counterclockwise.

Step 9

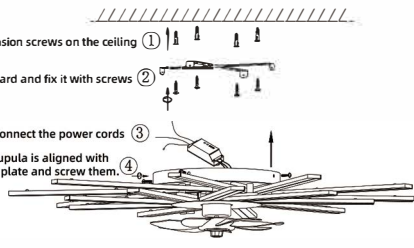

① Install expansion screws on the ceiling

② Press the hanging board and fix it with screws

③ Connect the power cords

④ The hole on side of cupula is aligned with the hole of hanging plate and screw them.

>> 03 <<

2. Remote control

1. Introduction to the key functions of the remote control



Description of code matching method

- 1: Turn on the wall power switch, press the "SETUP" key for 5 seconds until hearing a "DI" sound. After hearing the sound twice, the match was successful.
- 2: If not matched, turn off the power and repeat the operation after one minute.
- 3: If the remote control does not work after a period of time, change the battery and try again.

- Turn off the lights
- Turn on the lights
- All off
- Change color temperature
- Night lamp
- Increase brightness
- Reduce brightness
- Increase color temperature
- Reduce color temperature
- Forward rotation/ Reverse rotation
- Timing function 2 hours
- The gear position of the fan: 1st gear is the minimum wind
- Natural wind
- fan is off

Description of how software operates

1. Software download.
2. Device addition: After logging in APP, click "+" in the upper right corner to add a device. According to the prompts, fill in device name, room and select the corresponding device type such as fan light etc to complete the operation.
3. Matching: After adding the device, click the device icon to enter device details page, power off the device that need be matched for 1-2 seconds and then power it back on. Click the "matching" button on bottom right corner, and light flashes 3 times on and on, indicating that matching is successful. After supporting multiple devices to match at the same time, you can use APP to control them.

>> 04 <<