


ASSEMBLY INSTRUCTIONS

Thank you for purchasing one of our products.
Please read carefully the assembly instructions before the installation.
Do not discard this manual or any of the packaging material until the unit has been completely assembled.

WOODEN BOOKCASE, BROWN

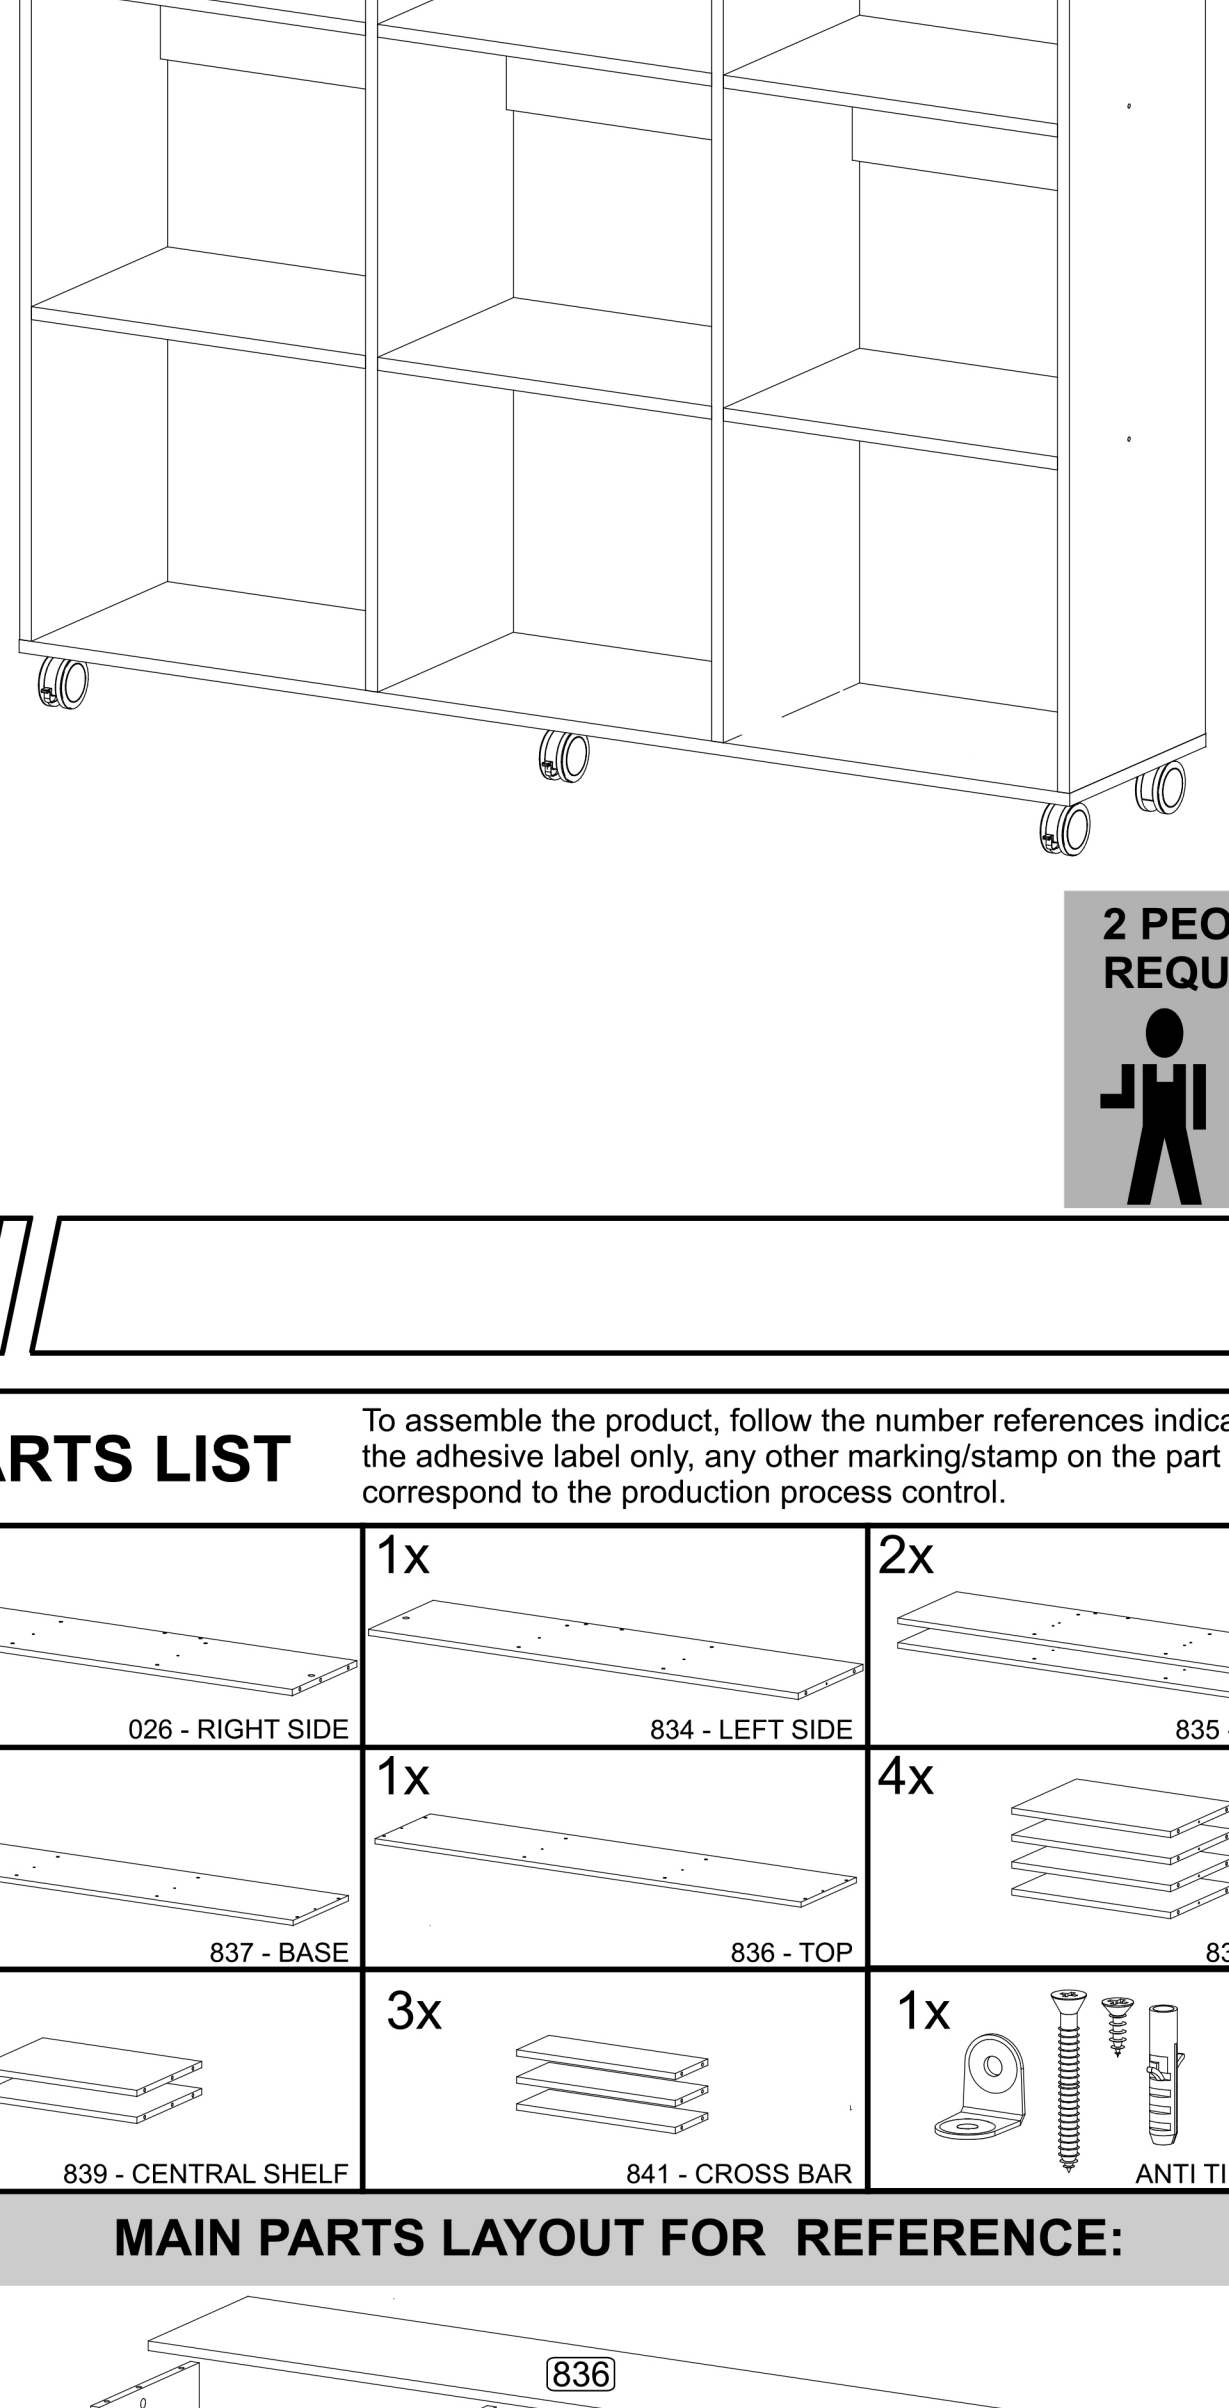

**2 PEOPLE
REQUIRED**





P.2

PARTS LIST

To assemble the product, follow the number references indicated on the adhesive label only, any other marking/stamp on the part may correspond to the production process control.

1x	1x	2x
026 - RIGHT SIDE	834 - LEFT SIDE	835 - DIVISION
1x	1x	4x
837 - BASE	836 - TOP	838 - SHELF
2x	3x	1x
839 - CENTRAL SHELF	841 - CROSS BAR	ANTI TIPPING KIT

MAIN PARTS LAYOUT FOR REFERENCE:

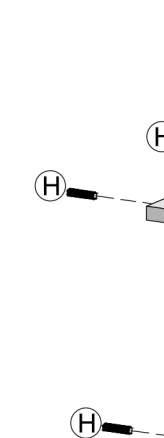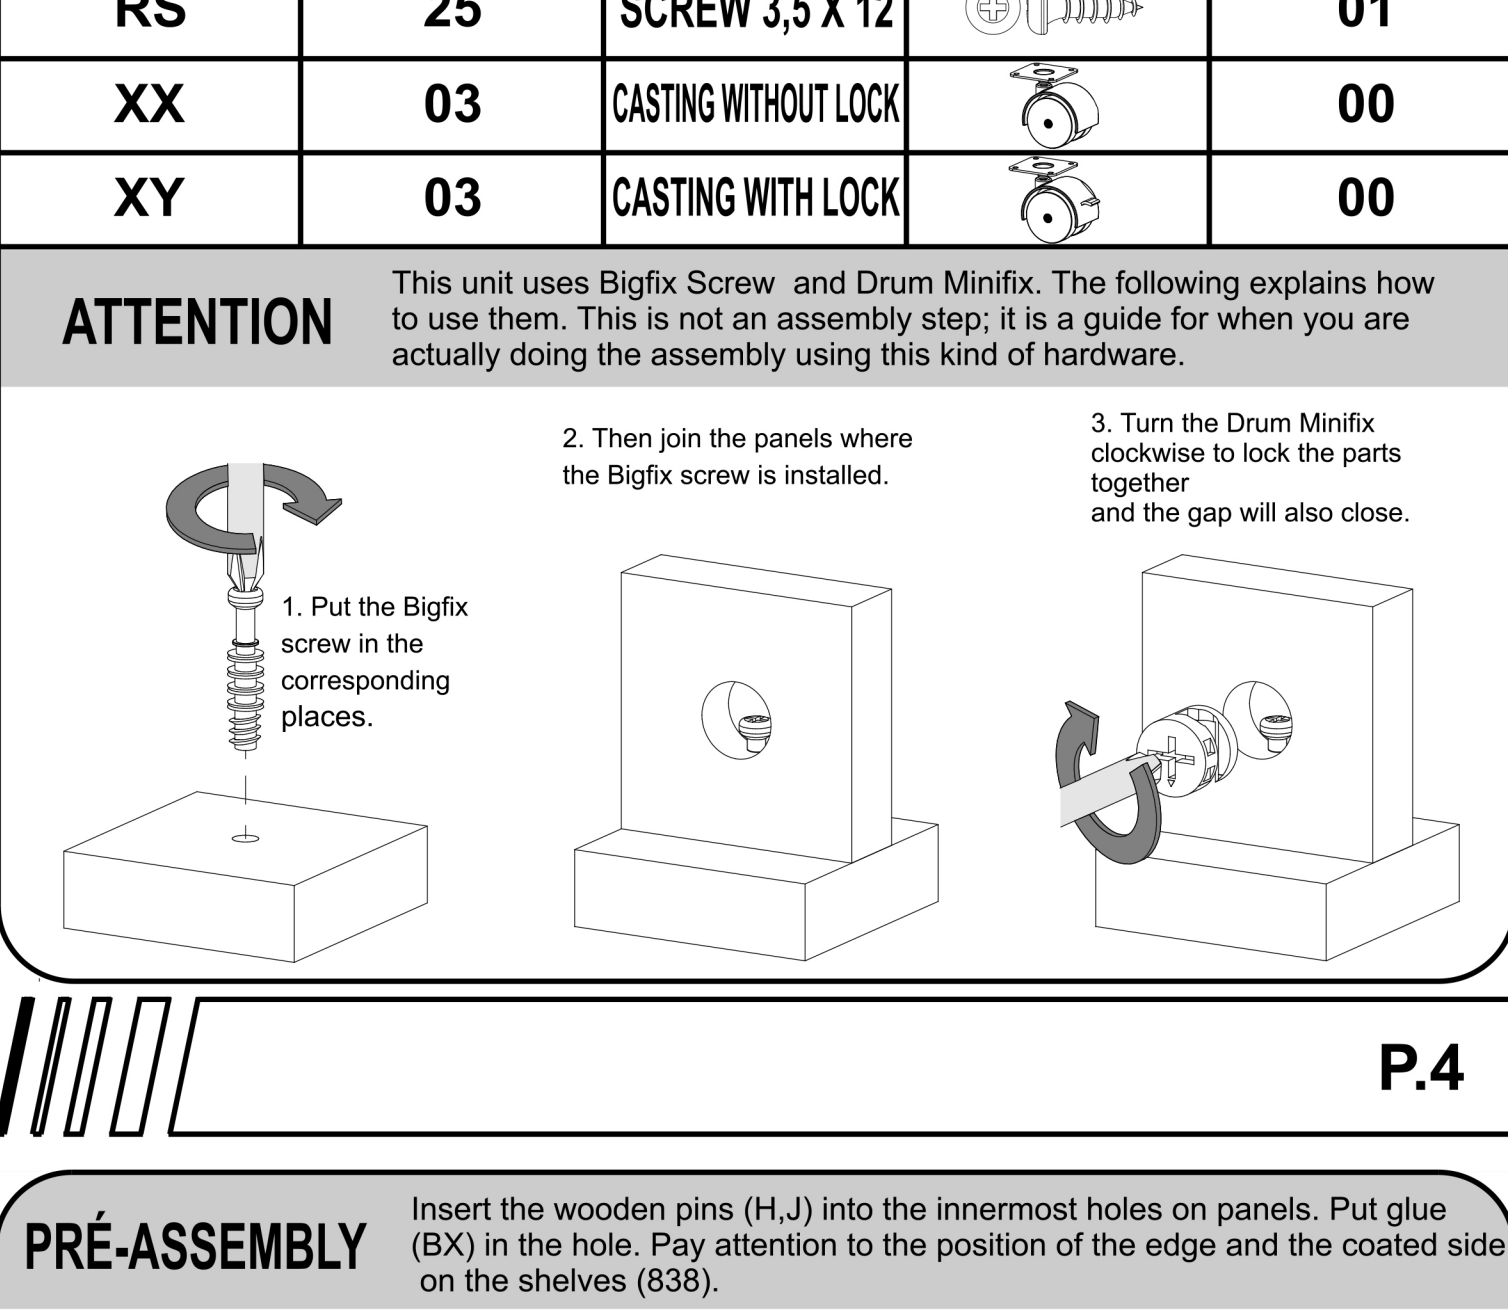

P.3



SCREWS

NOTE: Assembly tools you will need (not Included):
1 - Phillips screwdriver. 3 - Screwdriver.
2 - Mallet or hammer. 4 - Drill Ø6.

PART	QYT.	ITEM	ITEM	EX. HARDWARE
A	05	STICKER		01
B	13	SCREW 4,5 X 50		01
BX	02	GLUE		01
H	29	PIN 8,0 X 30		01
J	13	PIN 8,0 X 50		01
N	09	SCREW BIGFIX		01
O	09	DRUM MINIFIX		01
P	05	DRUM COVER		01
RS	25	SCREW 3,5 X 12		01
XX	03	CASTING WITHOUT LOCK		00
XY	03	CASTING WITH LOCK		00

ATTENTION


This unit uses Bigfix Screw and Drum Minifix. The following explains how to use them. This is not an assembly step; it is a guide for when you are actually doing the assembly using this kind of hardware.

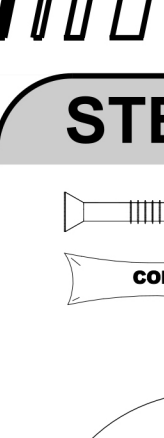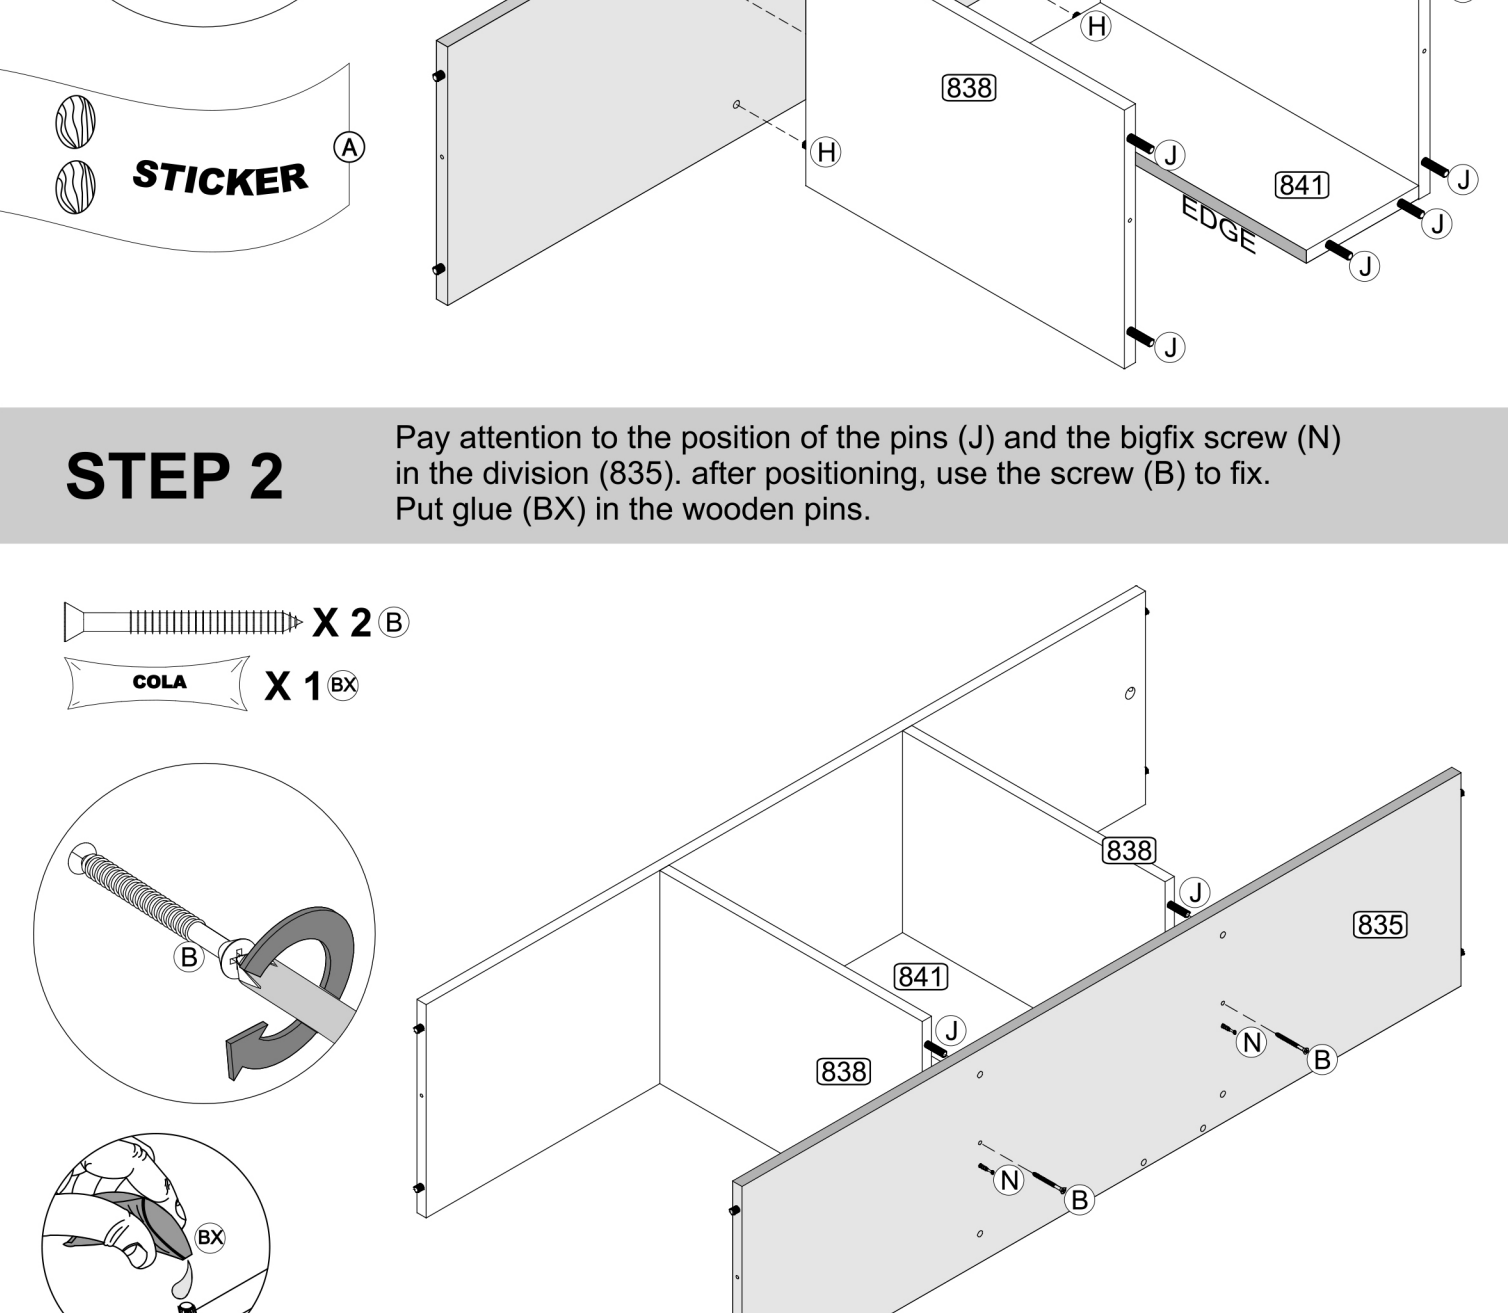

P.4



PRÉ-ASSEMBLY

Insert the wooden pins (H,J) into the innermost holes on panels. Put glue (BX) in the hole. Pay attention to the position of the edge and the coated side on the shelves (838).

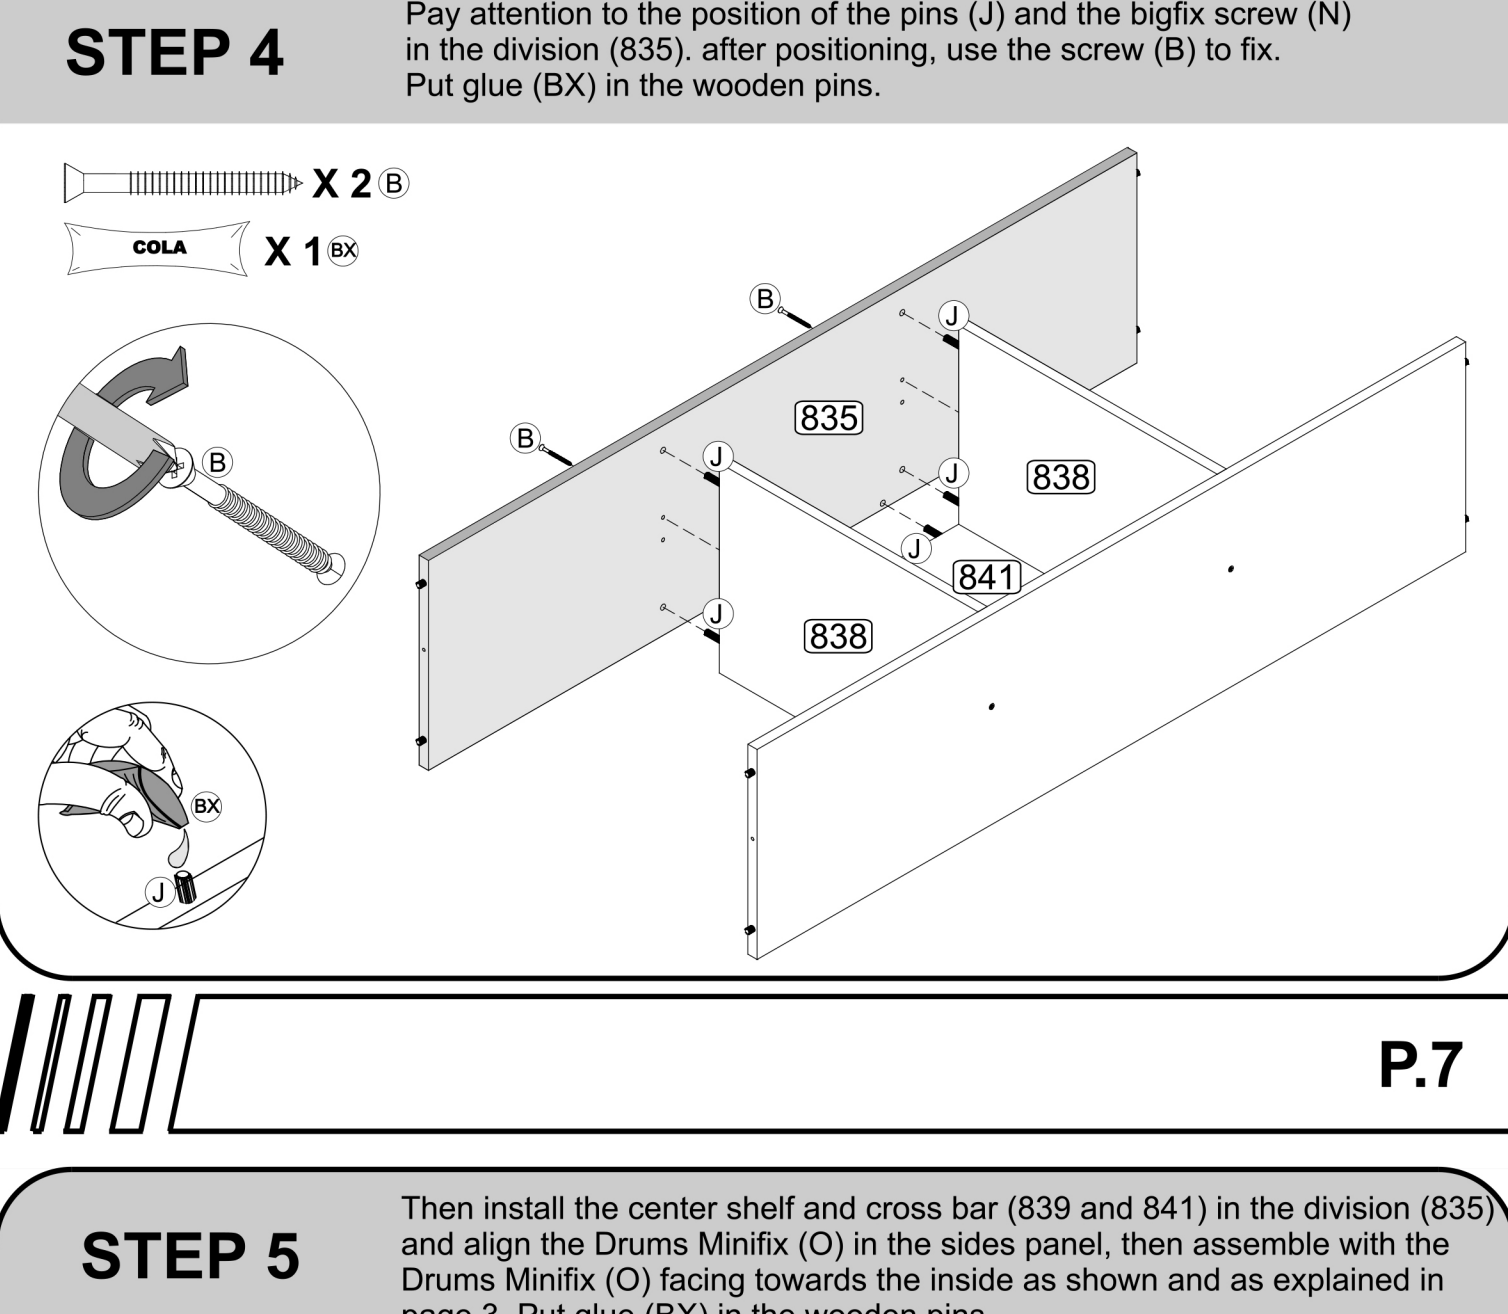

PRÉ-ASSEMBLY


Screw the Bigfix bolt (N) to the corresponding holes on the surface, placing the Bigfix screw at 136 mm on the opposite side of the holes indicated by the minor indications. Insert the wooden pins (H) into the innermost holes on panels. Put glue (BX) in the hole.

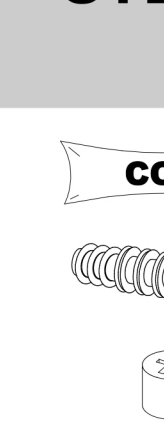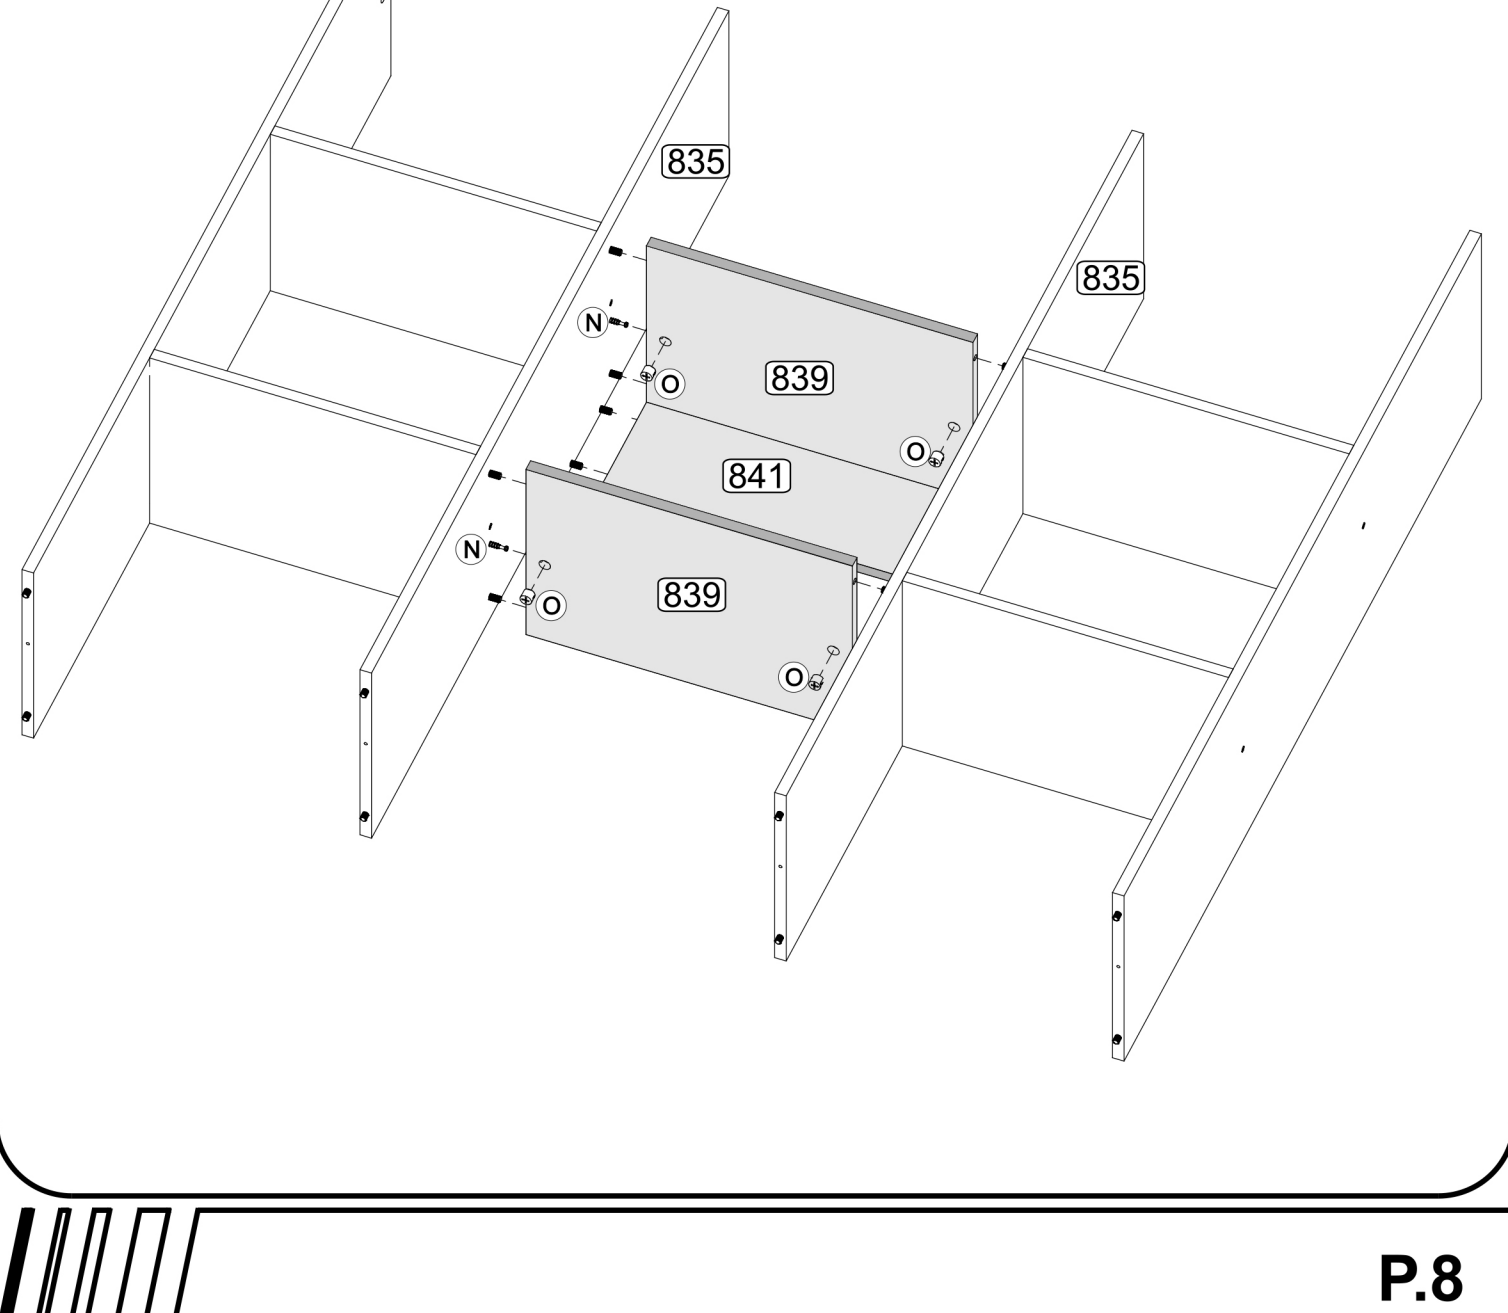

P.5


STEP 1

Screw the shelves (838) and fit the back (841) with the holes pins and put the glue (BX). Cover the screw (B) with sticker (A).

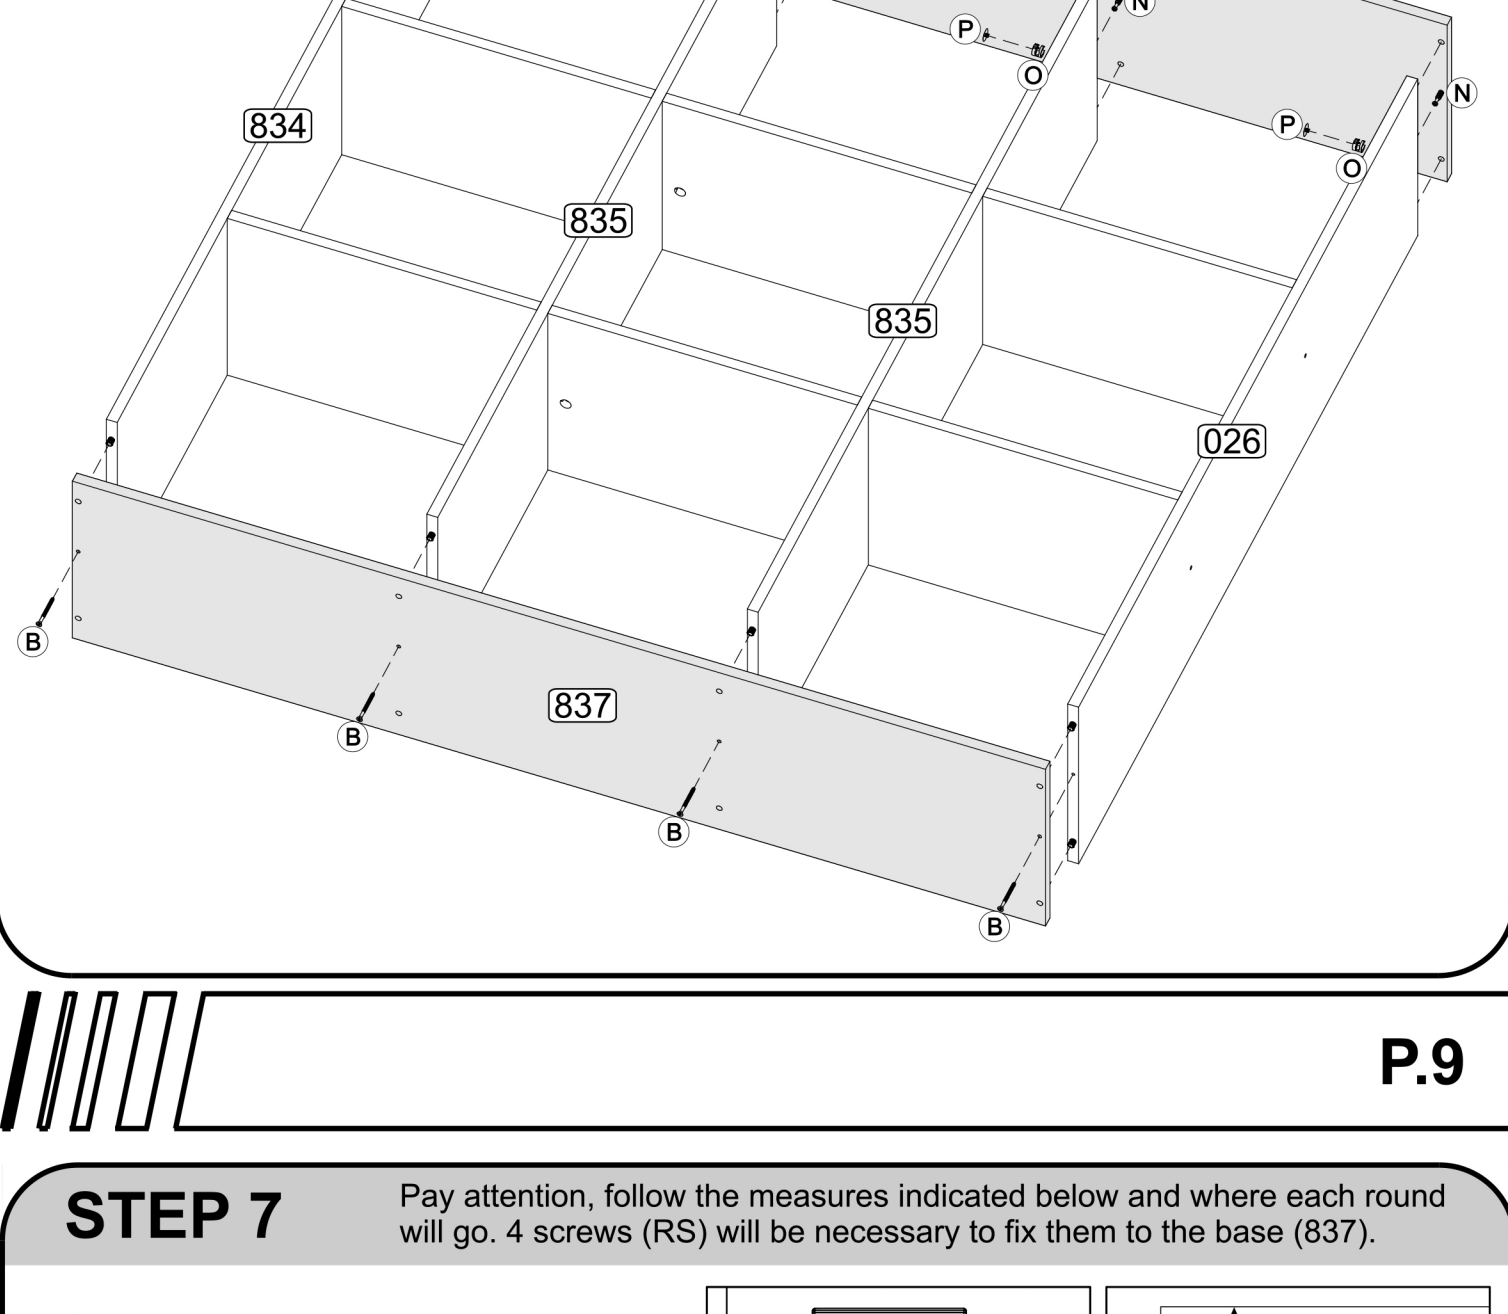

STEP 2


Pay attention to the position of the pins (J) and the bigfix screw (N) in the division (835). After positioning, use the screw (B) to fix. Put glue (BX) in the wooden pins.

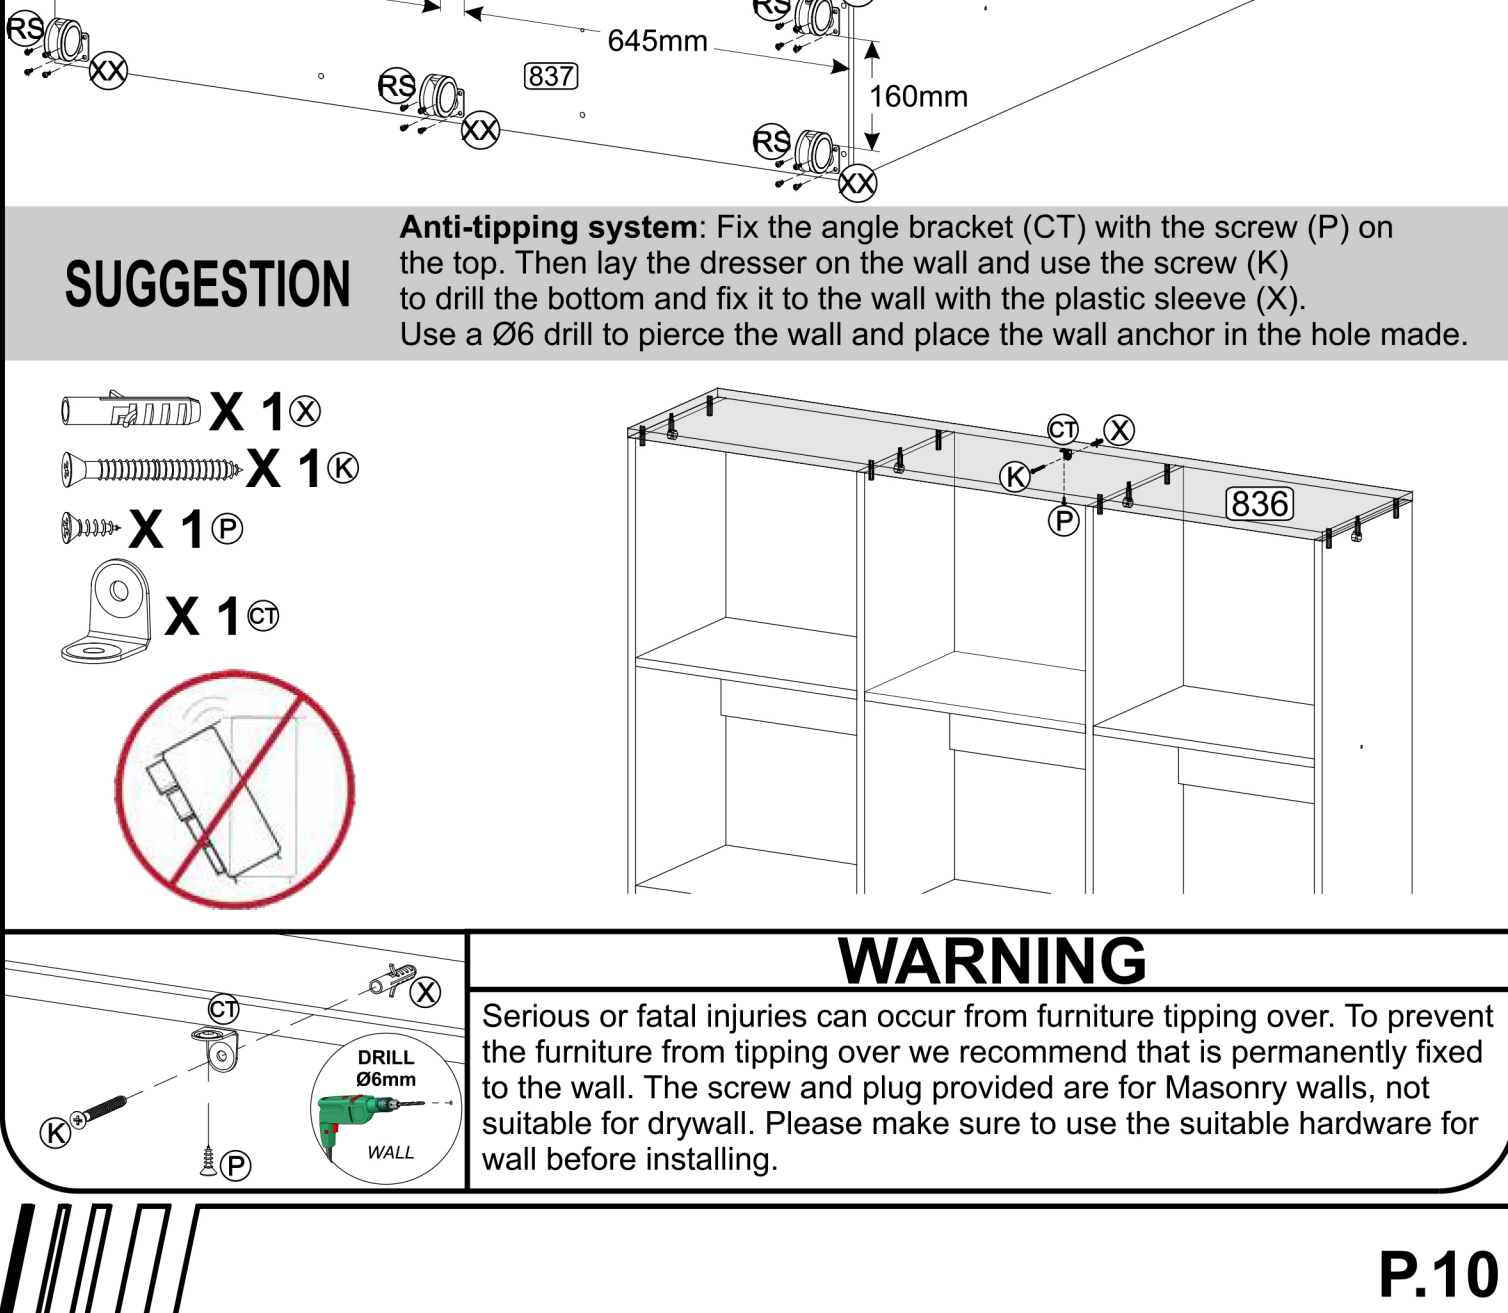

P.6

STEP 3

Screw the shelves (838) and fit the cross bar (841) with the holes pins and put the glue (BX). Cover the screw (B) with sticker (A).

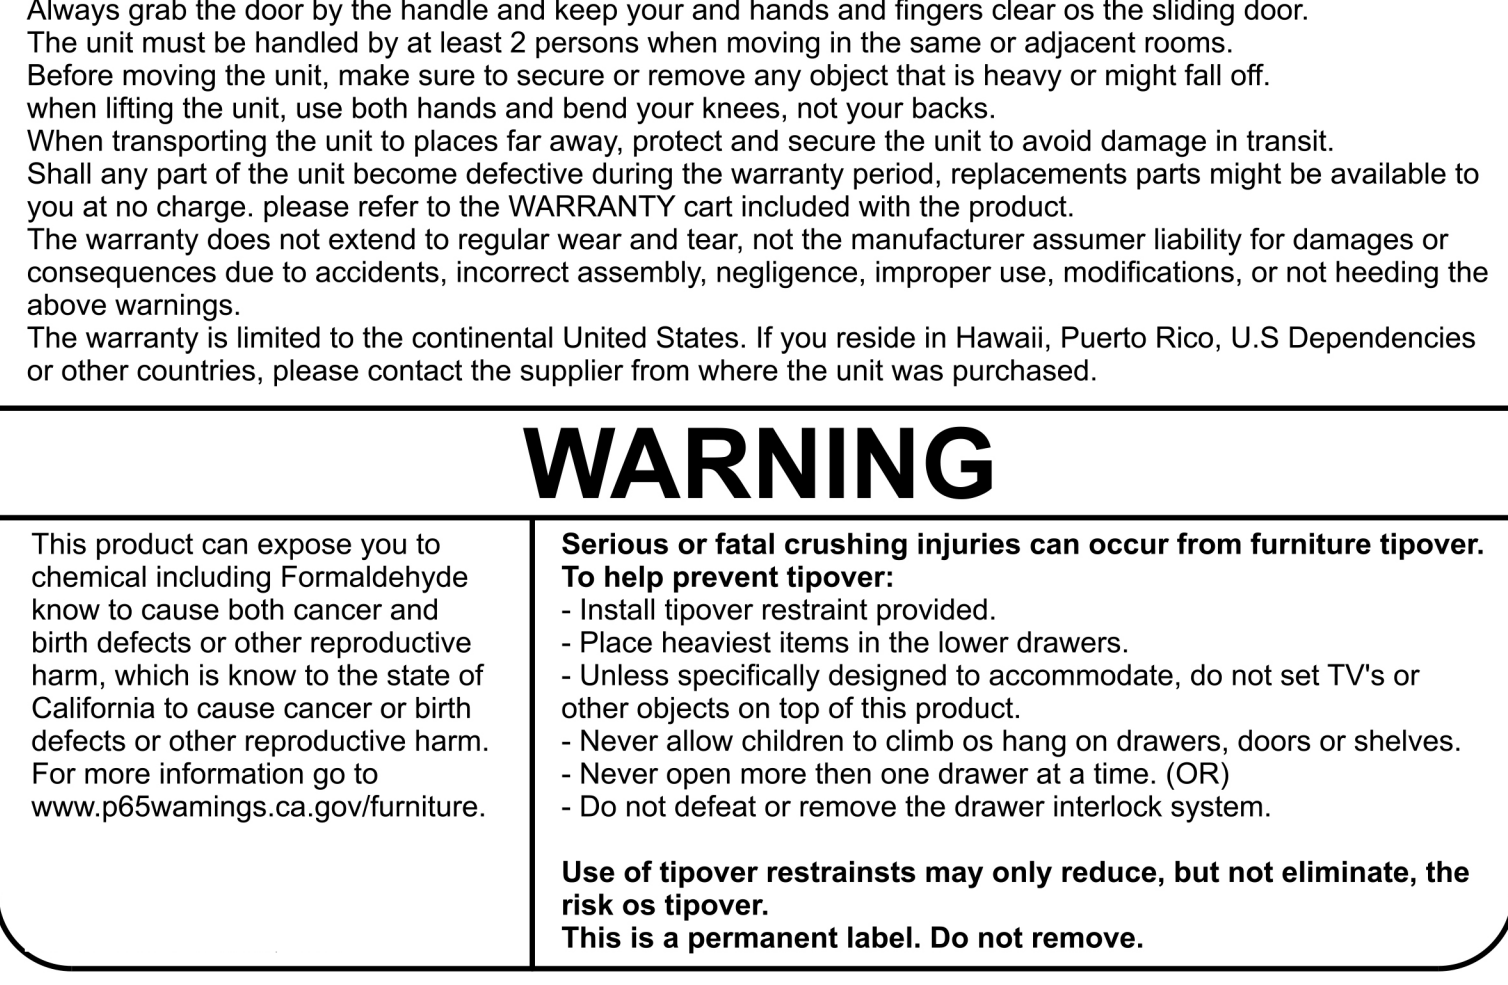

STEP 4

Pay attention to the position of the pins (J) and the bigfix screw (N) in the division (835). After positioning, use the screw (B) to fix. Put glue (BX) in the wooden pins.

P.7

STEP 5

Then install the center shelf (839) and cross bar (841) in the division (835) and align the Drums Minifix (O) in the sides panel, then assemble with the Drums Minifix (O) facing towards the inside as shown and as explained in page 3. Put glue (BX) in the wooden pins.

P.8

STEP 6

Then install the top (836) in the division (835) and sides (835, 026, 834) and align the Drums Minifix (O) in the sides panel, then assemble with the Drums Minifix (O) facing towards the inside as shown and as explained in page 3. Fix the base (837), screw with the indicated screws (B) in their respective places. Put glue (BX) in the wooden pins.

P.9

STEP 7

Pay attention, follow the measures indicated below and where each round will go. 4 screws (RS) will be necessary to fix them to the base (837).

SUGGESTION

Anti-tipping system: Fix the angle bracket (CT) with the screw (P) on the top. Then lay the dresser on the wall and use the screw (X) to drill the bottom and fix it to the wall with the plastic sleeve (K). Use a Ø6 drill to pierce the wall and place the wall anchor in the hole made.

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that is permanently fixed to the wall. The screw and plug provided are for Masonry walls, not suitable for drywall. Please make sure to use the suitable hardware for wall before installing.

P.10

ALL DONE!

Before you start using the unit, make sure that all the screws, bolts, can locks, etc. are properly tightened, and read the following warnings.

Do not exceed the indicated weight limits.
Do not expose the surfaces to direct sunlight or to extreme environmental conditions.
Clean the surfaces preferable with a clean cloth damped in a solution of mild soap and water, then dry with a clean towel.
Do not use solvents or abrasive materials to clean the unit.
If you decide to use a cleaning agent, test first on an area hidden from view such as underneath the top.
Do not seat on the unit or lean against it.
Do not allow small children to play inside or over the unit.
Always grab the door by the handle and keep your hands and fingers clear of the sliding door.
The unit must be handled by at least 2 persons when moving in the same or adjacent rooms.
Before moving the unit, make sure to secure or remove any object that is heavy or might fall off.
When lifting the unit, use both hands and bend your knees, not your backs.
When transporting the unit to places far away, protect and secure the unit to avoid damage in transit.
If you become defective during the warranty period, replacements parts might be available to you at no charge, please refer to the WARRANTY card included with the product.
The warranty does not extend to regular wear and tear, nor the manufacturer assumes liability for damages or consequences due to accidents, incorrect assembly, negligence, improper use, modifications, or not heeding the above warnings.
The warranty is limited to the continental United States. If you reside in Hawaii, Puerto Rico, U.S Dependencies or other countries, please contact the supplier from where the unit was purchased.

WARNING

This product can expose you to chemical including Formaldehyde know to cause both cancer and birth defects or other reproductive harm, which is know to the state of California to cause cancer or birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov/furniture.

Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tipover:
- Install tipover restraint provided.
- Place heaviest items in the lower drawers.
- Unless specifically designed to accommodate, do not set TV's or other objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time. (OR)
- Do not defeat or remove the drawer interlock system.

Use of tipover restraints may only reduce, but not eliminate, the risk of tipover. This is a permanent label. Do not remove.