 



# Love Seat and Coffee Table






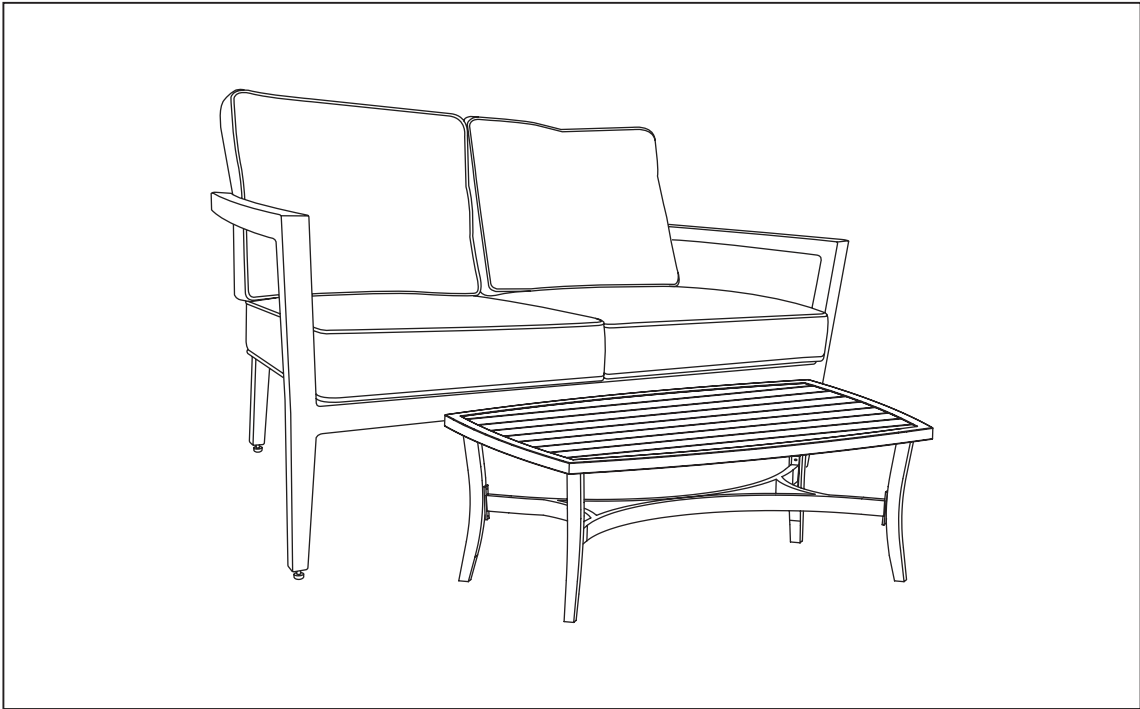



## ASSEMBLY INSTRUCTIONS

**IMPORTANT, RETAIN FOR FUTURE REFERENCE.  
READ CAREFULLY.**

       
# PARTS LIST

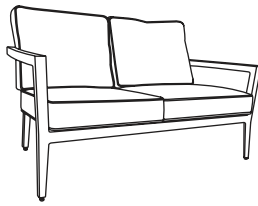

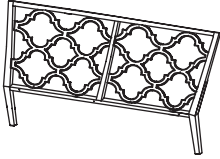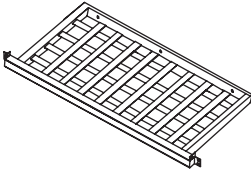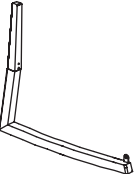NO	PICTURE	PART DESCRIPTION	QTY.
A		Sofa back	1
B		Sofa seat	1
C		Left and right arms	2
D		Bolt (M6 x 20)	8
E		Bolt (M6 x 35)	3
F		Washer (13*6.5*1.0)	11
G		Allen wrench #4	1


# Step 1.

 **CONNECT SOFA BACK TO SOFA SEAT** - Connect the sofa back (A) to the sofa seat (B) using washers (F), bolts (E), and allen wrench (G).

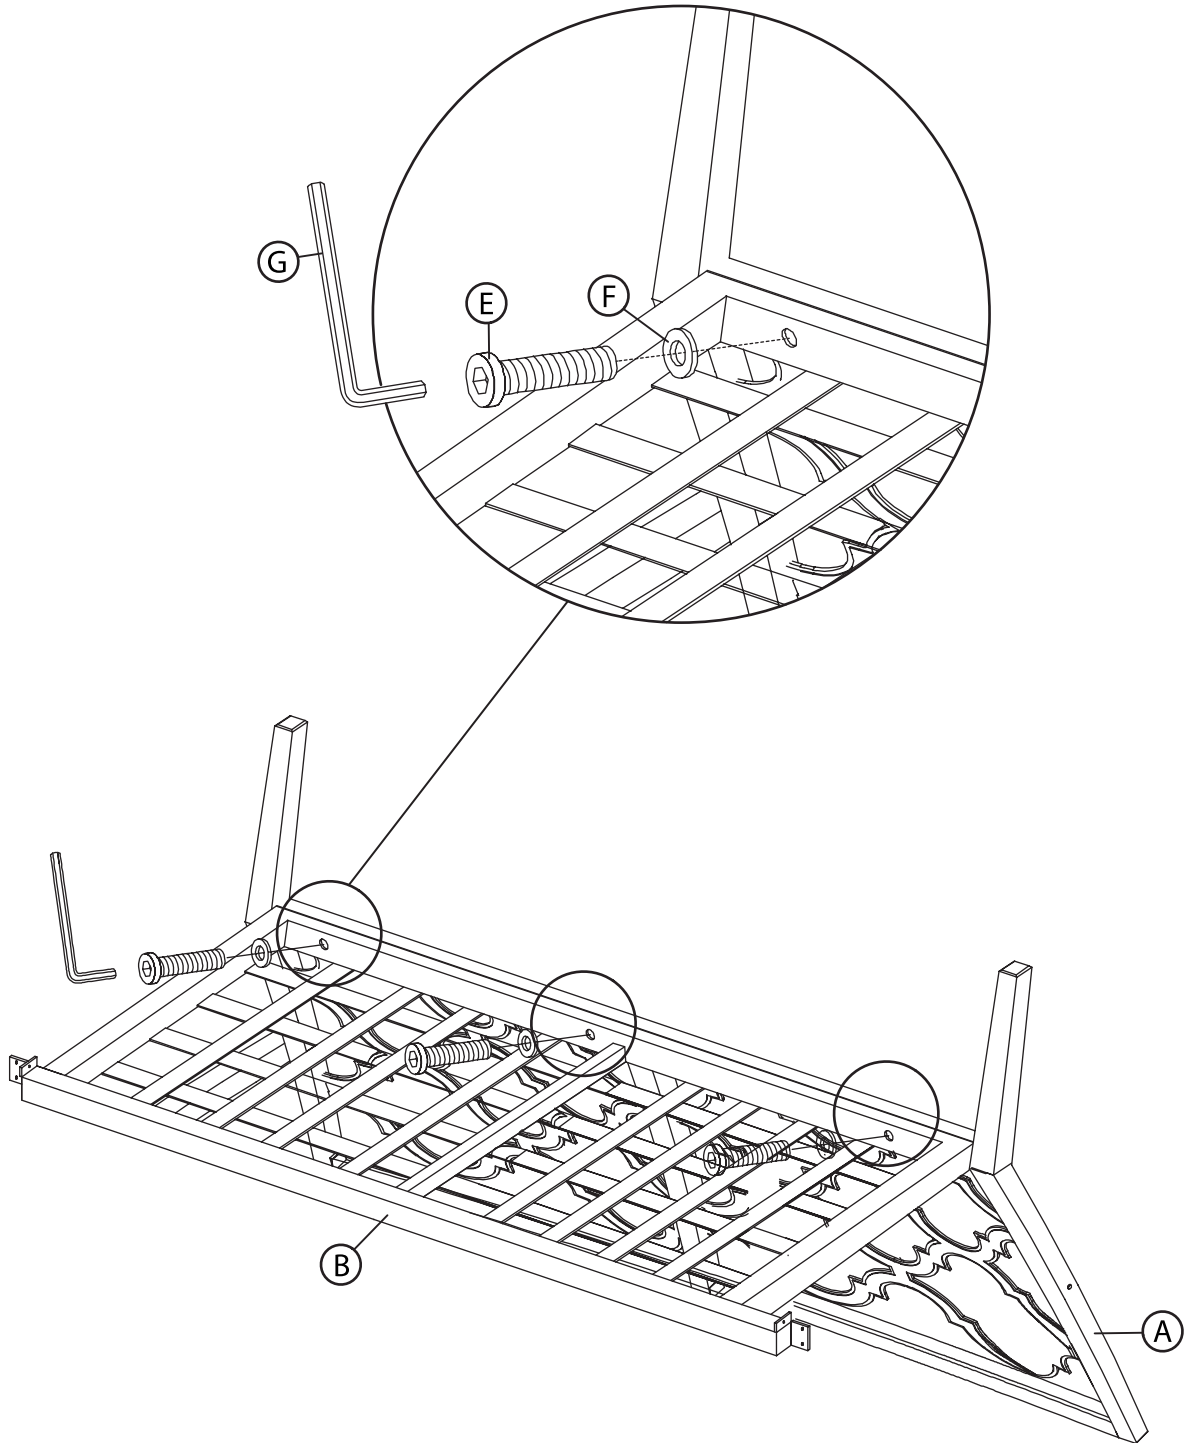








## Step 2.

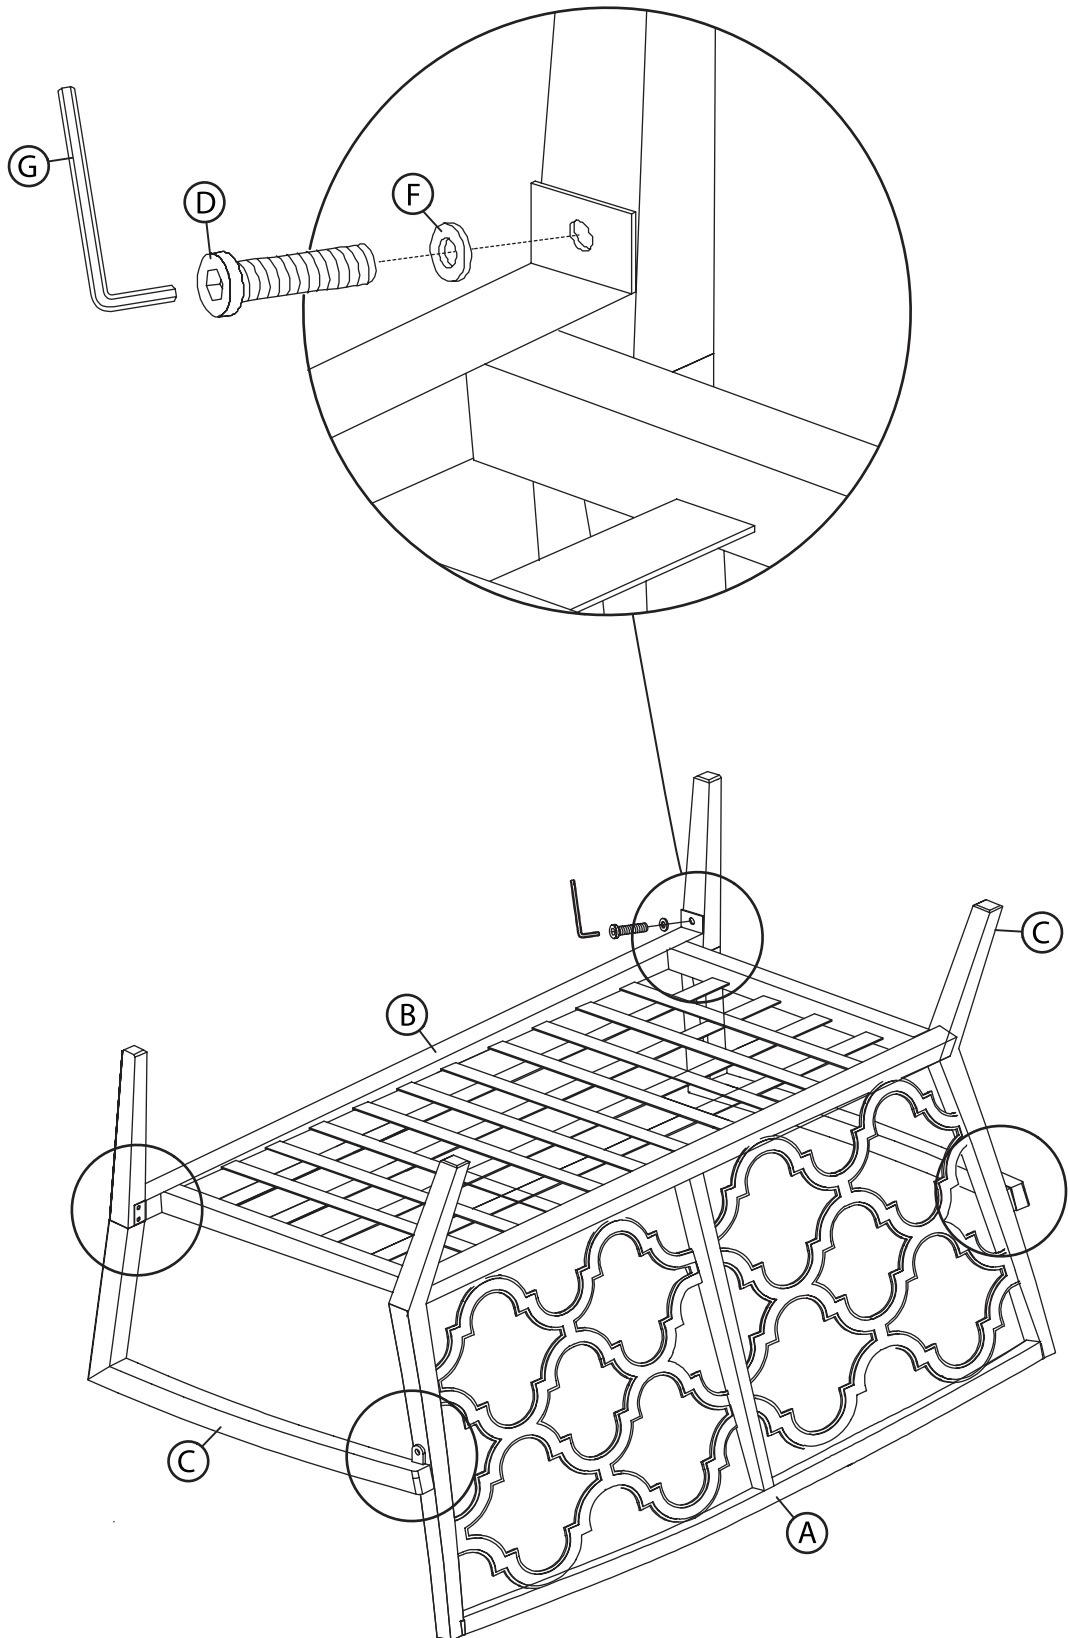  **ATTACH LEFT AND RIGHT ARMS** - Attach the left and right arms (C) to the assembled sofa back (A) and sofa seat (B) using washers (F), bolts (D), and allen wrench (G).

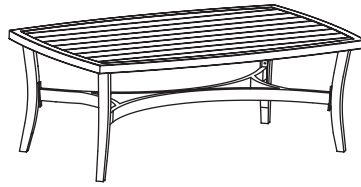

# PARTS LIST

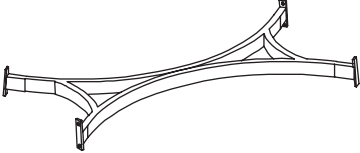    


NO	PICTURE	PART DESCRIPTION	QTY.
A		Table top	1
B		Table legs	4
C		Legs support	1
D		Bolt (M6 x 20)	16
E		Washer (13*6.5*1.0)	16
F		Allen wrench #4	1

# Step 1.


## ATTACH COFFEE TABLE LEGS AND LEGS SUPPORT

 1. Attach legs (B) to the table top (A) using washers (E), bolts (D), and allen wrench (F).
2. Attach legs support (C) to table legs (B) using washers (E), bolts (D), and allen wrench (F).

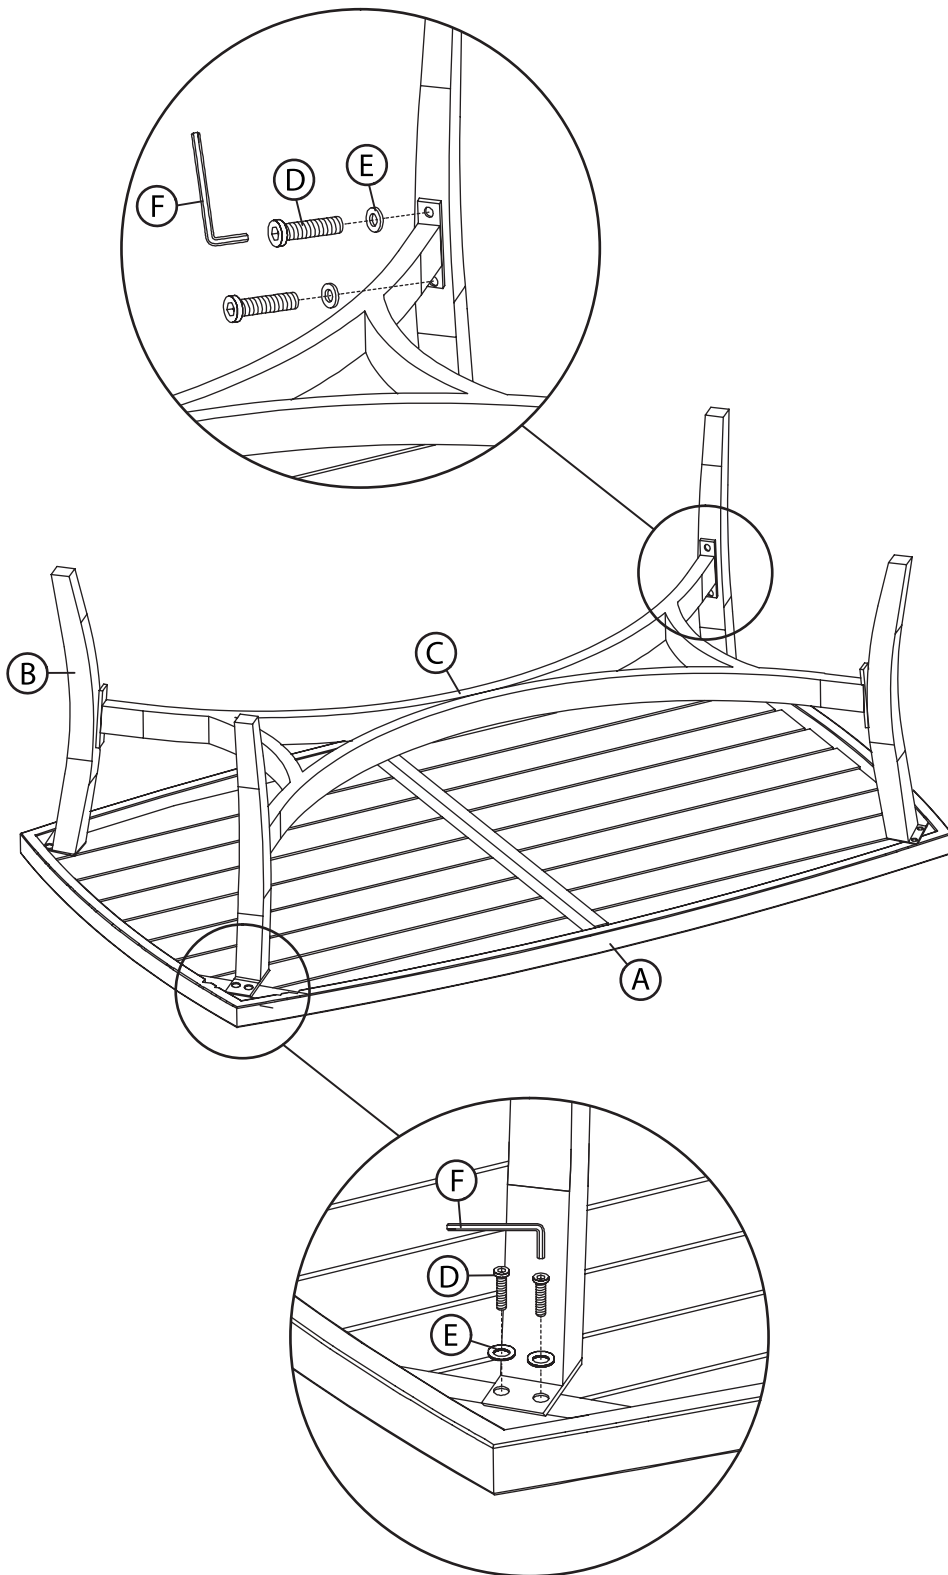


# Care and Maintenance

 All outdoor furniture is subject to UV rays and weather elements. In order to keep your furniture as long lasting and vibrant as possible, we advise using furniture covers or storing the furniture when not in use.

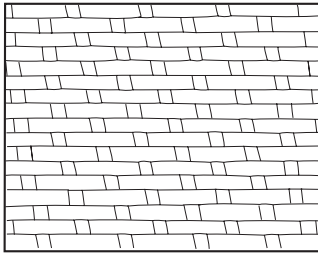


## WICKER

 Simply washing your wicker with a mild detergent and protecting it as much as possible by covering and or storing it when not in use for long periods of time is sufficient.

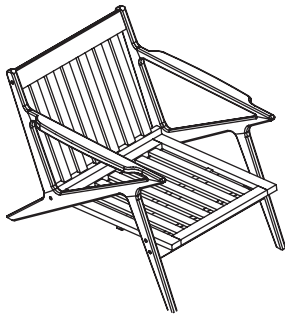


## WOOD FRAMES

 Make sure all surfaces are protected from heat and liquids. Wipe up spills immediately and do not place furniture next to a heat source such as radiators or fires. All timber surfaces may change color. Spray polishes are best to avoid as they contain silicones which may spoil the surface by building up overtime. Check bolts and screws regularly and tighten when necessary.

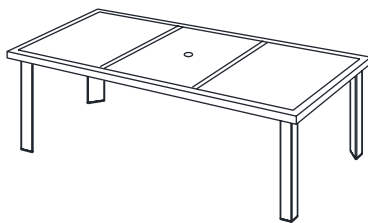

## STONE TOPS/ TABLE TOPS

 Spills should be wiped up quickly to avoid any staining on the surface. Regular cleaning with mild soap and water with a sponge or soft scrub brush is all that is required. Storing or covering your natural stone top when not in use for extended periods of time is recommended.

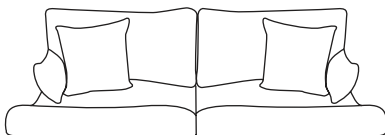

## FABRICS

Wipe off spills with a cloth and water. RST Brands uses Sunbrella® fabrics designed to protect and last for several years. Sunbrella fabrics are treated with a proprietary water and stain repellent.