

ASSEMBLY INSTRUCTIONS

 
SIDEBOARD

ASSEMBLY REQUIREMENTS:


2-Person Assembly

2.5Hours Assembly Time (Approximate)

Tool Required (Not Provided)



We appreciate your business!

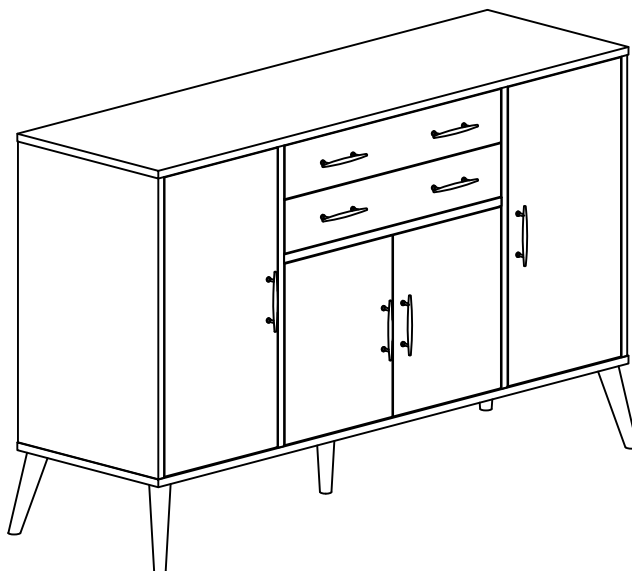 

ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Part List and Hardware List and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION:

1. Keep ALL HARDWARE PART OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and assemble the product near where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:


- Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- **Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.**
- Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.

PARTS LIST




NO	PART NAME	QTY
1	TOP PANEL	1
2	LEFT PANEL	1
3	RIGHT PANEL	1
4	BOTTOM FRAME	1
5	LEG	4
6	CENTER RAIL	2
7	LEFT PARTITION	1
8	RIGHT PARTITION	1
9	BIG DOOR	2
10	LEFT DOOR	1

NO	PART NAME	QTY
11	RIGHT DOOR	1
12	SMALL SHELF PANEL	2
13	BIG SHELF PANEL	1
14	SUPPORT STAND	1
15	BACK PANEL	1
101	DRAWER FRONT PANEL	2
102	DRAWER LEFT PANEL	2
103	DRAWER BACK PANEL	2
104	DRAWER BASE PANEL	2
105	DRAWER RIGHT PANEL	2

 PARTS ASSEMBLY OVERVIEW

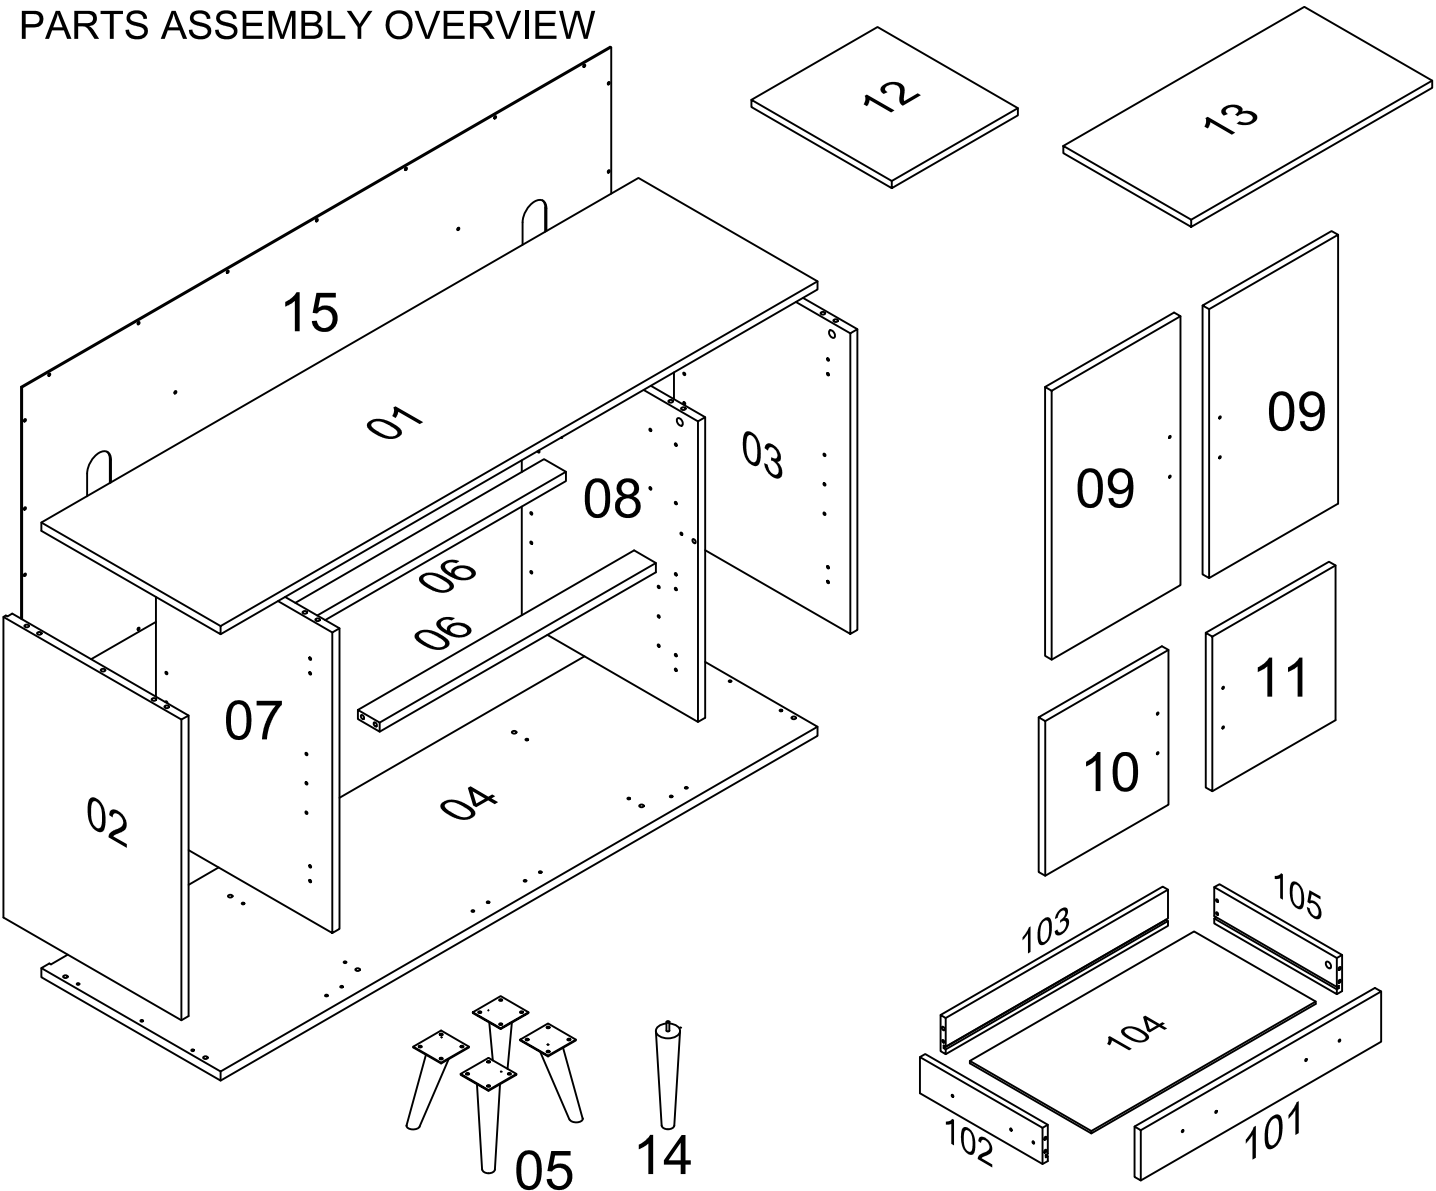


HARDWARE LIST

   NO	DESCRIPTION		QTY	EXTRA
A		CHIPBOARD SCREW M3 x 16MM	24	1
B		CHIPBOARD SCREW M4 x 16MM	48	1
C		WOOD DOWEL M8 x 35MM	20	1
D		WOOD DOWEL M6 x 30MM	8	1
E		CAM-LOCK 15 x 12	22	1
F		CAM-BOLT 5 x 25	22	1
G		CAM-LOCK COVER 17 x 5	22	1
H1		DRAWER SLIDE 350MM	2 SET	
H2				
I		HANDLE	8	
J		PANHEAD SCREW M4 x 25MM	16	


**EXTRA HARDWARE FOR SPARE USE

NO	DESCRIPTION		QTY	EXTRA
K		CHIPBOARD SCREW M4 x 38MM	10	1
L		PANHEAD CHIPBOARD SCREW M4 x 16MM	26	1
M		FLAT WASHER M6	16	1
N		JCBC SCREW M6 x 16MM	16	1
O		ALLEN KEY M4	1	1
P		HINGES H7	8	
Q		MAGNET CATCH	6	
R		METAL WARE	6	
S		CHIPBOARD SCREW M3 x 12MM	12	
T		SHELF PIN	12	
Z		Anti-Tipping Kit	2	

 DRAWER SLIDE DISASSEMBLE STEPS:

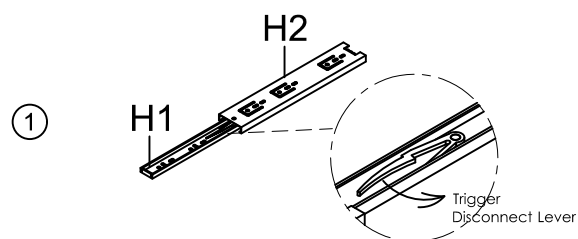

 - Distinguish between Slide Track (H2) and Slide Runner (H1) of Drawer Slide.
- Slide out H1 from H2 until Trigger Disconnect Lever is visible.
- Depress the Trigger Disconnect Lever in the groove of H1 and at the same time slide out H2 completely from H1.

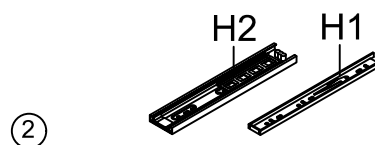


PARTS IN BOX 1

NAME: CENTER RAIL	QTY: 2Pcs	CODE: 6
NAME: BIG DOOR	QTY: 2Pc	CODE: 9
NAME: SMALL SHELVING	QTY: 2Pcs	CODE: 12
NAME: BIG SHELVING	QTY: 1Pc	CODE: 13
NAME: LEFT DOOR	QTY: 1Pc	CODE: 10
NAME: RIGHT DOOR	QTY: 1Pc	CODE: 11
NAME: DRAWER FRONT PANEL	QTY: 2Pcs	CODE: 101
NAME: DRAWER LEFT PANEL	QTY: 2Pcs	CODE: 102
NAME: TOP DRAWER BACK PANEL	QTY: 2Pcs	CODE: 103
NAME: TOP DRAWER BASE PANEL	QTY: 2Pcs	CODE: 104
NAME: DRAWER RIGHT PANEL	QTY: 2Pcs	CODE: 105
NAME: POST	QTY: 1Pack	CODE: 7
NAME: HARDWARE + AI	QTY: 1Pack	
NAME: DRAWER SLIDE	QTY: 1Pack	


PARTS IN BOX 2

NAME: TOP PANEL	QTY: 1Pc	CODE: 1
NAME: BOTTOM FRAME	QTY: 1Pc	CODE: 4
NAME: LEFT SIDE PANEL	QTY: 1Pc	CODE: 2
NAME: RIGHT SIDE PANEL	QTY: 1Pc	CODE: 3
NAME: LEFT PARTITION	QTY: 1Pc	CODE: 7
NAME: RIGHT PARTITION	QTY: 1Pc	CODE: 8
NAME: BACK PANEL	QTY: 1Pc	CODE: 15

 INSTRUCTION FOR CAM-BOLT & CAM-LOCK





CAM-BOLT

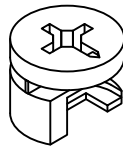 


CAM-LOCK

  
Tool Required (Not Provided)




INSERTING AND TIGHTENING CAM-BOLT

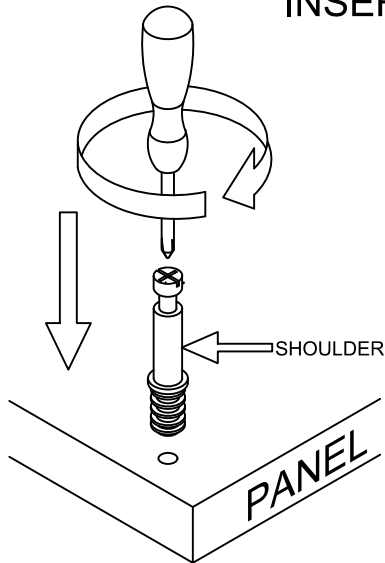 

 Place Cam-bolt on pre-drilled hole and screw in vertically

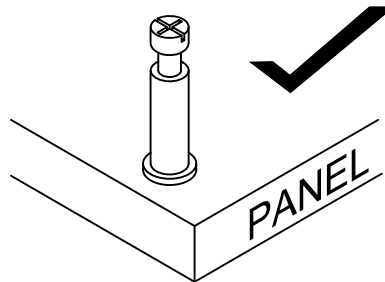

 
Shoulder is flushed (on the same level) with the panel

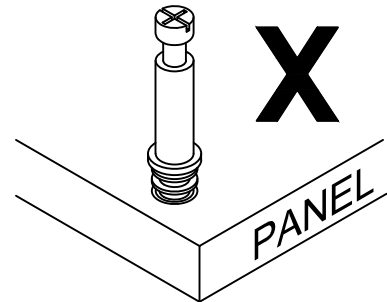

Shoulder is above the panel

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 
INSERTING CAM-LOCK

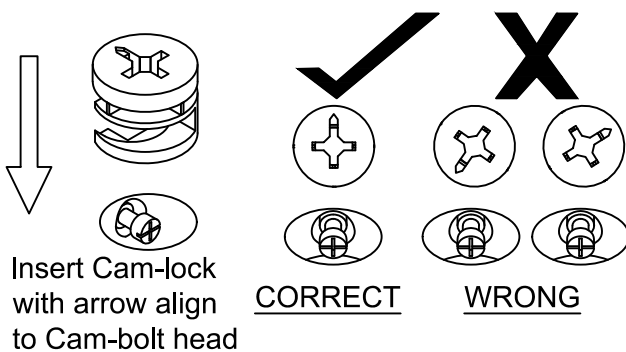

CAM-LOCK


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted

 TIGHTENING CAM-LOCK

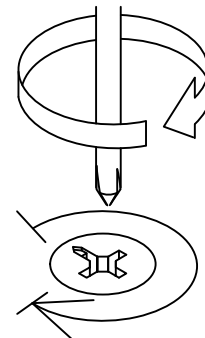

Use a Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

 STEP 1

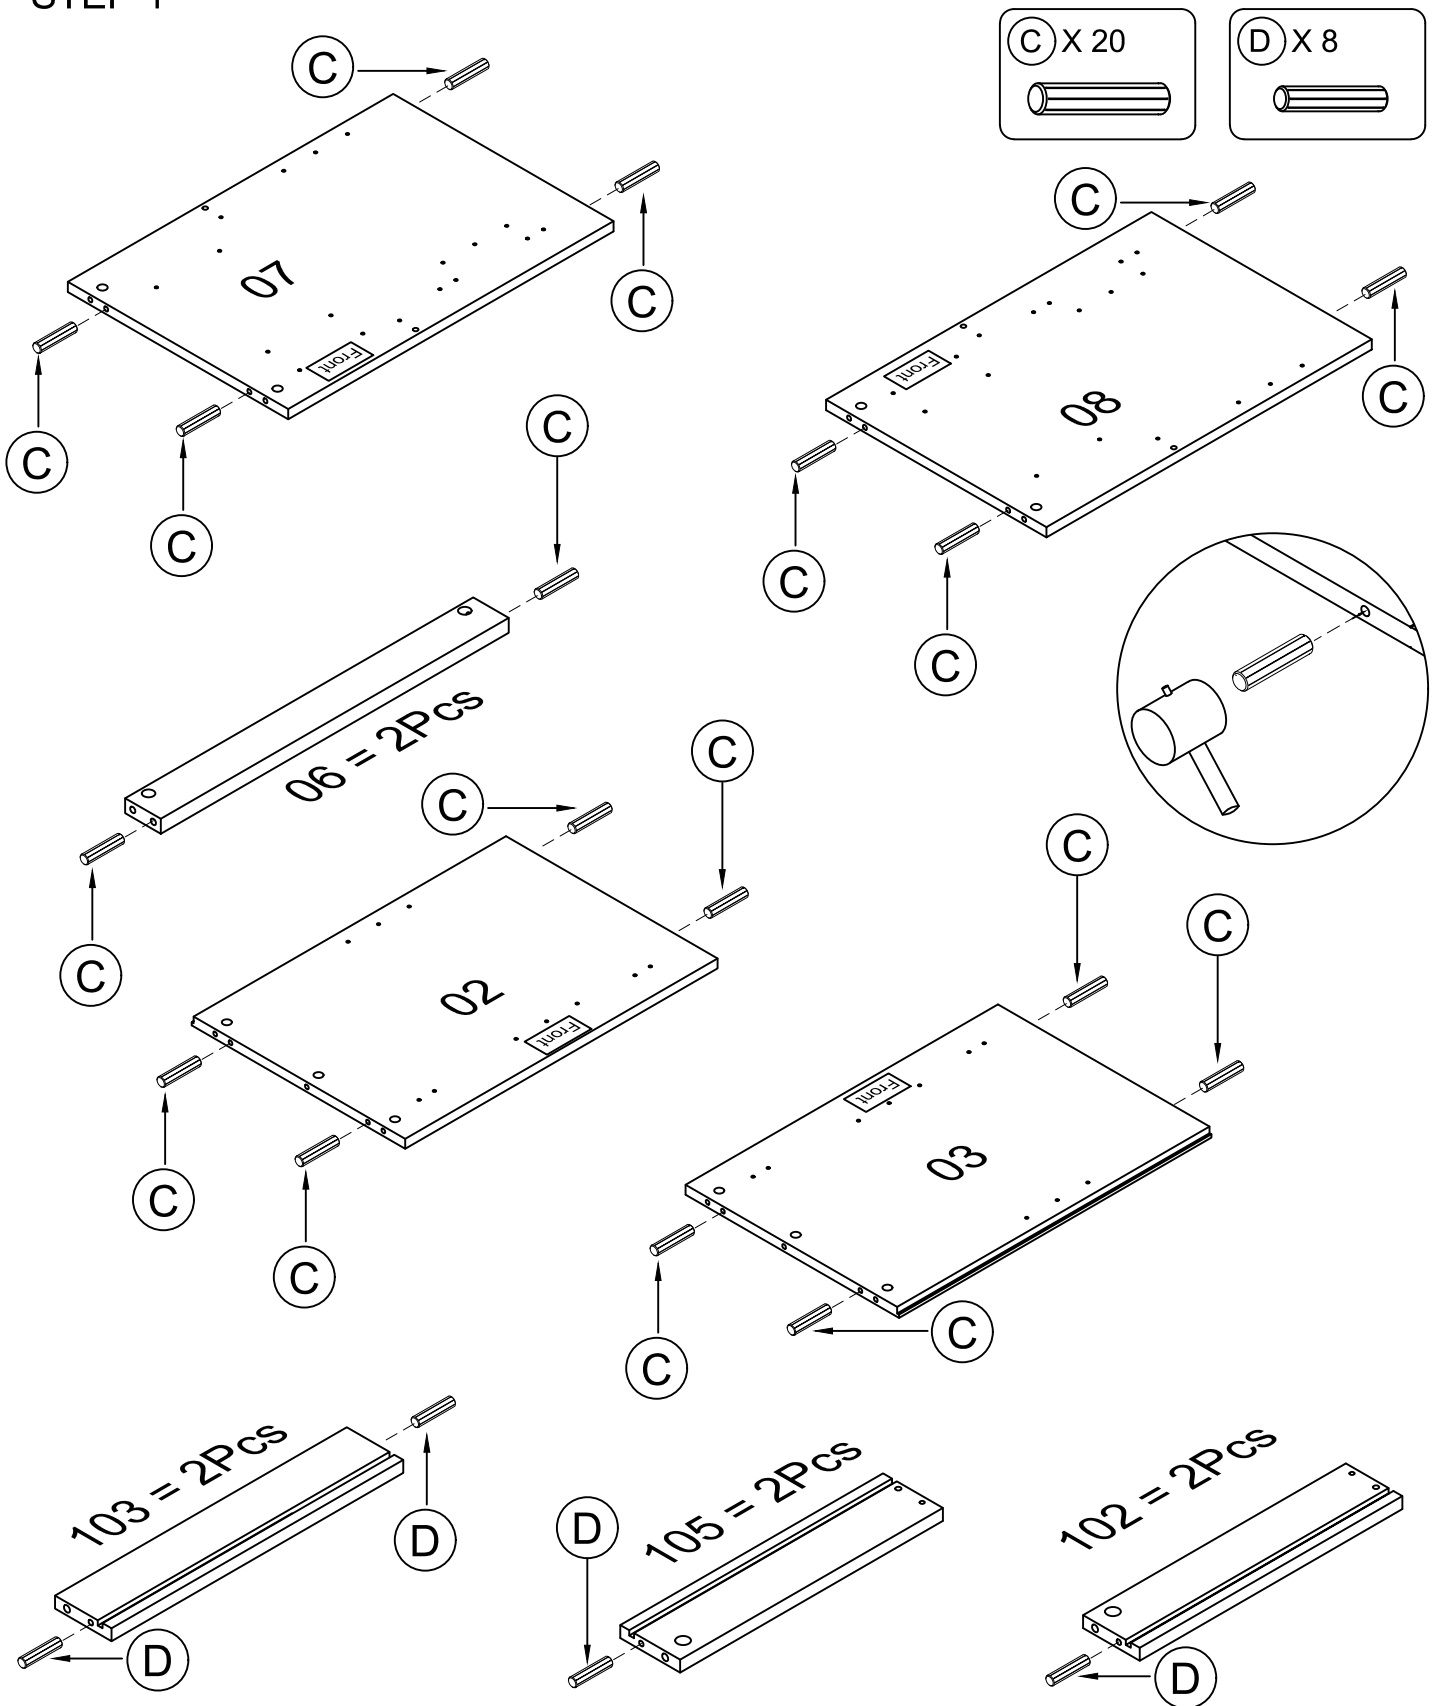



A. Lay Left & Right Panel (2 & 3), Center Rail (6), Left & Right Partition (7 & 8), Drawer Back Panel (103), Drawer Left & Right Panel (102 & 105) as shown on a material that does not scratch or damage the parts.

B. Identify the designated holes for Wood Dowel (C or D) on each part.

C. Insert Wood Dowel (C or D) into the designated holes of the respective parts, use a mallet to lightly tap in Wood Dowel (C or D) if necessary.

STEP 2

  (F) X 22

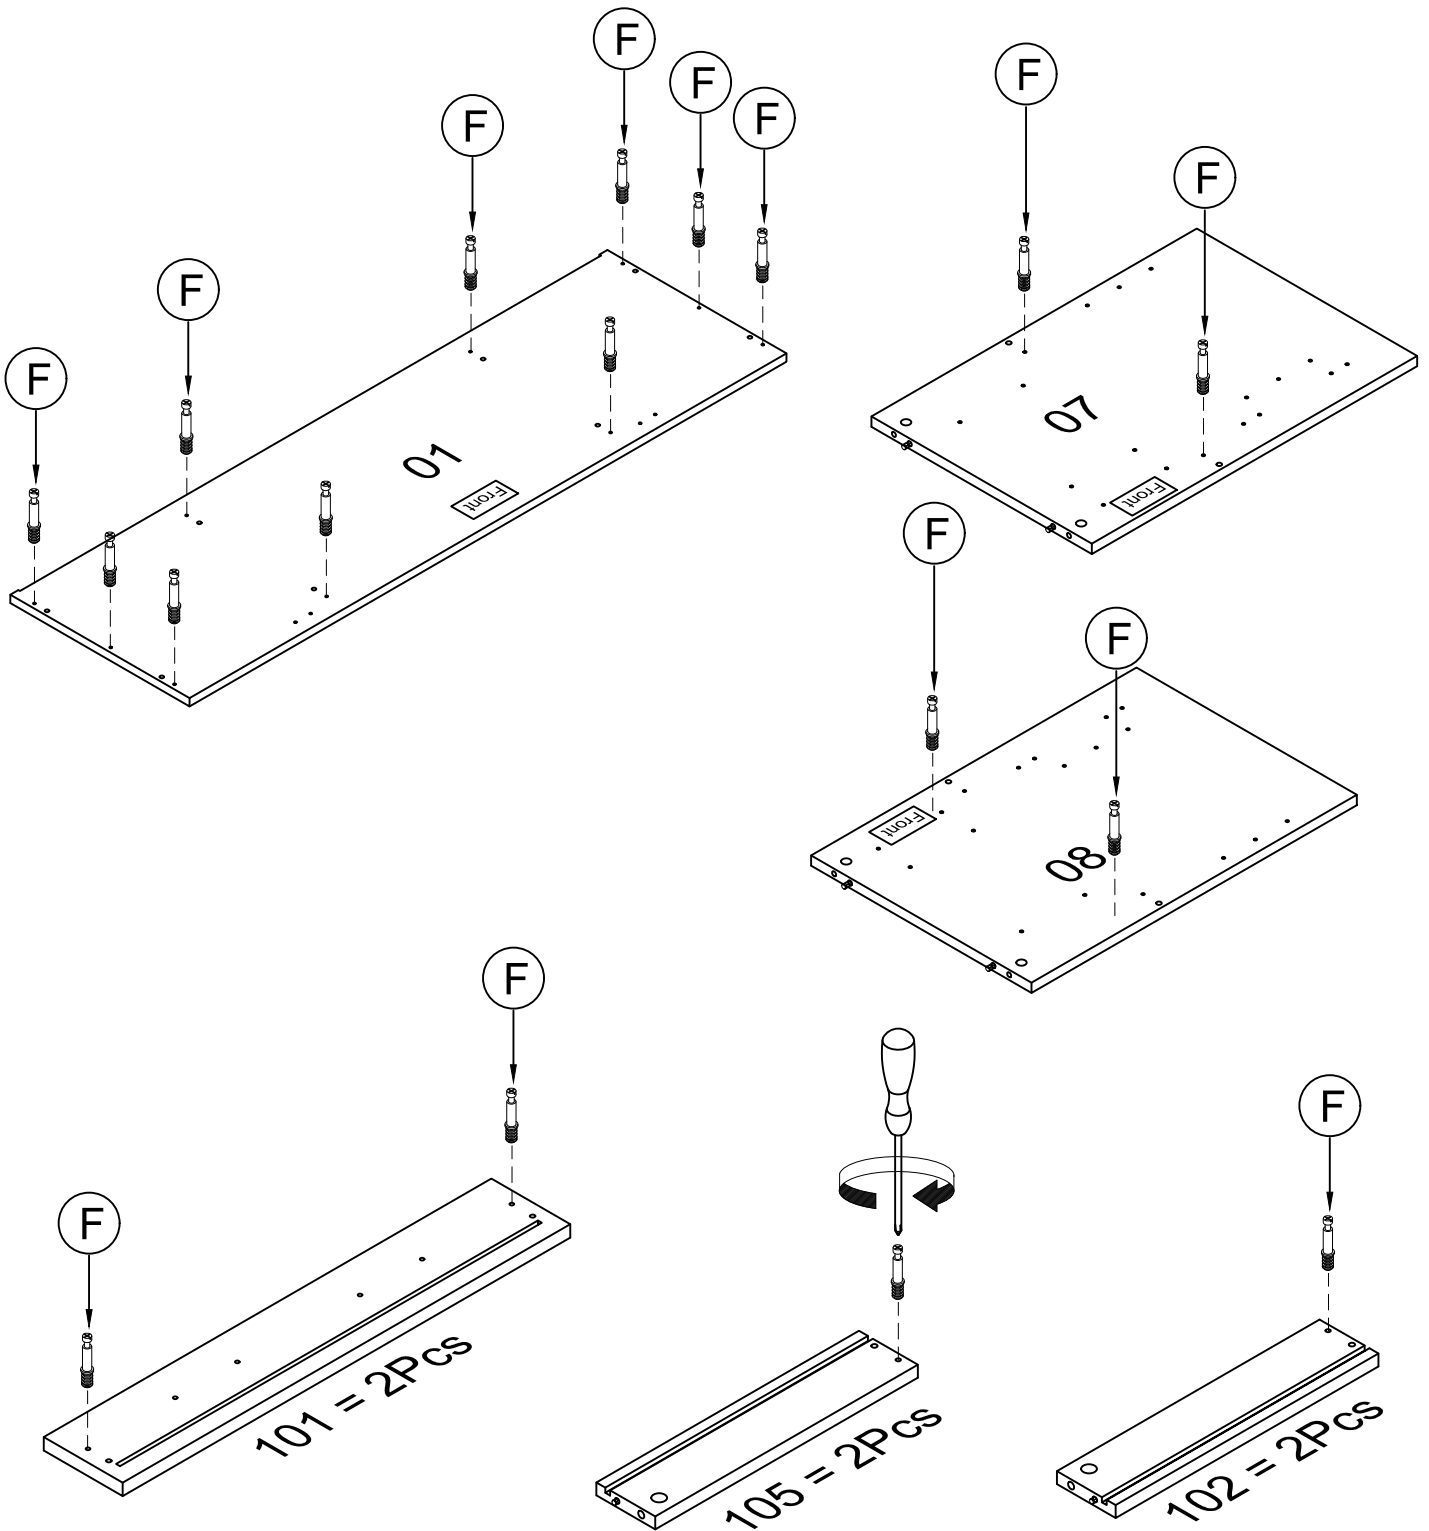

A. Lay the parts as shown on a material that does not scratch or damage the parts.

B. Screw in Cam-Bolt (F) into the designated holes on Top Panel (1), Left & Right Partition (7 & 8), Drawer Front Panel (101), Drawer Left & Right Panel (102 & 105).

Refer to page 4 for instructions on inserting and tightening Cam-Bolt (F).

STEP 3

(A) X 24



(H1) X 4

 
 


(H2) X 4




STEP 3A


Identify the pilot holes on Top Drawer Left & Right Panel (102 & 105) and install Slide Runner (H1) using Chipboard Screw (A) - ensure that the screws are screwed in vertically. Do not tighten the screw completely until all three screws are in place. Note: The sequence of fastening Screw (A) is from the front to the back.

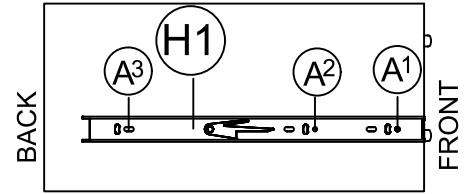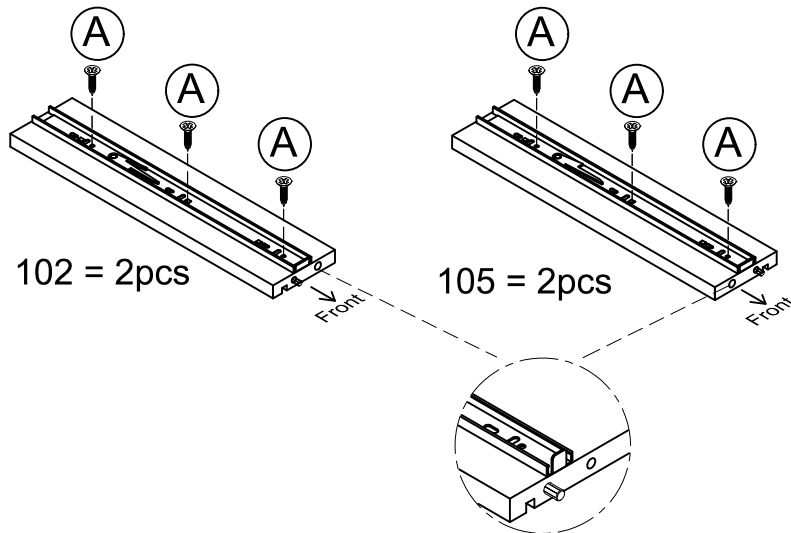

DRAWER SLIDE DISASSEMBLE STEPS:

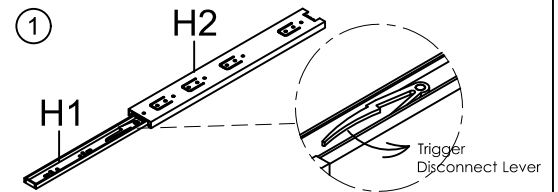 


 - Distinguish between Slide Track (H2) and Slide Runner (H1) of Drawer Slide.
- Slide out H1 from H2 until Trigger Disconnect Lever is visible.
- Depress the Trigger Disconnect Lever in the groove of H1 and at the same time slide out H2 completely from H1.

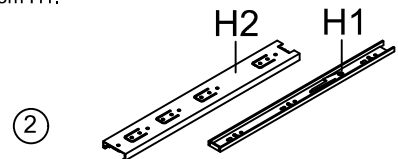


STEP 3B


 
Identify the pilot holes on Left & Right Partition (7 & 8) for Slide Track (H2) Use Screw (A) to fasten (H2)- ensure that the screws are screwed in vertically. Do not tighten the screw completely until all three screws are in each track.

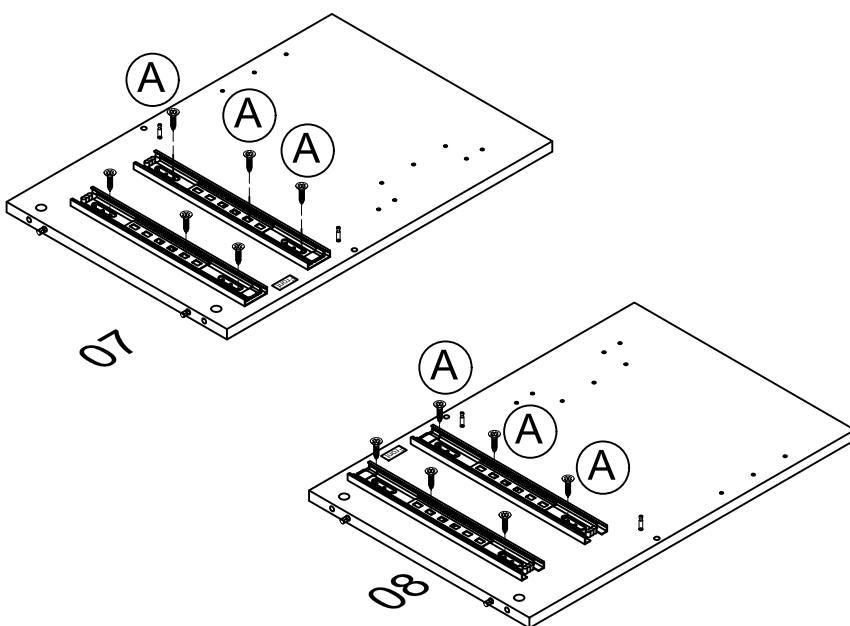





 
Step :1 Screw in A¹ and A³ on a view hole.

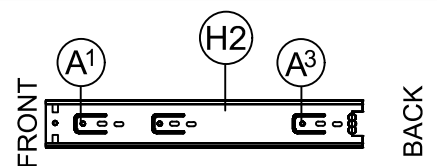

  Step :2 Adjust Metal Chrome Plate, screw in A² on view A hole

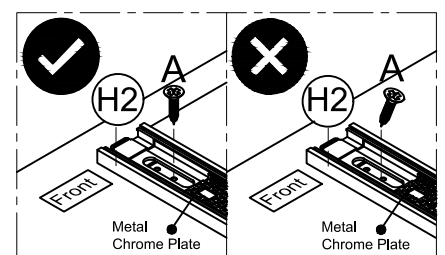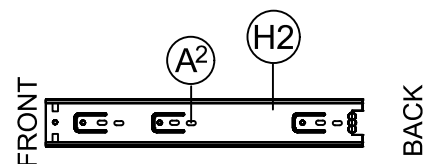


     STEP 4

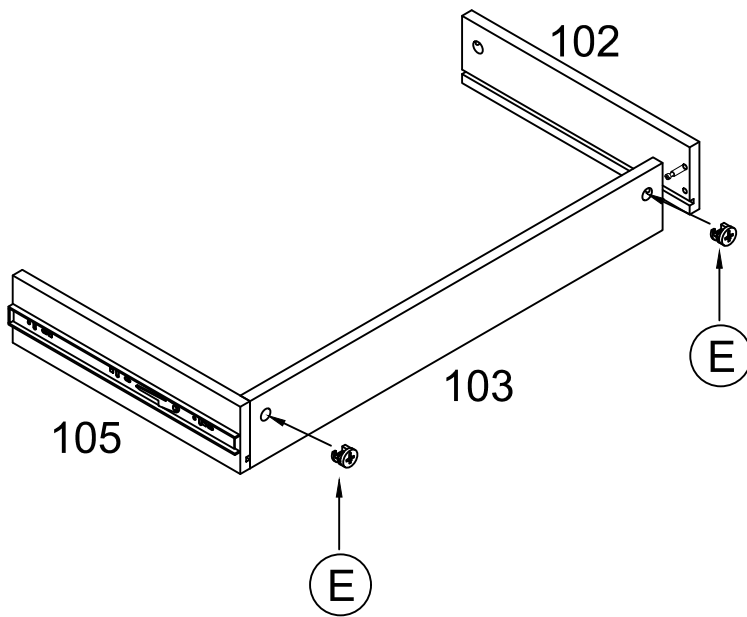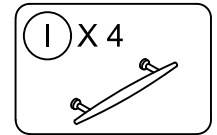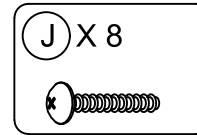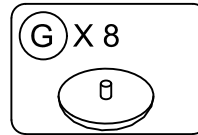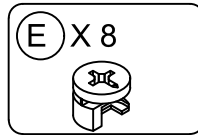



STEP 4A

 - Attach Top Drawer Left & Right Panel (102 & 105) to Top Drawer Back Panel (103) via Wood Dowel and Cam-Bolt on each part respectively.
- Insert Cam-Lock (E) to designated hole on Top Drawer Back Panel (103) then turn clockwise to lock onto Cam-Bolt.
- Insert Cam-Lock Cover (G) to conceal Cam-Lock (E).

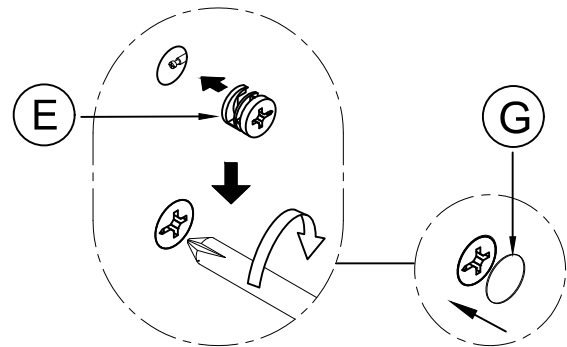

STEP 4B

 
 
- Fit Drawer Base Panel (104) via groove on Top Drawer Side and Top Drawer Back Panel.
- Attach Top Drawer Front Panel (101) to Top Drawer Left & Right Panel (102 & 105) via Cam-Bolt and Wood Dowel on the respective parts. Check that Drawer Base Panel (104) fits into the groove on the inside face of Top Drawer Front Panel (101).
- Insert Cam-lock (E) into designated holes on Top Drawer Left & Right Panel (102 & 105) and turn clockwise to lock onto Cam-bolt.
- Insert Cam-lock Cover (G) to conceal Cam-lock.

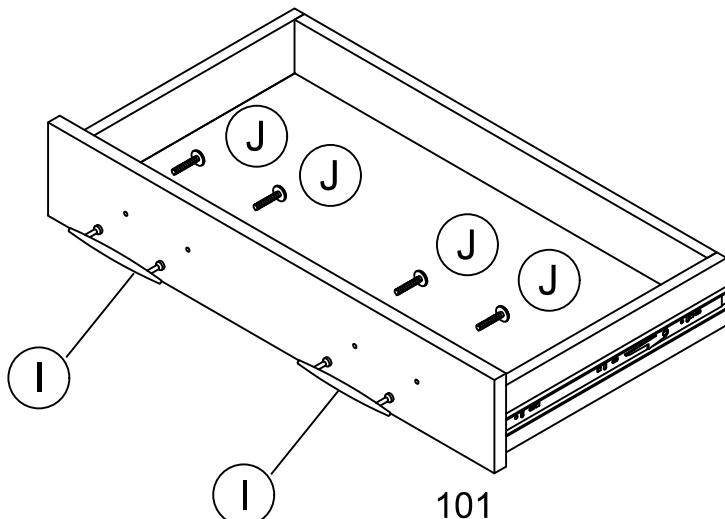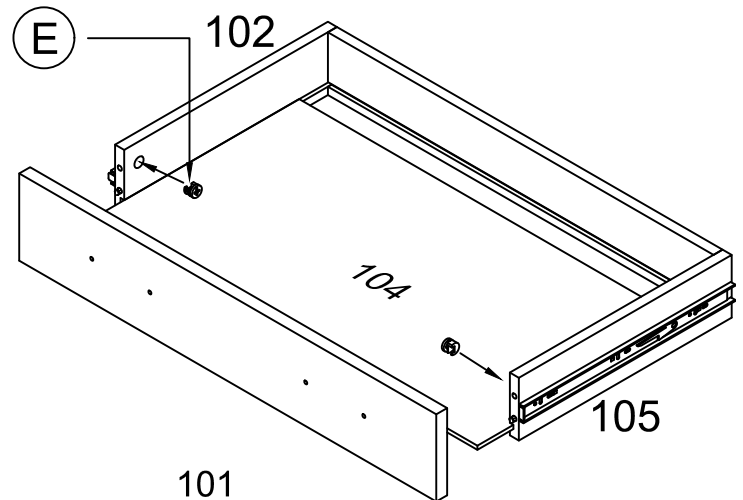

STEP 5



Affix Handle (I) to Top Drawer Front Panel (101) with Panhead Screw (J)

  STEP 6

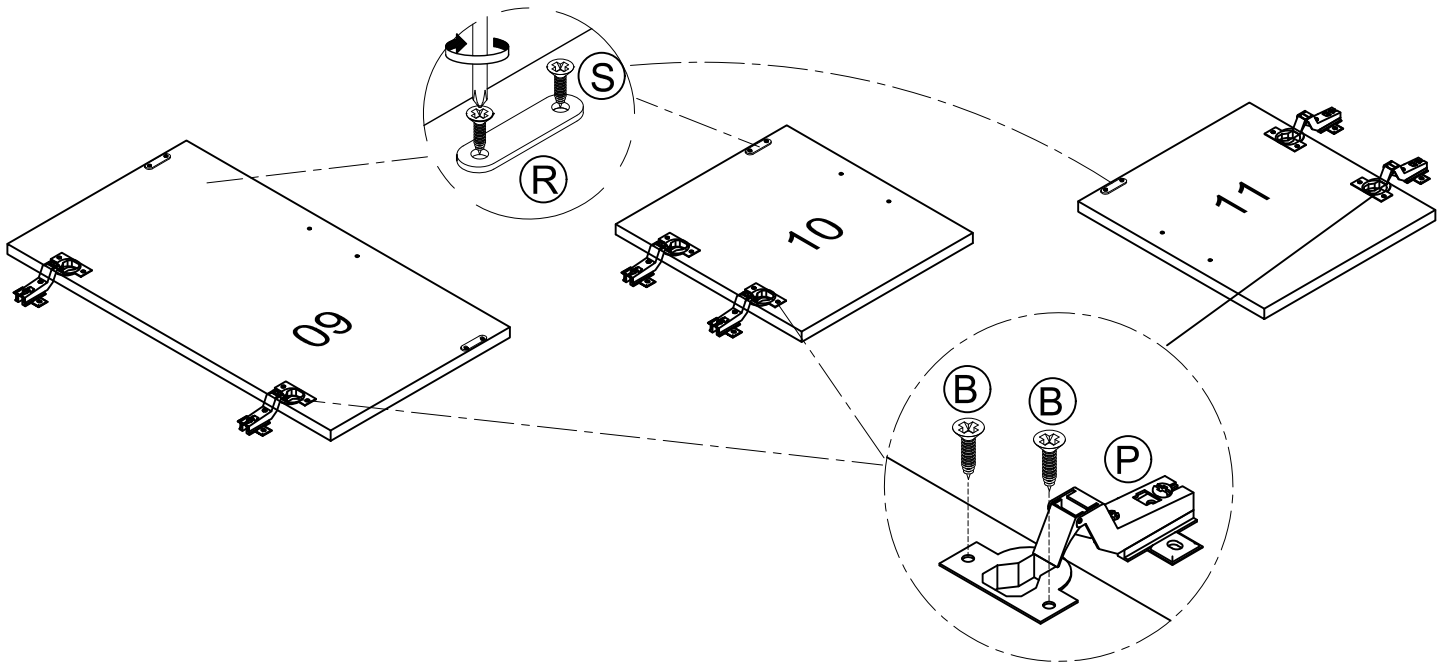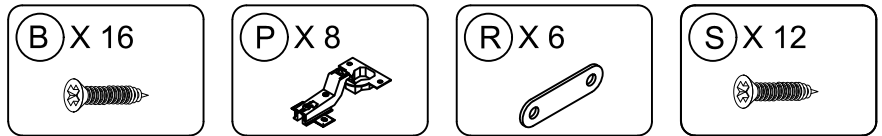


- A. Identify the pilot holes on Big Door (9) and Left & Right Door (10 & 11) and align the screw holes on Frame Wing to pilot holes. Next, use Chipboard Screw (A) to fasten Door Wing of Hinges (P).
- B. Identify the pilot holes on Big Door (9) and Left & Right Door (10 & 11) , using Chipboard Screw (S) to fasten Metal Ware (R) to Door (8 & 9).

  STEP 6A

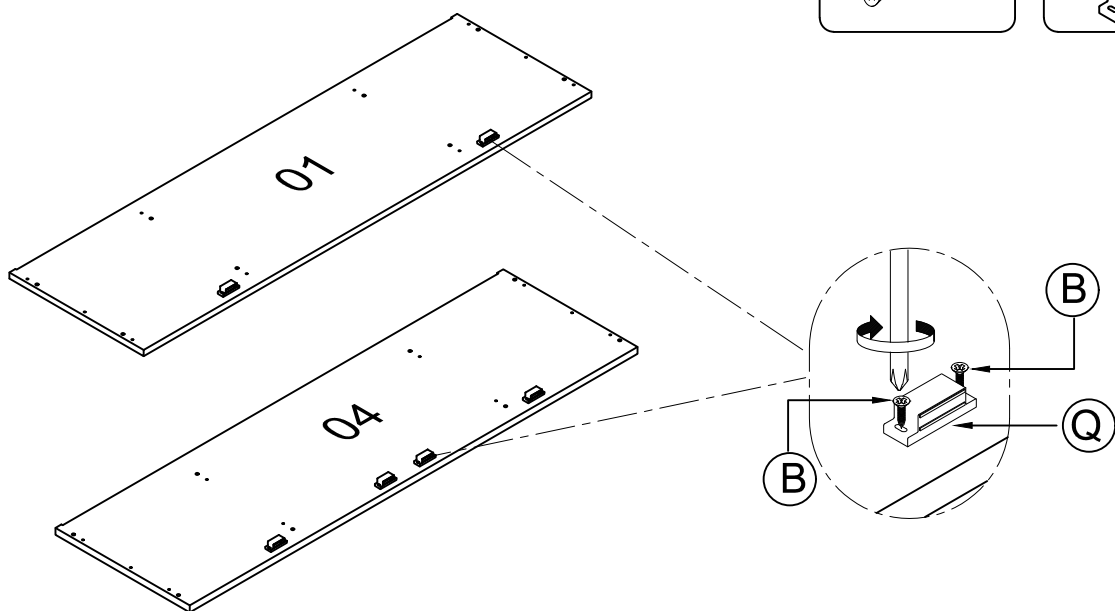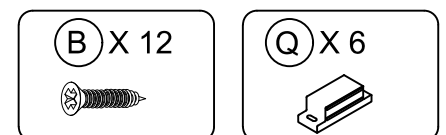


- A. Identify the pilot holes on Top & Bottom Panel (1 & 4) for Magnet Catch (Q). Use Screw (B) to fasten Magnet Catches (Q)

 STEP 7

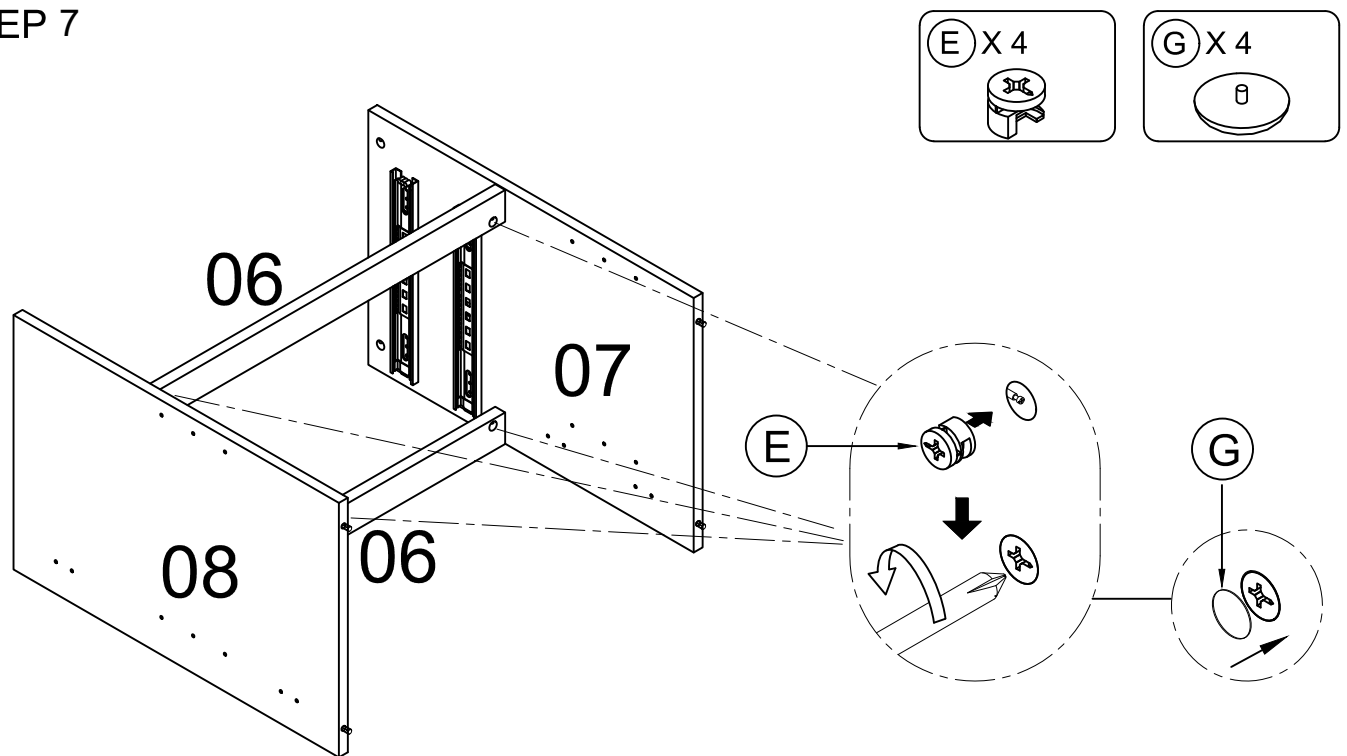


- A. Attach Center Rail (6) to Left & Right Partition (7 & 8), via Cam-Bolt and Wood Dowel on respective parts.
- B. Insert Cam-lock (E) into designated hole on Left & Right Partition (7 & 8), then turn clockwise to lock onto Cam-Bolt.
- C. Insert Cam-Lock Cover (G) to cover Cam-Lock (E).

 STEP 7A

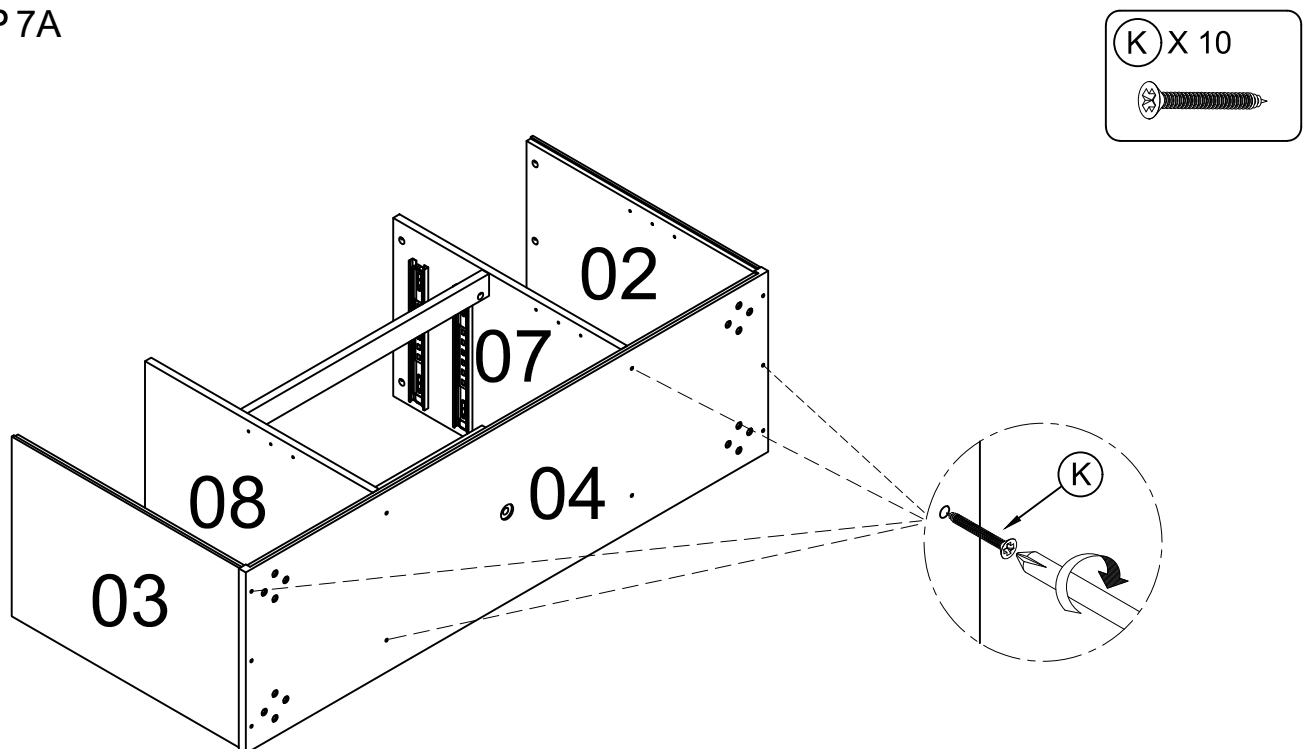


- A. Use Chipboard Screw (K) to fasten Bottom Panel (4) to Left & Right Panel (2 & 3) and Left & Right Partition (7 & 8). Do not tighten Screw (K) completely until all the screws are in place.

 STEP 8

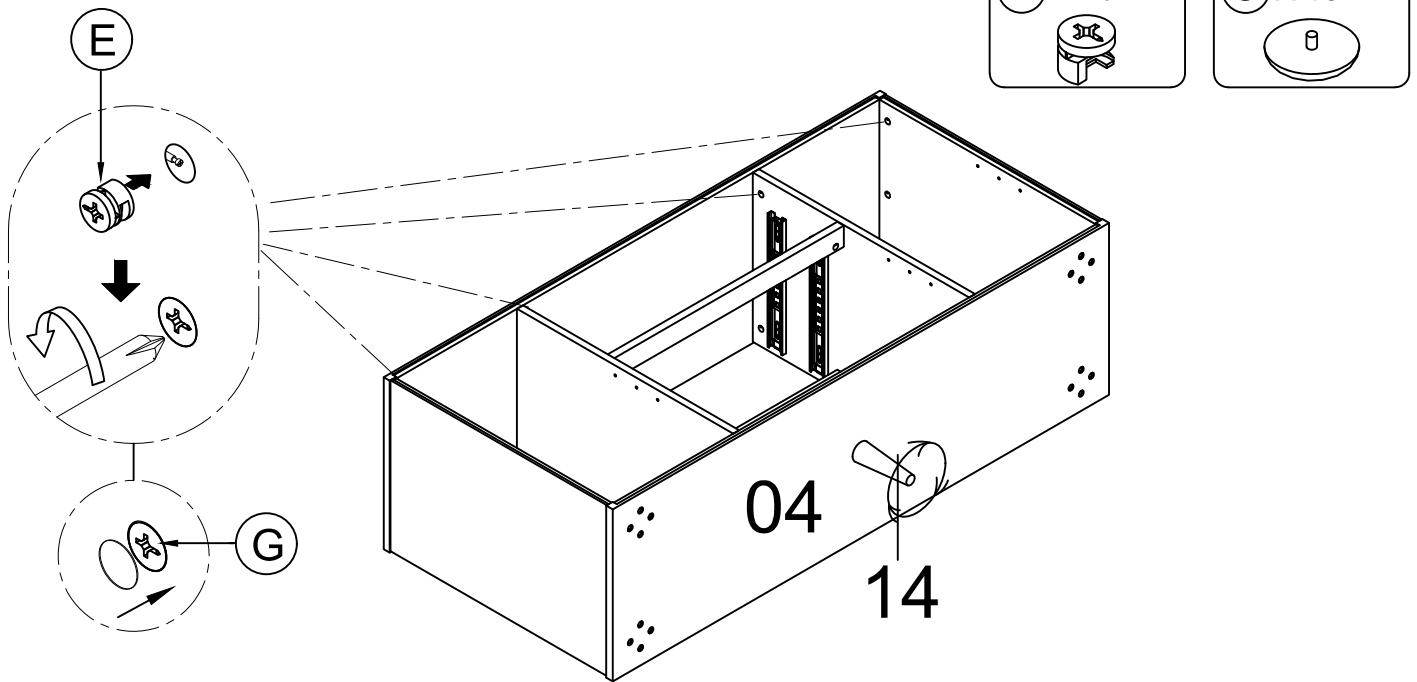



- Attach Top Panel (1) to Left & Right Panel (2 & 3) and Left & Right Partition (7 & 8), via Cam-Bolt and Wood Dowel on respective parts.
- Insert Cam-lock (E) into designated hole on Left & Right Side Panel (2 & 3) and Left & Right Partition (7 & 8), then turn clockwise to lock onto Cam-Bolt.
- Insert Cam-Lock Cover (G) to cover Cam-Lock (E).
- Screw-in Support Stand (14) to Bottom Frame (4) and tighten completely.

 STEP 9

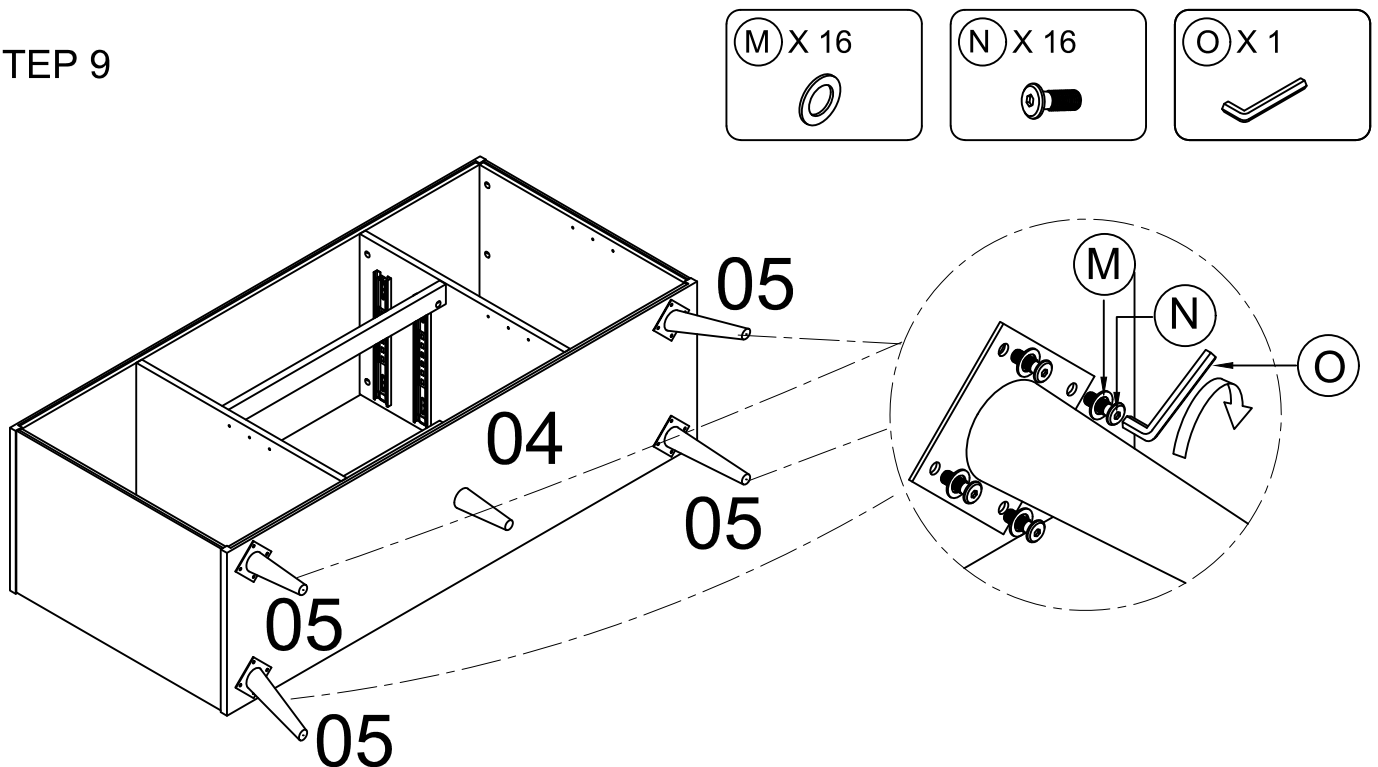



- Position Post (5) to Bottom Panel (4) as shown. Check that each Leg is angles outwards. Use JCBC Screw (N), Fitted with Flat Washer (M) to fasten (5). Use Allen Key (O) to drive JCBC Screw (N). Do not tighten (N) completely until all 4 screws are in place on each Post.
- With assistance, set the assembly right-side up when all the Post are installed.

  STEP 10

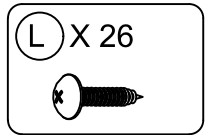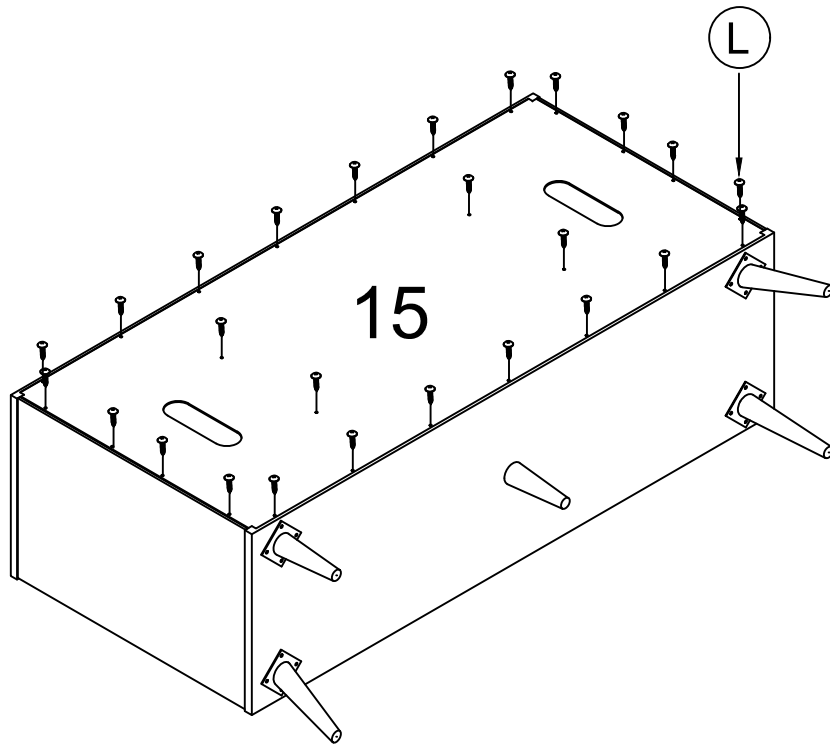

a) Attach Back Panel (15) squarely to Left & Right Panel, Top Panel and Bottom Frame and fasten with Panhead Chipboard Screw (L).

  
STEP 11

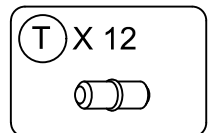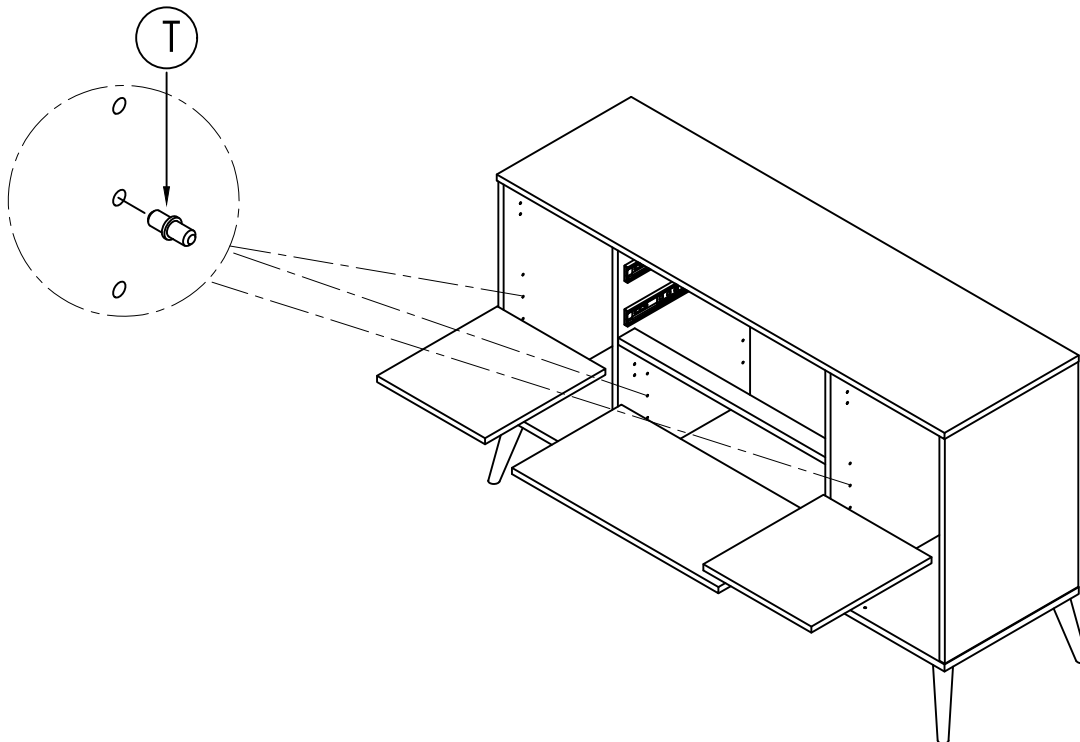

A. Insert Shelf Pin (T) into the designated holes on the same level at the desired height on Left & Right Panel (2 & 3) and Left & Right Partition (7 & 8). Place Big and Small Shelf Panel (12 & 13) by tilting it to fit between Side Panels and then level it to sit on Shelf Pin (T).


STEP 12

 A X 16

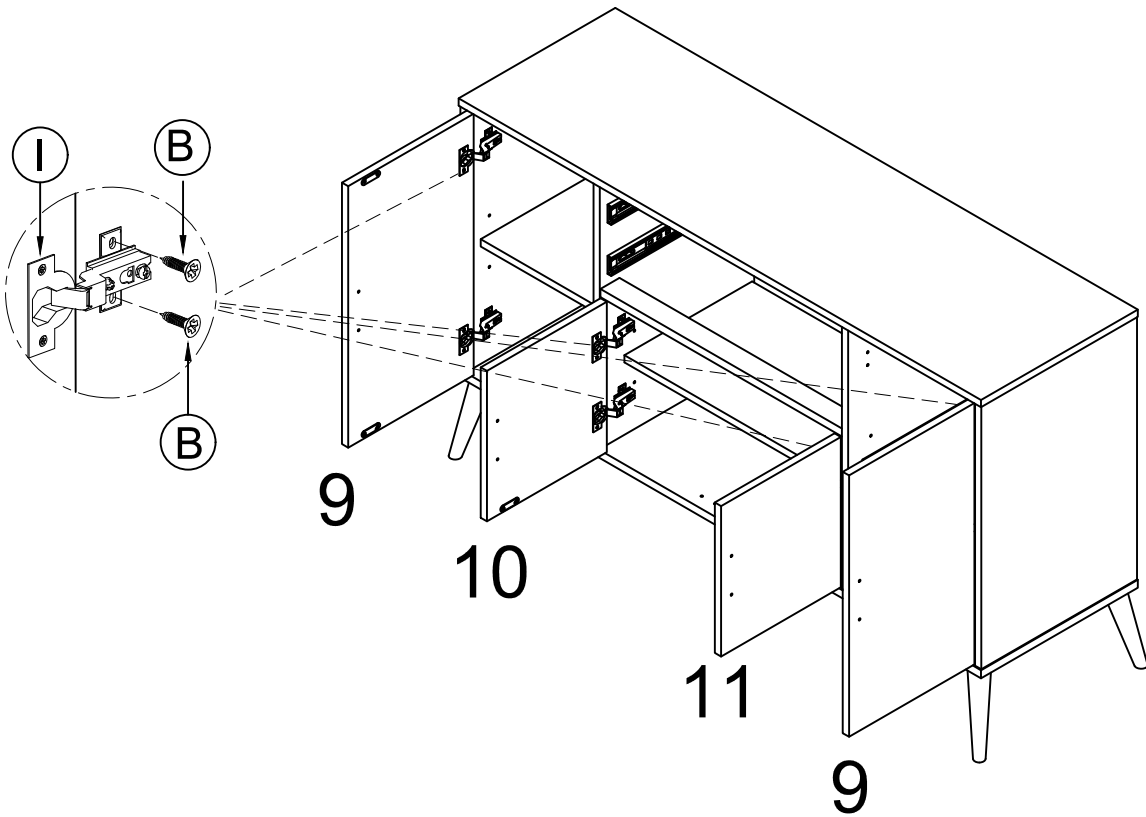


- A. Position Big Door (9) and Left & Right Door (9 & 10) as shown and place Frame Wing of Hinge (P) against the Left & Right Panel. Next, align the screw holes on Frame Wing to pilot holes on the Left & Right Panel and Left & Right Partition.
- B. Use a Philips Screwdriver to drive Screw (A) to fasten Frame Wing of Hinge (P) to the Left & Right Panel and Left & Right Partition. Do not tighten the screw completely until both screws are in place.

 
HINGE ADJUSTMENT: if the door does not appear square or misaligned, loosen or tighten the appropriate screws on each case hinge as illustrated.

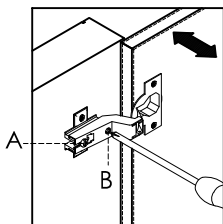

 - 1) Side to side adjustment :
Loosen Screw A, adjust gap with screw B and re-tighten Screw A



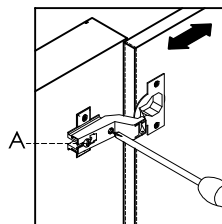


 - 2) Depth adjustment:
Loosen Screw A, push hinge arm forwards or backwards, re-tighten screw A.

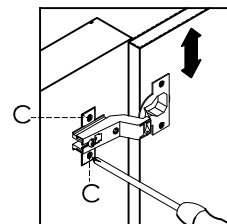

- 3) Height adjustment:
Loosen Screw C, adjust door height and re-tighten screw C.

   
STEP 13

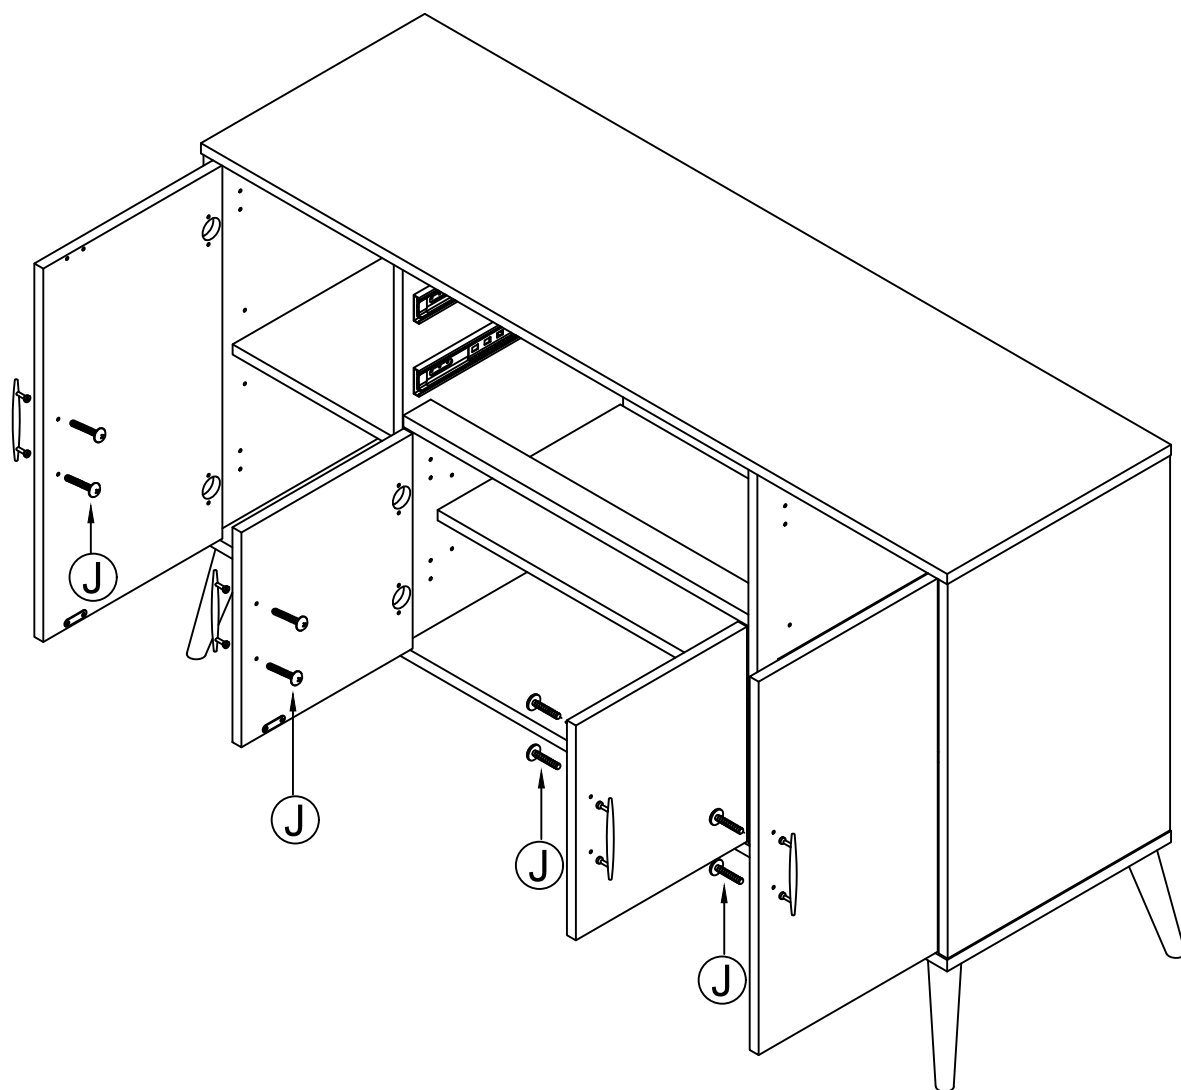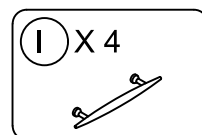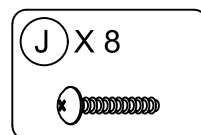

A. Affix Handle (I) to Door (7) with Panhead Screw (J).


STEP 14

 STEP 14A

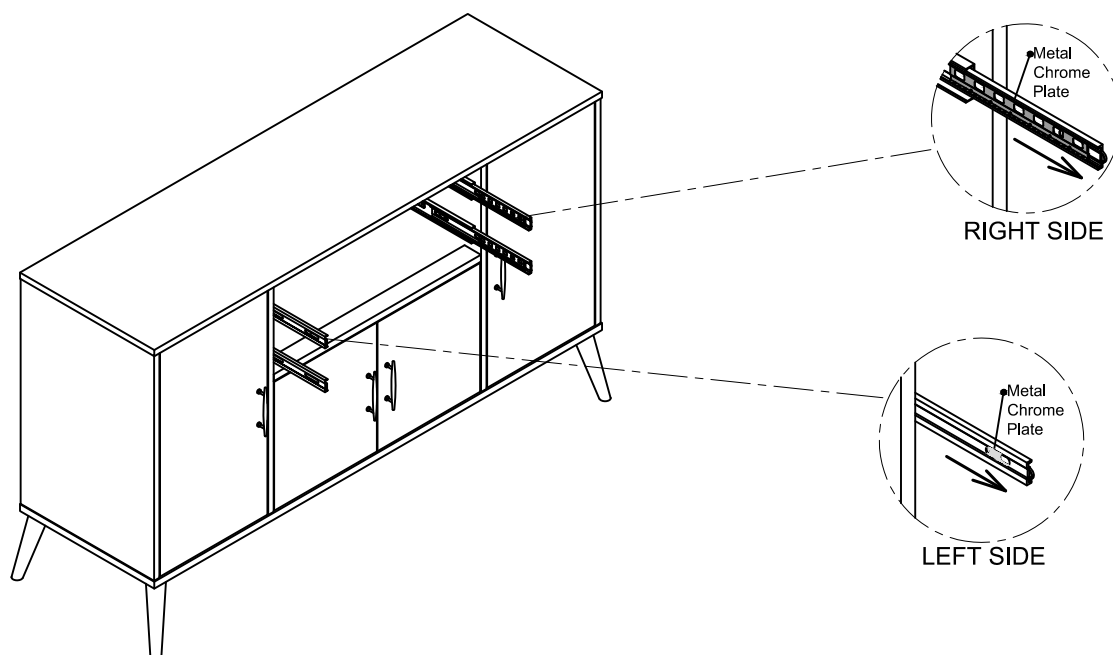

a. Slide out Metal Chrome Plate (ball bearing slider) on both sides of Slide Track (H2).

 STEP 14B

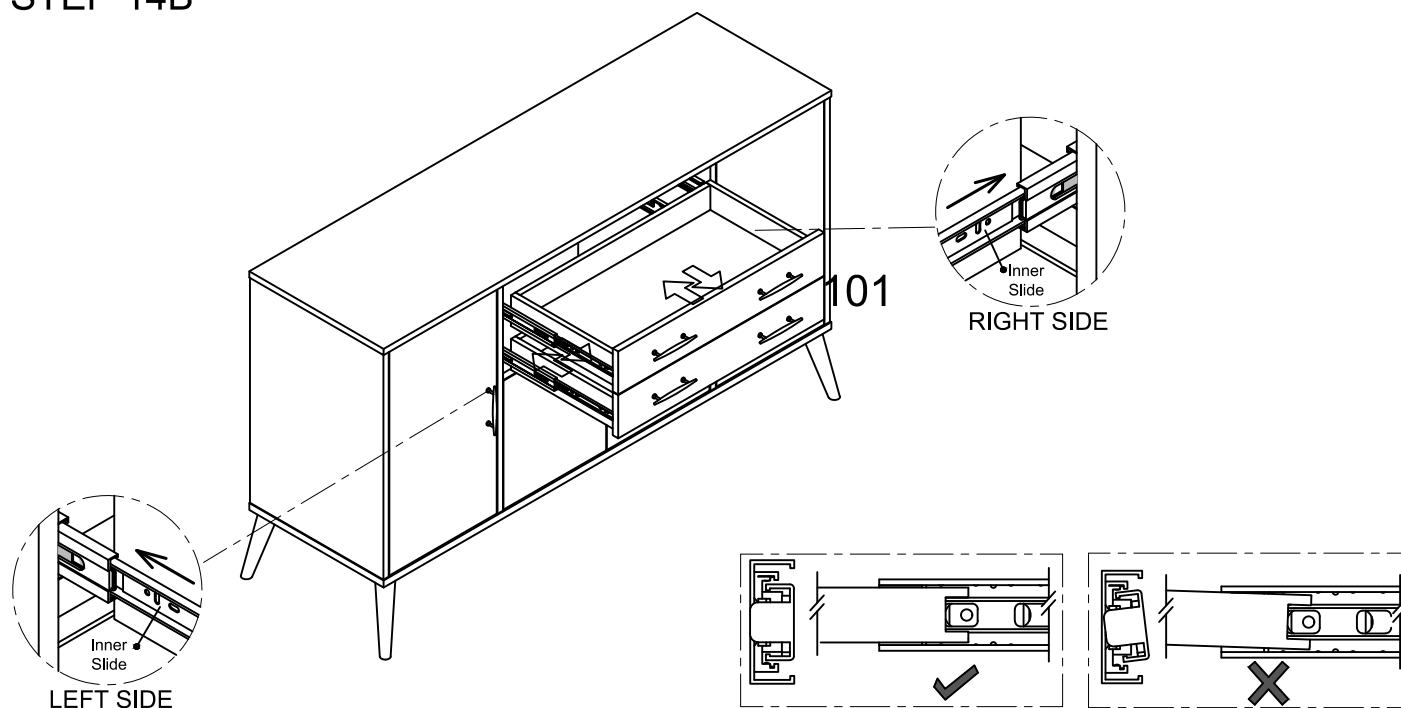


Align the back open-end of the Slide Runner (H1) on each side of the drawer to fit squarely into the groove on the open front-end of the chrome plate on Slide Track (H2) on the Side Panels.

Be sure the drawer/(H1) is not tilted or angled and push in the drawer slightly and squarely.

Push in the drawer further in gently - when the Trigger Disconnect Lever on (H1) is engaged onto (H2) there will be a slight resistance - this is normal. Pull out the drawer a little bit and gently push in the drawer again to engage the Trigger Disconnect Lever to the slide mechanism on (H2). The drawer should now slide smoothly.

If the drawer cannot be pushed in or stuck, do not force it in. Remove the drawer and repeat the steps above.

 STEP 14C

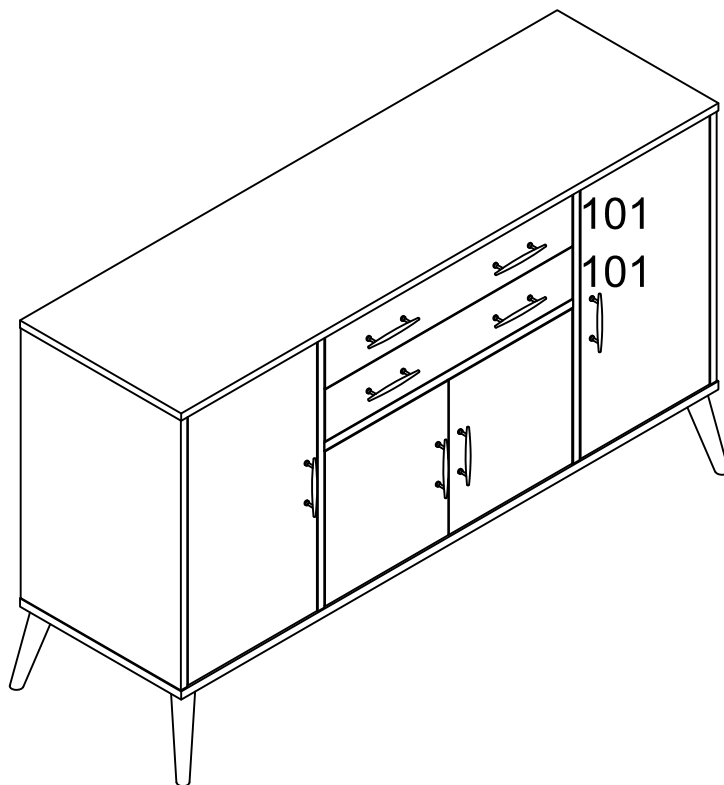

Drawers should be assembled as follows
The assembly of the Night Stand is complete.

STEP 15

ANTI-TIP KIT AND INSTALLATION



 
WARNING




Serious or fatal injuries can occur when furniture is not secured and tipover. To prevent tipover :

- 1) Install anti-tip kit provided.
- 2) Place heavier items in lower drawers or shelves.
- 3) Unless specifically designed to accommodate, do not place TVs or heavy objects on top of this product.
- 4) Never allow children to climb or hang on this product or any part of the product including, drawers, shelves or doors.
- 5) Never open more than one drawer at a time.
- 6) Do not deactivate or remove any drawer interlock system.

Use of tip-over restraints only reduces and does not eliminate the risk of tipover.

Parts and Hardware List

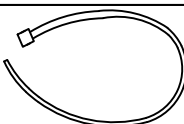PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Bracket		2Pcs
B	SCREW M4 X 50mm		1Pc
C	SCREW M4 X 16mm		1Pc
D	Nylon Strap		1Pc

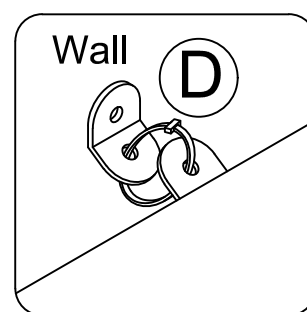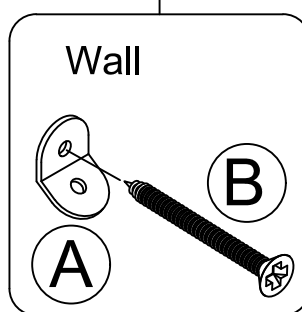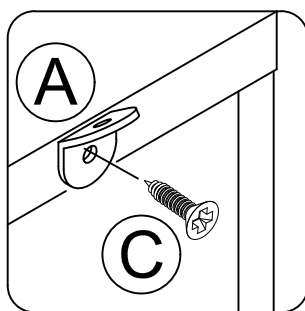   

NOTE:

WALL PLUG IS NOT SUPPLIED WITH THIS PRODUCT AS DIFFERENT WALL MATERIALS REQUIRE DIFFERENT TYPES OF FIXING HARDWARE & YOU MUST USE SUITABLE FIXING HARDWARE FOR TYPE OF WALL YOU INTEND TO MOUNT THIS PRODUCT TO WALL.

Installation Steps:

1. Use Screw (C) to fasten Bracket (A) to the center of back top edge of the Top Panel.
2. Mark the location on the wall for mounting the second set of bracket (A) which need to be at the same level as Bracket (A) on the back edge of Top Panel and drill hole in the wall as per the length and diameter of WALL PLUG.
3. Insert WALL PLUG into the drilled hole and fasten (A) to the wall with Screw (B).
4. Place the furniture so the brackets on the back edge of Top panel is aligned with the bracket on the wall.
5. Lace the end of the Nylon Strap (D) through each of the bracket. Bring both ends together and slide the beaded end of the strap through the keyhole-shaped slot on the other end. Pull down on the beaded end until it snap-locked into the keyhole-shaped slot.
6. Check to make sure the strap is securely laced and locked to the brackets.

The anti-tipping installation is complete.