 


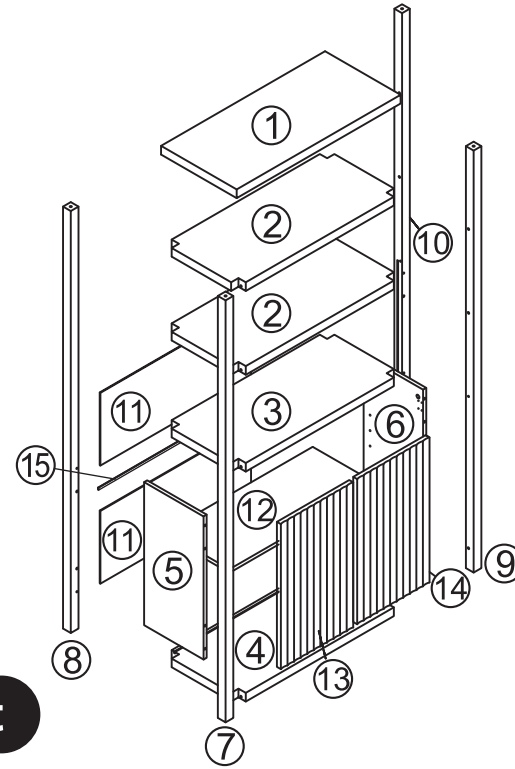














 



 






Parts list





Hardware list

A x16 $\phi 15 \times 9.5\text{MM}$ 	B x16 $\phi 6 \times 24\text{MM}$ 	C x8 $\phi 8 \times 30\text{MM}$ 	D x12 $\phi 8 \times 55\text{MM}$ 	E x12 M8 
F x12 M8 	G x24 $\phi 4 \times 14\text{MM}$ 	H x4 $\phi 3.5 \times 12\text{MM}$ 	I x10 $\phi 3 \times 16\text{MM}$ 	J x4 $\phi 3 \times 12\text{MM}$ 
K₁ x2 	K₂ x4 	L x6 	M x12 $\phi 20\text{MM}$ 	N x12 $\phi 50\text{MM}$ 
O x4 	P x4 	Q x2 	R x2 	S x1 
T x2 $\phi 4 \times 35\text{MM}$ 	U x2 	V x2 $\phi 4 \times 15\text{MM}$ 	W x4 	

 
 
Step 1

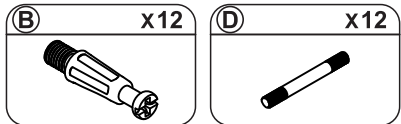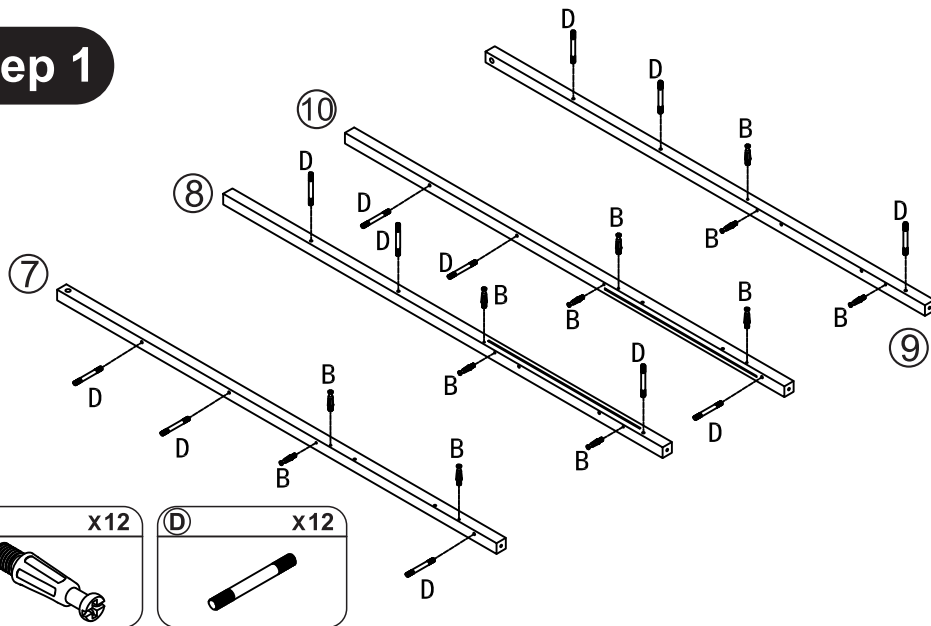

 
 
Step 3

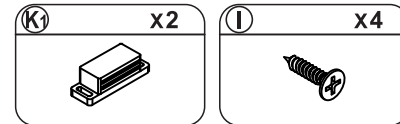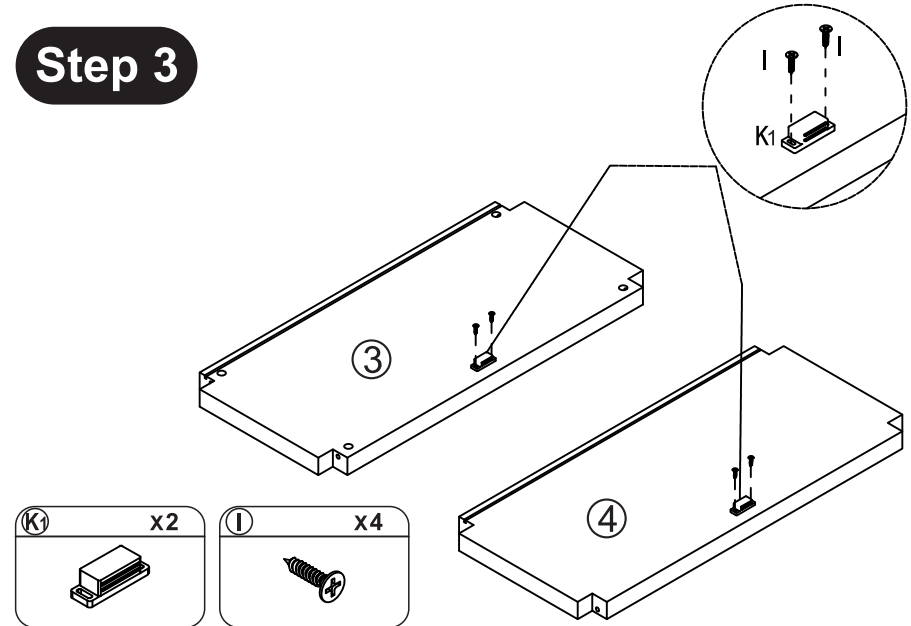

  
Step 2

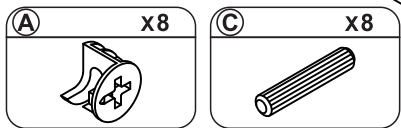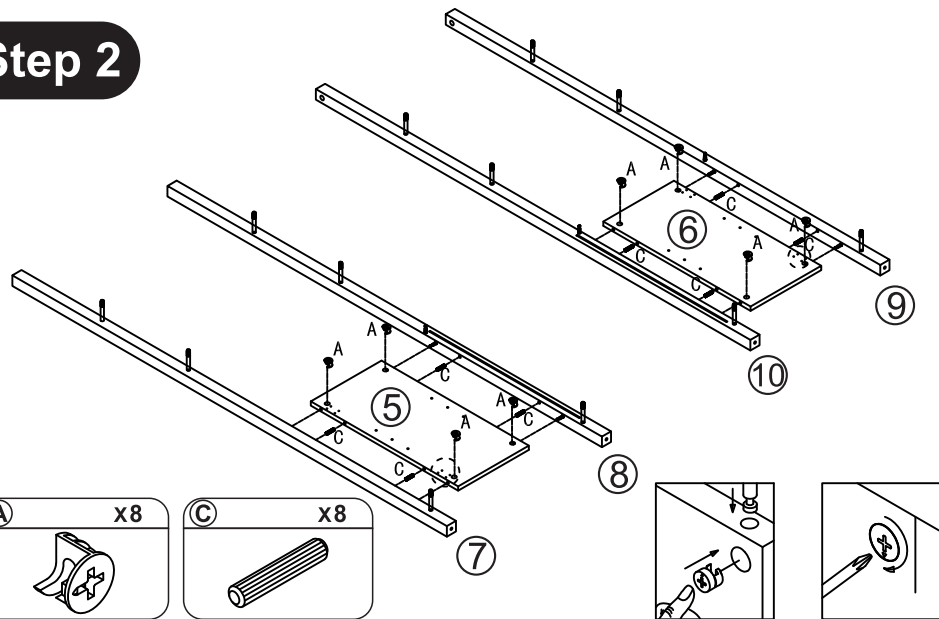

 
 
Step 4

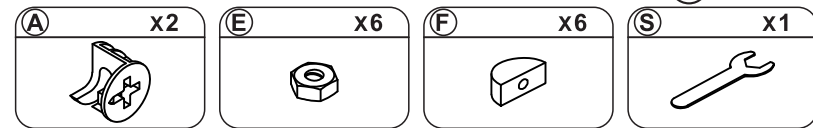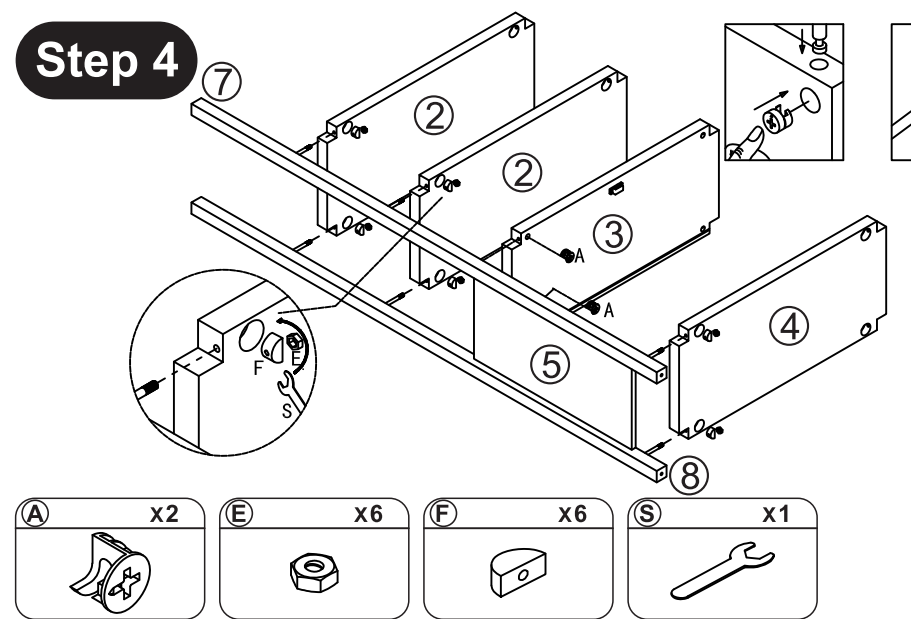


 
Step 5

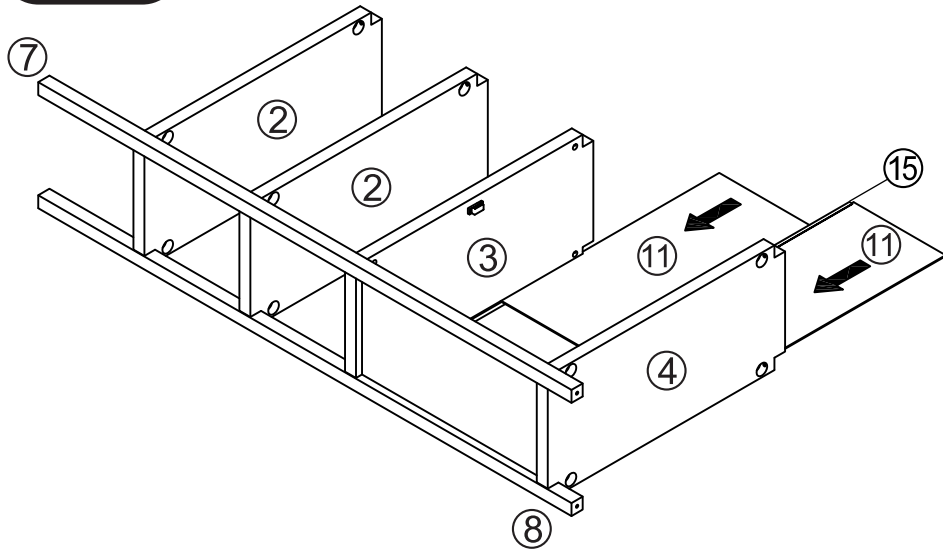

 
 
Step 7

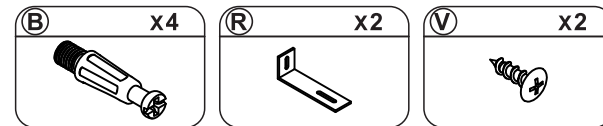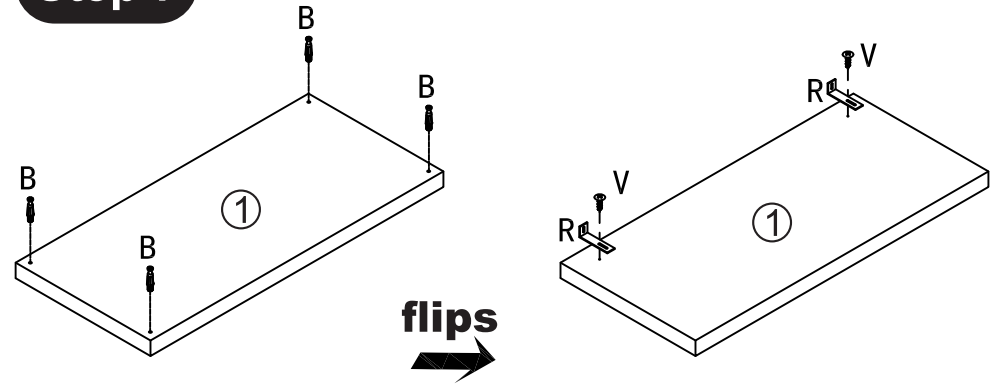

 
 
Step 6

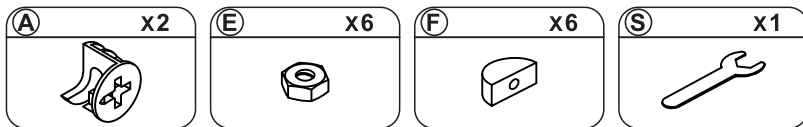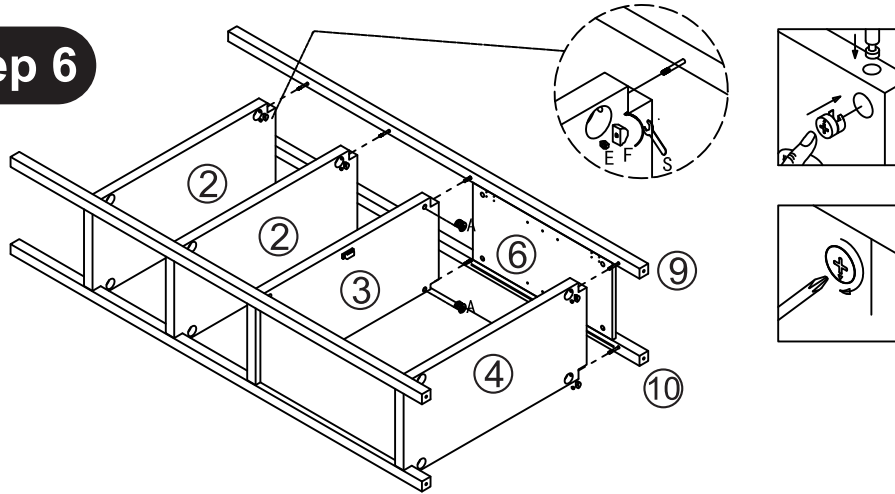



 
 
Step 8

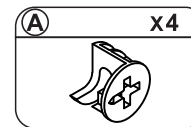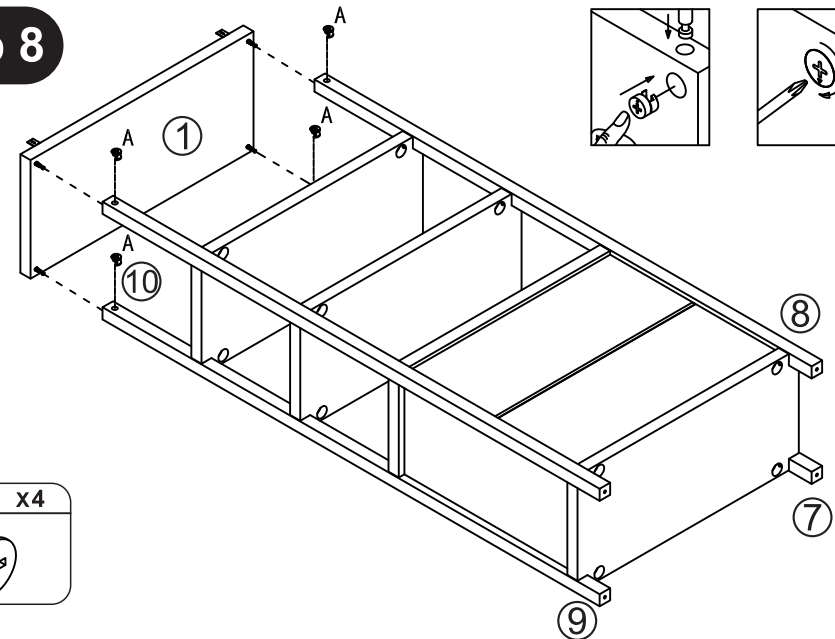

 
 
Step 9

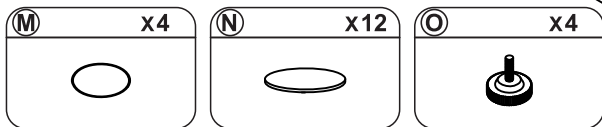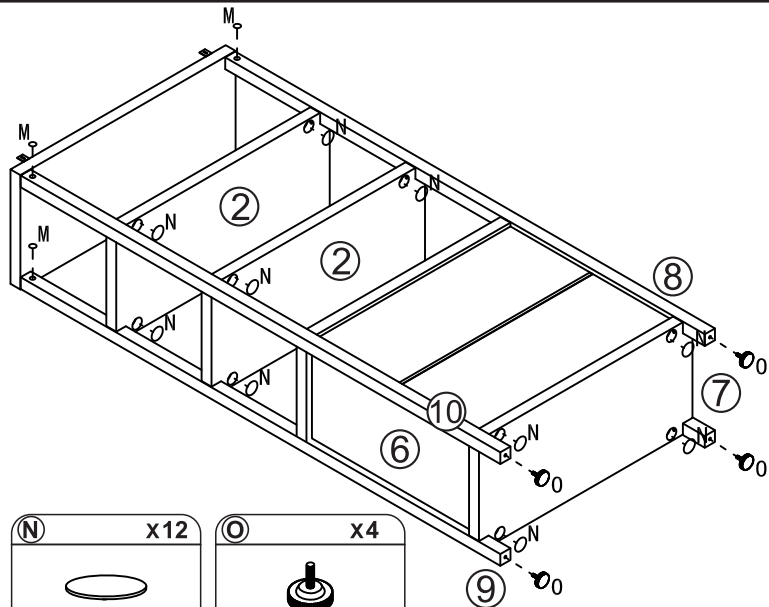

  
 
 
Step 11

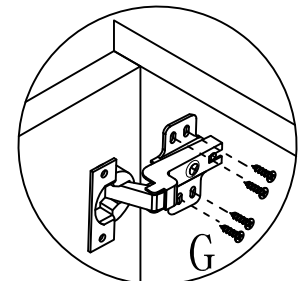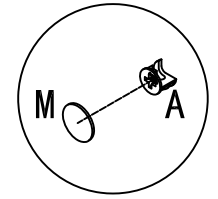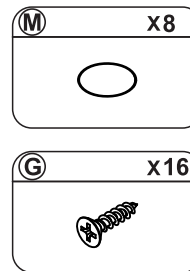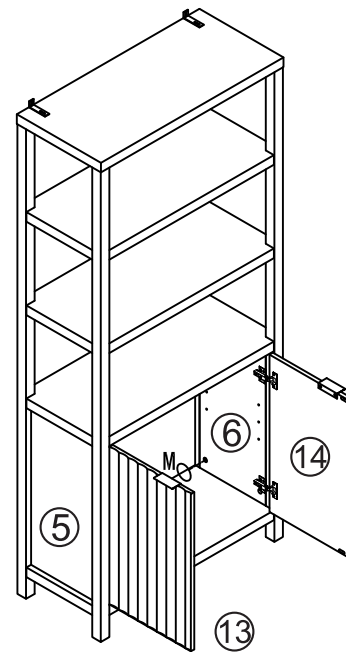



 
 
Step 10

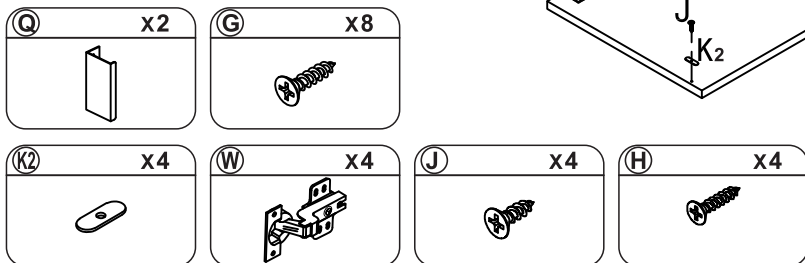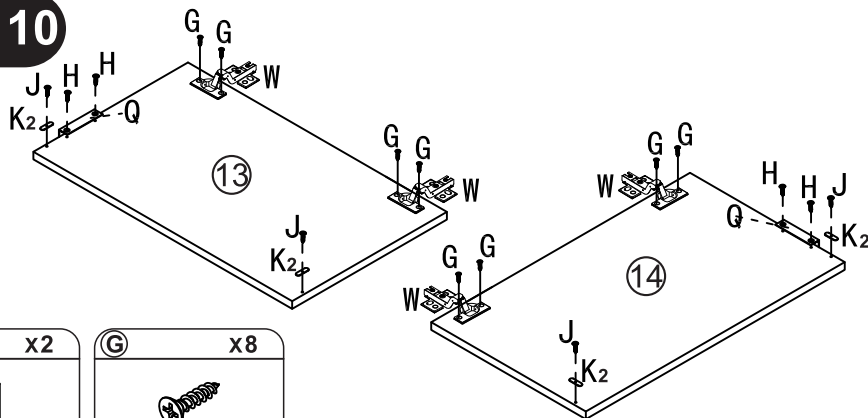






 
 
 
Step 12

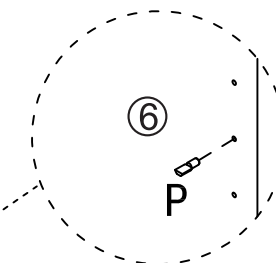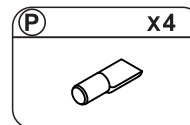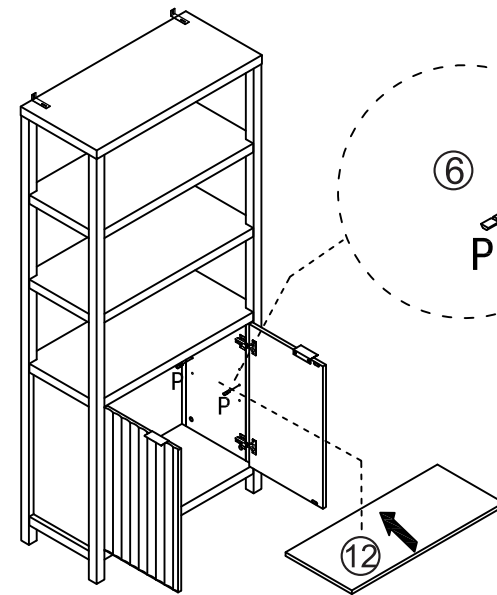

    Step 13

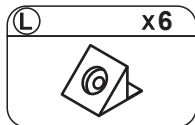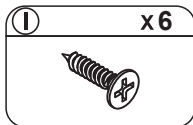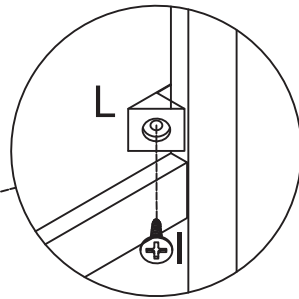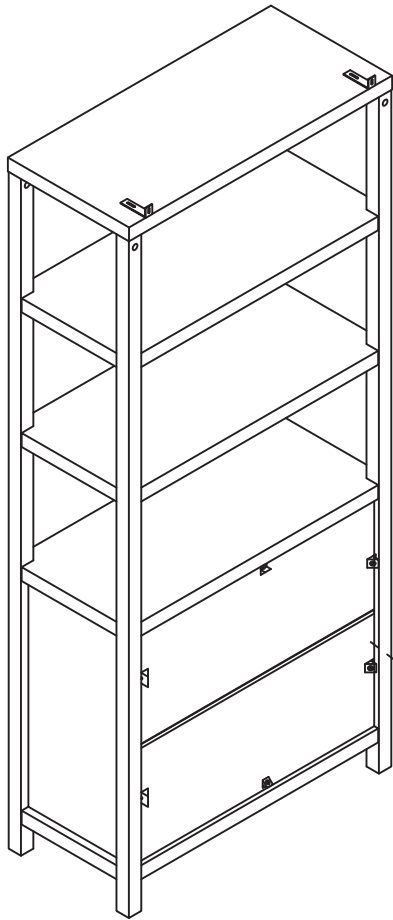

        
Step 14

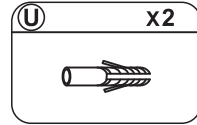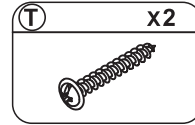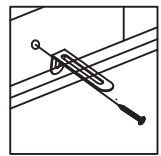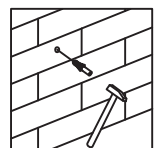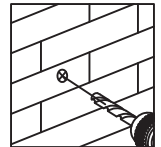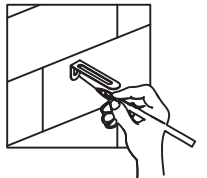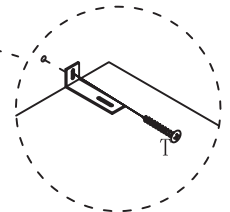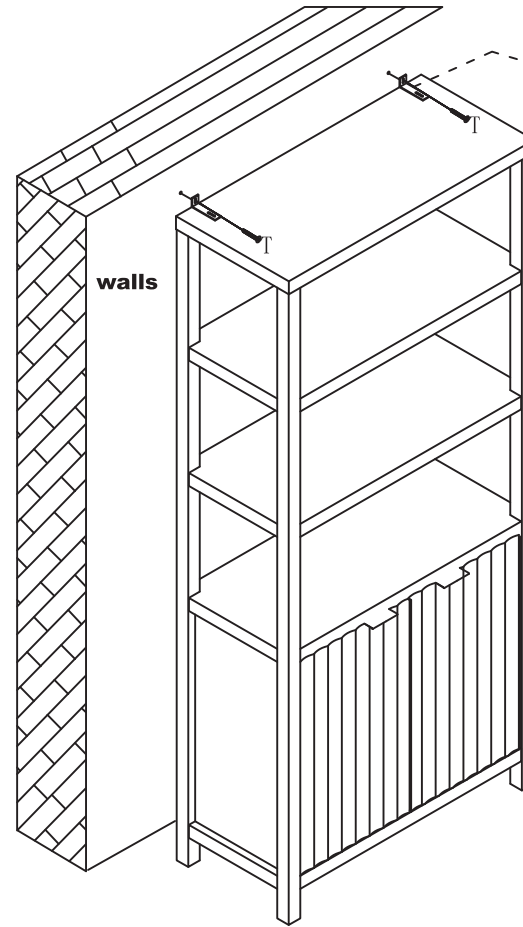


Adjusting the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.




 
Components Name

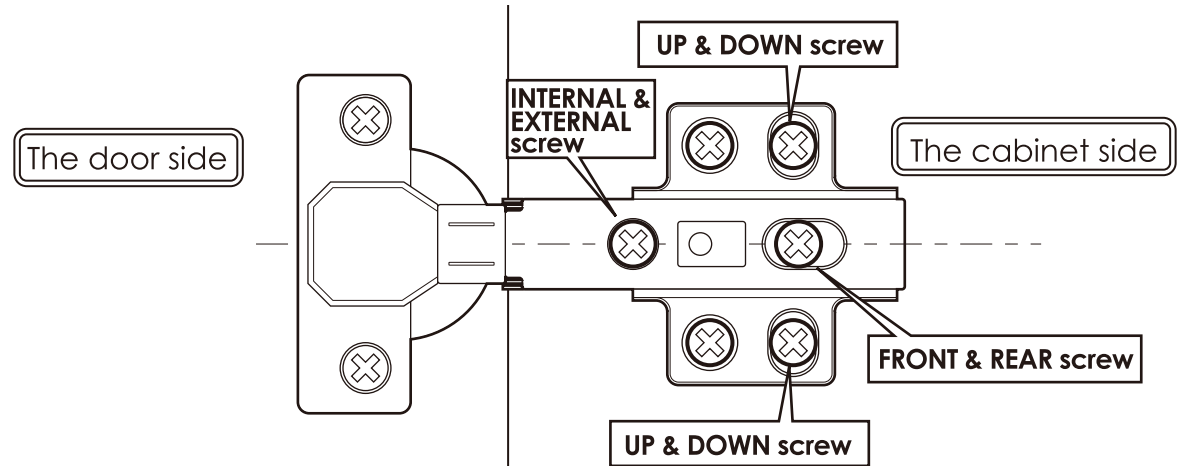

 Obvious gaps between doors or Doors don't look closed

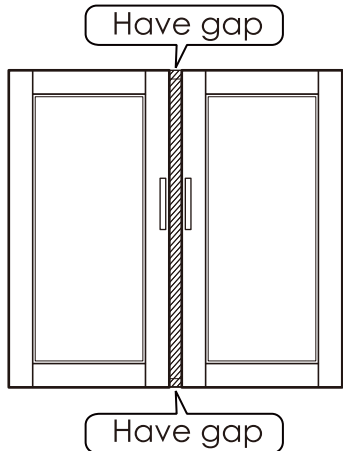

    1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

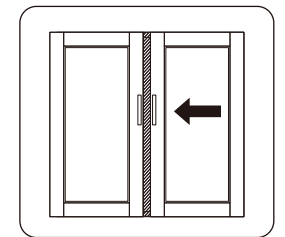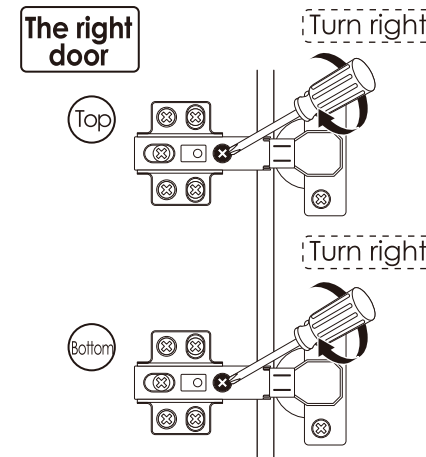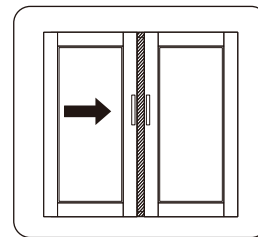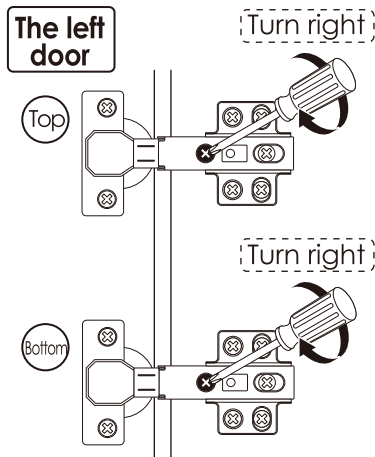

※ If the 2 doors are overlap, please turn the "internal & external screw" to the left.

When door is crooked



Please take the following steps to adjust first.

 
1 Rotate the "front and rear screws" to the left

※ After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right Slightly.

2 Push the door to the cabinet


3 Rotate the "front and rear screws" to the right

When door is leaning

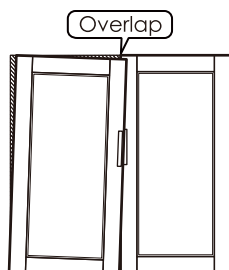


1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

 Protruding to the upside

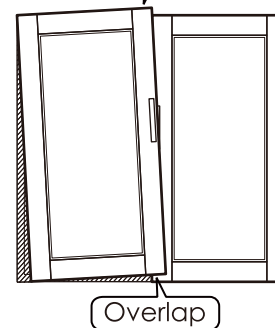

1 Turn "internal & external screw" to the left can make the bottom of the door tilted outward.

 When the door is higher on top

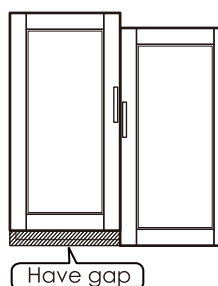



1 Turn "up & down screw" to the left

2 Lower the door's height so that 2 doors are of the same height.

3 Turn "up & down screw" to the right

※ If the door is lower on bottom, please lift up the left door slightly on step 2

  ※ **Stay Scratch-Free: Safeguard Your Furniture by Assembling on Carpet.**

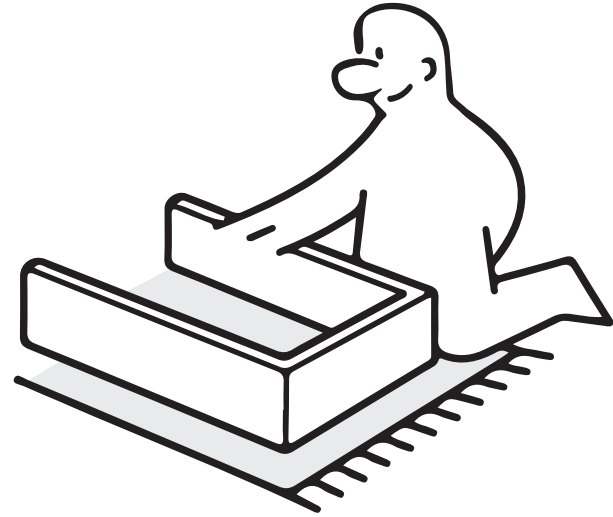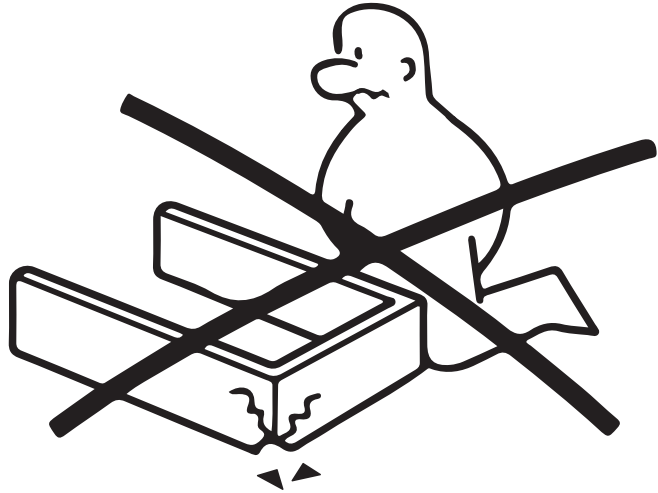

※ **Stuck in Assembly Limbo? Check out our website or contact our support team for quick solutions!**

