

eurotech

G-GAMEBSC

ASSEMBLY INSTRUCTIONS
OPERATING INSTRUCTIONS
WARRANTY














CUSTOMER SERVICE: parts@raynorgroup.com
CUSTOMER SERVICE: 1-800-637-0005
www.eurotechseating.com

ASSEMBLY INSTRUCTIONS

G-GAMEBSC

Remove all items from the carton. Verify all pieces before assembly.

PARTS LIST				
Key	Description	Part	Qty.	Spare
A	Caster		5 pcs	
B	Star Base		1 pc	
C	Seat Post (cylinder)		1 pc	
D	Mechanism		1 pc	
E	Seat Cushion		1 pc	
F	Backrest		1 pc	
G	Armrests - 1 Left & 1 Right Armrest		2 pcs	
H	Mechanism Screws (5/16"*3/4", Red) and Washers		4 pcs	1
I	Armrest Screws (1/4"*1", Blue)		8 pcs	1
J	Arm Screw Caps		8 pcs	1
K	Allen Wrench (5mm)		1 pc	

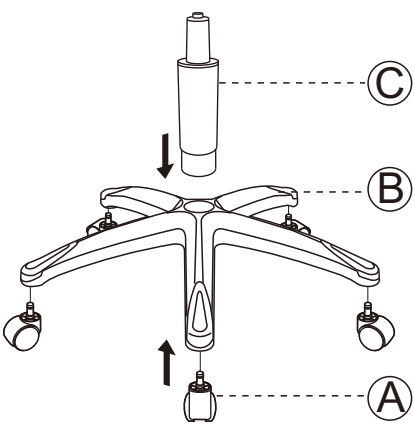
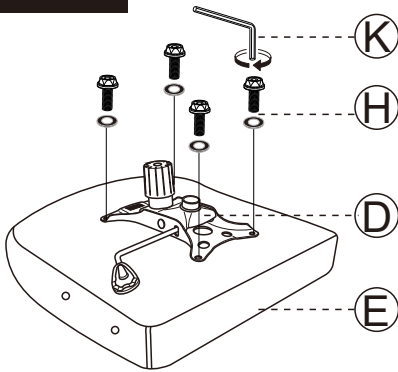
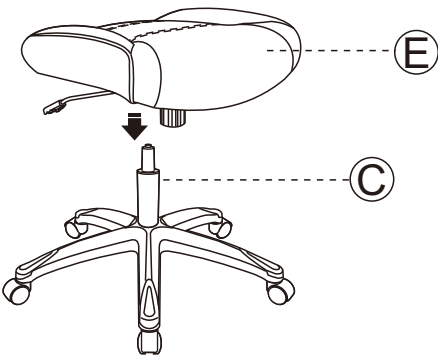
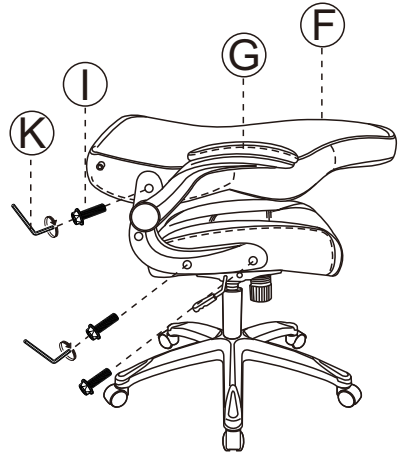
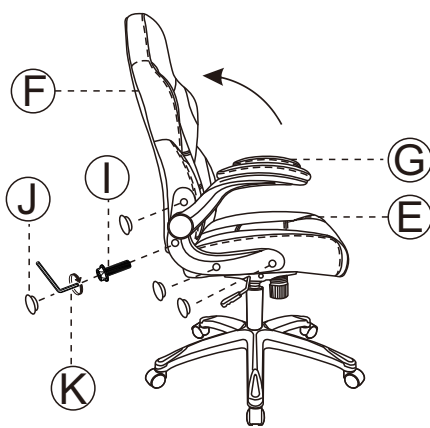

PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING – IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.

ASSEMBLY INSTRUCTIONS

G-GAMEBSC

Remove all items from the carton. Verify all pieces before assembly.

<p>STEP 1</p>  <p>Press the Casters (A) into the holes at the end of each leg of the Base (B). Insert the bottom end of the Seat Post (C) into the center hole of the Base (B).</p>	<p>STEP 2</p>  <p>Please be careful to use the correct RED Mechanism Screws and Washers (H) . For easy assembly, place the Seat Cushion (E) face down on a flat surface. Attach the Mechanism (D) to the Seat Cushion (E) inserting the 4 RED Mechanism Screws and Washers (H) in the predrilled holes to the Seat Cushion. Tighten securely with the enclosed Allen Wrench (K).</p>	<p>STEP 3</p>  <p>Turn the assembled seat (E) upright and locate the center hole of the Mechanism over the Seat Post (C). Push down firmly until the connection is secure.</p>
<p>STEP 4</p>  <p>Please be careful to use the correct BLUE Armrest Screws (I) . Attach each Armrest (G) to the Seat Cushion (E) using 2 BLUE Armrest Screws (I) for each arm. Attach the Backrest (F) to the Armrest inserting one BLUE Armrest Screw (I) into the upper holes of the armrest (G) for each armrest . Do not fully tighten the armrest screws just inserted until instructed to in Step 5 .</p>	<p>STEP 5</p>  <p>Turn the Backrest (F) upright. Insert one BLUE Armrest Screw (I) into the lower holes of the armrest (G) for each armrest. Tighten all 8 Armrest Screws (I) securely with the enclosed Allen Wrench (K). Insert Arm Screw Caps (J) over each of the screws on the armrests to cover the exposed holes of the armrests (G).</p>	<p>STEP 6</p>  <p>Before using your chair, ensure that all the screws are tightened fully for safety. You can now enjoy the comfort of your new chair! NOTE: Please keep the enclosed Allen Wrench and check all screws every six months to ensure they remain tightly fastened.</p>

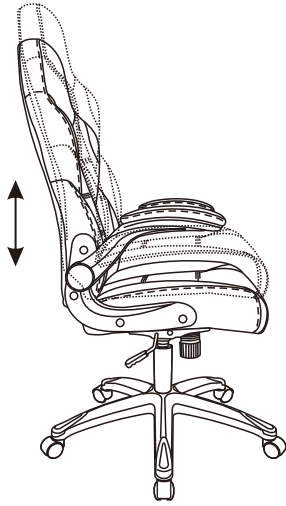
PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING – IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.


OPERATING INSTRUCTIONS

G-GAMEBSC

A SEAT HEIGHT ADJUSTMENT



B BACK TILT ADJUSTMENT

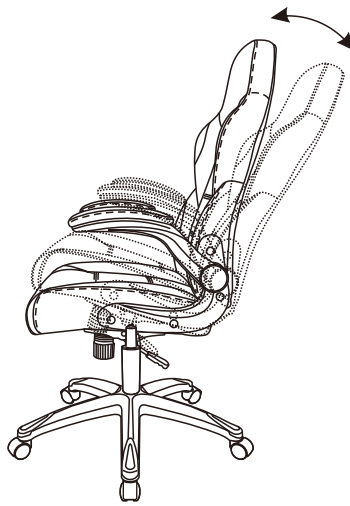


A SEAT HEIGHT ADJUSTMENT

While seated, pull the lever on the right side of the seat up and hold it while raising or lowering the seat to change the seat height. When the lever is released, the seat height is locked. The seat height adjustment range is approximately 2.75".

B BACK TILT ADJUSTMENT

While seated, pull the lever on the right side of the seat out to unlock the tilt function. Push backwards to tilt. To lock in the upright position, sit back up straight and push the lever in. The range of motion is approximately 12°.

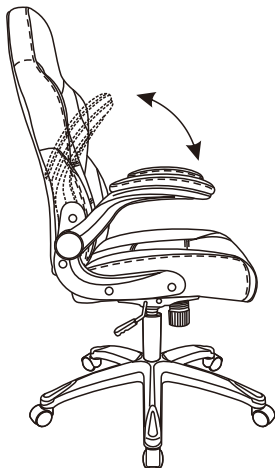C FLIP UP ARM ADJUSTMENT



D TILT TENSION ADJUSTMENT



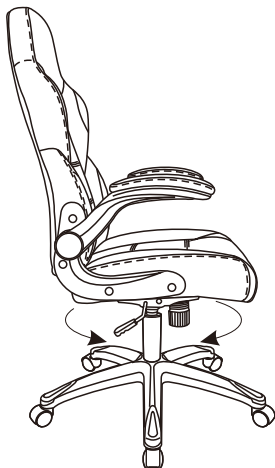
C FLIP UP ARM ADJUSTMENT

Lift arm up towards the back of the chair.

D TILT TENSION ADJUSTMENT

Rotate the knob located underneath the seat clockwise or counterclockwise to adjust the tilt tension to your preferred level of resistance.

E 360° SWIVEL



E 360° SWIVEL

Your chair can rotate around 360°.

OUR PROMISE.

They say with age comes wisdom. And while we've learned a lot since we sold our first office chair in 1979, even then we knew that superior craftsmanship and design are essential ingredients in delivering real value for our customers. All these years later, those three simple pillars still stand behind our promise of exceptional seating with every chair we sell.

DESIGN CRAFTSMANSHIP VALUE

Eurotech. Sit Smarter.

THE EUROTECH WARRANTY

- For all products except for 24/7 chairs (see below), Eurotech warrants to the original purchaser all components for the life of the product with the exception of upholstery and foam, which will be warranted for five years.
- For 24/7 chairs, Eurotech warrants to the original purchaser of all 24/7 and Big & Tall chairs all components for 5 years with the exception of upholstery and foam which will be warranted for 2 years.
- Eurotech warrants to the original purchaser that all parts will be free from material defects. Eurotech will repair or replace, at its option, any unaltered components.
- Eurotech does not warrant any aftermarket hardware that is installed on the product.
- Eurotech's warranty is limited to the normal use of the product in a forty hour work week and a 275lb. weight limit unless otherwise noted.
- Eurotech shall NOT be liable for consequential or incidental damage arising from any product defect.
- Eurotech's warranty is limited to replacement or repair and does not cover cost of transportation and labor. There are no other warranties expressed or implied other than those specifically described.
- Eurotech does not warrant customer's own material.
- Eurotech warrants to the original purchaser with proof of purchase along with a copy of the receipt.
- Arm Pads are warranted for 2 years under normal wear and tear.
- Cylinder is warranted for 5 years.

This warranty is made as of 9/15/16. Please see <http://www.eurotechseating.com/warranty-information> for any updates and/or revisions to this warranty.