 




# **INSTALLATION**

## *Product Manual*

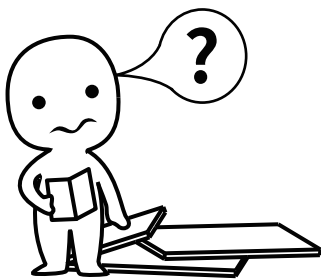


### **IMPORTANT INFORMATION!**

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

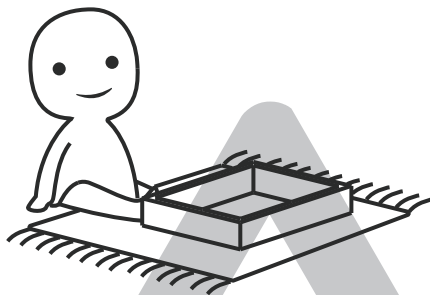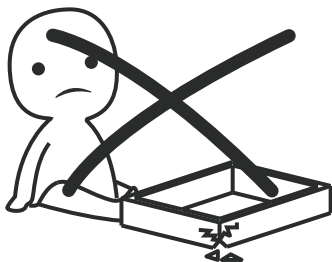



### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

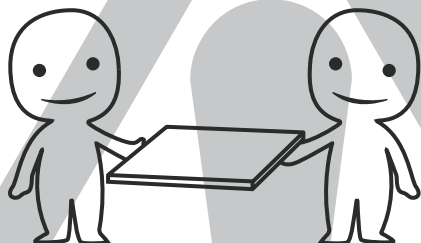

### **IMPROVE EFFICIENCY !**

 Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

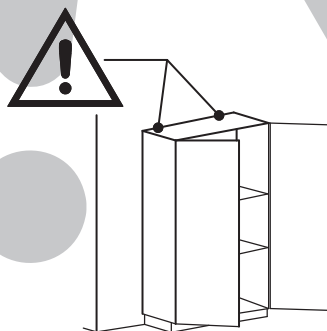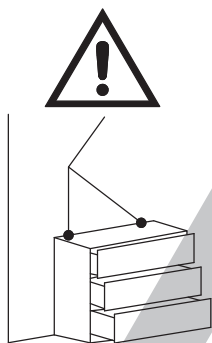

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

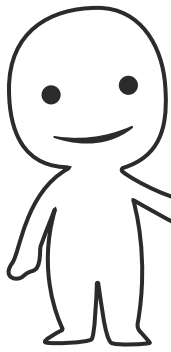


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 54



M5 x 42 mm

B x 54



 
Ø 15 x 10 mm

C x 20



M3.5 x 12 mm

D x 10




M5 x 40 mm

E x 4



M6 x 12 mm

 F x 2




M6 x 30 mm

G x 4



M3 x 18 mm

 H x 28



Ø 6 x 40 mm

I x 1



 
Ø 60 mm

J x 4




M4 x 18 mm


K x 2



L x 1 SET

 


M x 1

 

N x 8




 O x 1





4 #

 22

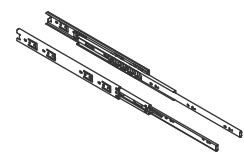

14"(3508W) 1SET

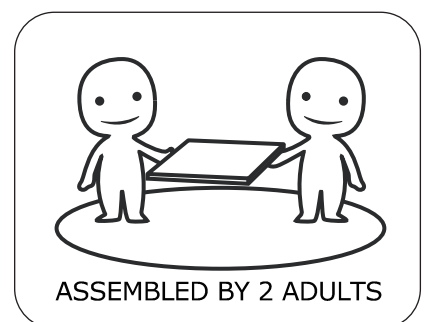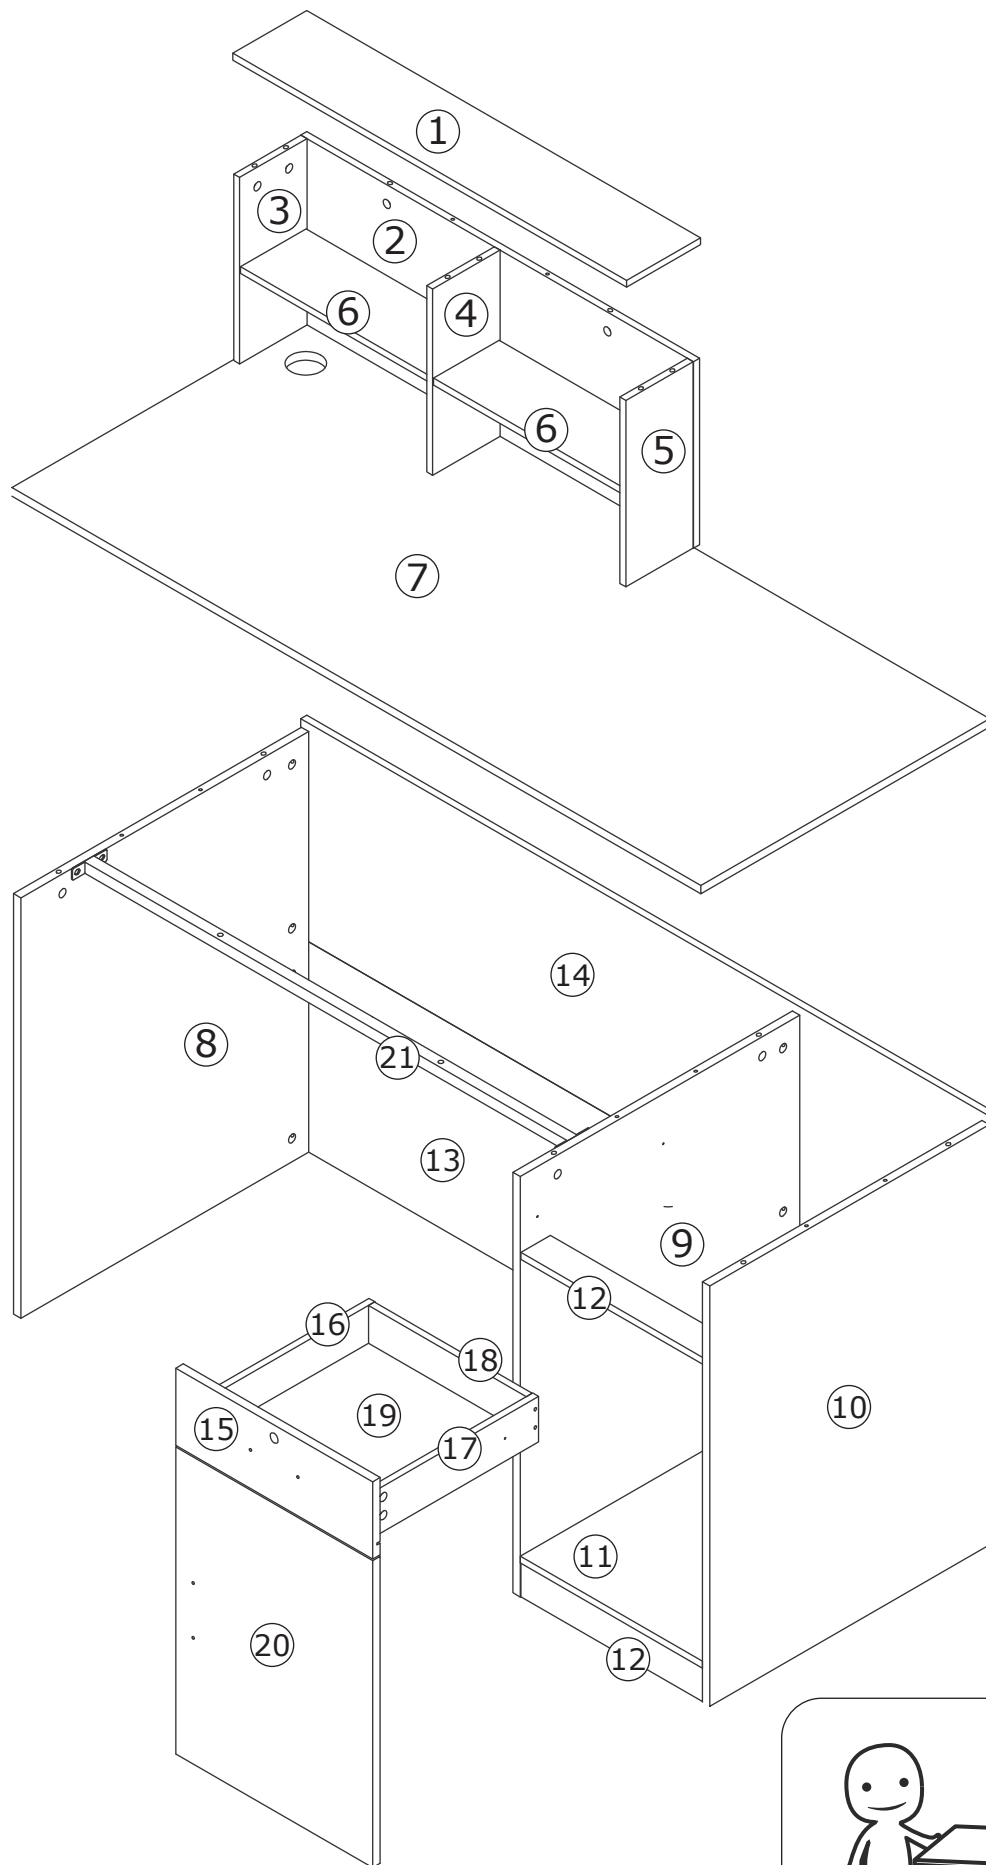  





**Slides Must Be Separated Before Assembly.**  
**After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

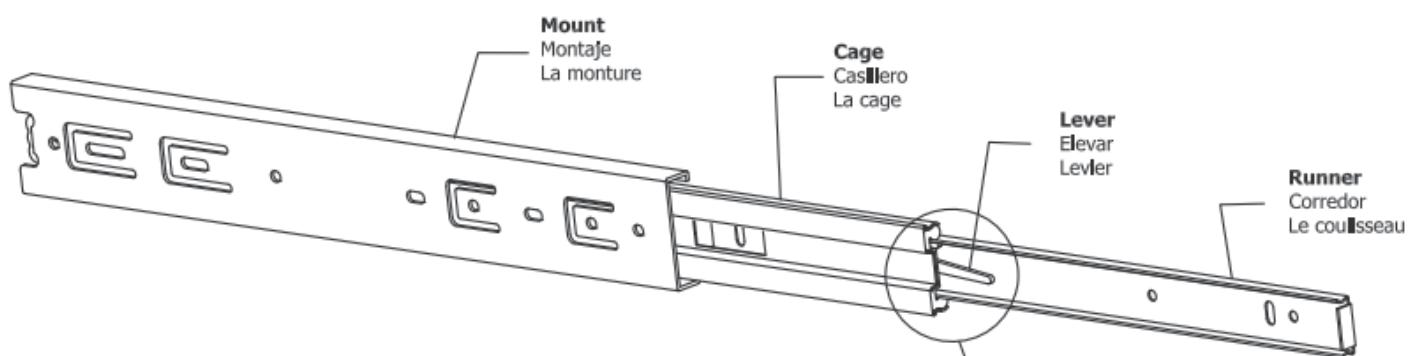

 
**STEP 1: Extend Slide**  
Extender la diapositiva  
Extendre la diapositive

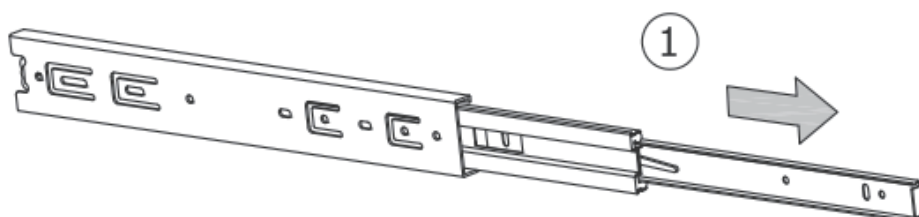

 **STEP 2: Push Lever UP**  
Empujar hacia arriba  
Lever le levier

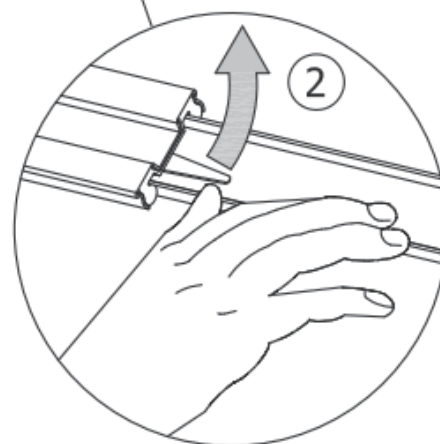


 **STEP 3: Remove Runner**  
Quitar el corredor  
Enlever le coureur


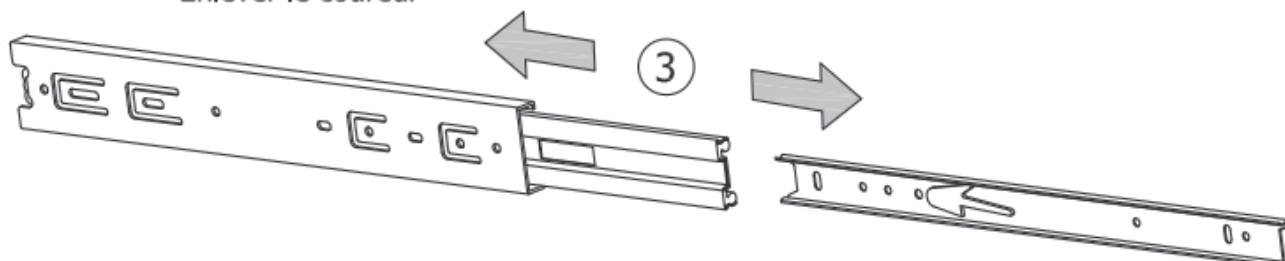


1


 
A x 12  
M5 x 42 mm






 
 
Insert quickfit screw(A) into plate 1 and 2 with a screwdriver as shown.

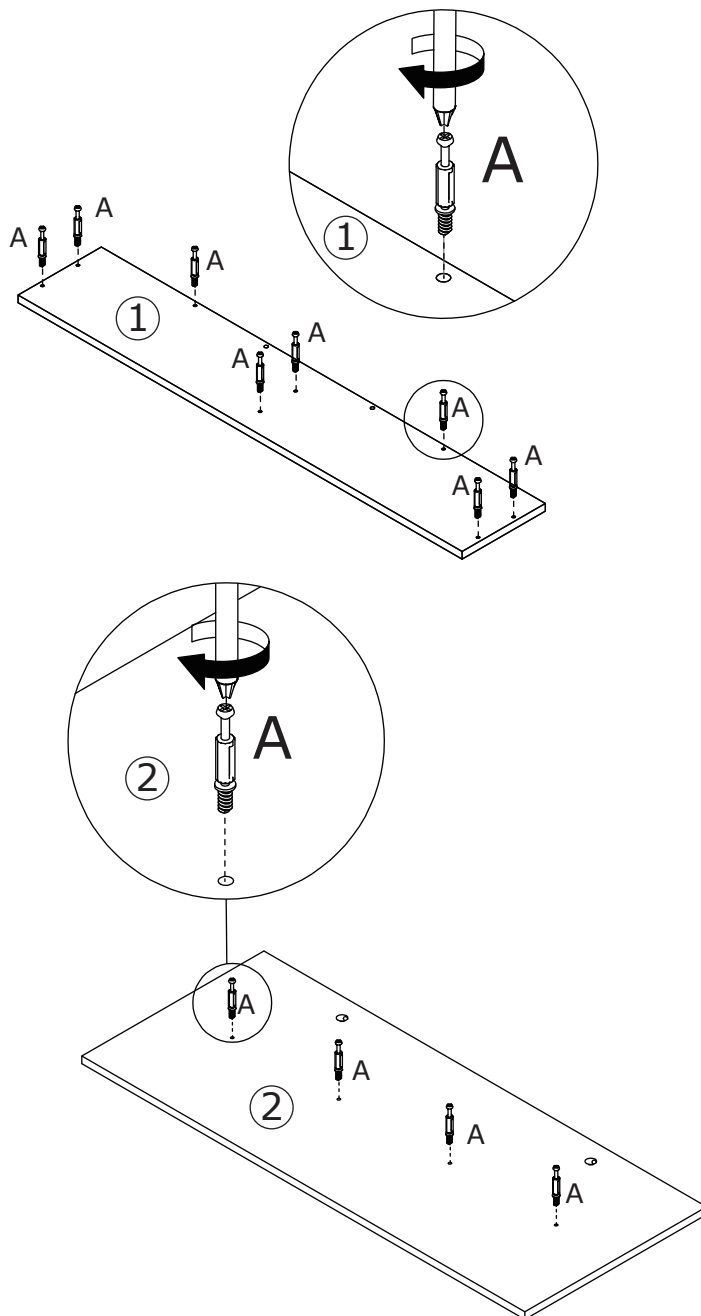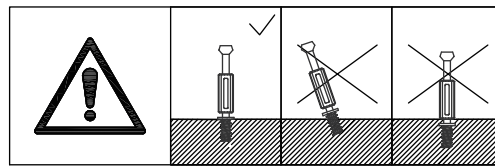


2

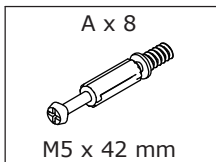  


     Insert quickfit screw(A) into plate 3,4,5 with a screwdriver as shown. Please note both sides of plate 4 need to be inserted.

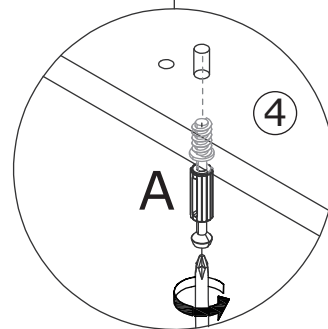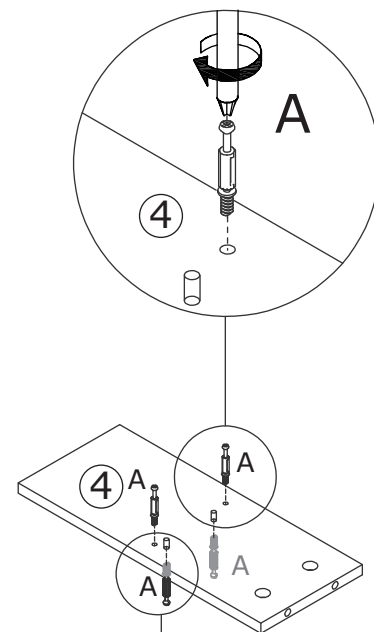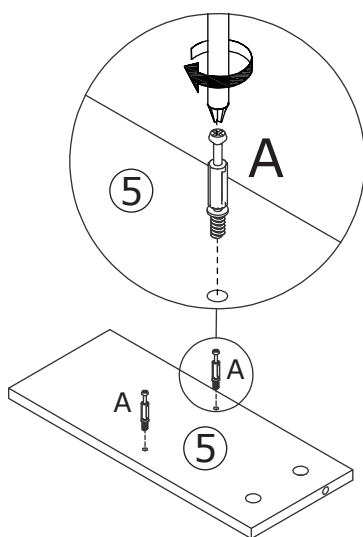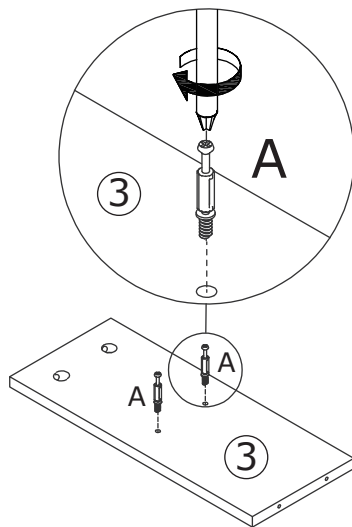
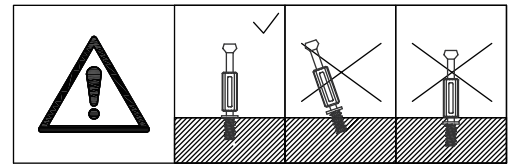


# 3

 
B x 4  
  
 Ø 15 x 10 mm




  Connect plate 3 and 4 with plate 6 and turn cam locks(B) clockwise to tighten as shown.

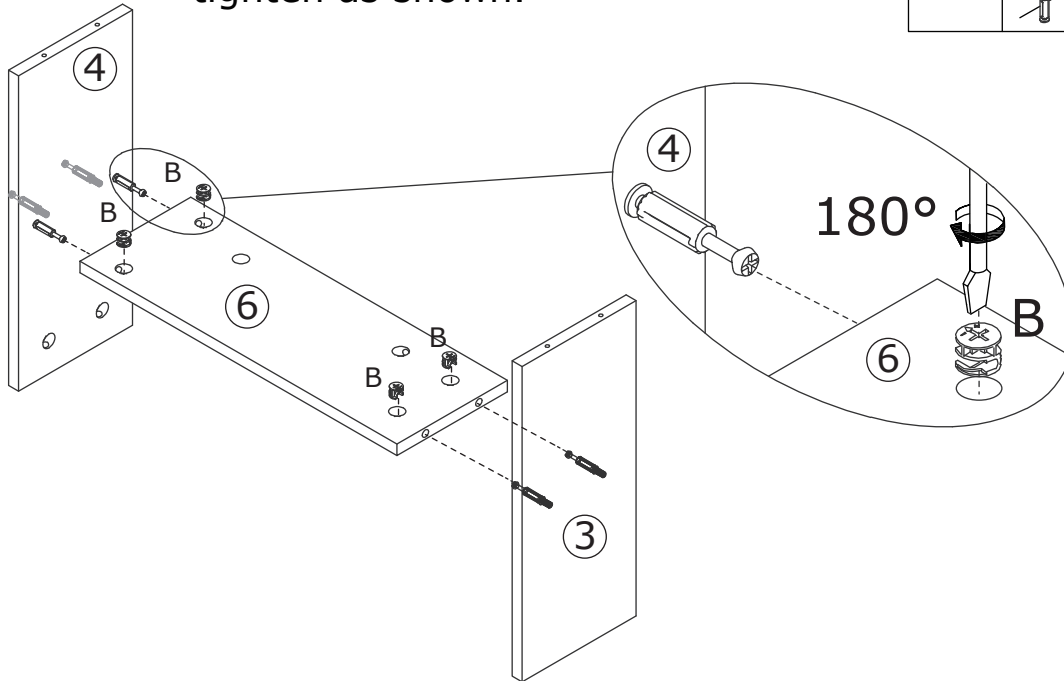
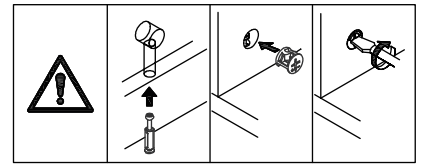


# 4

 
B x 4  
  
 Ø 15 x 10 mm




  Connect plate 4 and 5 with plate 6 and turn cam locks(B) clockwise to tighten as shown.

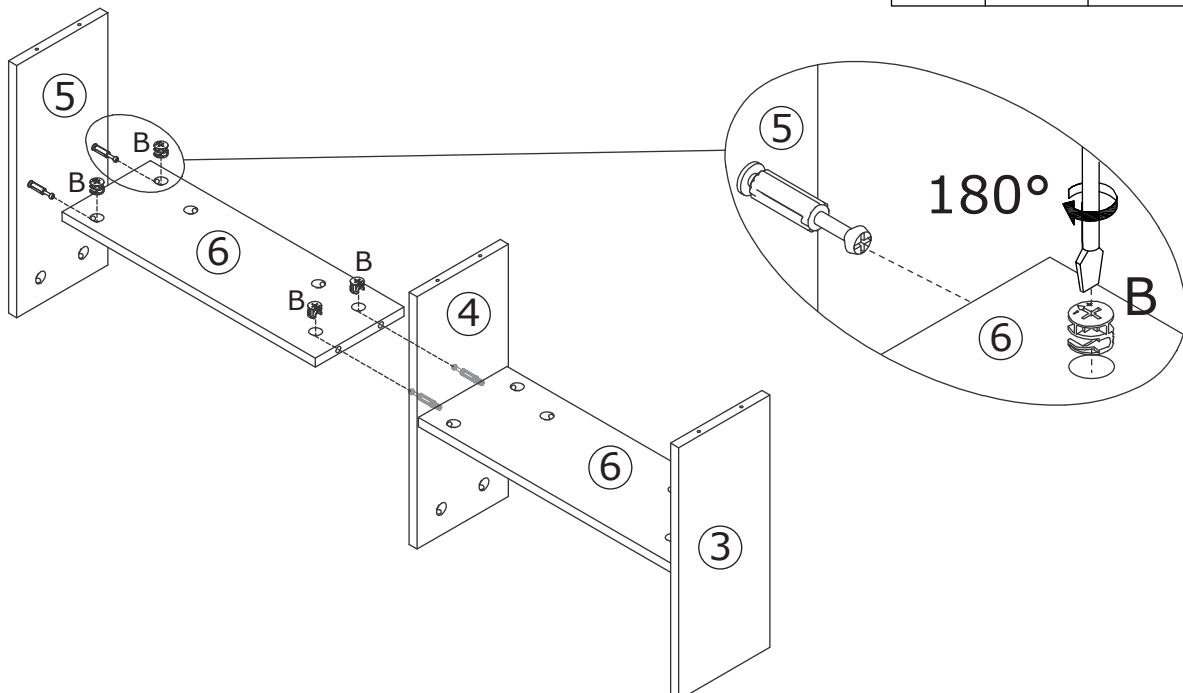
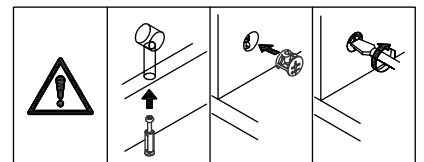


5

   
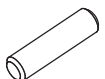
B x 4  
  
 Ø15 x 10 mm

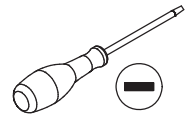


Attach the component to plate 2 and turn cam locks(B) clockwise to tighten as shown.

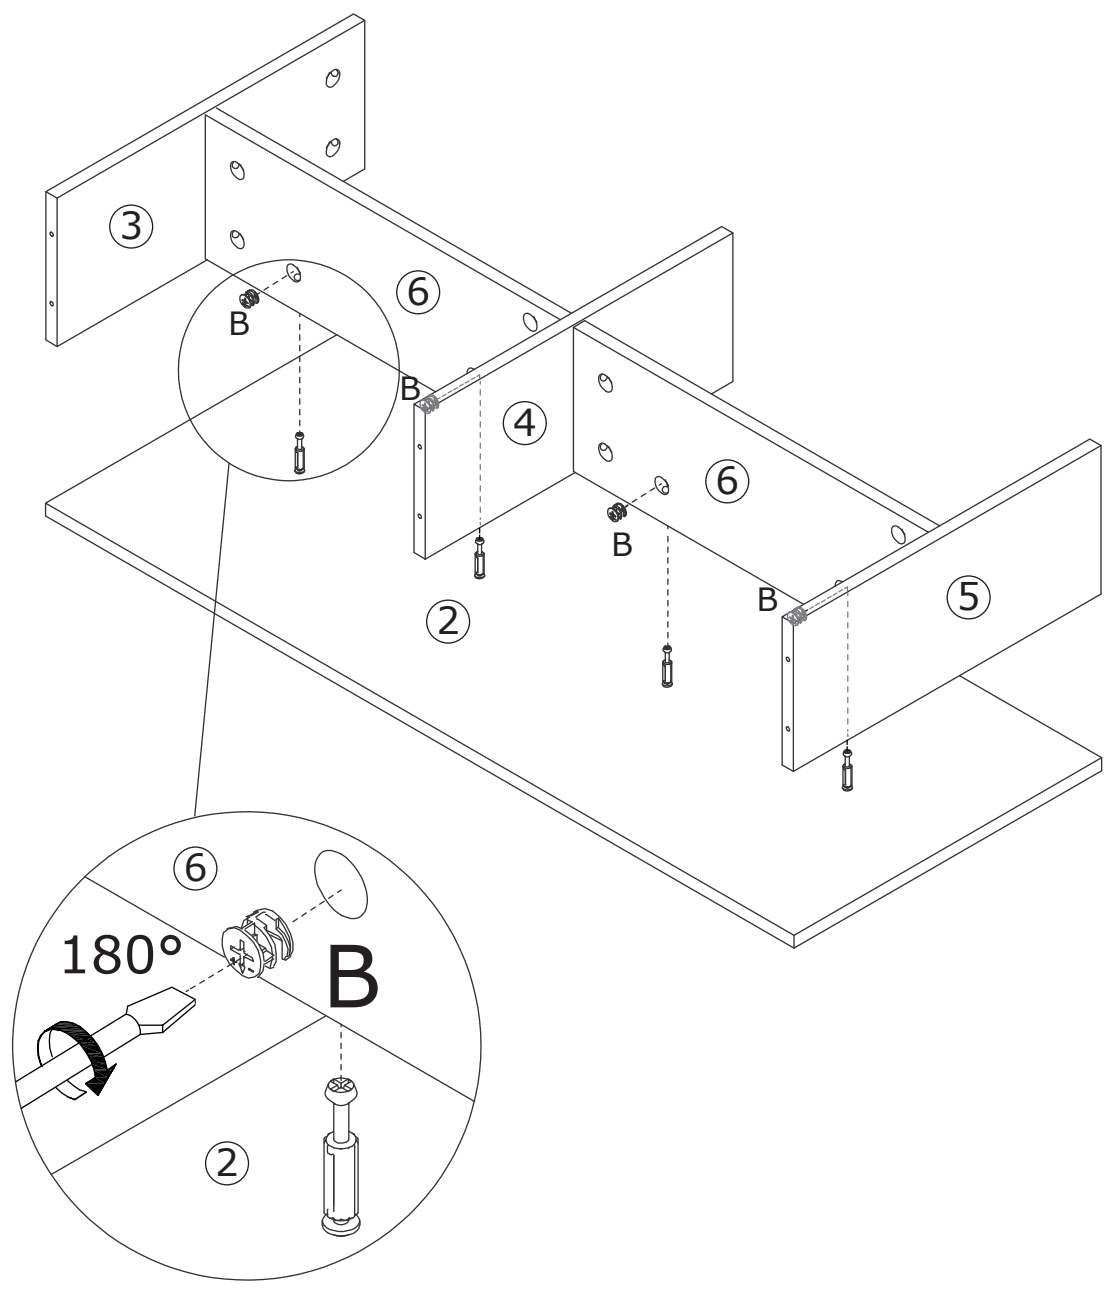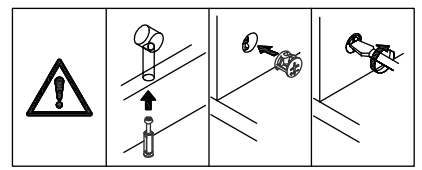



# 6
 
<p>B x 8</p>  <p>Ø 15 x 10 mm</p>	<p>H x 2</p>  <p>Ø 6 x 40 mm</p>
--	---


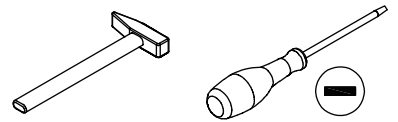


Insert wooden dowel(H) into plate 2 at first.

 
 
Cover plate 1 to plate 2,3,4,5 and turn cam locks(B) clockwise to tighten as shown.

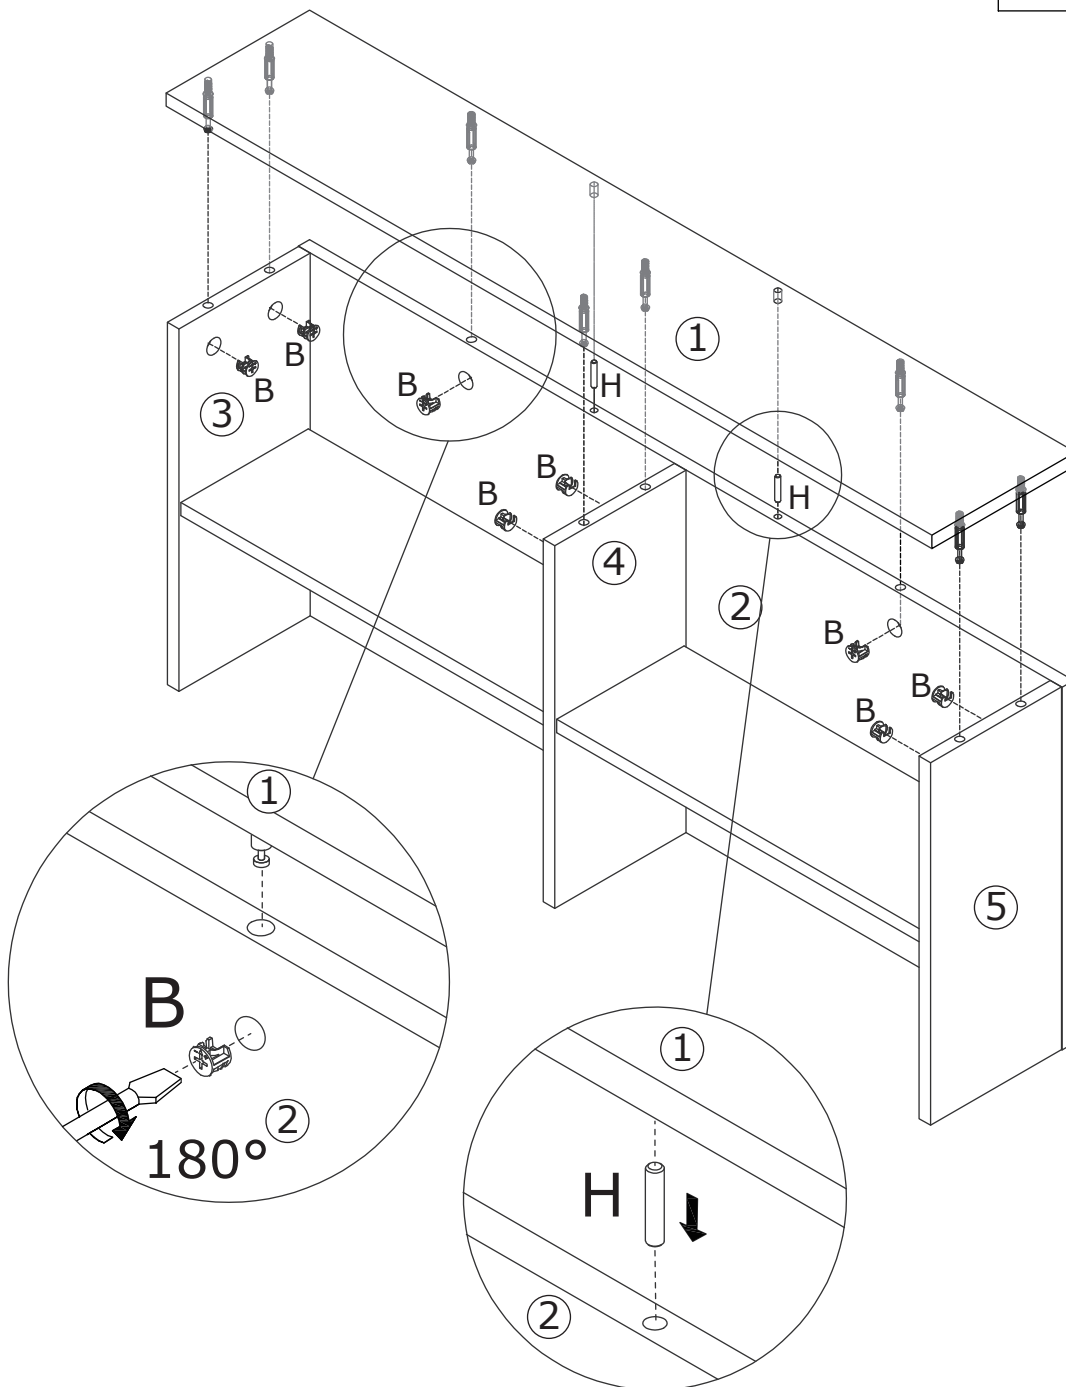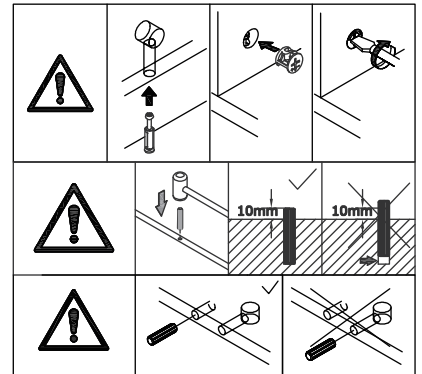



7

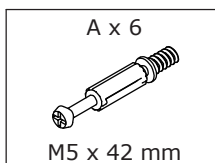  

  
Insert quickfit screw(A) into plate 7 with a screwdriver as shown.

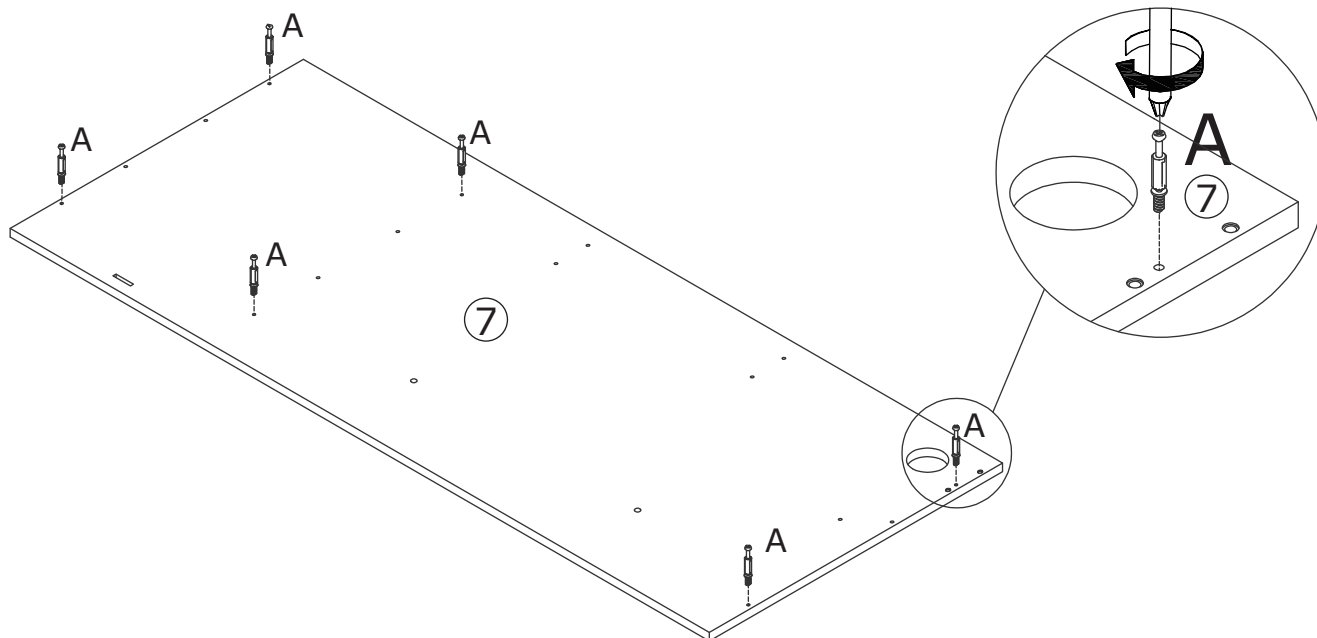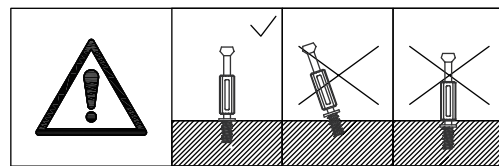

8

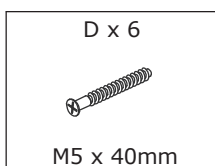  

 
Attach plate 7 to plate 3,4,5 with screw(D) as shown.

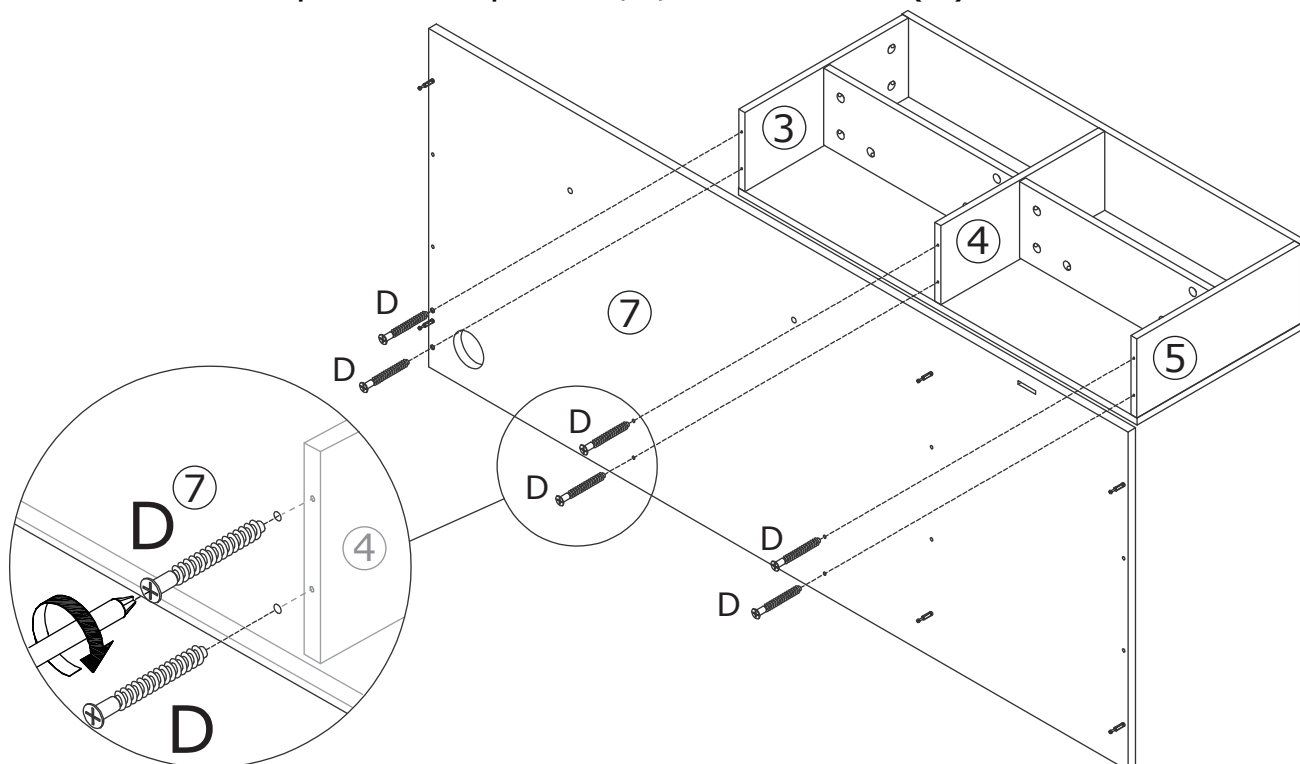


9



 Separate glide into two parts, fix slide rail 22 to plate 9 with screw(C) as shown. Insert quickfit screw(A) into plate 9 with a screwdriver as shown.

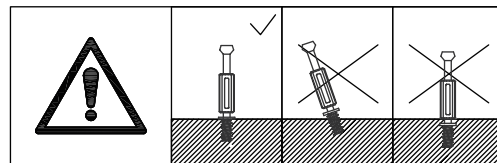

 Please pay attention to the holes where the accessories are inserted.

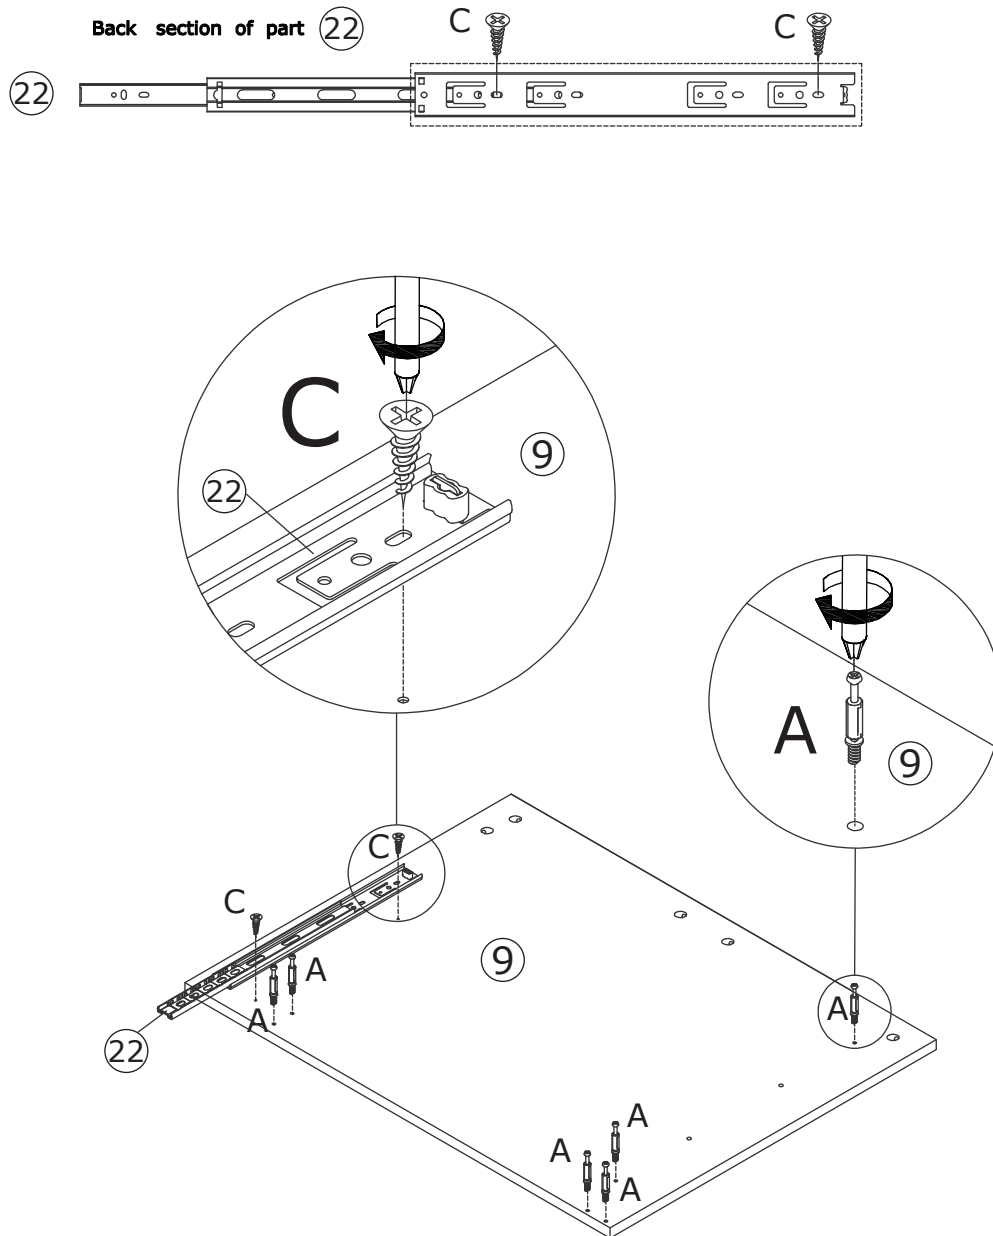






# 10



Fix slide rail 22 to plate 10 with screw(C) as shown.

Insert quickfit screw(A) into plate 10 with a screwdriver as shown.

   Please pay attention to the holes where the accessories are inserted.

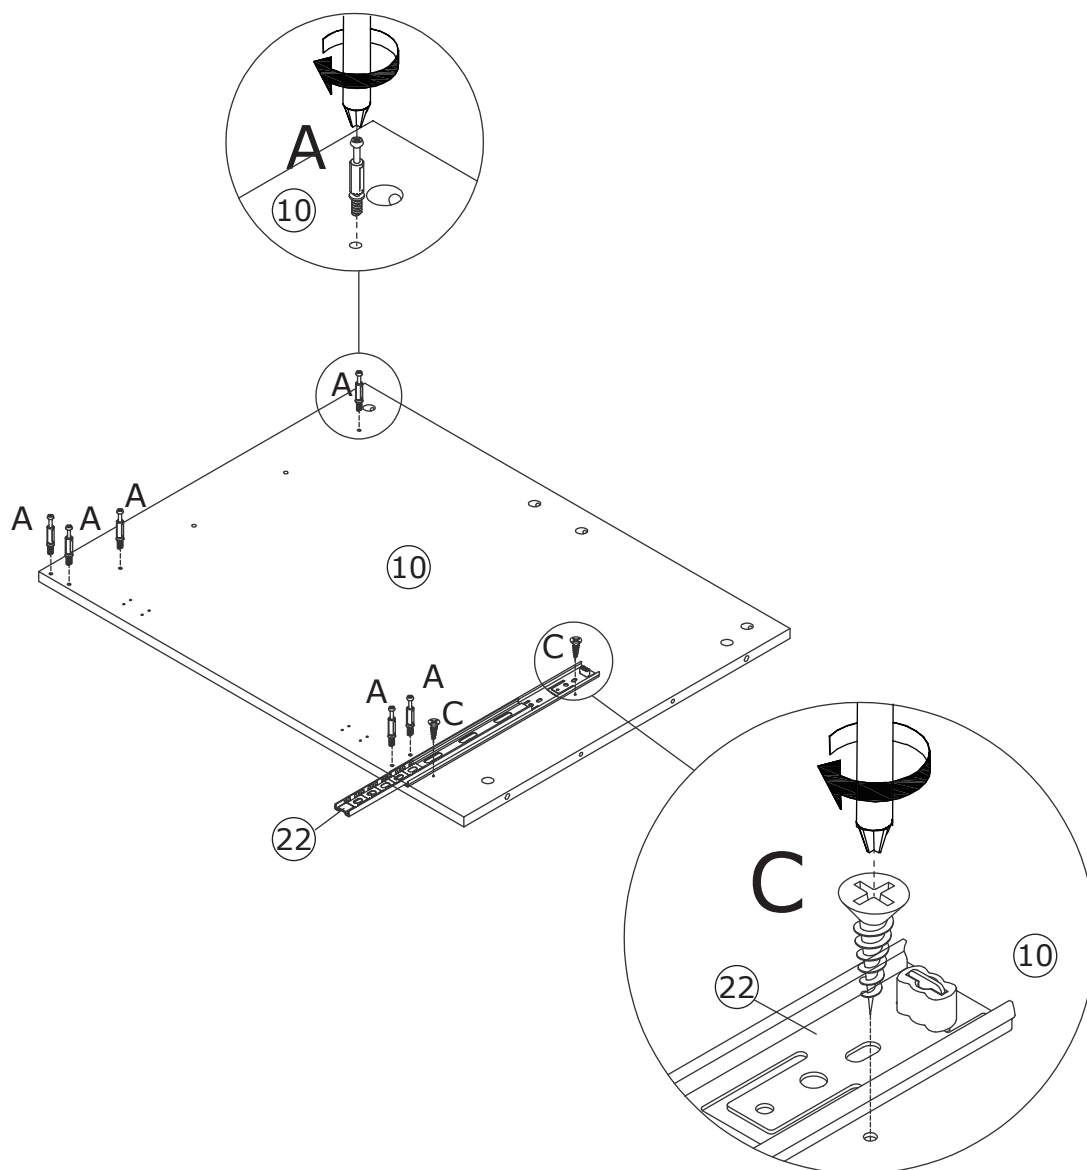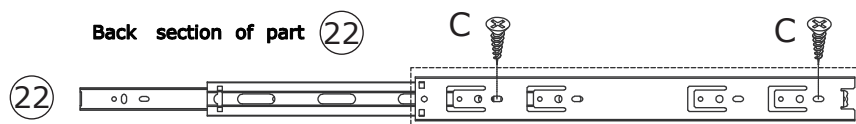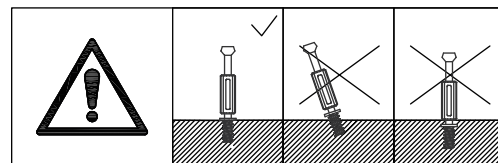


# 11

B x 6





Ø15 x 10 mm

 H x 2





Ø6 x 40 mm

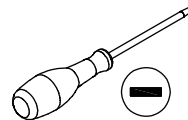    
 



Insert wooden dowel(H) into plate 11 at first.

Attach plate 11,12 to plate 9 and turn cam locks(B) clockwise to tighten as shown.

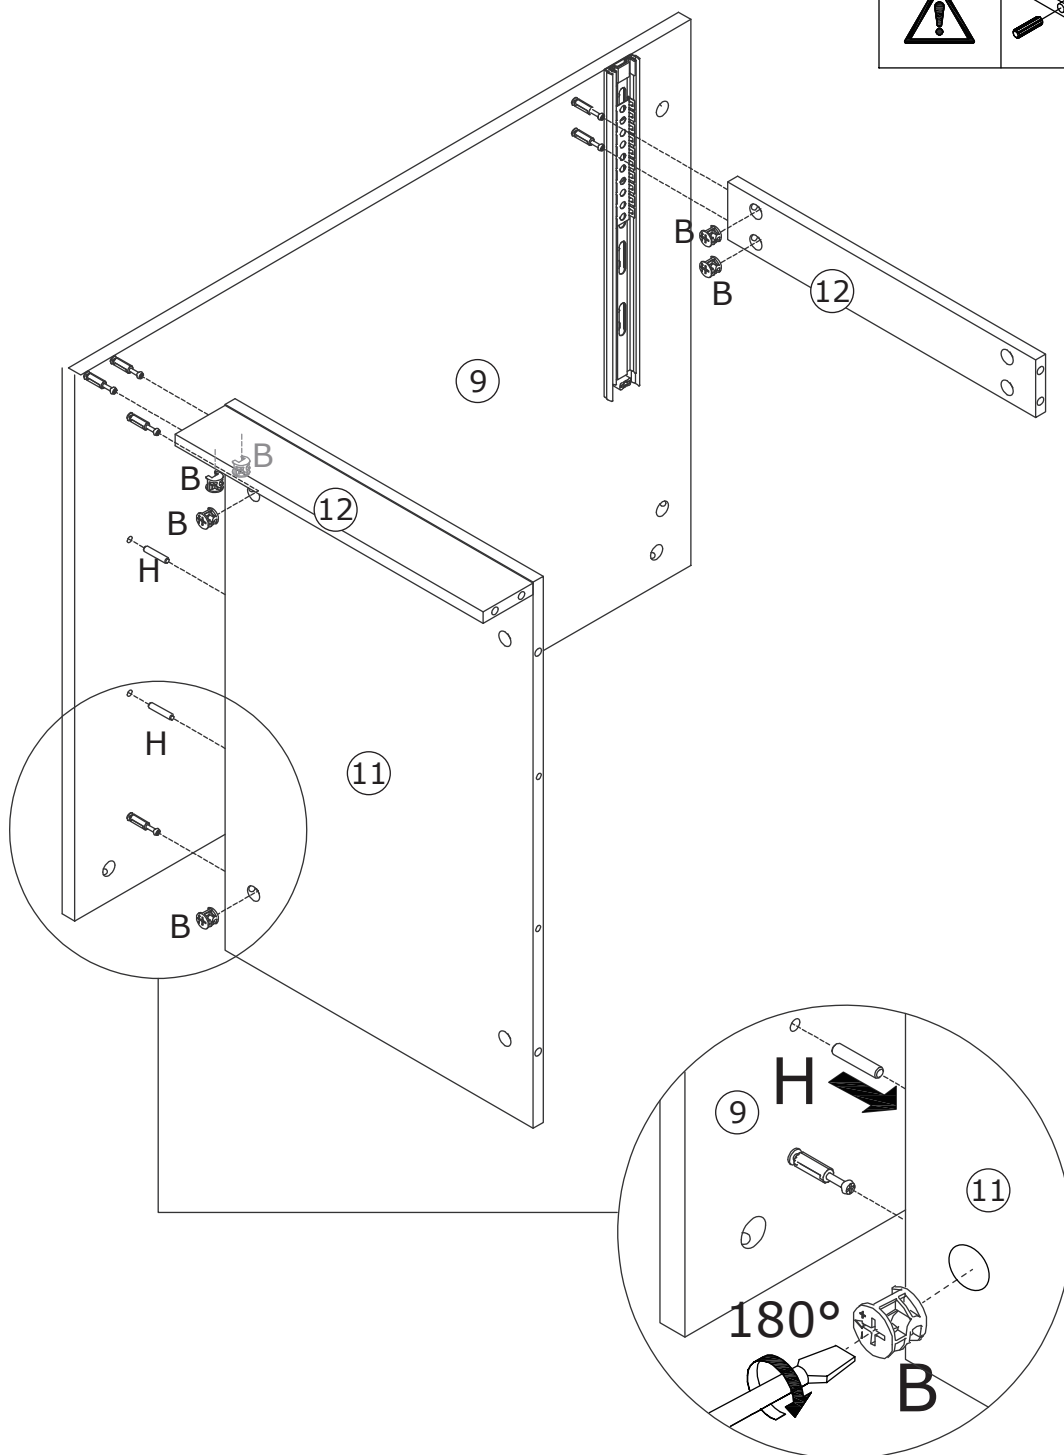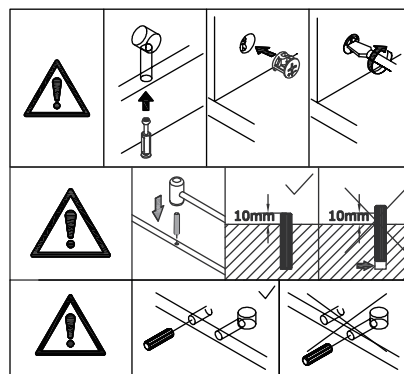



# 12

 B x 6  Ø 15 x 10 mm	H x 2  Ø 6 x 40 mm
--	---

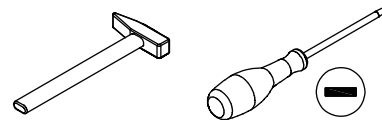


Insert wooden dowel(H) into plate 11 at first.

  Attach plate 10 to plate 11,12 and turn cam locks(B) clockwise to tighten as shown.

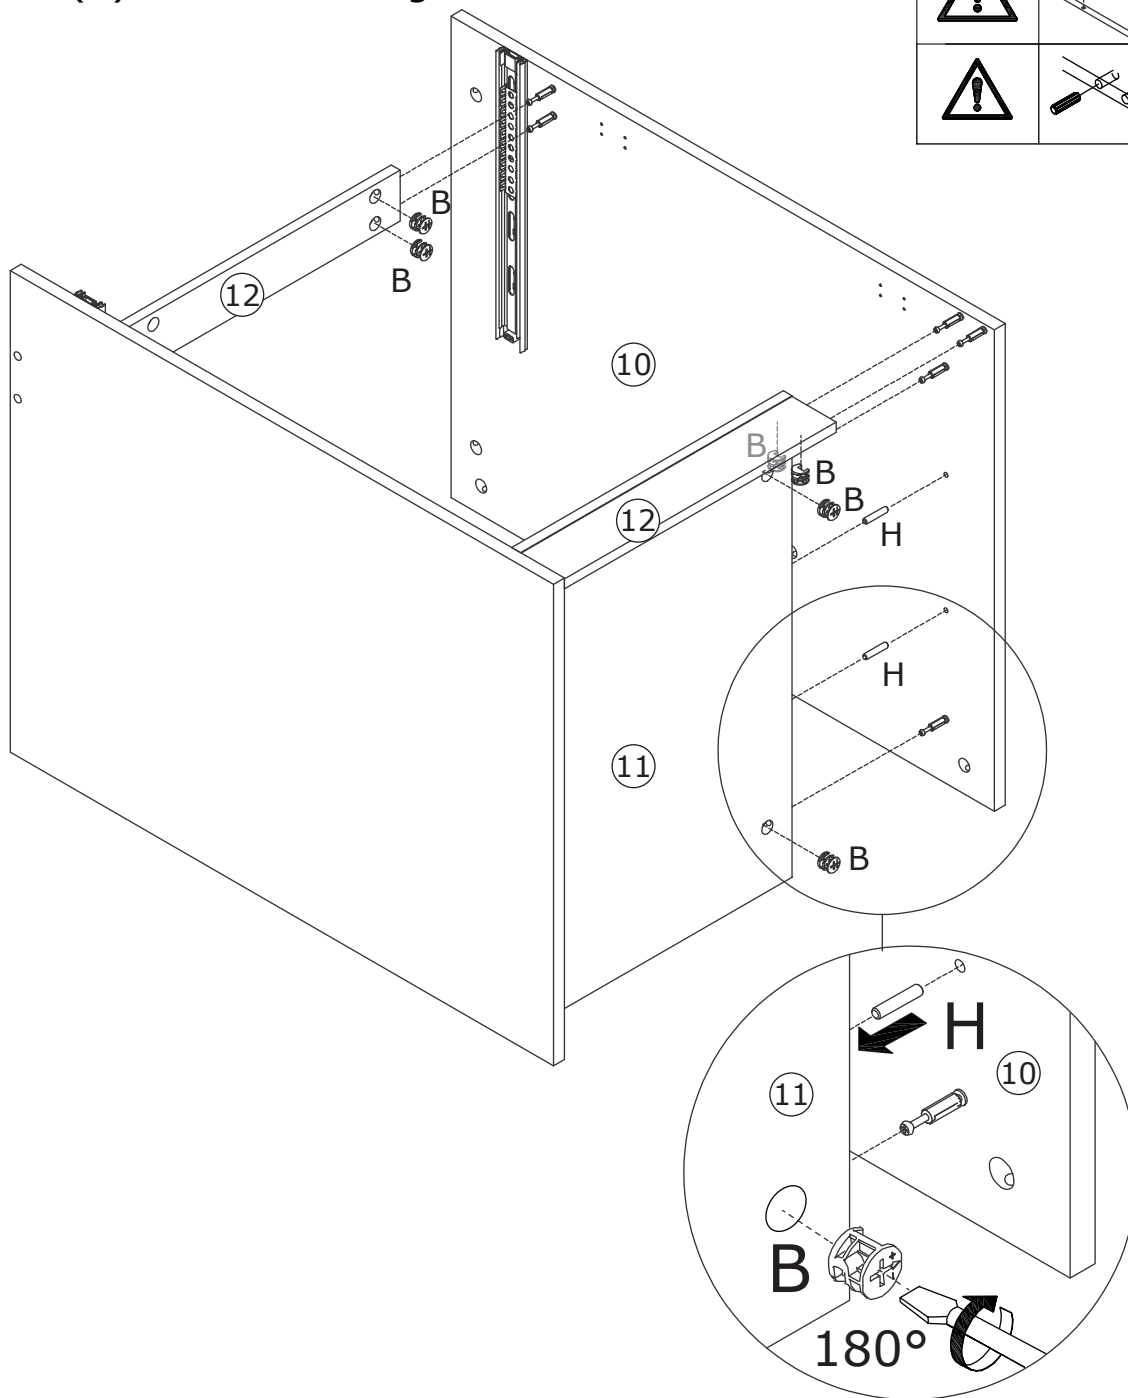
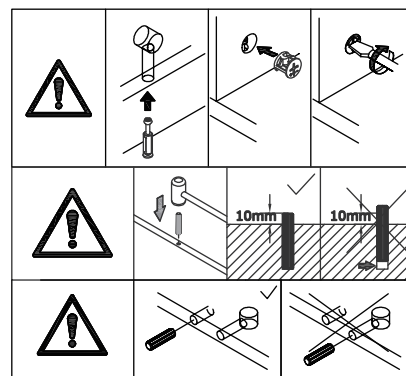


# 13

 A x 6  
M5 x 42 mm



  Insert quickfit screw(A) into plate 13 with a screwdriver as shown.

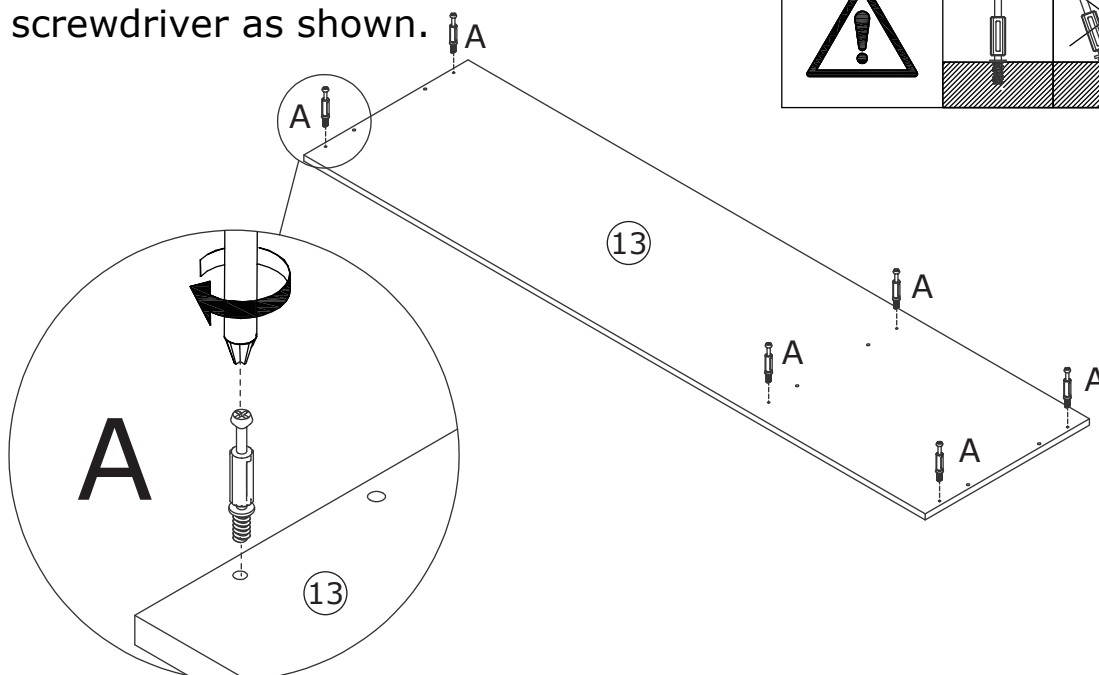
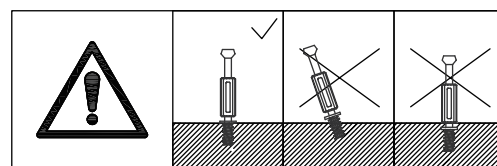


# 14



A x 6  
M5 x 42 mm



  
Insert quickfit screw(A) into plate 14 with a screwdriver as shown.

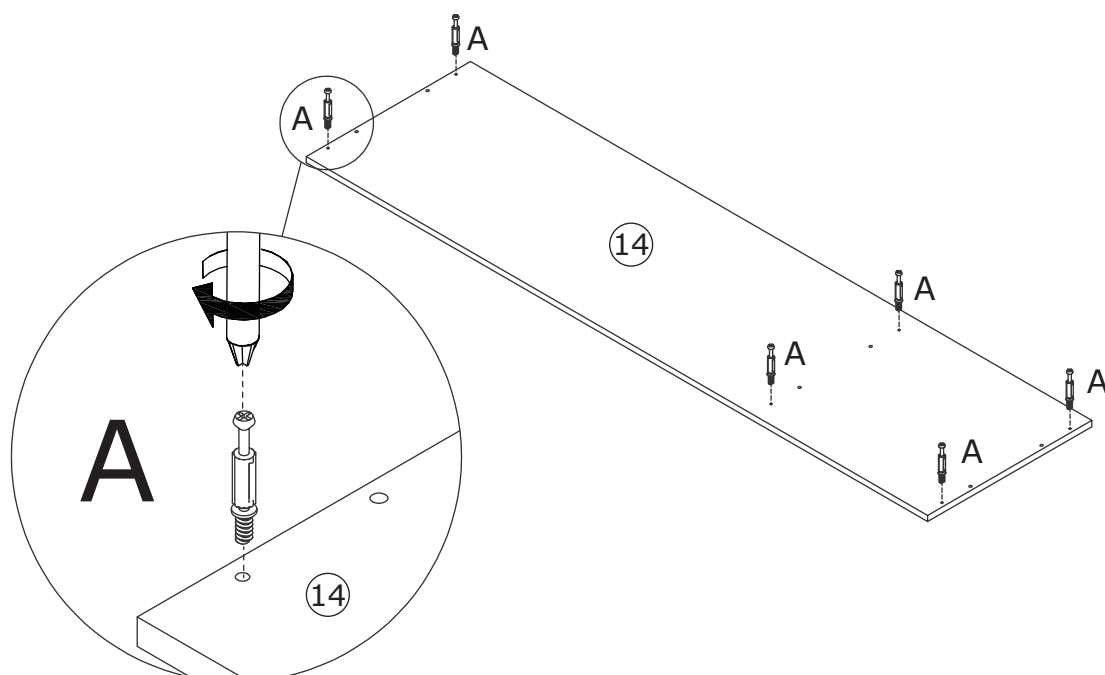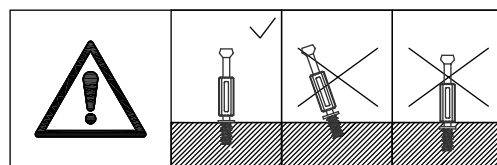





# 15

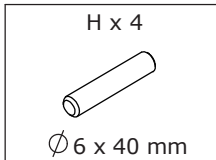  


 
Connect plate 13 and 14 with wooden dowel(H) as shown.

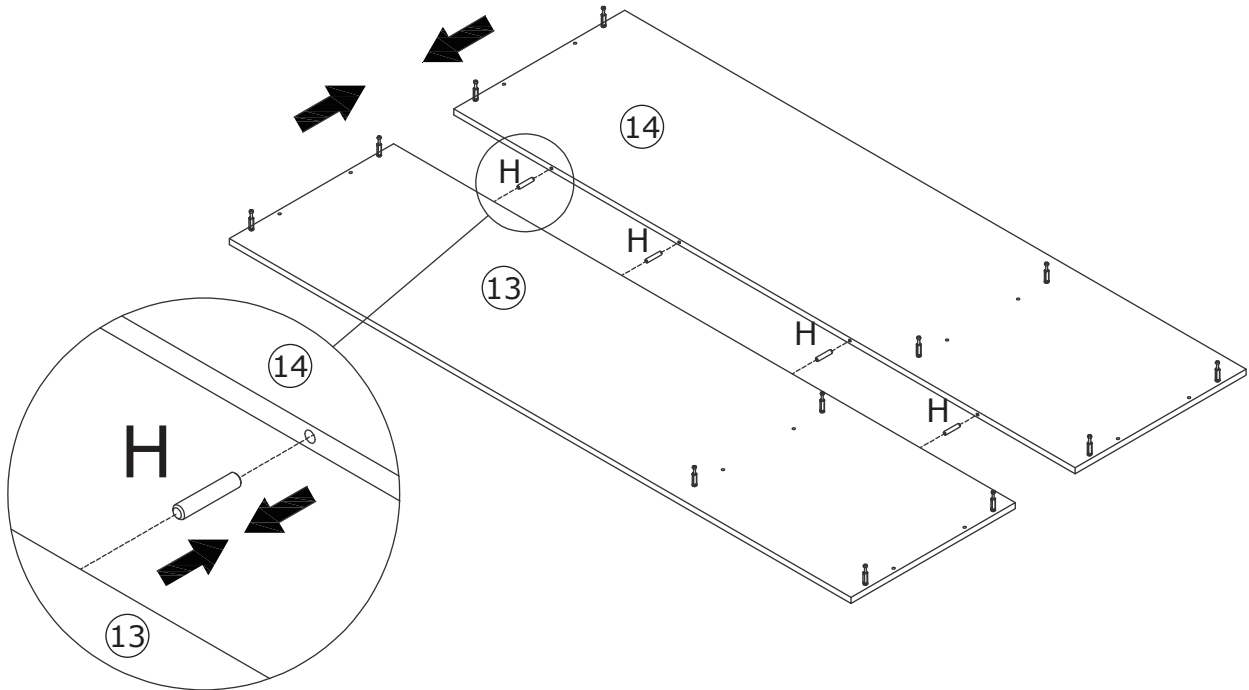

# 16

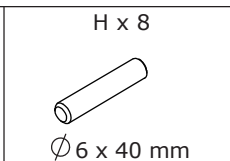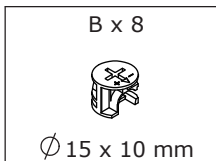    

  Attach plate 13,14 to plate 9,10 with wooden dowel(H) and turn cam locks(B) clockwise to tighten as shown.

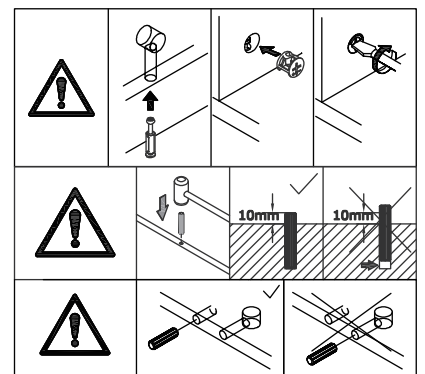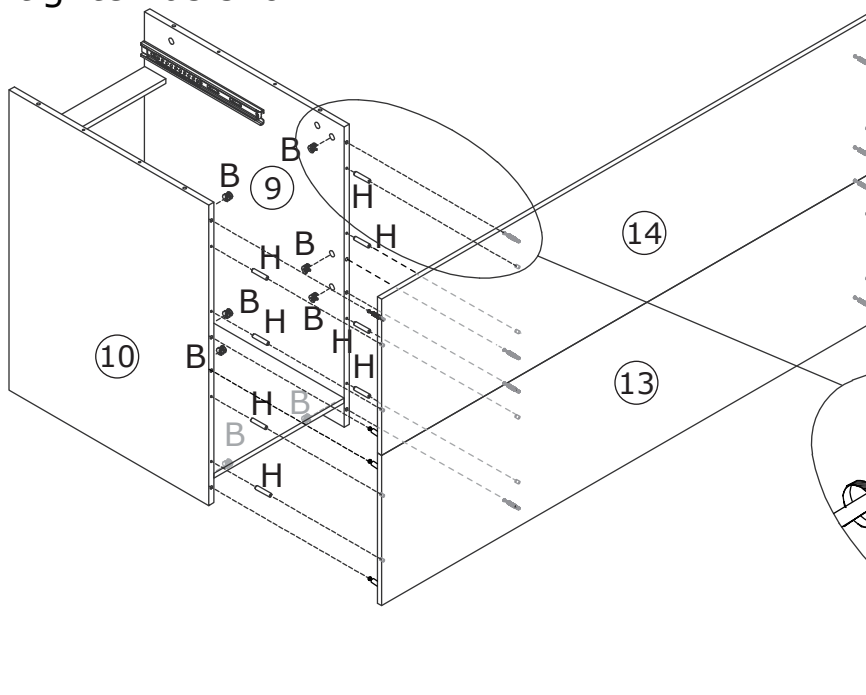

# 17

B x 4

 


Ø 15 x 10 mm



H x 4



Ø 6 x 40 mm



  Attach plate 8 to plate 13,14 with wooden dowel(H) and turn cam locks(B) clockwise to tighten as shown.

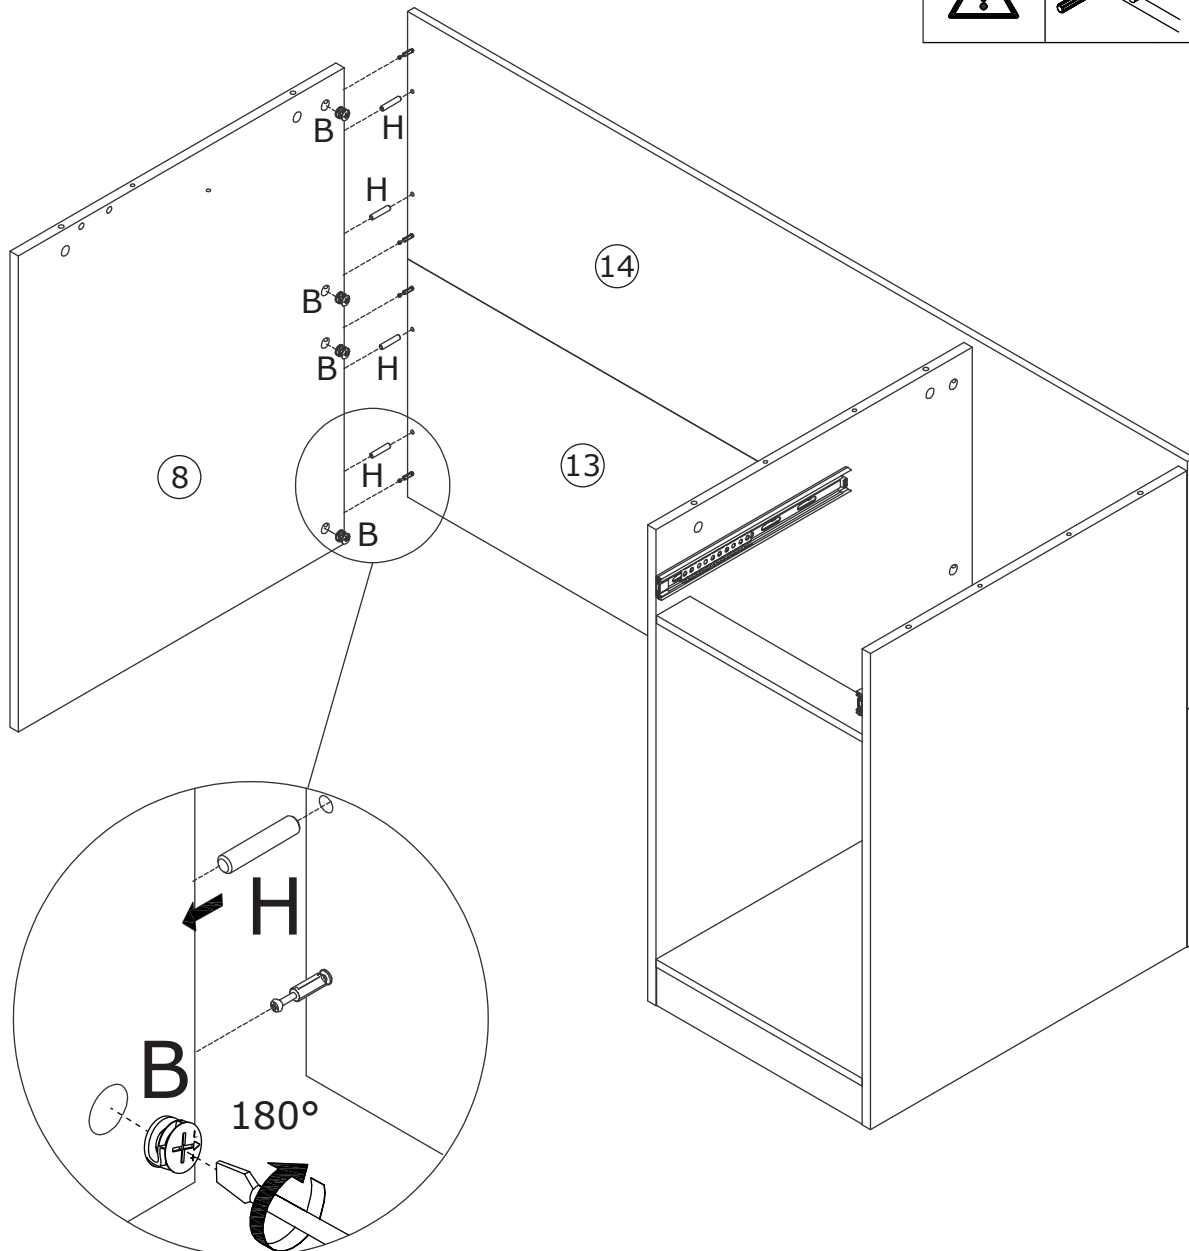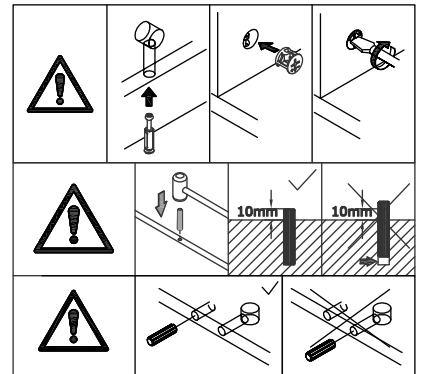


# 18


E x 4



 
M6 x 12 mm

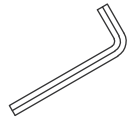

 Connect plate 8 and 9 with iron tube 21 using screw(E) as shown.


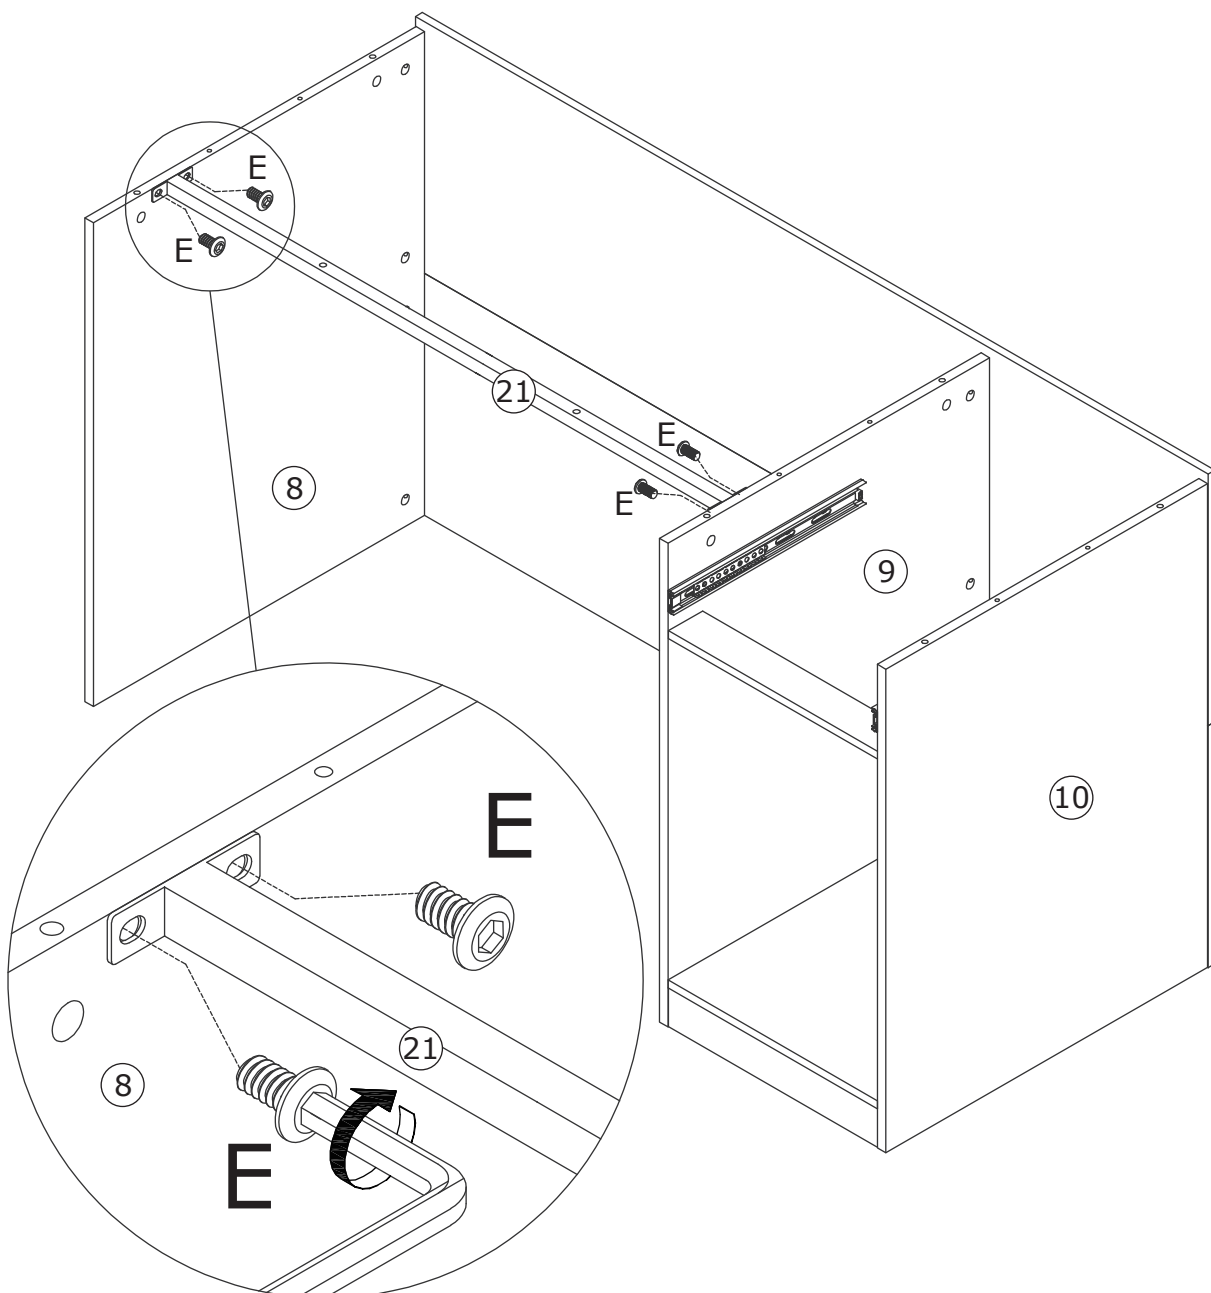


# 19

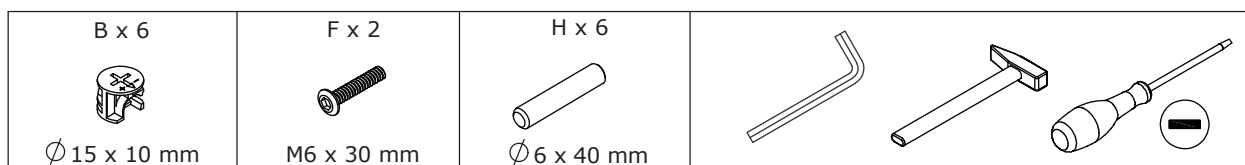 

Attach plate 7 to plate 8,9,10 with wooden dowel(H) and turn cam locks(B) clockwise to tighten as shown.

  Fix iron tube 21 to plate 7 with screw(F) as shown.

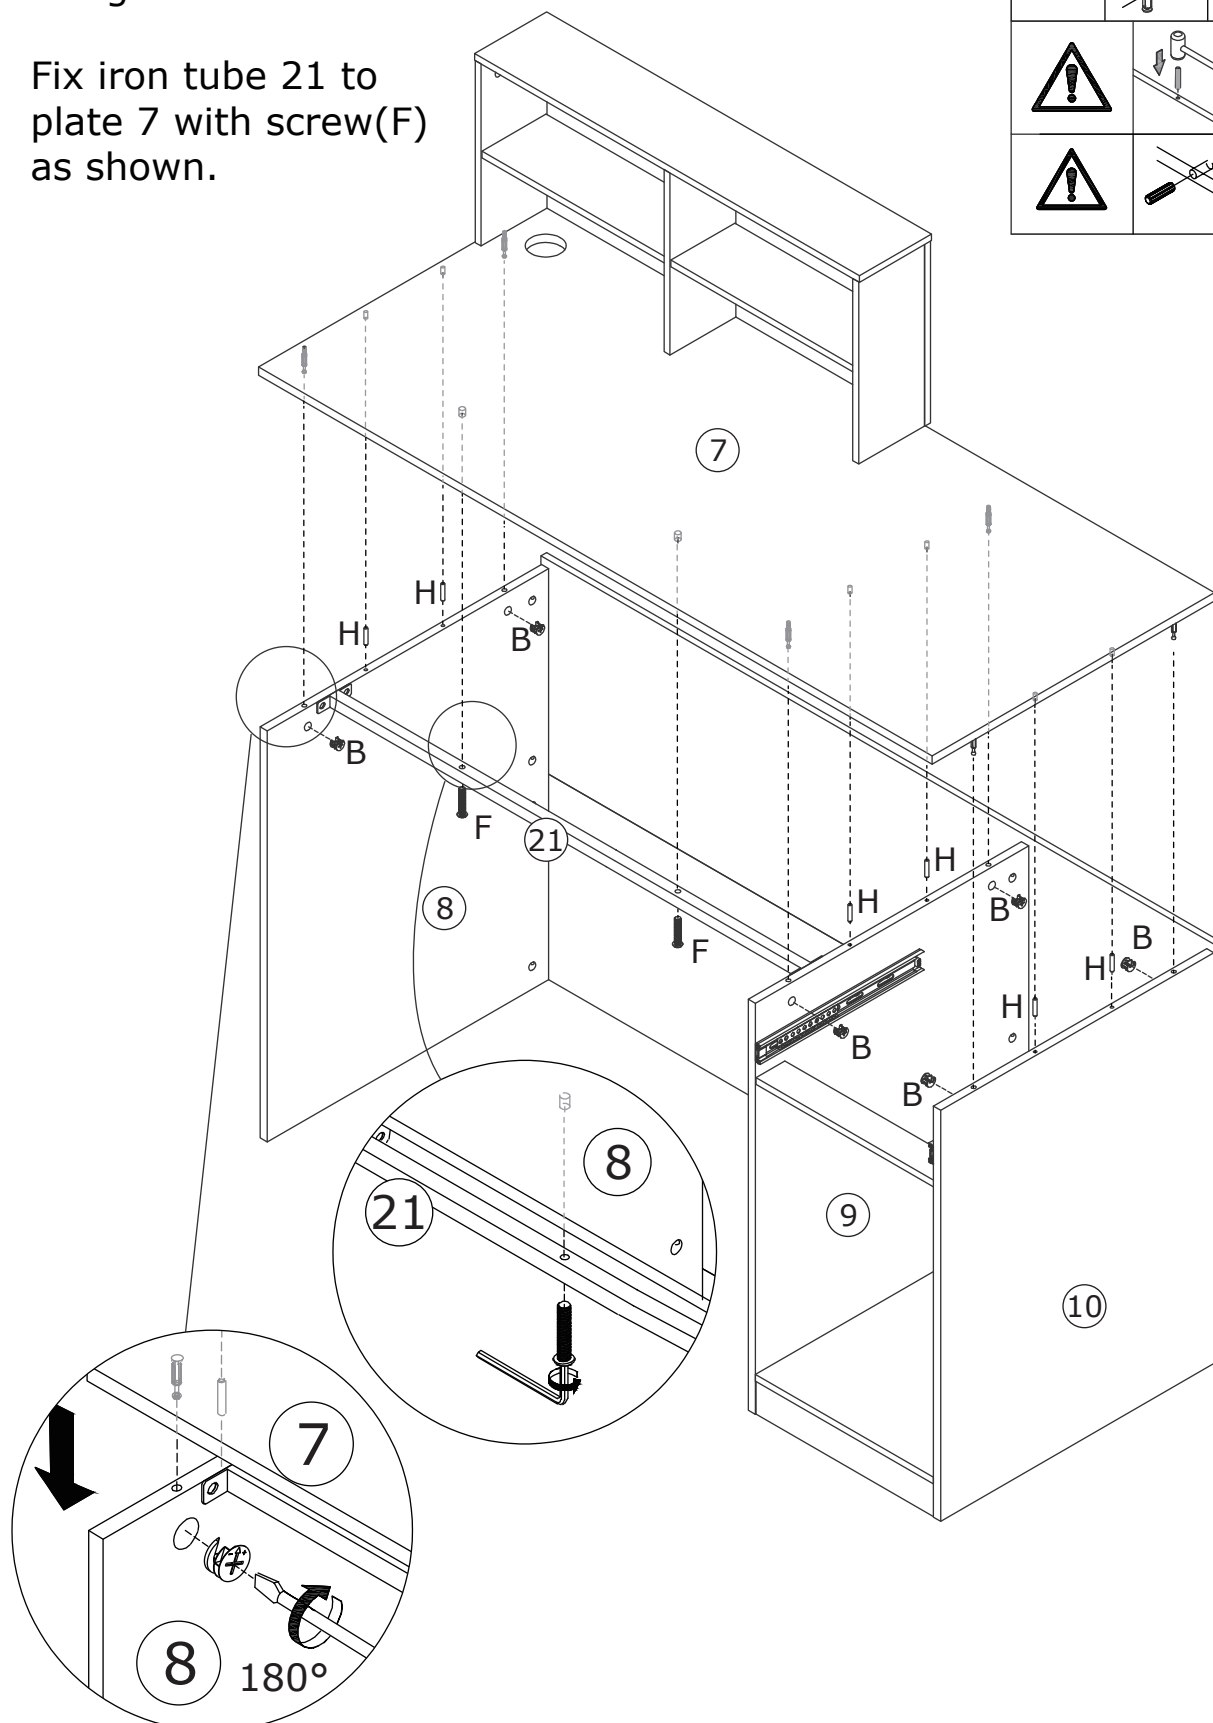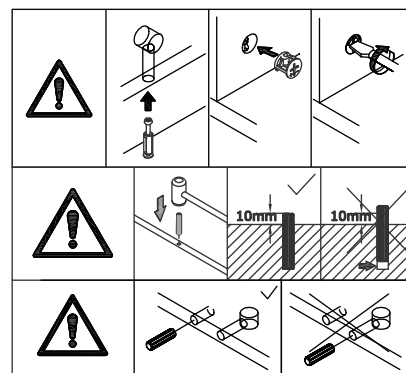



# 20

C x 4



 
M3.5 x 12 mm

J x 2




M4 x 18 mm






K x 1



L x 1 SET

 

     Fix hinge(L) to plate 20 with screw(C),  
fix handle(K) to plate 20 with screw(J)  
as shown.

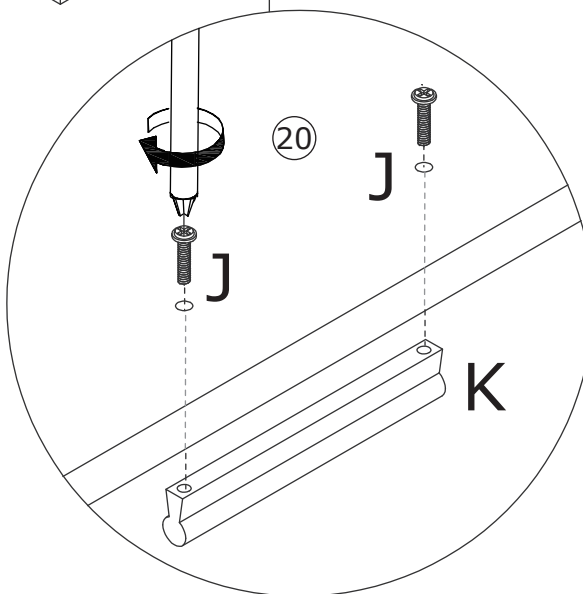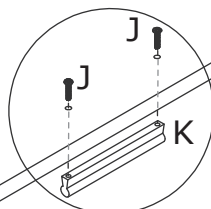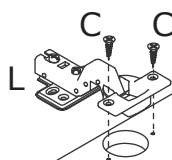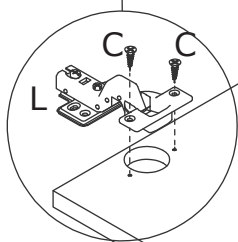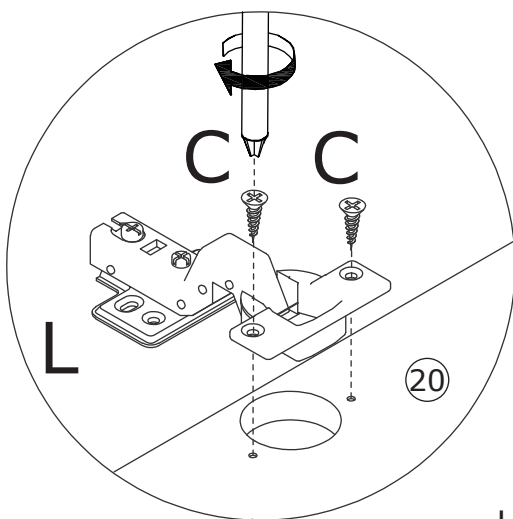


# 21


C x 8















 
M3.5 x 12 mm



 Attach plate 20 to 10 by fixing hinge with screw(C) as shown.

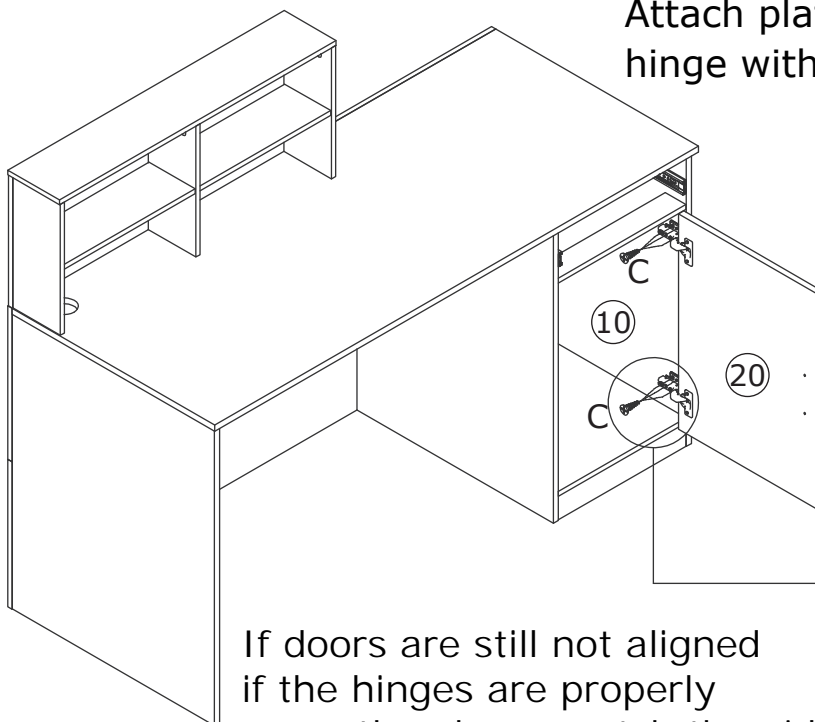

             If doors are still not aligned if the hinges are properly correctly, please watch the video.  
<https://youtu.be/nOLb36SoODM>

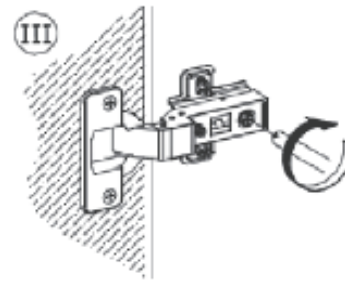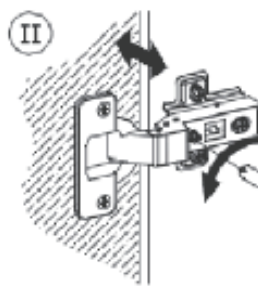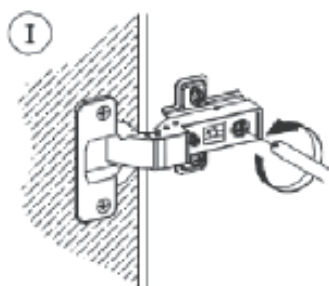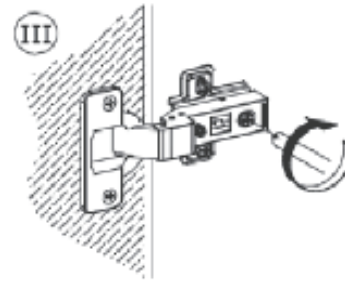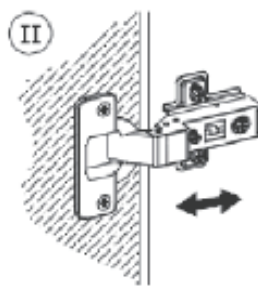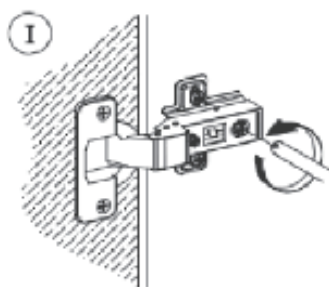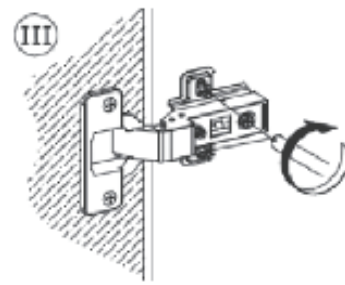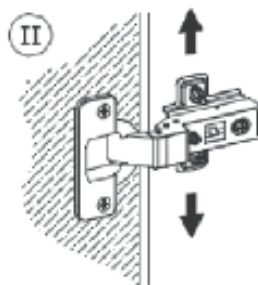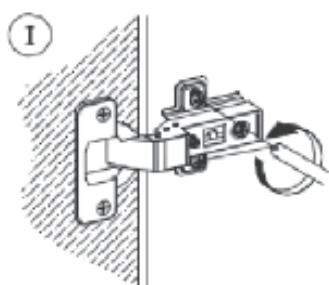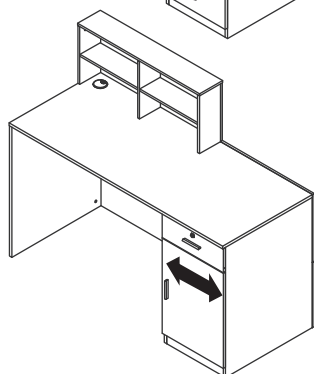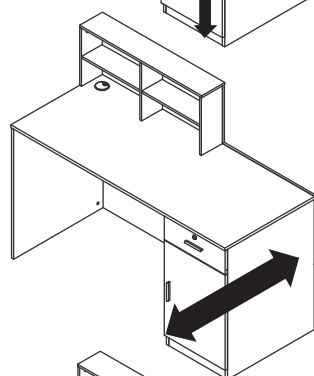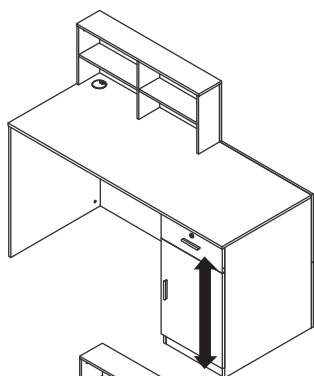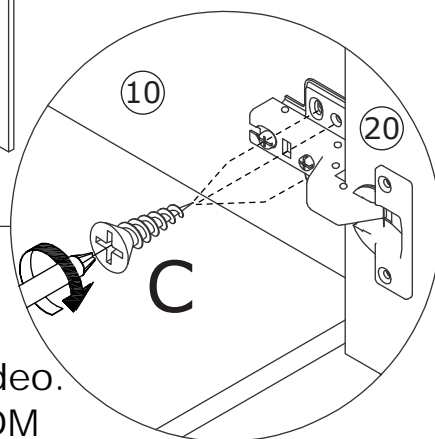



# 22

G x 4




M3 x 18 mm

  M x 1




 Fix part(M) to plate 15 with screw(G) as shown.

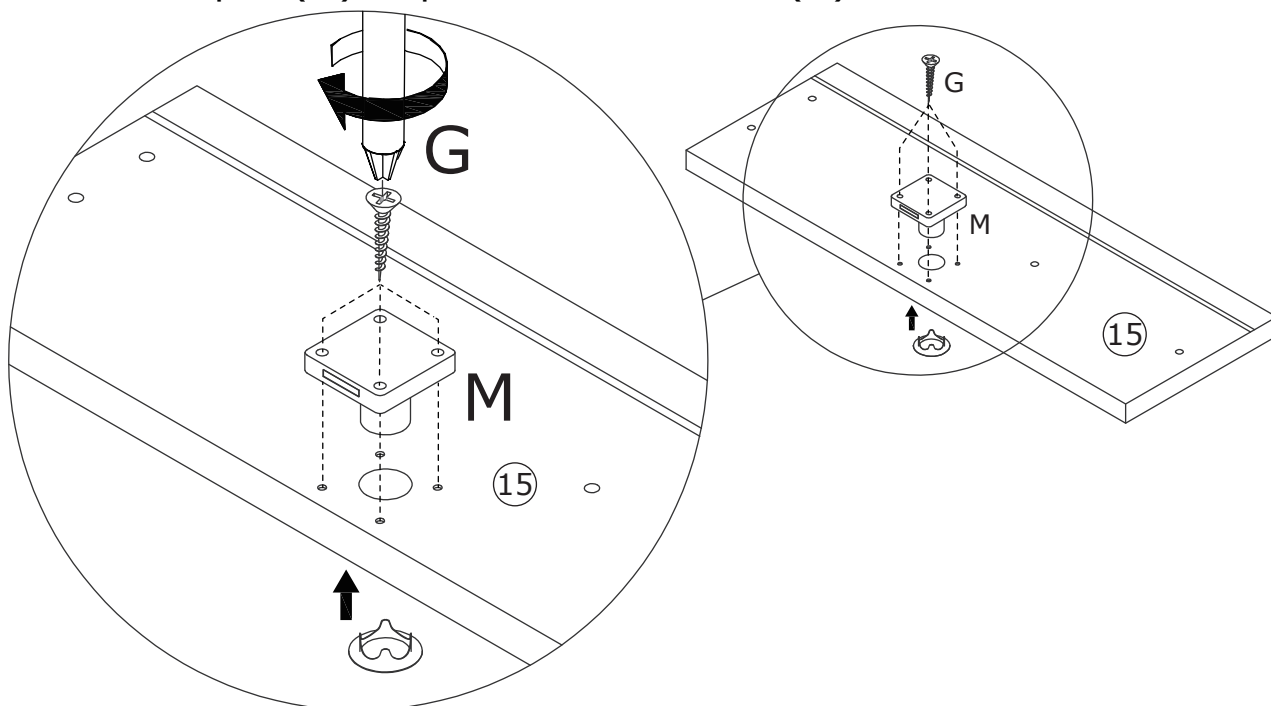

# 23

 A x 4





M5 x 42 mm

J x 2




M4 x 18 mm

  
K x 1



 Insert quickfit screw(A) into plate 15 with a screwdriver as shown.

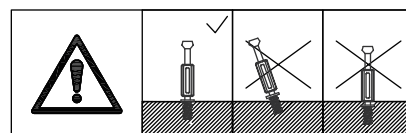

 Fix handle(K) to plate 15 with screw(J) as shown.

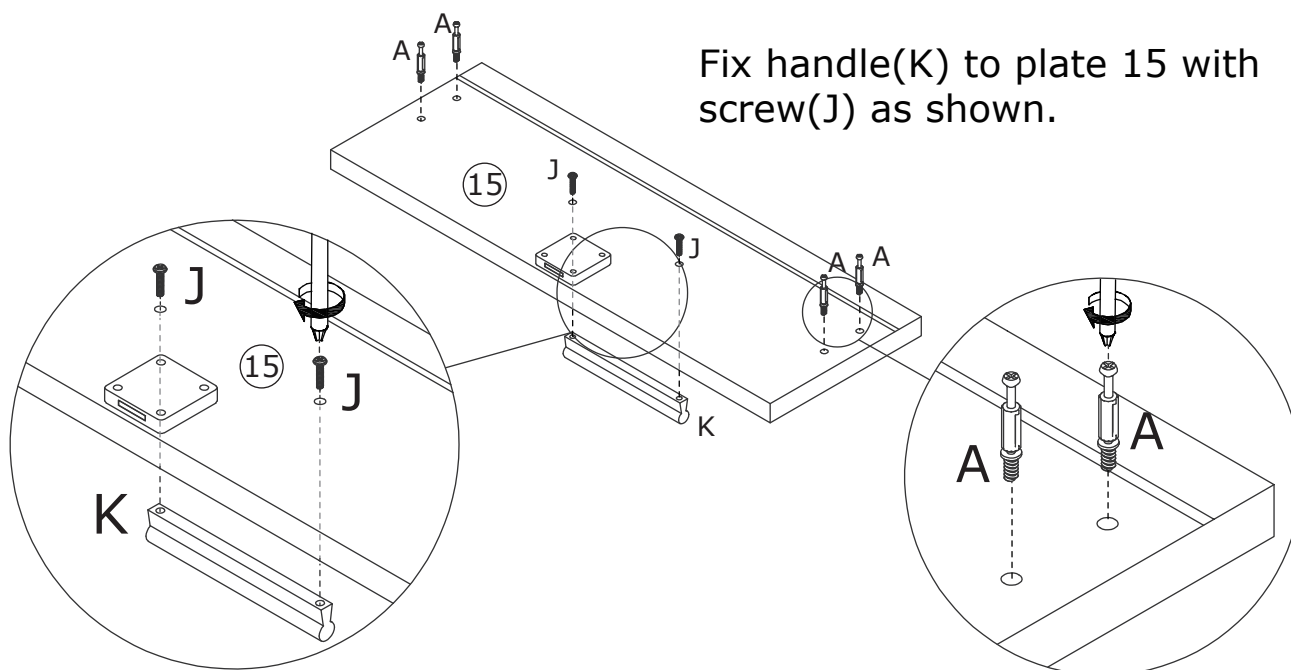


# 24



B x 4



 Ø 15 x 10 mm




  Attach plate 16,17 to plate 15 and turn cam locks(B) clockwise to tighten as shown.

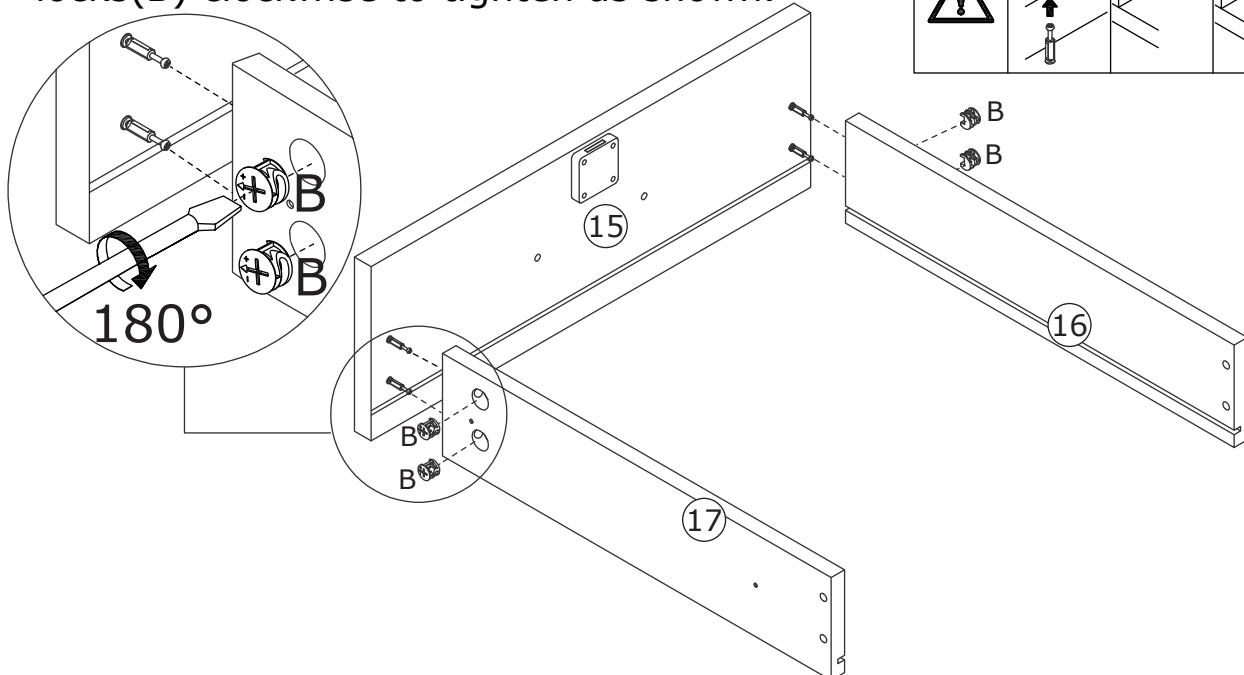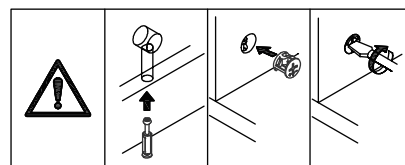


# 25

 Slide plate 19 into available slots as shown.


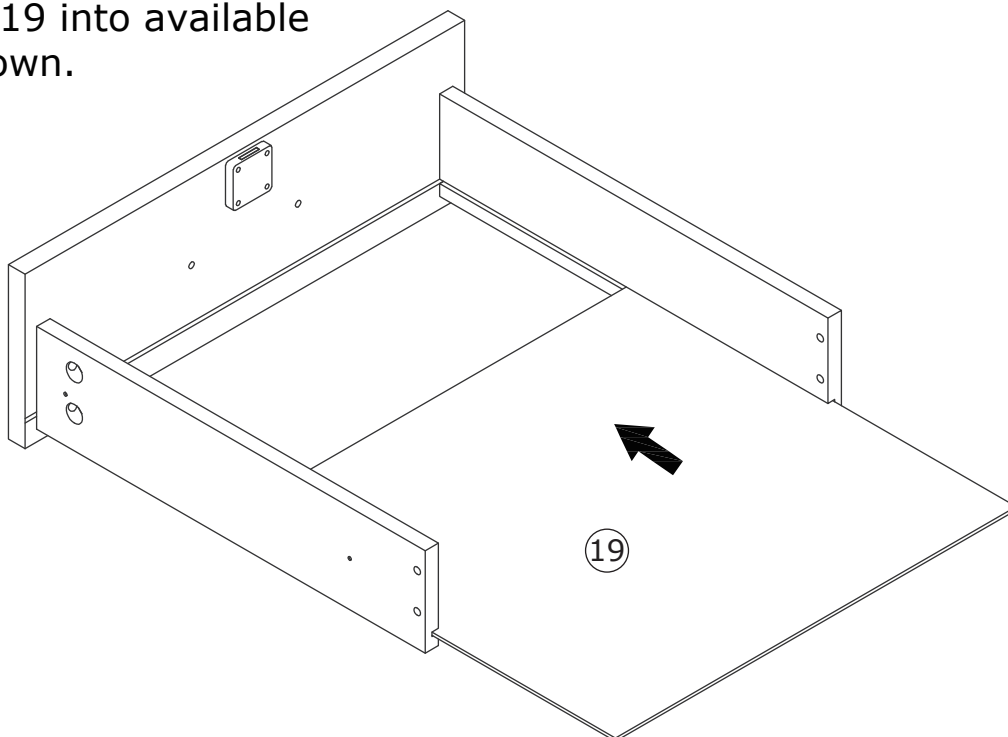


# 26

 D x 4  
M5 x 40 mm



  Attach plate 18 to plate 16,17 with screw(D) as shown.

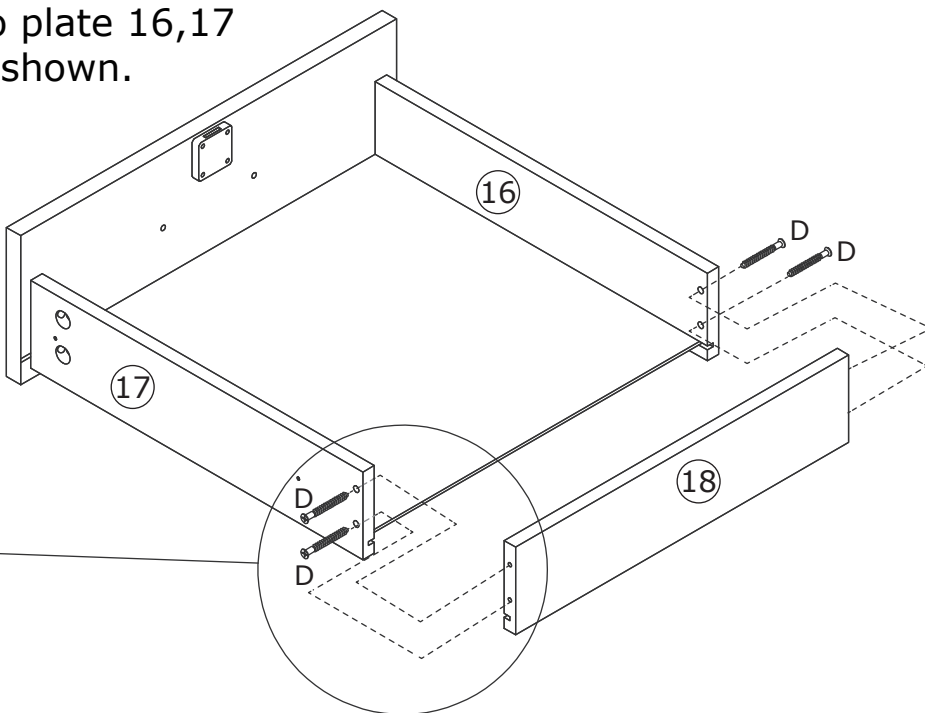
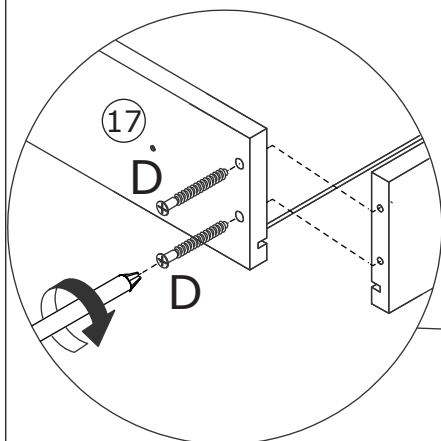


# 27

C x 4  
M3.5 x 12 mm



  Fix runner 22 to plate 16,17 with screw(C) as shown.

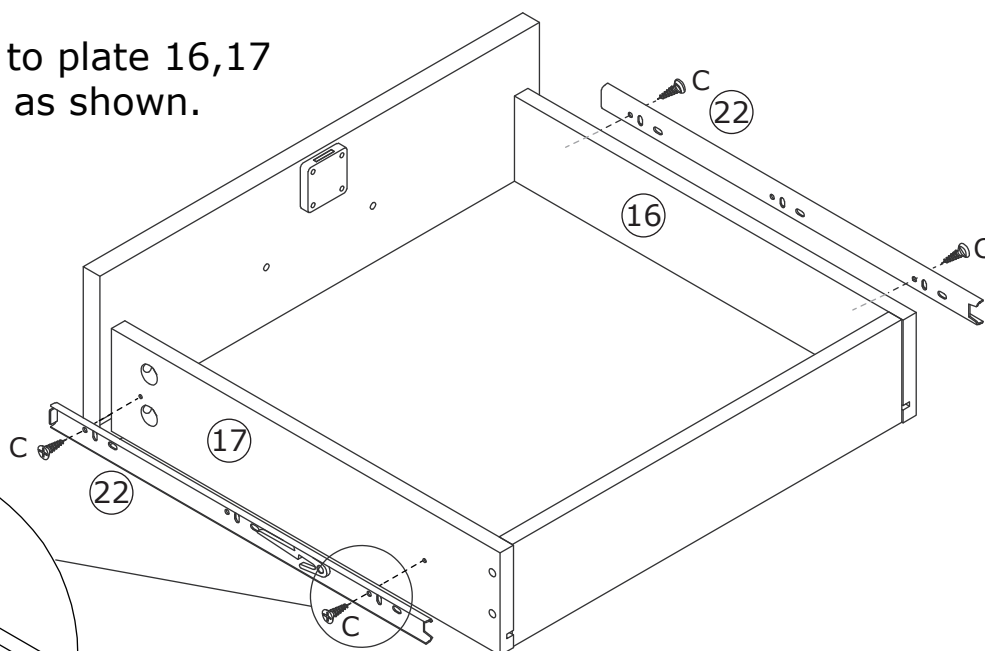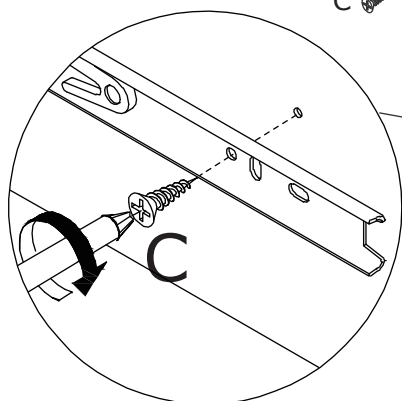


# 28

I x 1



 Ø 60

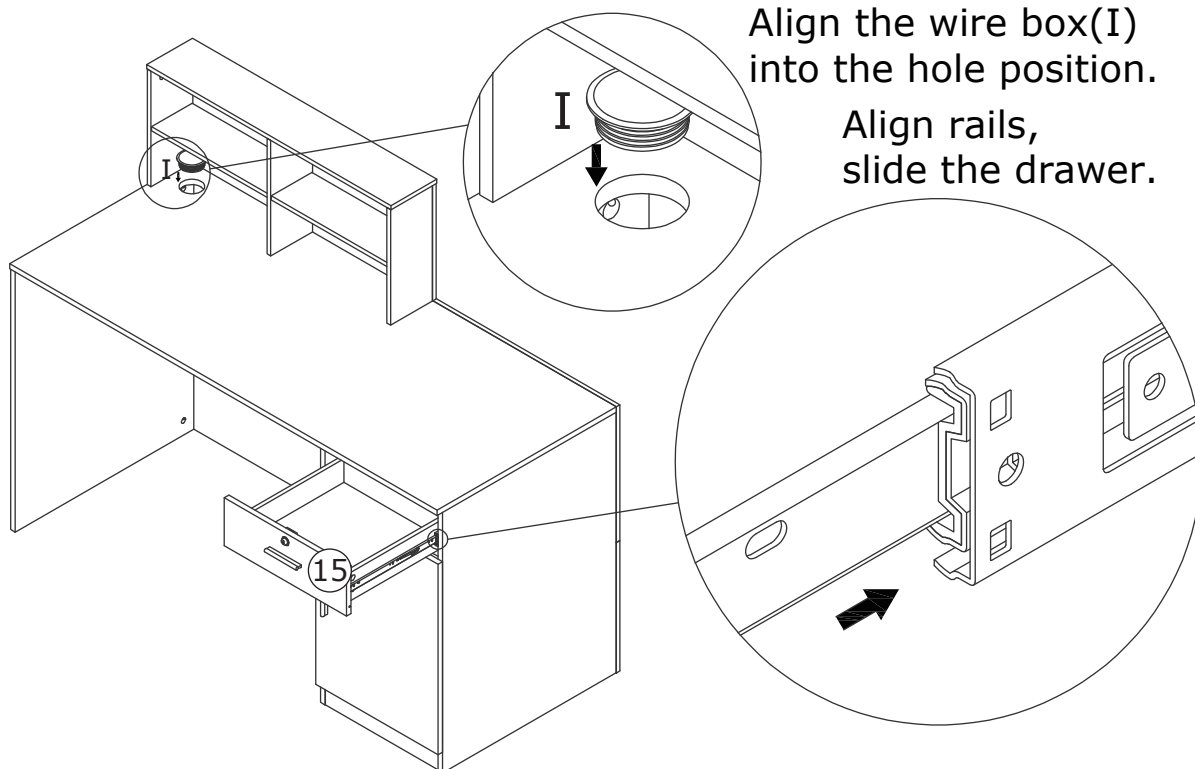


# 29

N x 8



 Cover cam locks(B) using sticker(N) as shown.

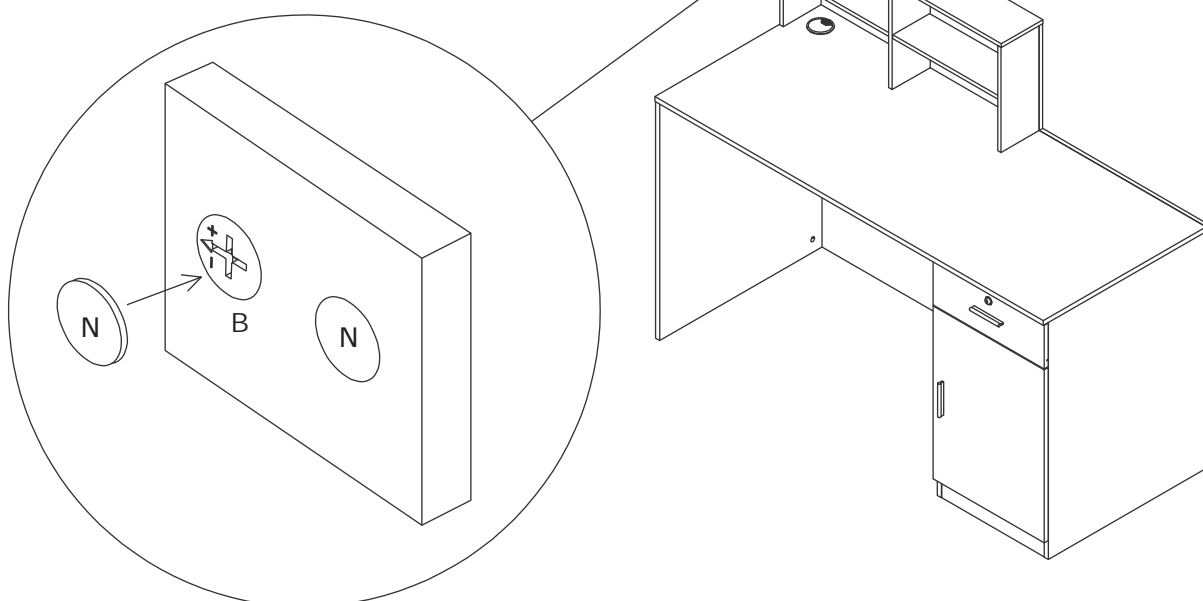

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.