

OVENTE®

DELUXE MILK FROTHER

WITH HEATING FUNCTION

FR4810 SERIES



Before use, please read this manual thoroughly and save for future reference.

ovente.com

DELUXE MILK FROTHER

WITH HEATING FUNCTION

FR4810 SERIES



Available in two elegant finishes: BLACK, BRUSHED, and CHROME

DELUXE MILK FROTHER WITH HEATING FUNCTION

FR4810 SERIES

TABLE OF CONTENTS

IMPORTANT SAFETY	• • • • • • • • • • •	4
PARTS AND FEATURES	• • • • • • • • • • •	6
USING THE MILK FROTHER	• • • • • • • • • • •	8
CARE AND MAINTENANCE	• • • • • • • • • • •	10



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages.

- ❗ Read all instructions carefully before using the appliance.
- ❗ Before connecting the appliance, check if the voltage indicated at the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- ❗ DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. If the mains cord is damaged, contact your service provider immediately.
- ❗ To protect against electrical hazards, DO NOT immerse cord, plugs, or the appliance itself in the water or other liquid.
- ❗ DO NOT let cord hang over the edge of a table or counter, and do not let it touch hot surfaces.
- ❗ Regularly check the main cord if it is still in good and safe condition.
- ❗ To avoid circuit overload, do not operate another high voltage appliance on the same circuit.
- ❗ Turn the switch OFF before connecting or disconnecting plug from power outlet.
- ❗ Using an extension cable is not recommended.
- ❗ Unplug from the power outlet when not in use and before cleaning.
- ❗ Appliance should always be used on a dry and level surface.
- ❗ Do not place the appliance on or near a hot gas or electric burner.
- ❗ Close supervision is necessary when the appliance is used and near children.
- ❗ This appliance is not intended to be used by persons (including children) with reduced physical, sensory and mental capabilities. This appliance is not for persons with lack of experience and knowledge, unless they have


been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.

- ❗ Do not operate without milk in the carafe.
- ❗ Do not fill milk over the filling capacity, as the carafe may overflow.
- ❗ Do not insert any objects and/or fingers in the openings of the appliance.
- ❗ The carafe is not suitable for refrigerator, freezer and dishwasher.
- ❗ After heating or frothing, allow the frother to rest for 2 minutes before using it again. To shorten this time, rinse with water then wipe dry.
- ❗ DO NOT leave unit unattended while in use.
- ❗ Do not use outdoors or for purposes other than intended use.

- ❗ The device is not intended to be operated with an external timer or separate remote control system.
- ❗ **DANGER: NEVER TOUCH MOVING OR ROTATING PARTS. RISK OF INJURY!**




PARTS AND FEATURES

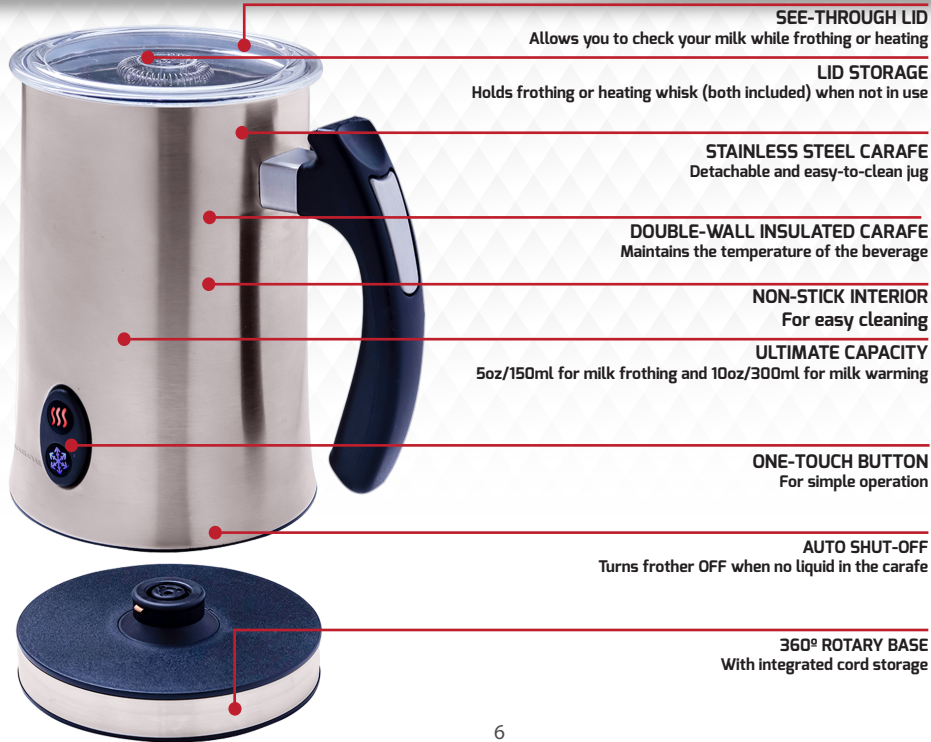

DELUXE MILK FROTHER WITH HEATING FUNCTION

FR3608 SERIES

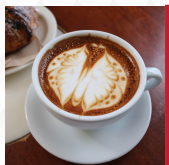

HOT OR COLD LATTE

Pour hot or cold milk froth over espresso to create a treat to warm you up or cool you down.



DRY MILK / BABY FORMULA

Combine dry milk or baby formula with water and blend/warm it using your milk frother.



CAPPUCCINO

Combine equal portions of espresso, steamed milk, and hot milk foam for a decadent tasting experience.



HOT CHOCOLATE

Add some smooth milk froth to a holiday hot chocolate, creating a delicious treat you can enjoy with friends and family.



USING THE MILK FROTHER

Whisk	Function	Max capacity	Time
	Frothing	5oz/150ml	120s
	Frothing & Heating	5oz/150ml	70-120s
	Heating (a small amount of froth)	10oz/300ml	140-190s

- The milk frother comes with two different whisks. One is for frothing, and the other one is for heating. Choose the appropriate whisk for your beverage.



FROTHING



HEATING

- Set the frothing or heating whisk inside the carafe.




- Pour the milk into the carafe according to the minimum or maximum markings inside the jar (50z/150ml for frothing and 100z/300ml for heating).



- Put the lid on the top of the frother. Make sure that it is tightly closed.

- Press the desired button.

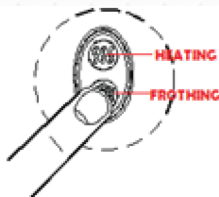

- To start frothing/frothing and heating, press the frothing button. Its indicator light will illuminate during the process, and will start to blink for 30 seconds when the milk is ready.
- To start heating, press the heating button. Its indicator light will illuminate during the process, and will start to blink for 30 seconds when the milk is ready.
- Unplug the milk frother from the power outlet immediately after use.



MILK FROTHER TIPS

- Always froth or heat your milk first when preparing a drink. While it is operating, prepare your coffee, hot milk, or hot chocolate, and serve immediately.
- You can froth cold milk with this frother without heating it, but you cannot cool down milk in the frother. Without the heating function, the frother will maintain the milk's temperature.
- Keep the whisks in a safe place, and out of reach of children. They are small and can be lost easily.
- The frother is designed to heat and froth milk. If you add flavorings, coffee granules or hot chocolate powder in the frother, ensure to thoroughly clean all parts immediately after use.



CARE & MAINTENANCE

- Always unplug the frother from the power outlet, and remove the carafe from the base before cleaning.
- Never immerse the carafe or the base in the water.
- Do not wash the whisks or any part of the milk frother in the dishwasher.
- Clean the non-stick interior of the carafe after each use. To clean, flush and clean the interior by using warm, soapy water, then dry with a soft cloth (cloth not included).
- To clean the lid, wash with warm and soapy water.
- To clean the exterior of the carafe, clean with a soft cloth only (cloth not included).
- Never use sharp cleaning agents, metal objects or a metal brush on the milk frother. Abrasive cleaners will scratch the non-stick interior and stainless steel carafe.
- To clean the whisk, remove the whisk from the carafe, then wash with warm water. Dry and store in a safe place, and out of children's reach.



ELECTRICAL REQUIREMENTS

Voltage: 120V

Hertz: 60Hz

Power: 500W



OVENTE WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at ovente.com/register

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fee may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

Customer Support: ovente.com/support

Visit us at ovente.com



Facebook.com/ovente



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



youtube.com/ovente

ovente.com

OVENTE®

Defining Housewares