

Thank you for your purchase!

Ever since we started back in 2011, our mission has been to give YOU the confidence to tackle something new. Whether you're building a deck or just hanging a picture, we'll be there along the way. We stand behind every product, which is why they come with a full 3-year warranty. Our contact information is listed below and you can reach out to us any time. From the entire Pink Power family, we wish you all the best on your next project!

Thank you!

Michael Wilson

Need to get in touch?

Register Your Warranty and sign up for free coupons:

Pinkpowerdrill.com/warranty

Questions?

📞 Call or Text Us: 813.304.2224

✉ Email Us: customerservice@pinkpowerdrill.com

Love your items so much that you want to be a Brand Ambassador?

Join the Pink Power Army by sending your request to:
affiliate@pinkpowerdrill.com

Follow us for discounts and fun!



@shoppinkpower

 pinkpowerdrill.com/blog

4-VOLT ELECTRIC SCISSORS

FEATURES:

- ❶ **Style O scissor head for soft, flexible materials. This blade has a circle in the middle.**
- ❷ **Style D scissor head for hard, rigid materials. This blade has a half circle in the middle.**
- ❸ **Blade release button (one on each side)**
- ❹ **Blade safety button**
- ❺ **ON/OFF switch.**
- ❻ **External 1500 mAH battery pack.**
- ❼ **Battery release tabs.**



OPERATING INSTRUCTIONS:

CHARGING THE BATTERY PACK

Your scissors come equipped with a 90 minute fast charger. The battery back for this tool has been shipped in a low charge condition to extend battery life. The battery should be fully charged prior to first use. Batteries will not reach full charge the first time they are charged. Please allow several cycles for the battery to reach full charge. Do not charge the battery in areas of extreme heat or cold.



CHARGING INDICATION

Connect the charger base to the DC adapter and plug the adapter into a power source. Place the battery in the charger and the light on the back of the charger will illuminate RED. When the battery is fully charged the light will turn off.



INSERTING & REMOVING THE BATTERY

Once you have removed the battery from the charging base, grasp the battery release tabs and slide into the back of the scissors. You should hear a clicking sound. To remove the battery, grasp the battery release tabs, squeeze and pull away from the tool.



ON/OFF TRIGGER

Before using your scissors for the first time, practice turning them on and off using the ON/OFF switch. To turn on, push the back of the switch FORWARD. To turn your scissors off, push the back of the switch DOWN. Once the switch is turned on, you do not need to continue holding the switch.

