


Assembly instructions


For cast iron frame and teak top

Sika·Design®
HANDMADE FURNITURE

Part list:

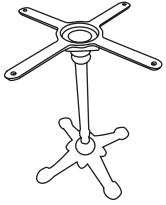

1 x cast iron frame

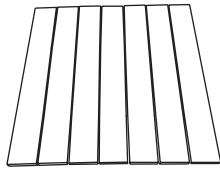

1 x teak table top




4 x washers




4 x screws

Guide:


1. Flip the teak top

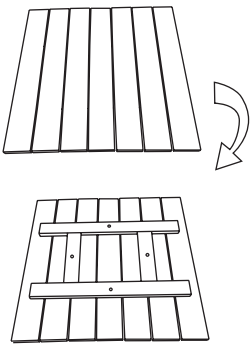

2. Tip cast iron frame and place it on top of the teak

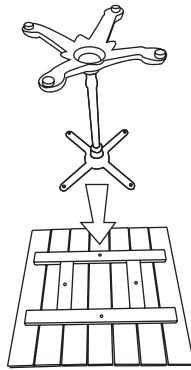

3. DO NOT use the premade holes.
Turn the frame as the illustration below.

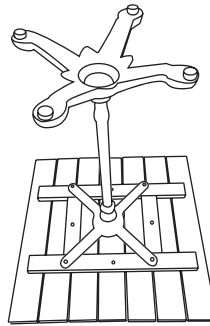

4. Place the washer on top of the hole of the frame, and screw the screw into the teak. Repeat in all four holes. Flip the table

