



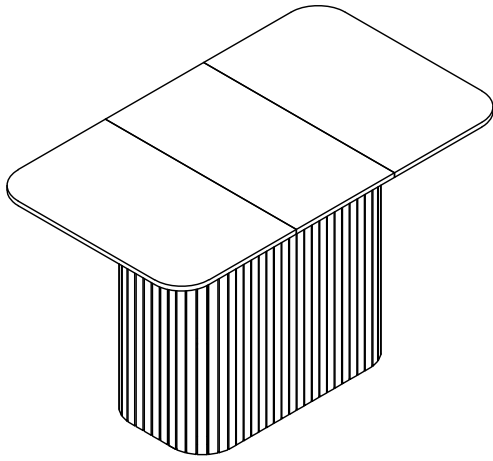


Ax2 	Bx1 	Cx1 	Dx1 	Ex2
Fx4 	Gx16 6x16mm 	Hx14 8x25mm 	Ix12 6x30mm 	Jx16
Kx16 	Lx10 	Mx4 	Nx1 	
SPARE(Ersatzteile)				
Gx1 6x16mm 	Hx1 8x25mm 	Ix1 6x30mm 	Jx1 	Kx1
Lx1 	Ox1 			


Step1

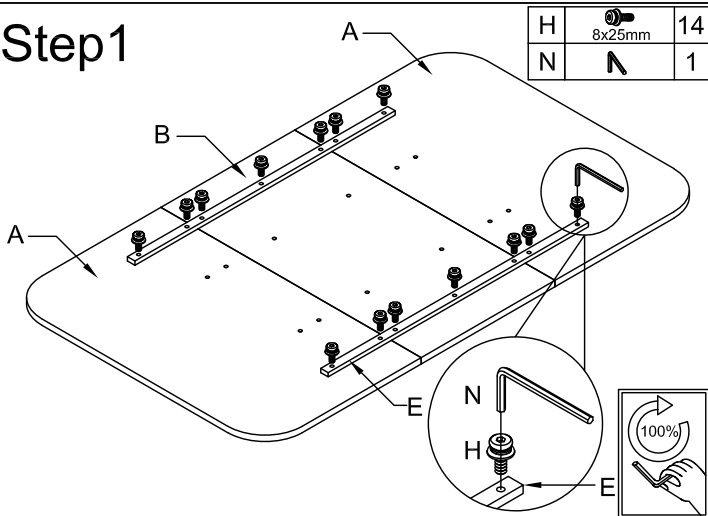


Step2

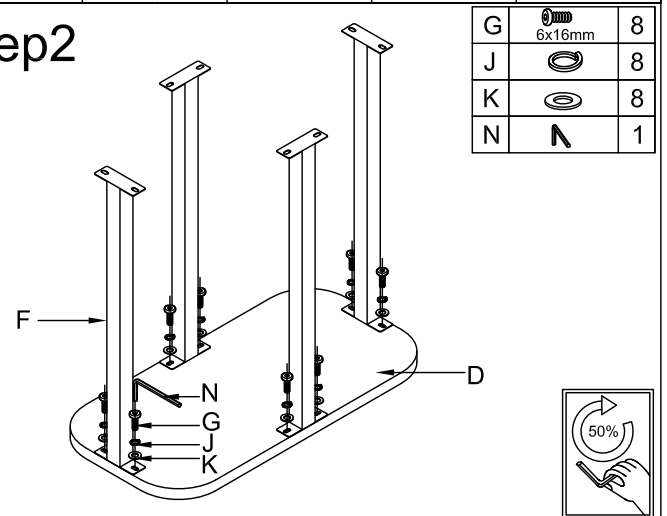


Step3

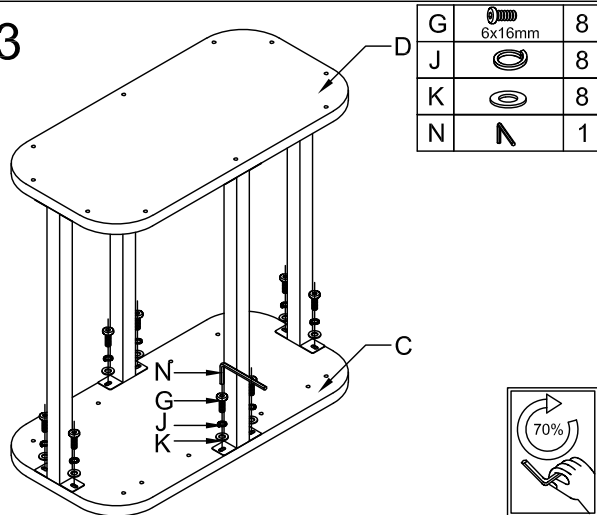

Step4

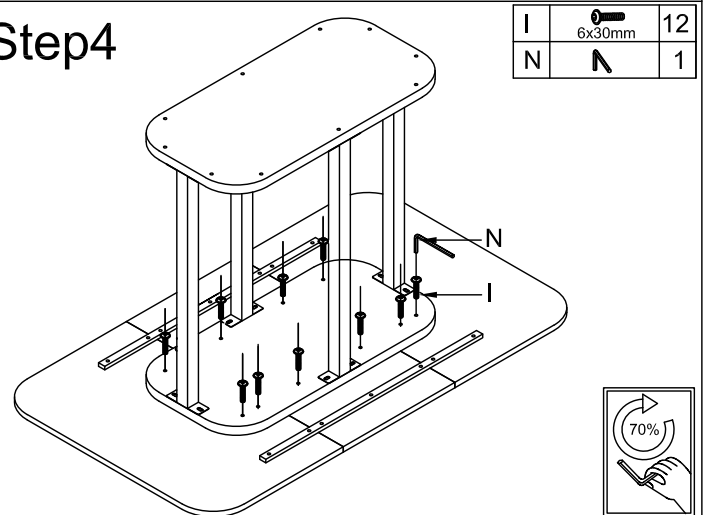

Step5

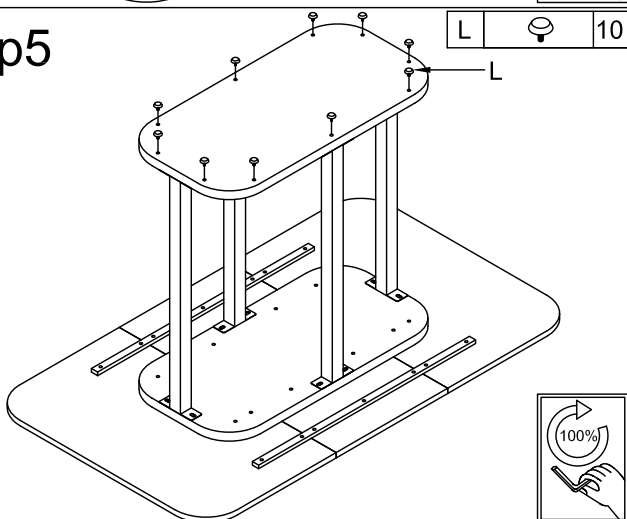

Step6

