 


Instruction Manual

Cabinet	SHX-WYG17030-X-0-S
----------------	---------------------------

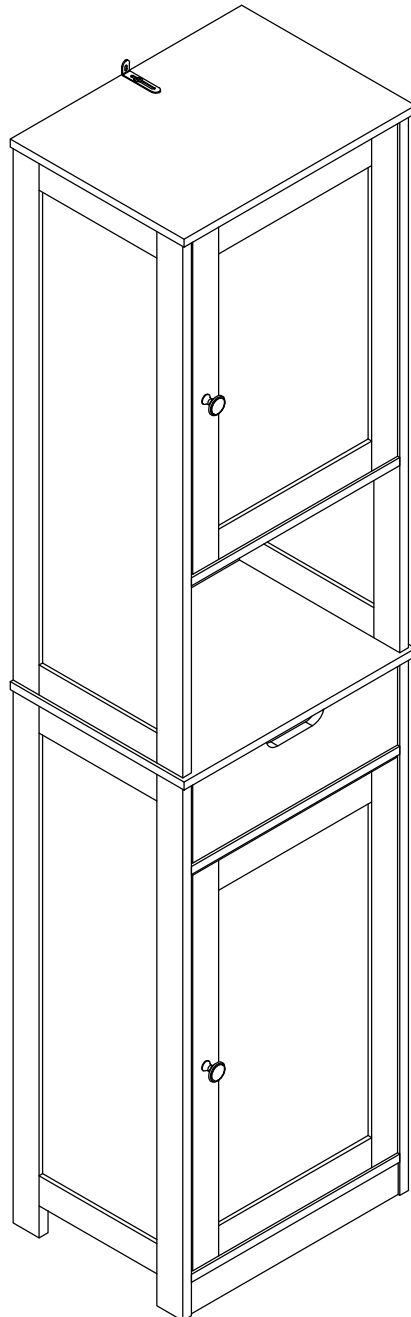

 
Thank you for shopping with us!

If any part is missing, broken upon receipt or you need any help from us.


For the FASTEST SOLUTION, please FIRSTLY CONTACT US at our
after-sales email:

CSsince1987@hotmail. com!

















Power tool is recommended for the assembly.

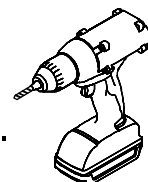







ASSEMBLY OVERVIEW

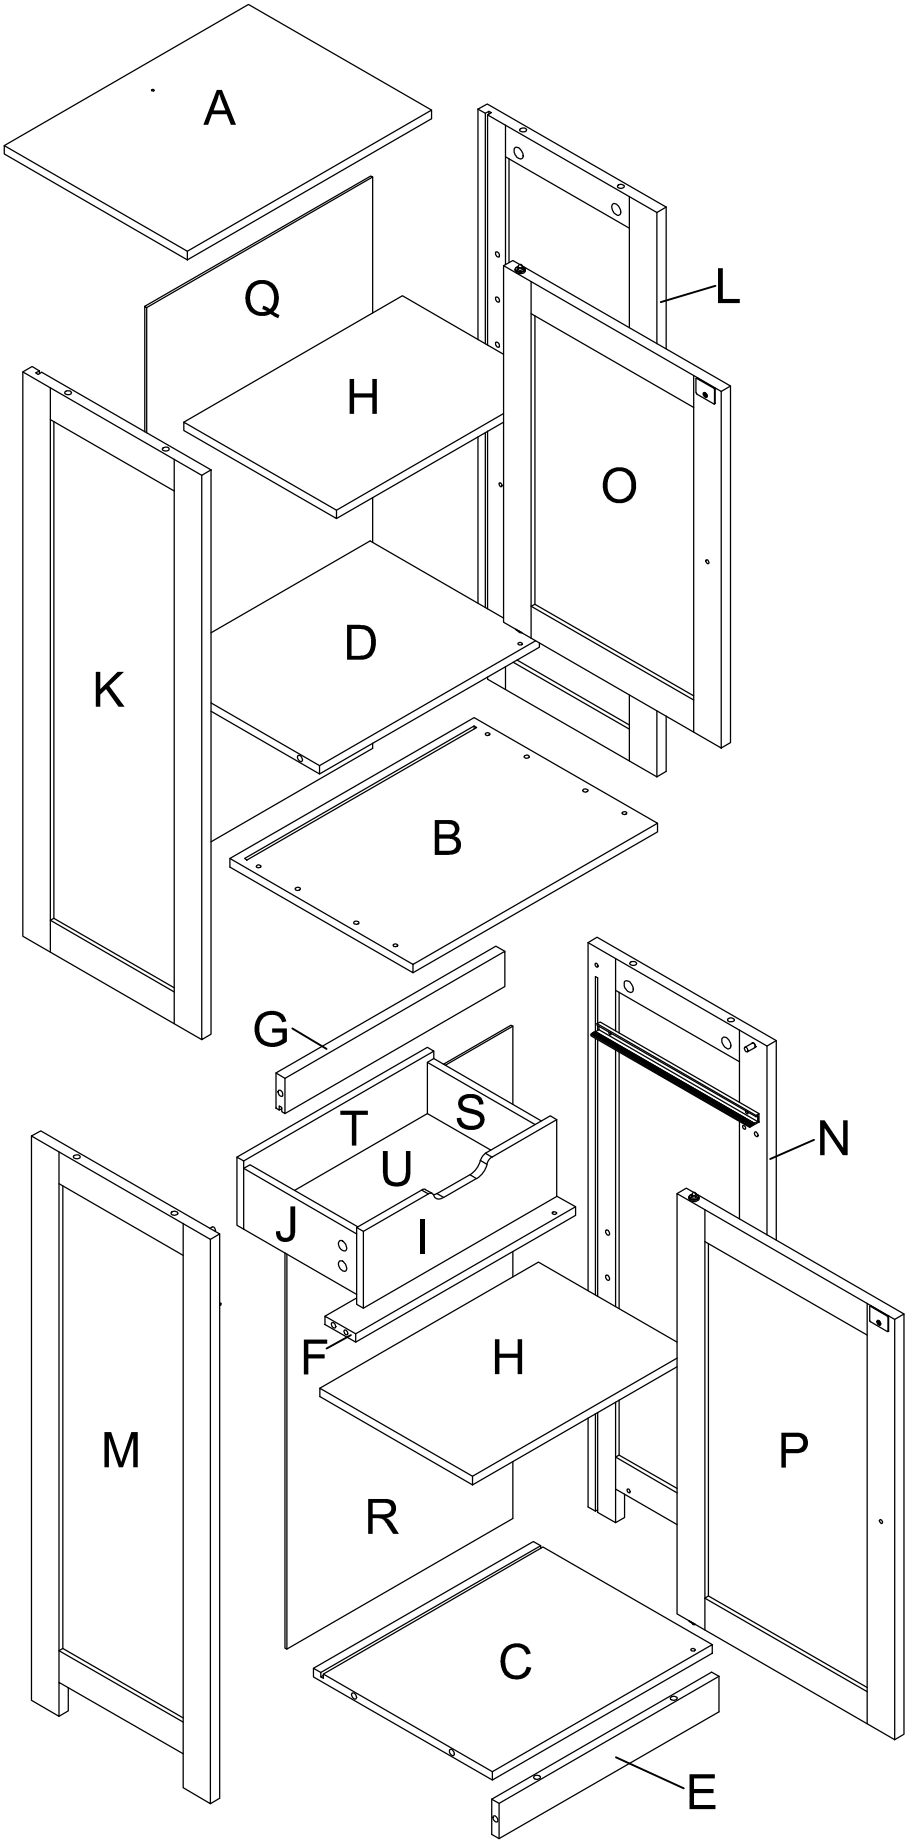 


PART LIST

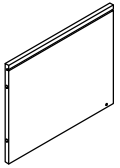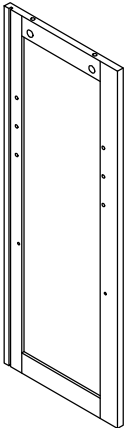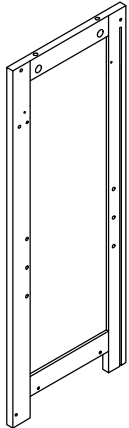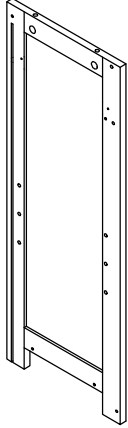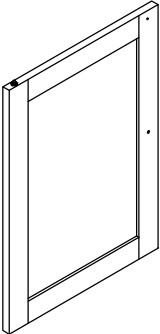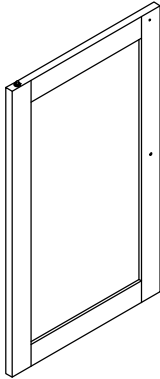                A 	B 	C 	D 	E 
Upper Cabinet Top Panel 1 PC	Upper Cabinet Bottom Panel 1 PC	Below Cabinet Bottom Panel 1 PC	Upper Cabinet Fixed Shelf Panel 1 PC	Below Cabinet Front Foot Board 1 PC
F 	G 	H 	I 	J 
Below Cabinet Front Rail 1 PC	Below Cabinet Back Rail 1 PC	Adjustable Shelf 2 PCS	Drawer Front Panel 1 PC	Drawer Left Panel 1 PC
K 	L 	M 	N 	O 
Upper Cabinet Left Panel 1 PC	Upper Cabinet Right Panel 1 PC	Below Cabinet Left Panel 1 PC	Below Cabinet Right Panel 1 PC	Upper Cabinet Door 1 PC
P 	Q 	R 	S 	T 
Below Cabinet Door 1 PC	Upper Cabinet Back Panel 1 PC	Below Cabinet Back Panel 1 PC	Drawer Right Panel 1 PC	Drawer Back Panel 1 PC
			U  Drawer Bottom Panel 1 PC	

      HARDWARE LIST
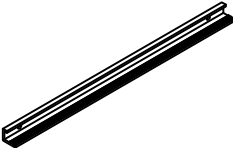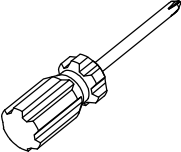
#1  M5*18mm Round Screw 2PCS (Extra 1)	#2  Ø6*30mm Wood Dowel 6PCS (Extra 2)	#3  Ø3.5*30mm Screw 4PCS (Extra 1)	#4  Ø6*35mm Cam-bolt 28PCS (Extra 4)	#5  Ø15*9mm Cam-lock 28PCS (Extra 4)
#6  Ø27*22mm Handle 2PCS	#7  M4*22mm Round Head Bolt 2PCS	#8  14*14mm Back Bracket 12 PCS (Extra 2)	#9  Ø3.5*14mm Screw 16 PCS (Extra 2)	#10  Ø3*12mm Screw 6 PCS (Extra 2)
#11  Ø6.5*19.5*11.5mm Shelf Holder 8PCS (Extra 1)	#12  45*17*12mm Single Door Magnet 2 PCS	#13  30*22*1mm Door Small Plate 2 PCS	#14  Ø5*40mm Screw 4 PCS (Extra 2)	#15  Safety Strap Kit 1 SET
#16  260*15*12mm Plastic Drawer Slide Set 2 PCS	 25*Ø12mm Center Axis (Extra) 2 PCS	 Phillips Screwdriver 1 PC		

 Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK

 
Tools Required




INSERTING AND TIGHTENING CAM-BOLT

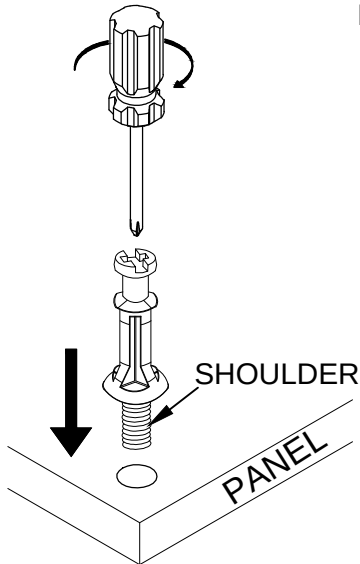 

 Place Cam-bolt on pre-drilled hole and screw in vertically

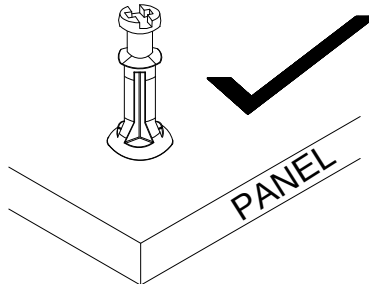

 
Shoulder is flushed (on the same level) with the panel.

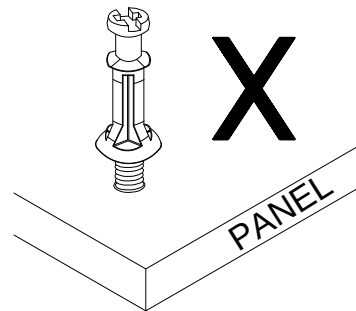


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 
INSERTING CAM-LOCK

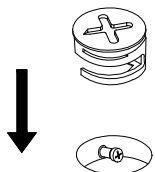

 Insert Cam-lock with arrow align to Cam-bolt head

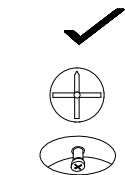


CORRECT

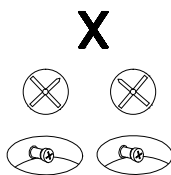 

WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 TIGHTENING CAM-LOCK

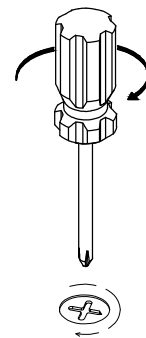


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

 
Step 1.




I x1

 


J x1

 


S x1

 


T x1

 

U x1

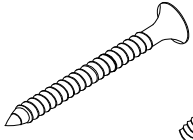 


#3 x4

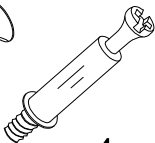 






#4 x4


 
#5 x4





x1

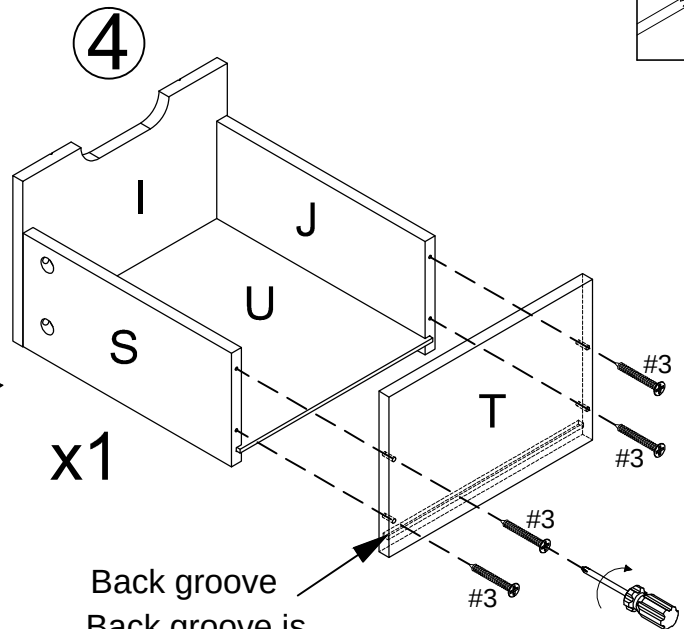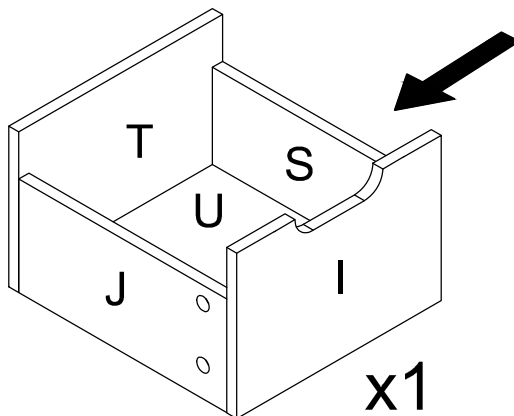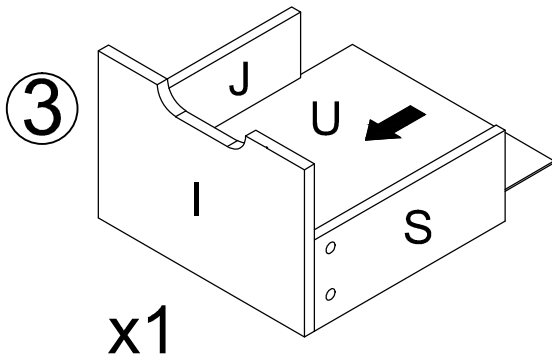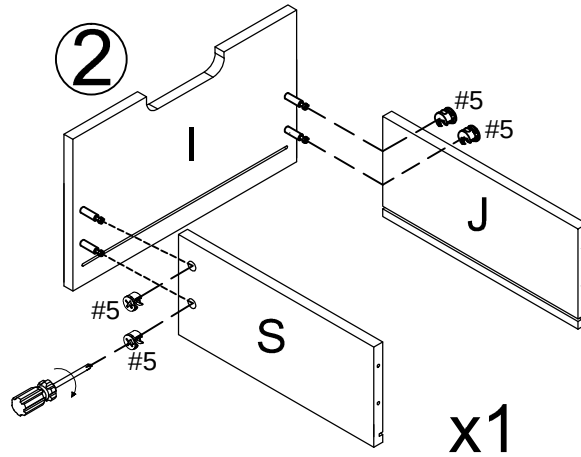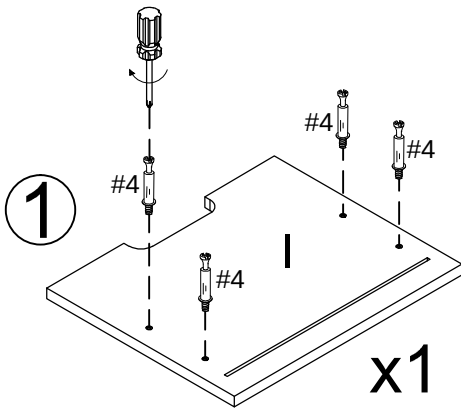     




Back groove
Back groove is
on the this side.

Note: Tighen it or it will
cause wobble.

 
 
Step 2.

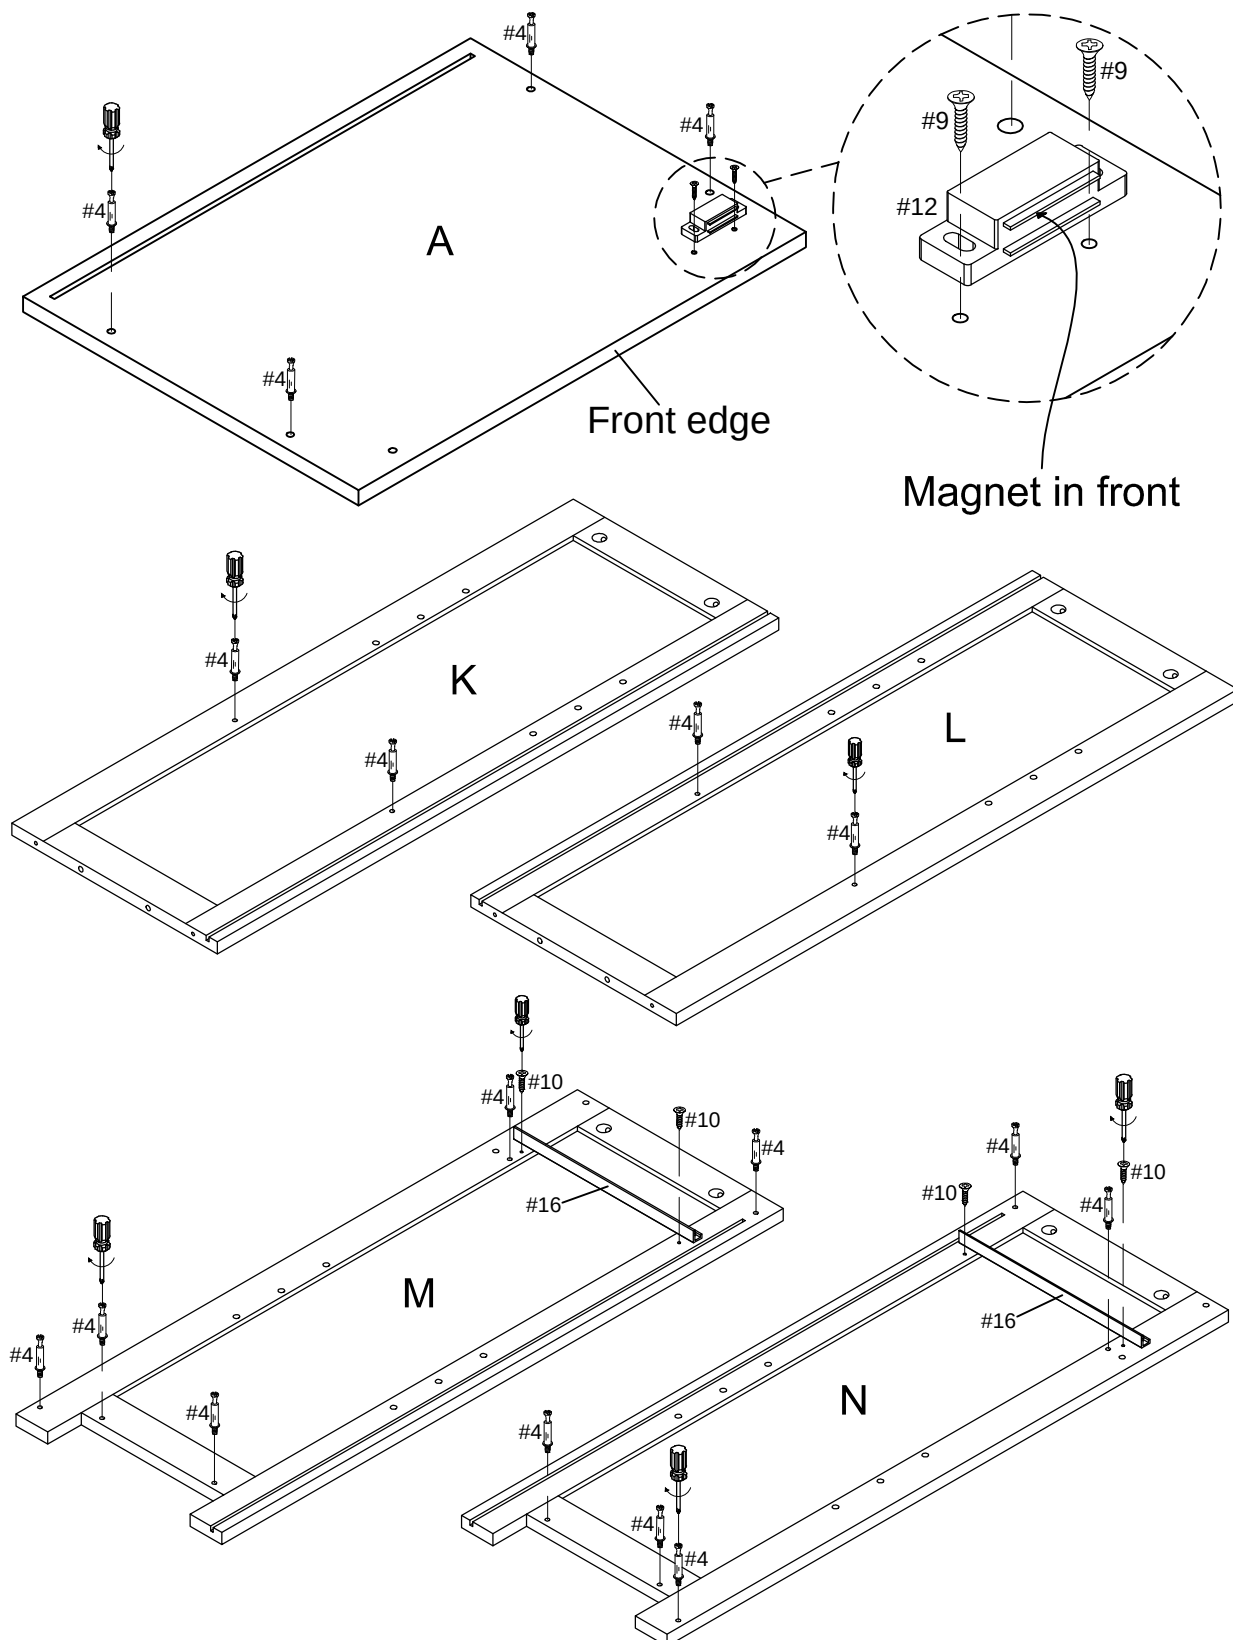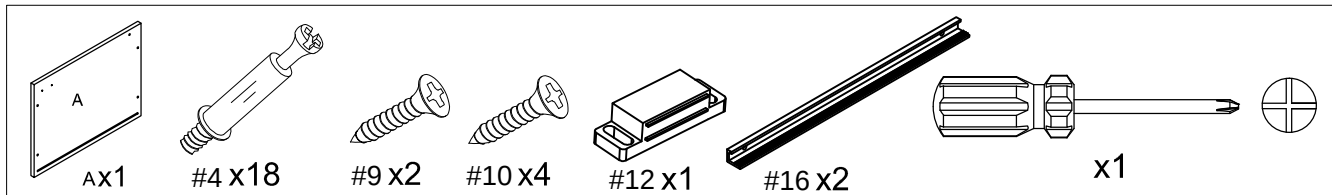

  
 
Step 3.

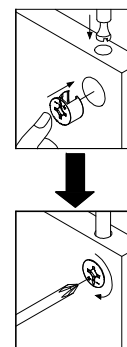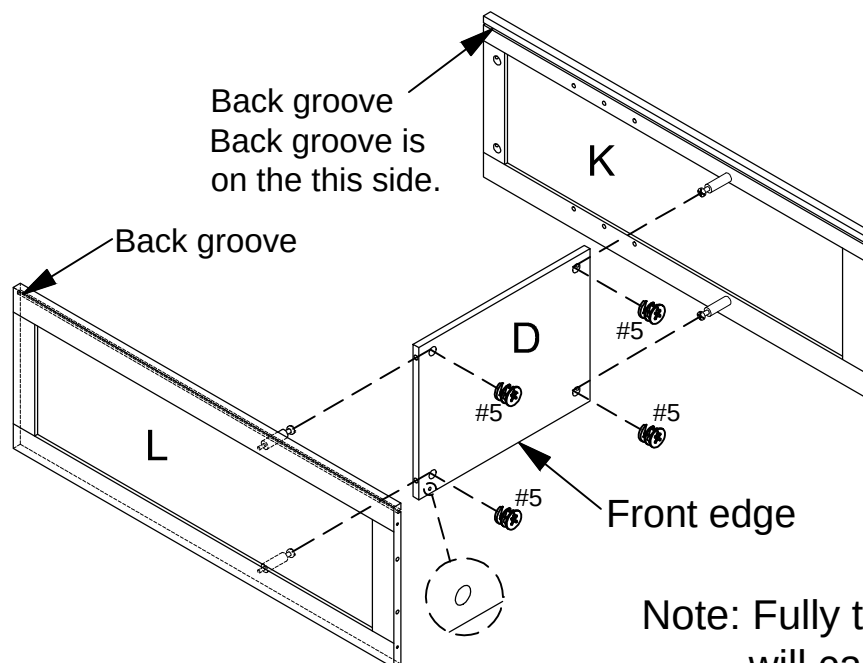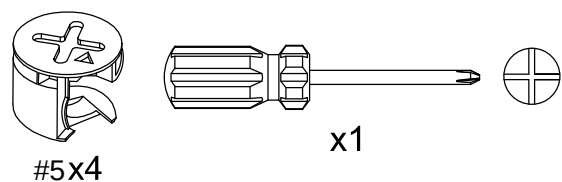


 
 
Step 4.

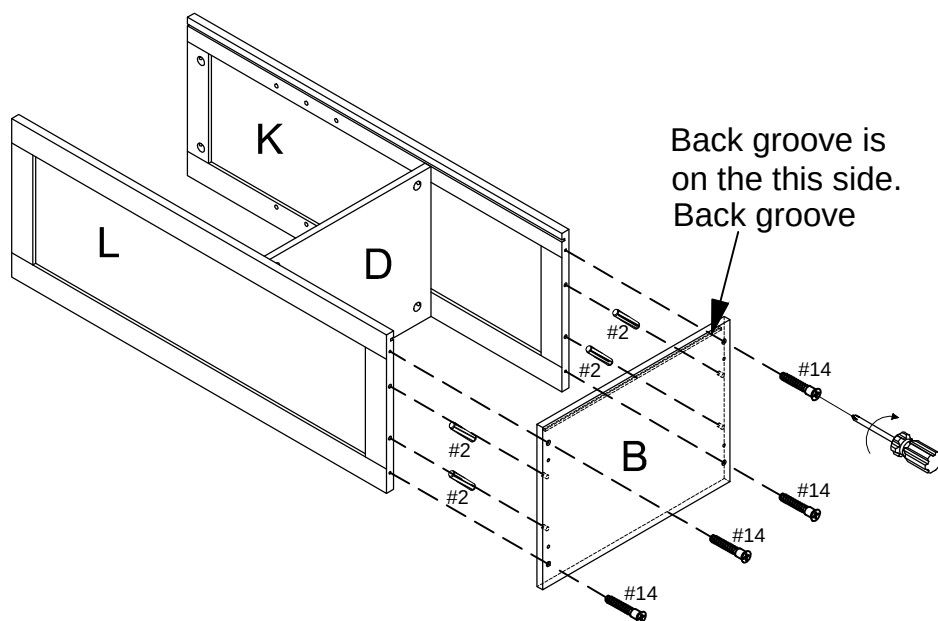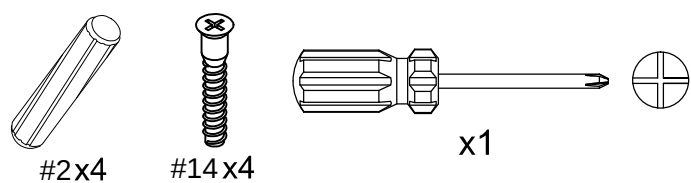

  Step 5.

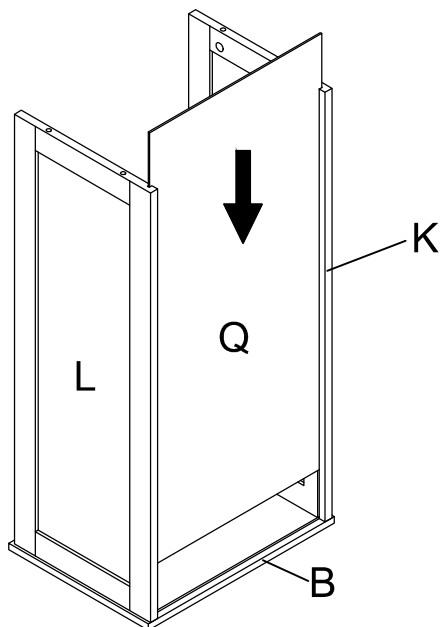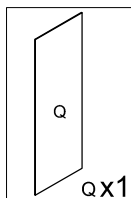


   Step 6.

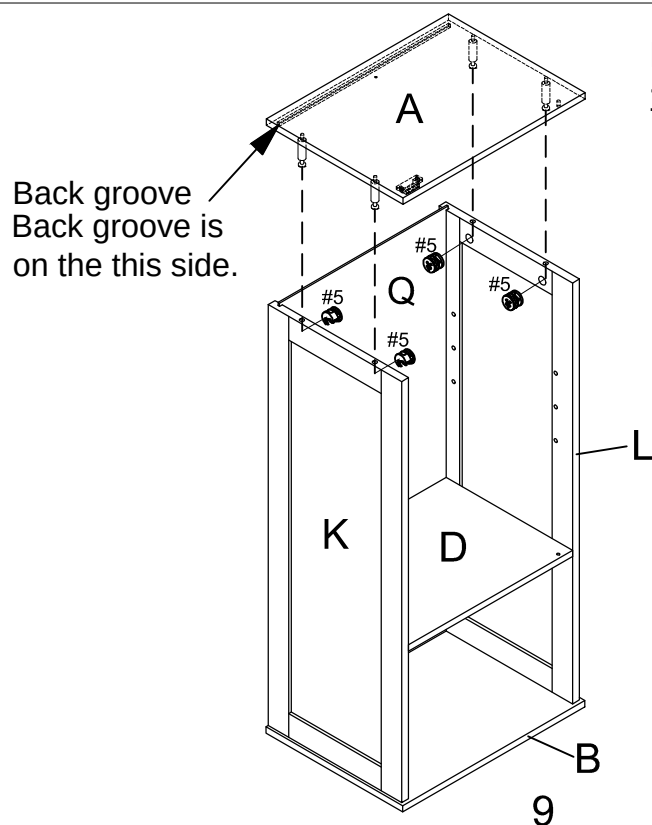



Note:

 
1. The groove on A needs to be aligned with Q.
2. Fully tighten #5 or it will cause wobble.

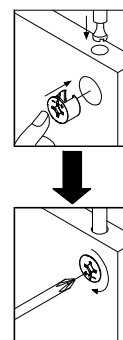

 
 
Step 7.

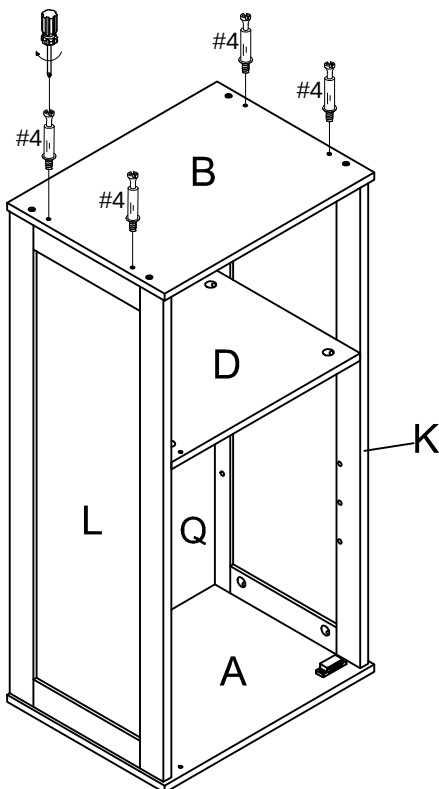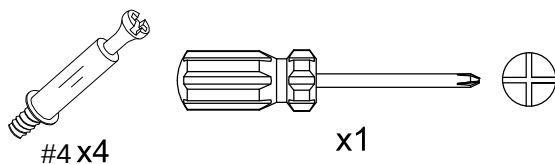



 
Step 8.

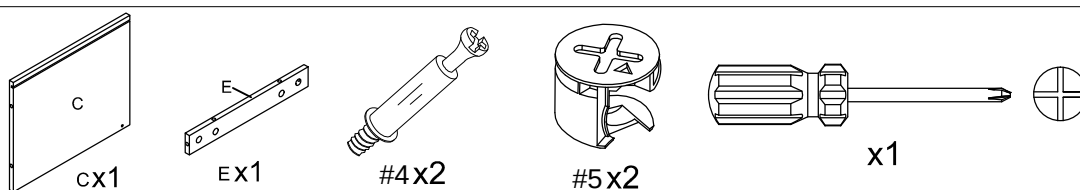

 
 
Note: Fully tighten #5 or it will cause wobble.

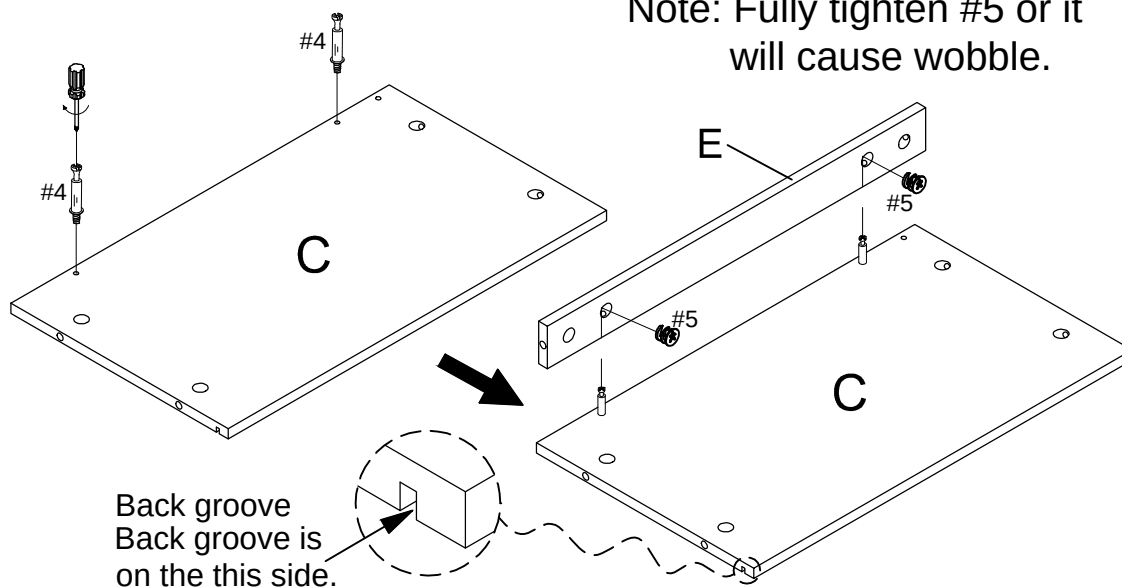

 
 
 
Step 9.

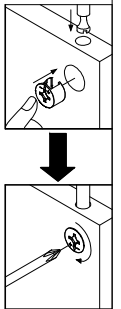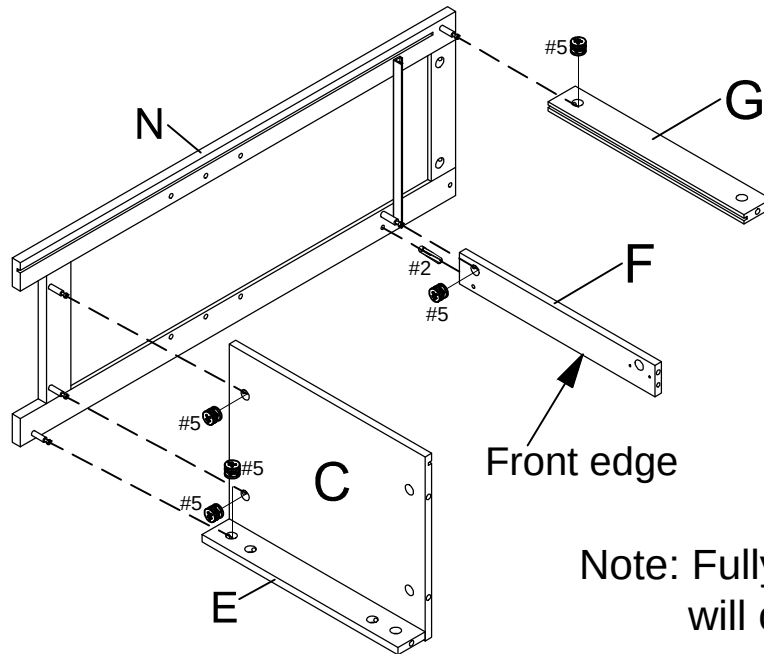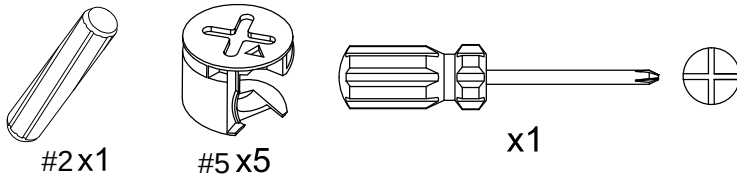

  Step 10.

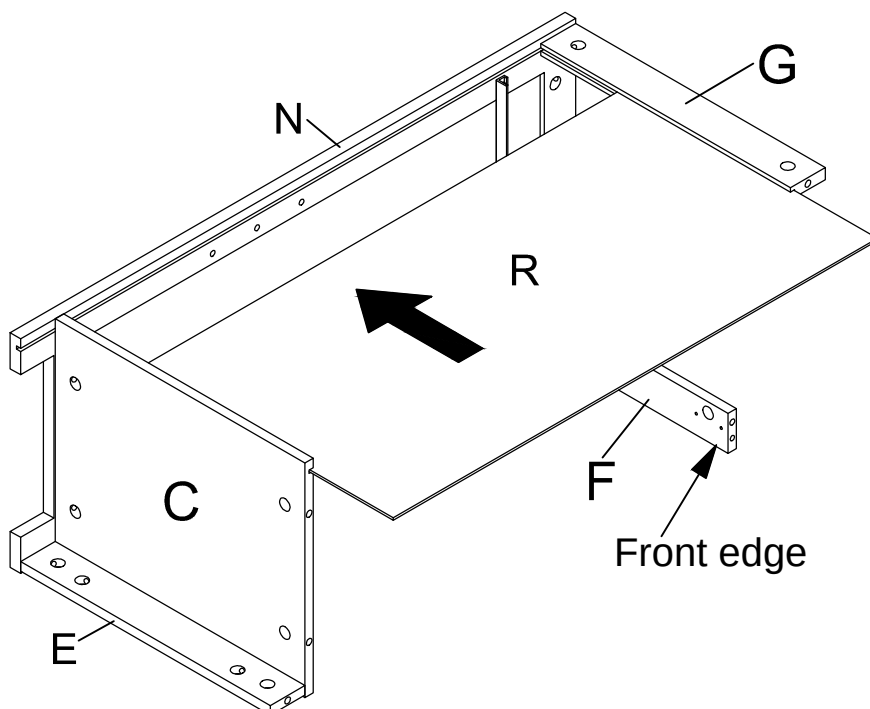

  
 
Step 11.

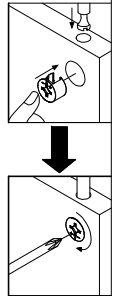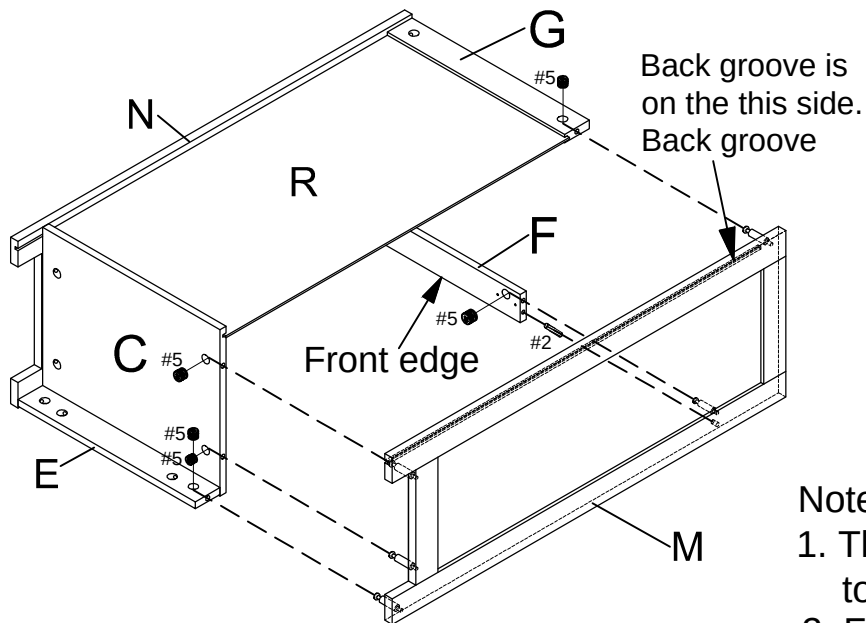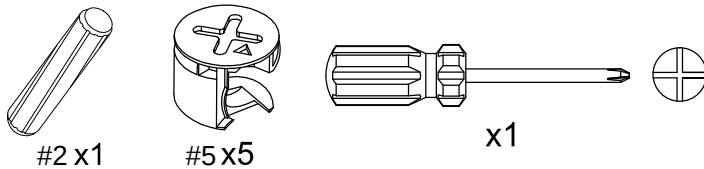


Note:

1. The groove on M needs to be aligned with R.
2. Fully tighten #5 or it will cause wobble.

  
Step 12.

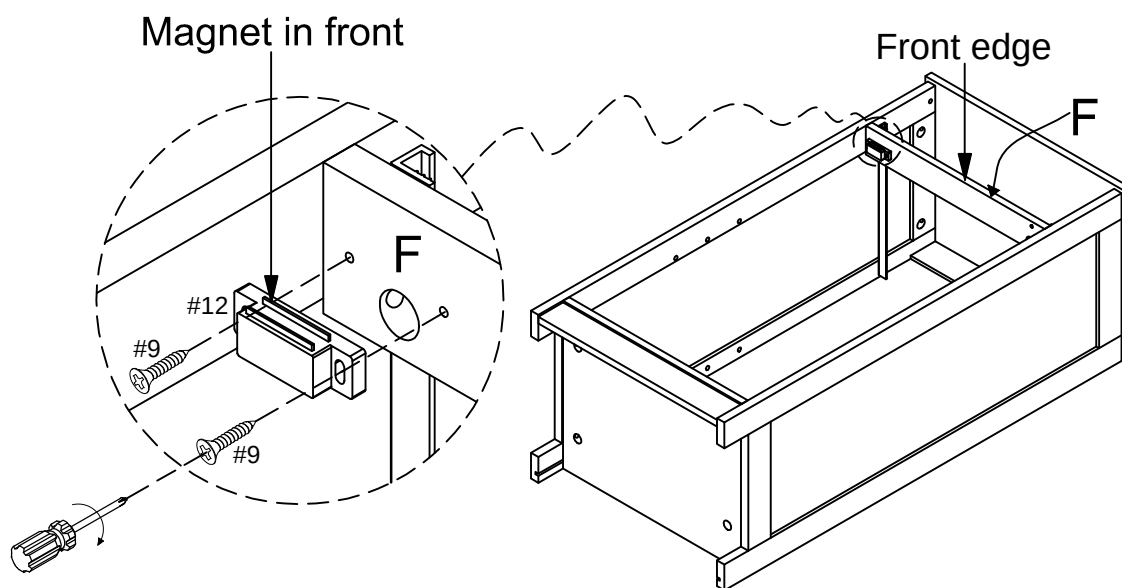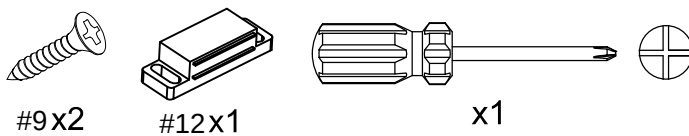





 
Step 13.

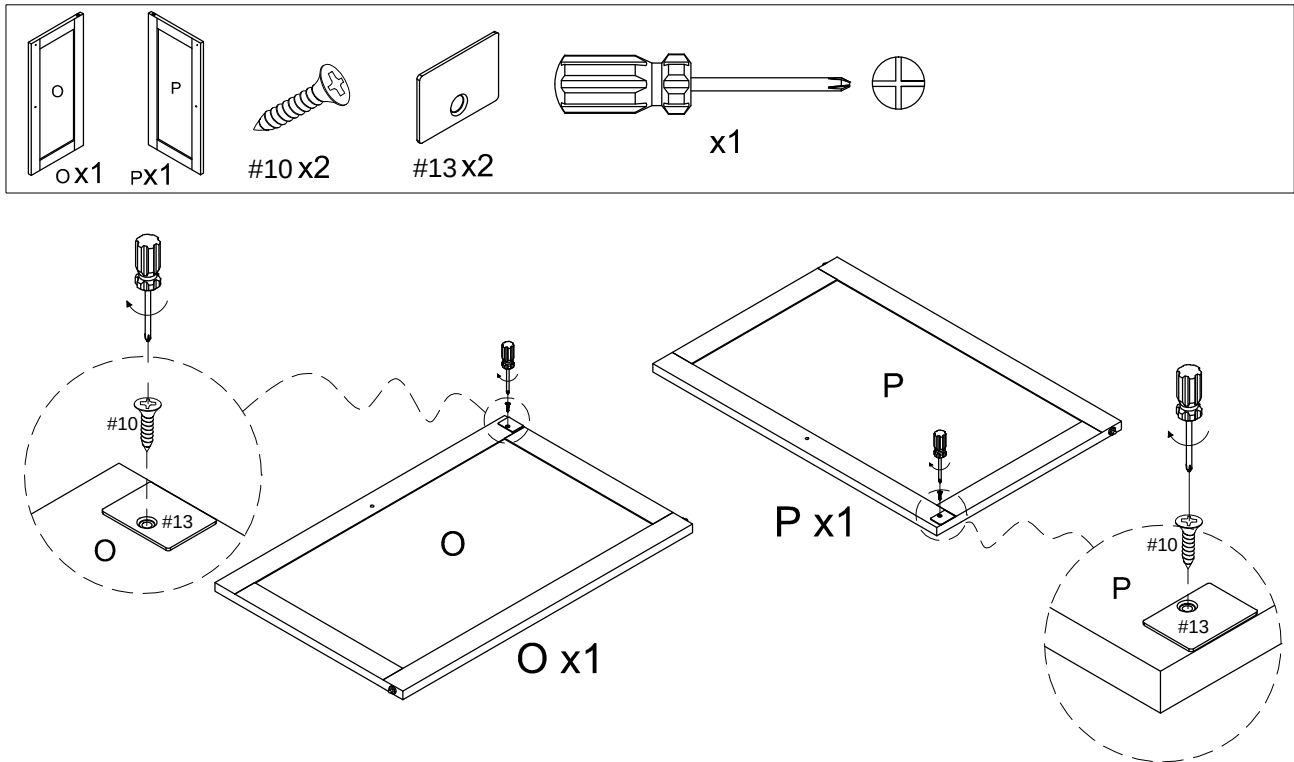

 Step 14.




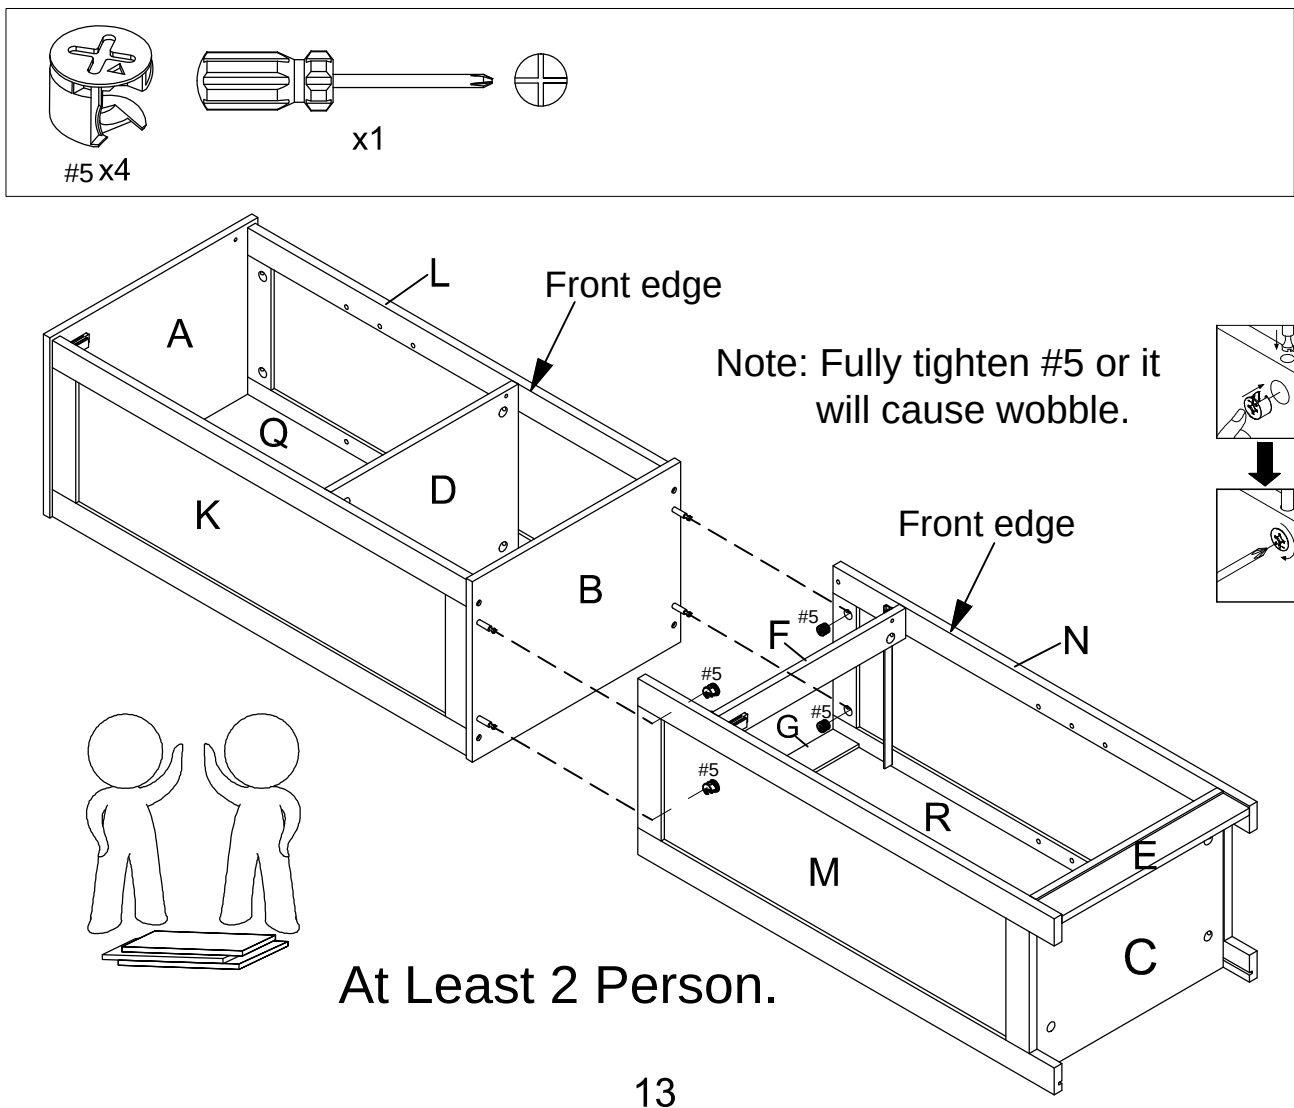


     Step 15.

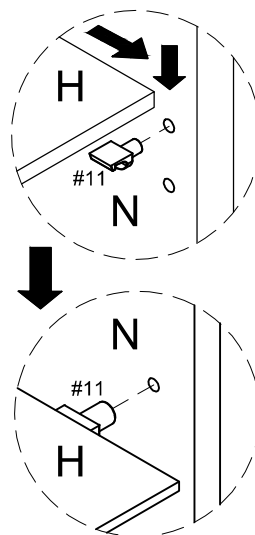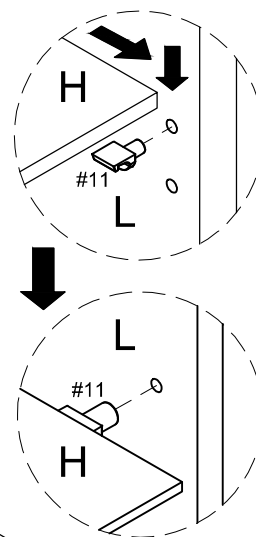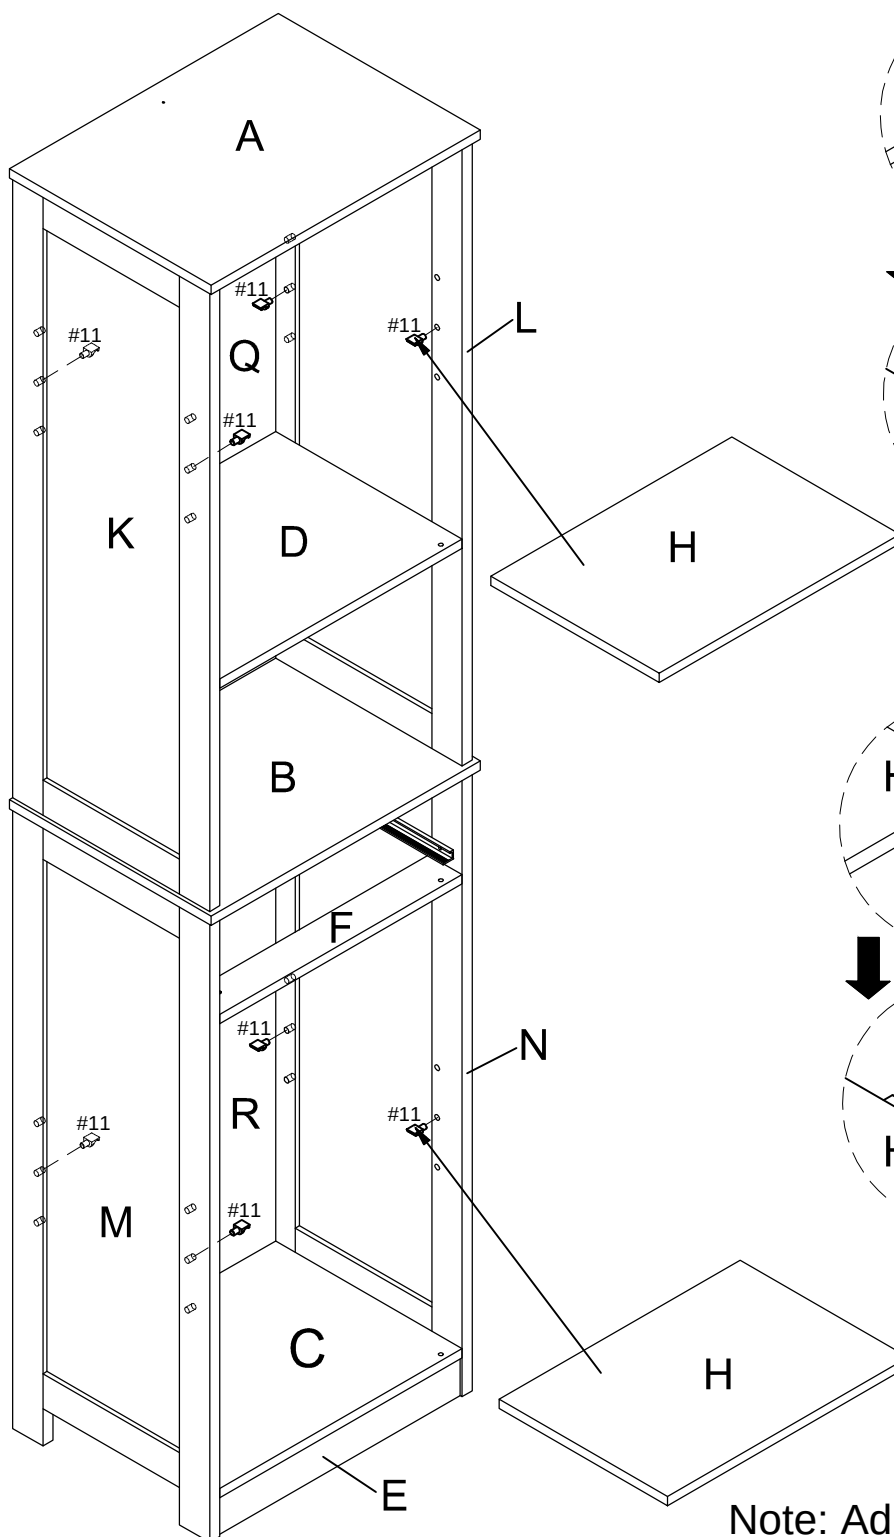
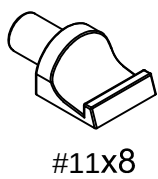
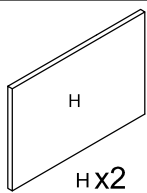


Note: Adjustable for three heights.

    
Step 16.

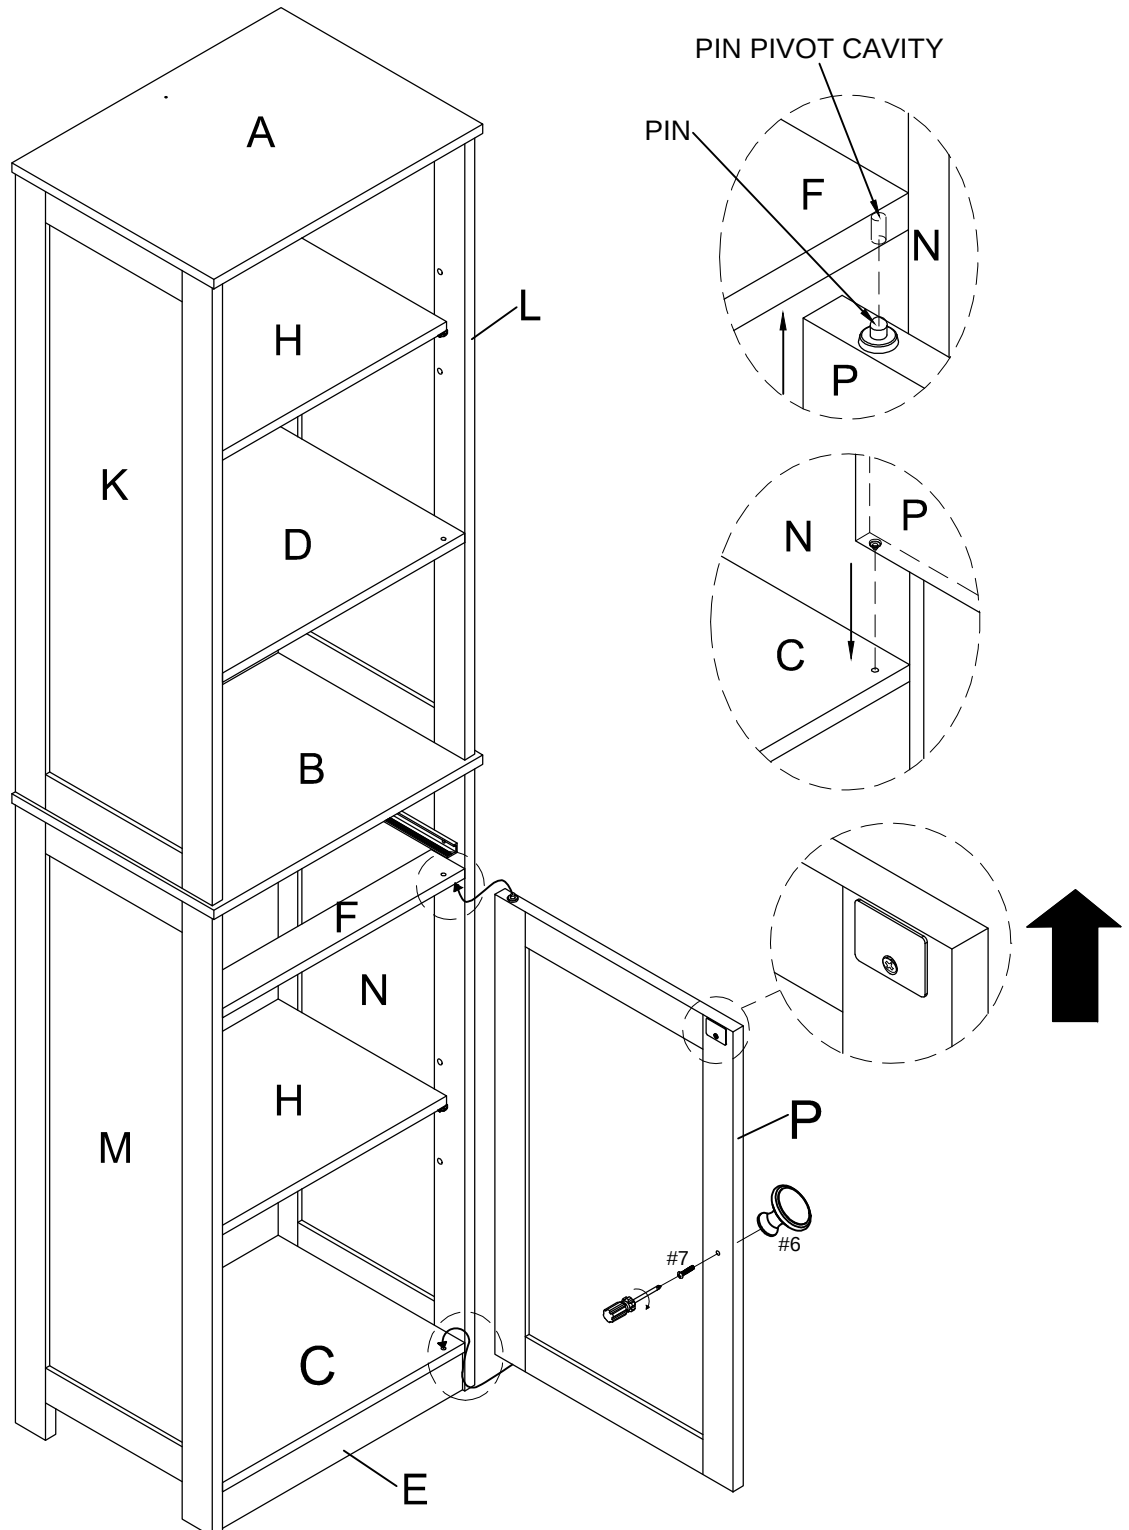

   
Step 17.

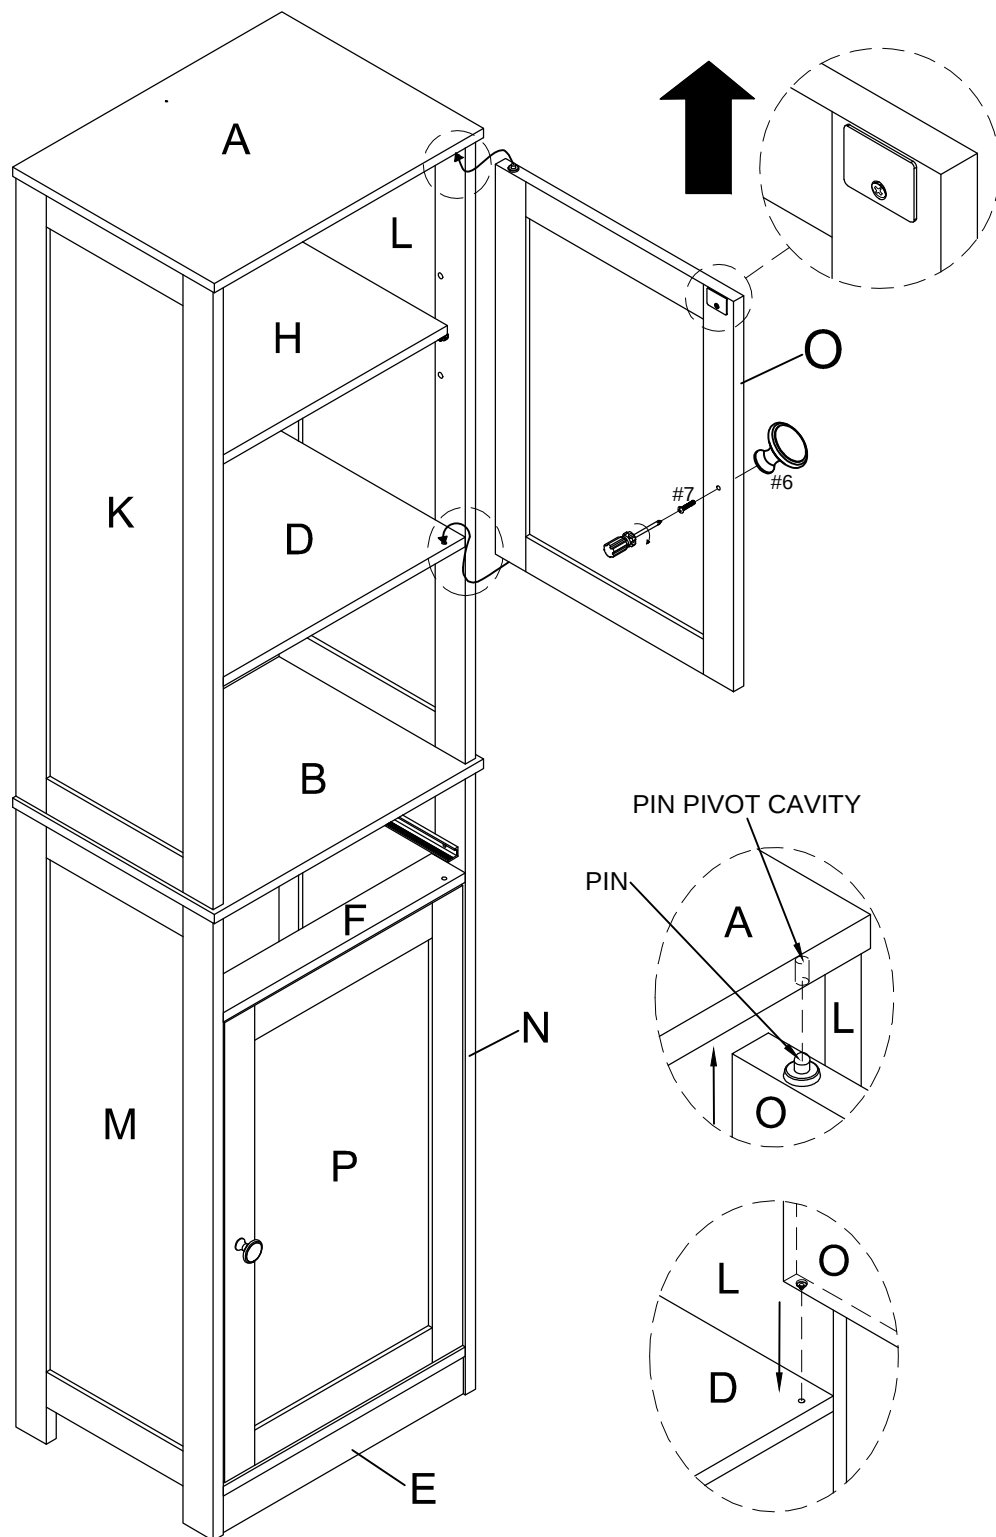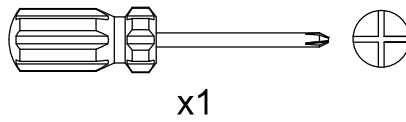

 
Step 18.

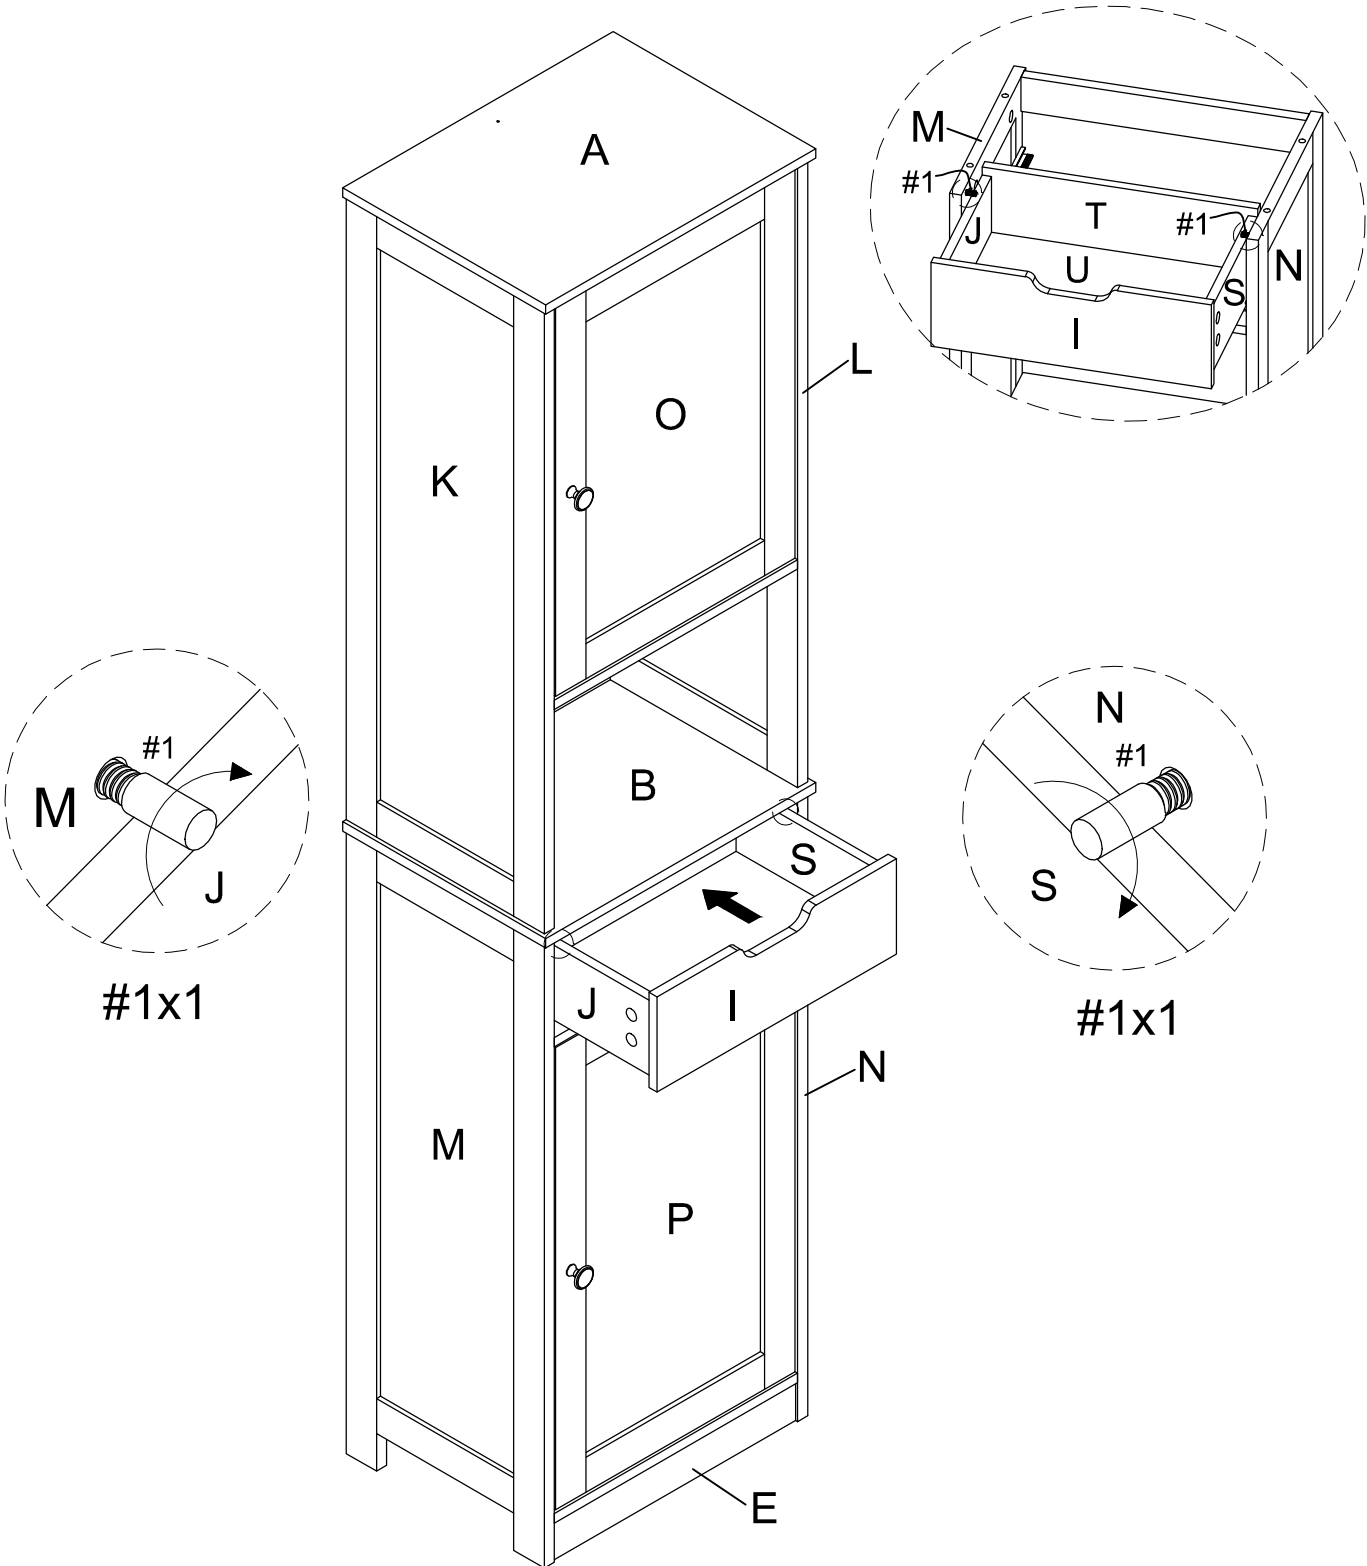

 
Step 19.





#8x12

 




#9x12

 


x1

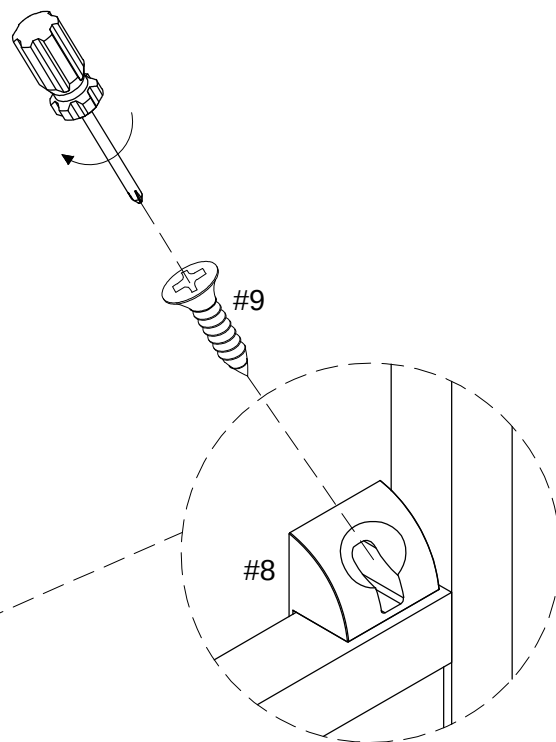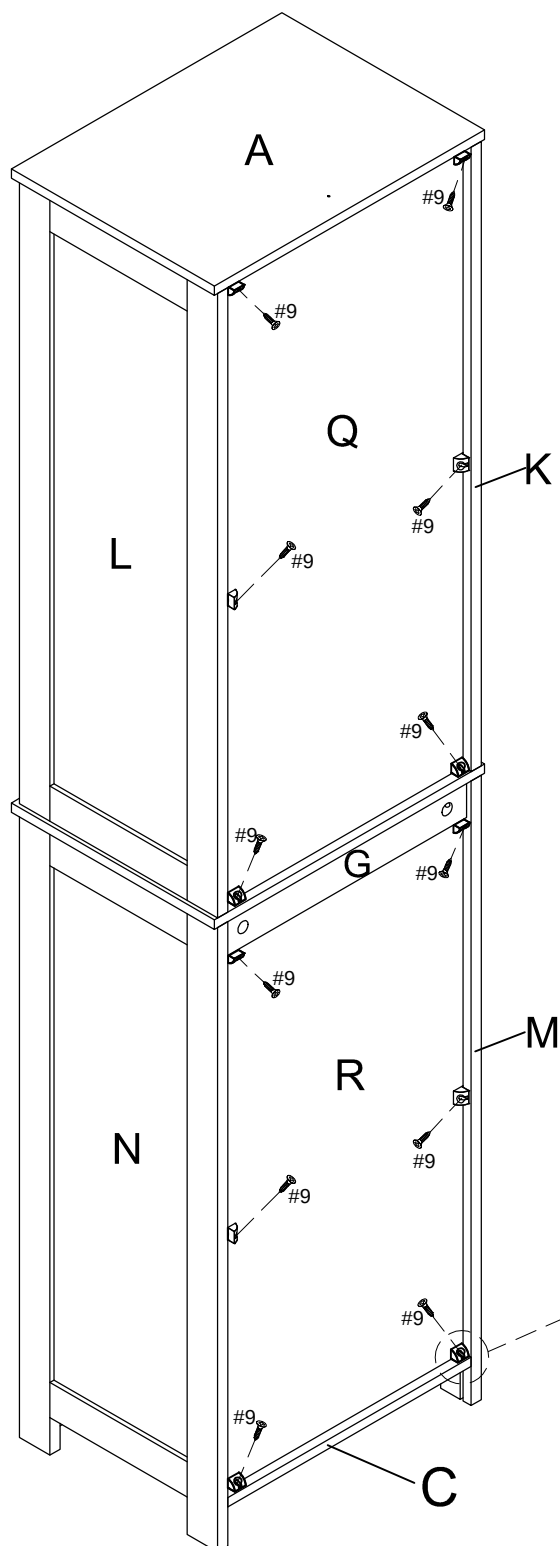  

   Step 20.
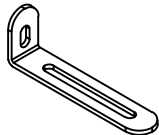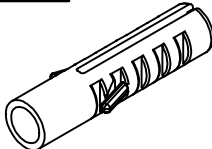
#15 	#15-A  72*24*1.5mm	#15-B 	#15-C  Ø3.5*15mm	#15-D  Ø4*40mm
Safety Strap Kit 1 SET	Angel Iron 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Long Screw 1 PC

 Safety strap kit (#15) must be installed to prevent tipping, damage and/or injury.

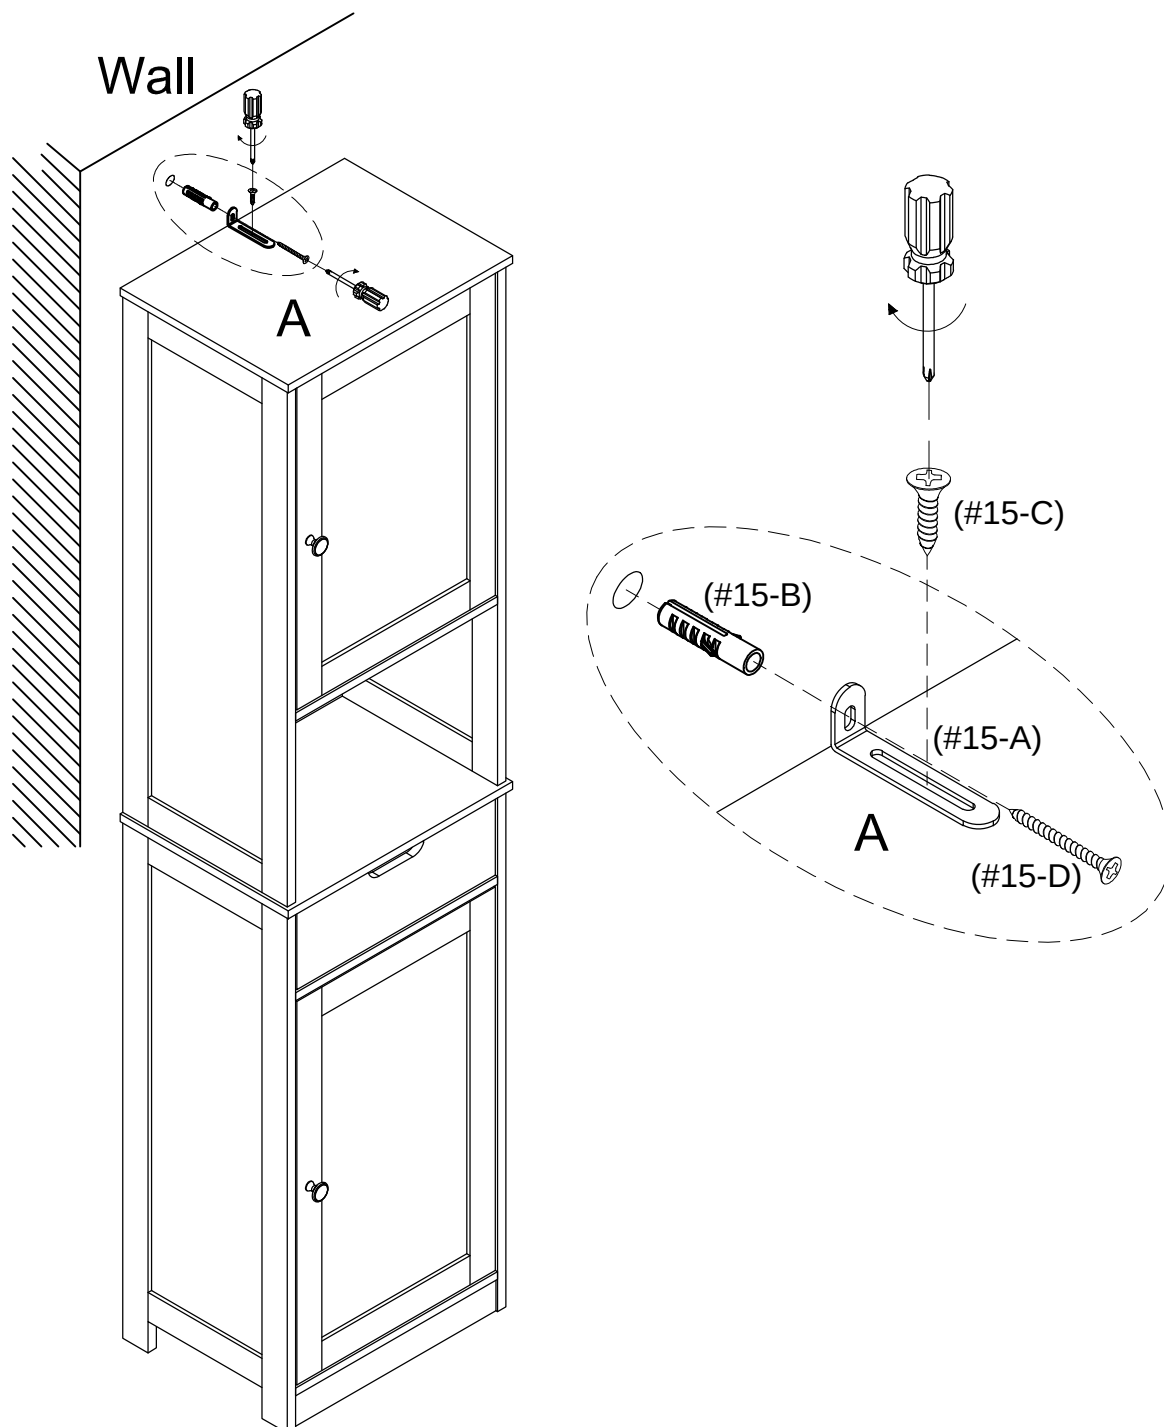

The assembly of the cabinet is complete.

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.

3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.