










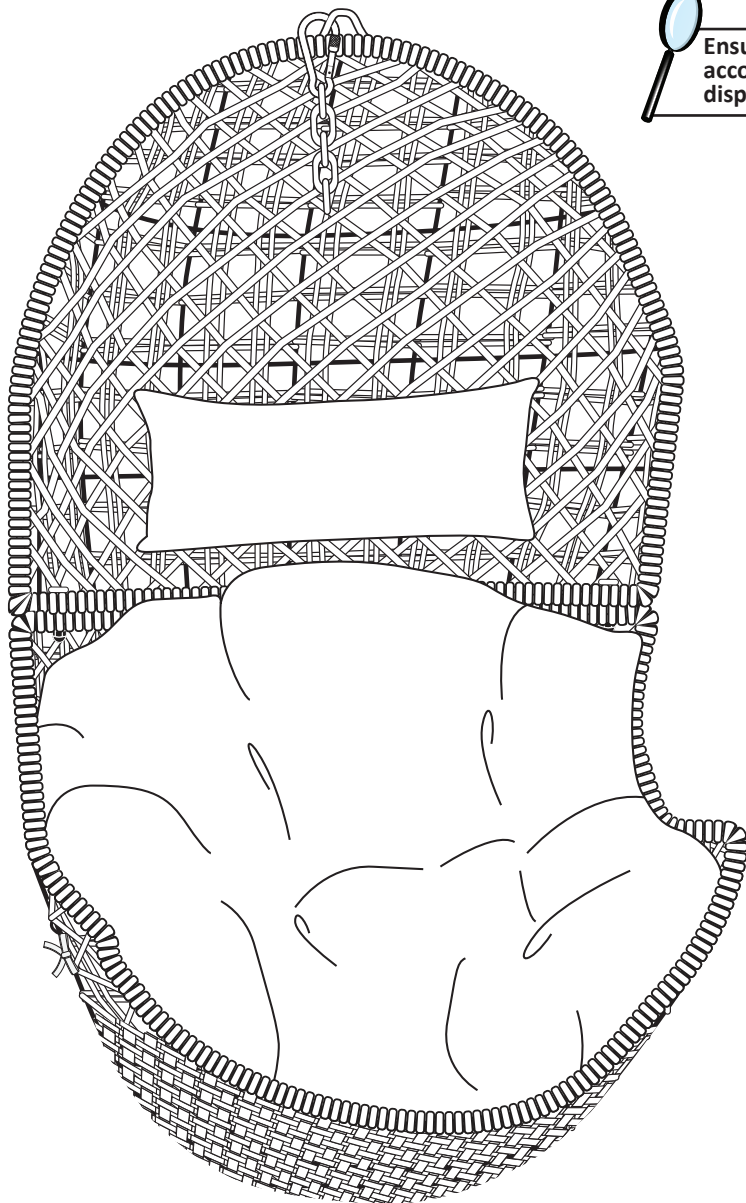




HANGING EGG CHAIR

Read all assembly and care instructions carefully before using this product. Save these instructions for future reference.

Assemble components on a soft, clean surface to avoid scratching/damaging the finish.




Ensure all parts are accounted for before disposing of packaging.

No.	PARTS		QTY.
1		Chair Top with Carabiner and Chain	1
2		Chair Bottom	1
3		Seat Cushion and Pillow	1
G1		M6x45mm Bolt	2
G2		M6x50mm Bolt	2
H		M6 Washer	8
P		M6 Lock Nut	4
Q		Nut Cap	4
R		Pin	1
S		Extension Spring	1
T		Safety Strap	1
X		Hex Key	1
Z		Spanner	1

NOTE: Over time, the bolts may become loose. Save the included tools for tightening hardware.

WARNING!

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

 WARNING: Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

CAUTION

This egg chair is not designed to be used like a swing. Bouncing, swinging, or any other significant movements could result in serious injury.

Ensure all hardware is securely tightened before each use.

The safety strap must always be used with or without the Sunnydaze Egg Chair Stand (stand sold separately).

Weight Limit: 265 lbs.

ASSEMBLY

Review all steps and understand assembly before beginning.

Do not fully tighten hardware until all bolts have been loosely installed.

STEP 1

1: 1 G1: 2 H: 8 Q: 4

2: 1 G2: 2 P: 4

NOTE: When installing a lock nut, the metal thread goes on first. Hand-tighten until you feel resistance, which is caused by the nylon insert. A wrench is required to tighten the lock nut fully.


- Align Chair Top (1) and Chair Bottom (2).
- On the left and right side of the chair frame, hand-tighten one M6x50mm Bolt (G2), two Washers (H), and one Lock Nut (P) as shown.
- Hand-tighten one M6x45mm Bolt (G1), two Washers (H), and one Lock Nut (P) into the center mounting holes, as shown.
- Fully tighten all hardware and place four Nut Caps (Q) over the lock nuts.

STEP 2

3: 1

- Tie Seat Cushion and Pillow (3) onto the frame of the egg chair.

IMPORTANT: Do not tie the seat cushion or pillow to the rattan material, as doing so may cause the rattan to break and unravel.

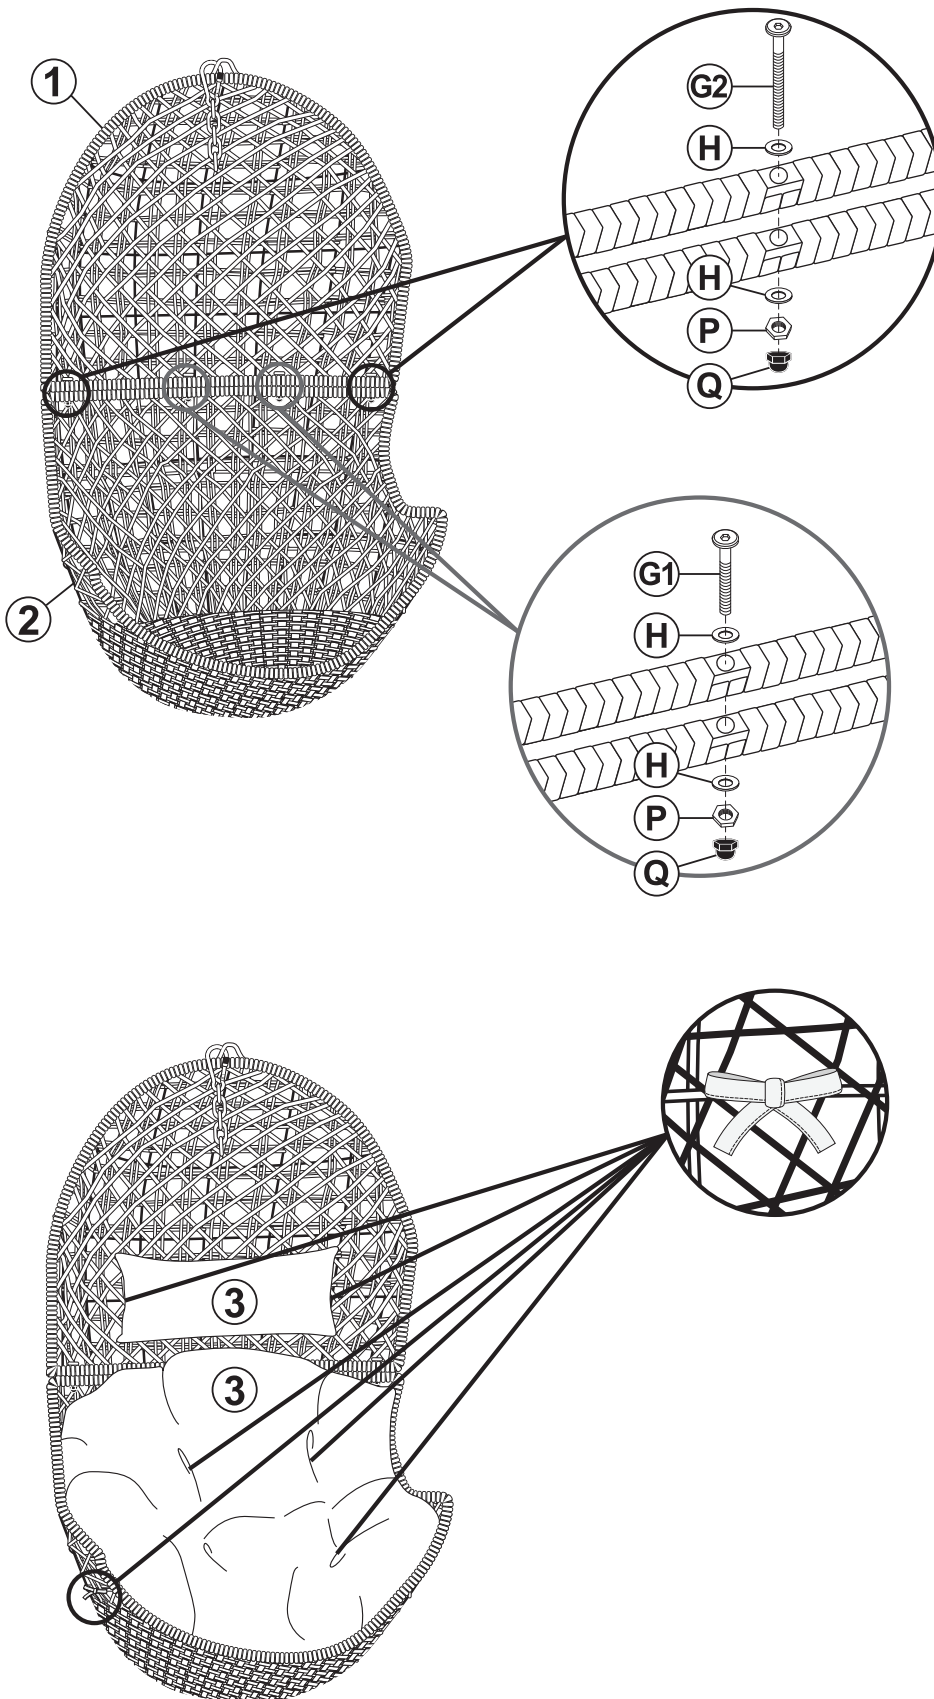

Care & Maintenance

HANGING: The included hanging hardware is designed for use with a Sunnydaze Egg Chair Stand (not included). If installing from a ceiling or structure, consult a professional to ensure safety.

Hang the chair at a height where the user can safely enter and exit, and adjust the chain length as necessary

This egg chair is intended to be used by adults and person(s) with developed motor skills who understand the potential dangers if it is misused. Supervise children at all times. Never allow small or young children to enter or exit the chair without adult assistance. Never allow or encourage children to sleep or play in the chair. Instead, teach and practice safe use.

SAFE USE: Do not swing, bounce, jump, twist, or make other excessive movements while using this chair; doing so may cause serious injury. Do not use this chair without the safety strap; this strap helps keep the chair safely in place while the user enters and exits the chair. Never stand in the chair. Do not exceed the weight capacity.

INSPECT: Check the rattan and frame for damage before each use; do not use the chair if they are broken. Periodically check hardware and tighten as necessary.

SUN EXPOSURE: All fabrics will eventually fade from sun exposure. Maintain fabric color and integrity by storing the cushions indoors when not in use.

WINTER CARE & STORAGE: Maintain the appearance and prevent damage by storing this item indoors when not in use.

Store indoors during winter and inclement weather. A cool, dry location is recommended to prevent damage. Cover with a breathable cover while in storage to help prevent dust build-up. Ensure cushions are completely dry before storing as moisture promotes mold and mildew growth.

Cleaning



HAND-WASH ONLY



DO NOT USE BLEACH OR FABRIC SOFTENERS



DO NOT TUMBLE DRY



DO NOT DRY CLEAN



DO NOT IRON

Spot clean with a soft, damp cloth.

For stubborn stains on the cushions, hand-wash with mild soap and warm water. Rinse thoroughly, ensuring all soap residue has been removed. To help remove excess water, press cushions between two dry towels. Allow to thoroughly air dry before use or storage.



SAFETY STATEMENTS & WARNINGS



- Do not exceed the weight capacity: 265 pounds
- For residential use only.
- Sunnydaze Egg Chair is not a swing. Therefore, do not swing, bounce, jump, twist, or spin in the chair.
- This product is intended to be used by one person at a time.
- Never use the chair without the provided safety strap.
- Do not loop the safety strap around the rattan material of the chair.
- Inspect the chair for damage and ensure all materials are intact before each use.
- Do not allow children to use this product without adult supervision.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.