

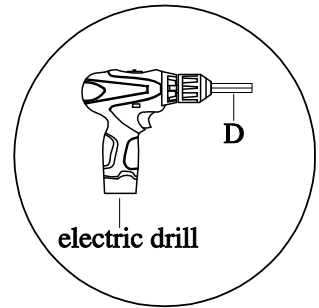


Assembly Instruction

3/3

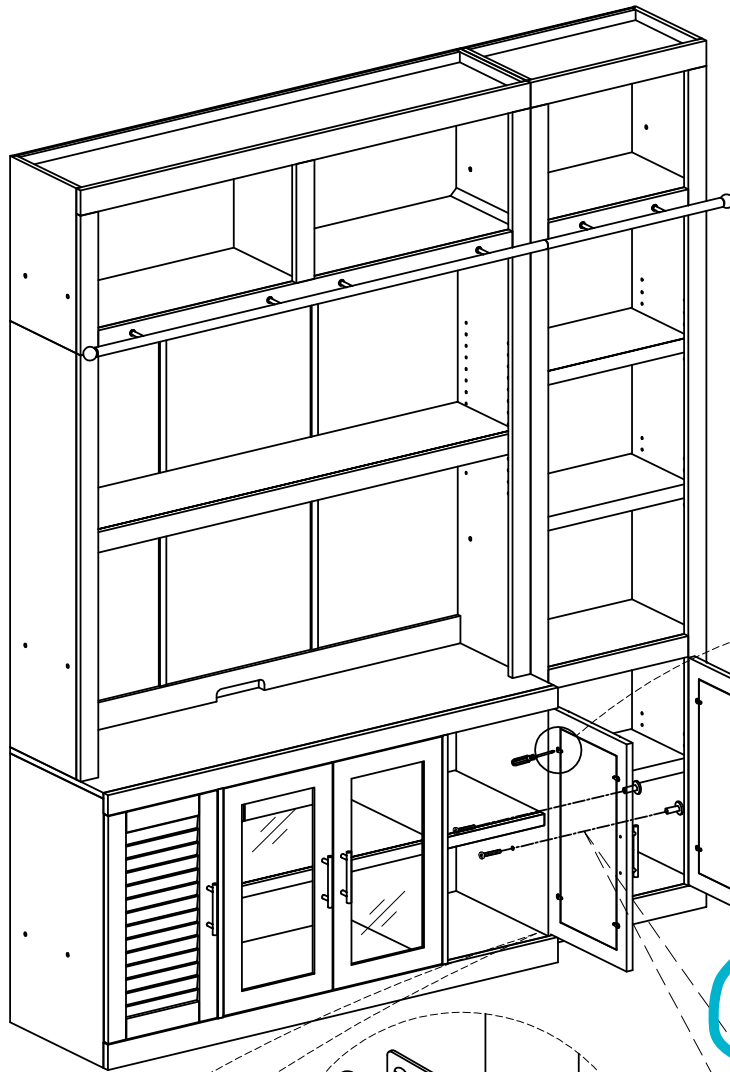


Use a screwdriver to loosen the screw of each Tab before flipping up the Tabs.


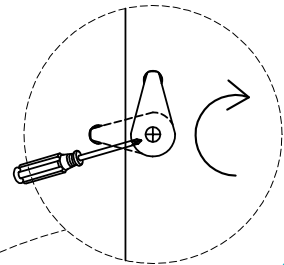


The front wood door panel is reversible. To change the door panel, flip up each tab and push door panel out. Turn the panel around and place back inside the door and flip the tabs down to hold it in place.

Inside the bottom panel on the forward RSF side is a cap with the leveler below. To adjust the leveler remove the cap and turn the leveler to adjust the height of the bookcase with Allen wrench(E).

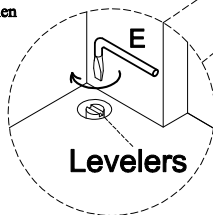

The library self closing hinges can be adjusted with the above diagram screws.

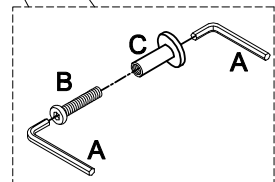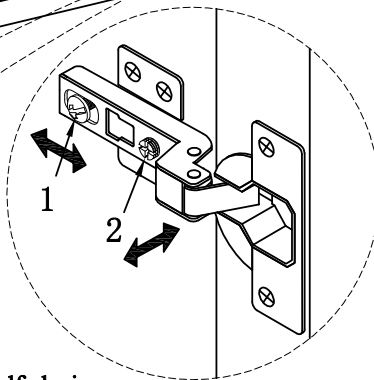

Align and connect cabinets with Connector Bolt (B) and Connector Cap (C).