



## !\ Safety and Care Advice

#### Important – Please read these instructions fully before starting assembly

- · Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- · Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- · During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- · Assemble on a soft level surface to avoid damaging the unit or your floor.
- · Parts of the assembly will be easier with 2 people.



 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- · This product should not be discarded with household waste. Take to your local authority waste disposal centre.

### **Handy Hints**

- · Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- · Regularly check and ensure That all bolts and fittings are tightend properly.

#### WARNING In order to help prevent overturning please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

# **Using Camlocks**


### Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

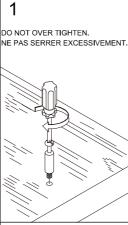

## Step 2


Push the male camlock into the entry hole.

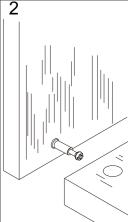

### Step 3

Insert the femle camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

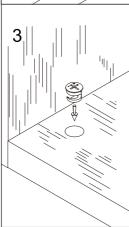

## Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.



# **MWARNING**



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ·ALWAYS install tipover restraint provided.
- ·NEVER put a TV on this product.
- ·NEVER allow children to stand. climb or hang on drawers, doors, or shelves.





- ·Place heaviest items in the lowest drawers.
- •Do not defeat or remove the drawer interlock system.


This is a permanent label.


Do not remove!




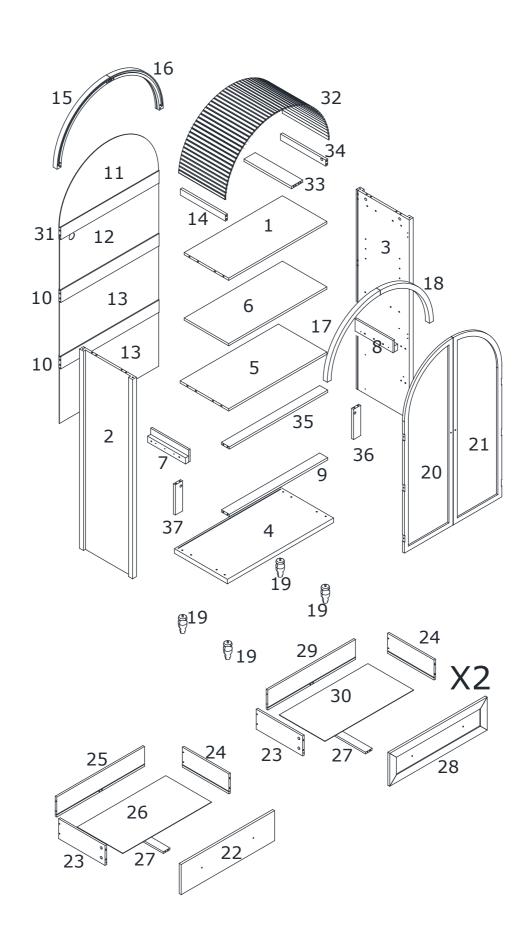

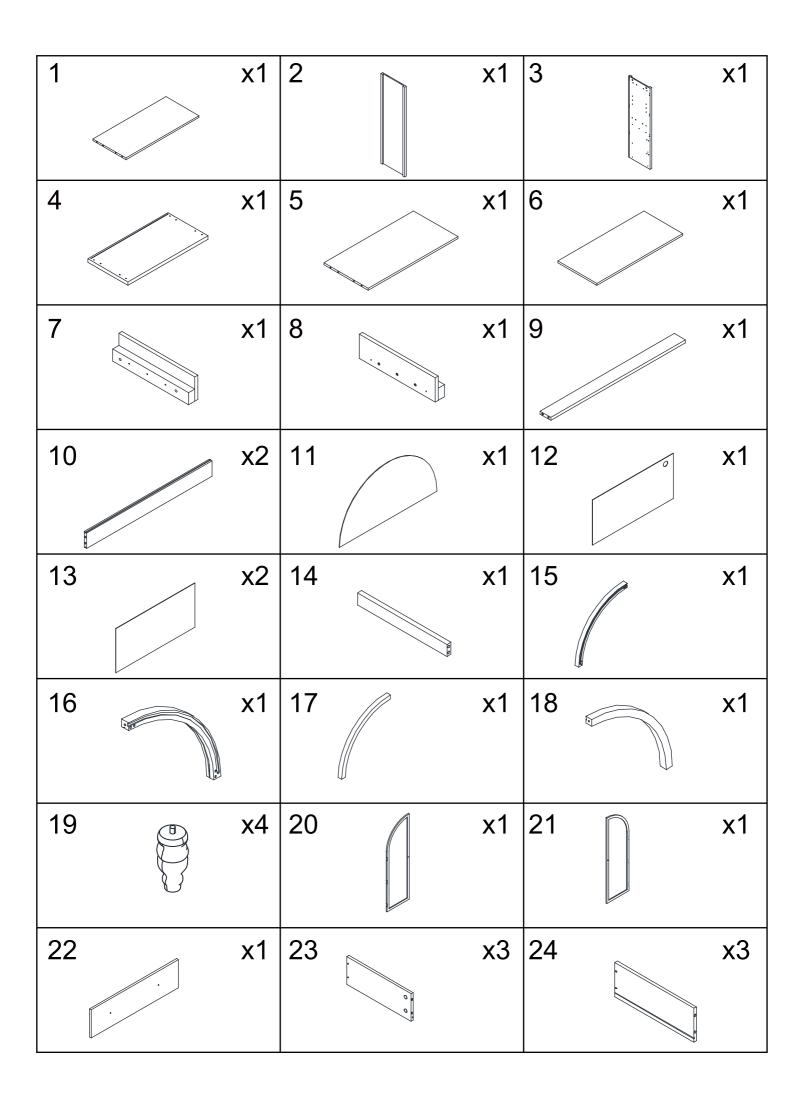


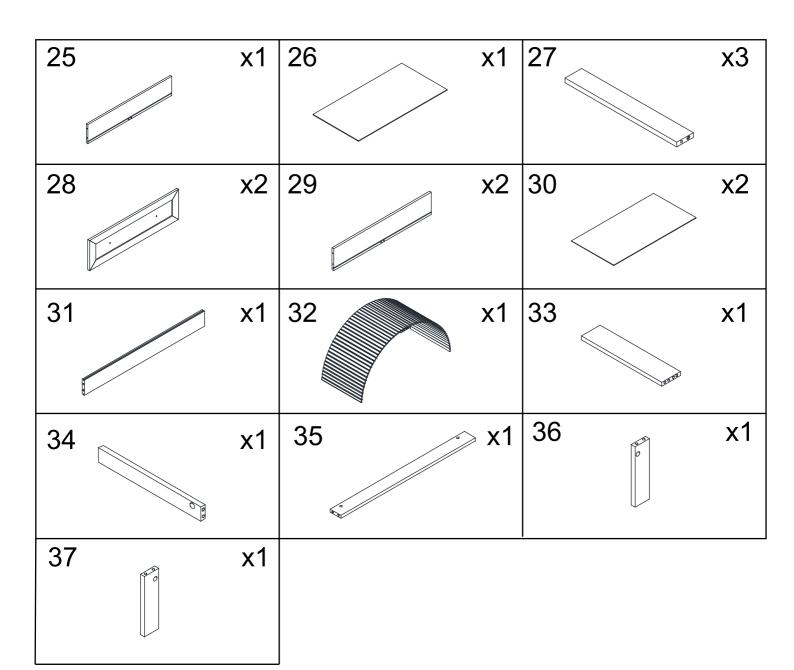

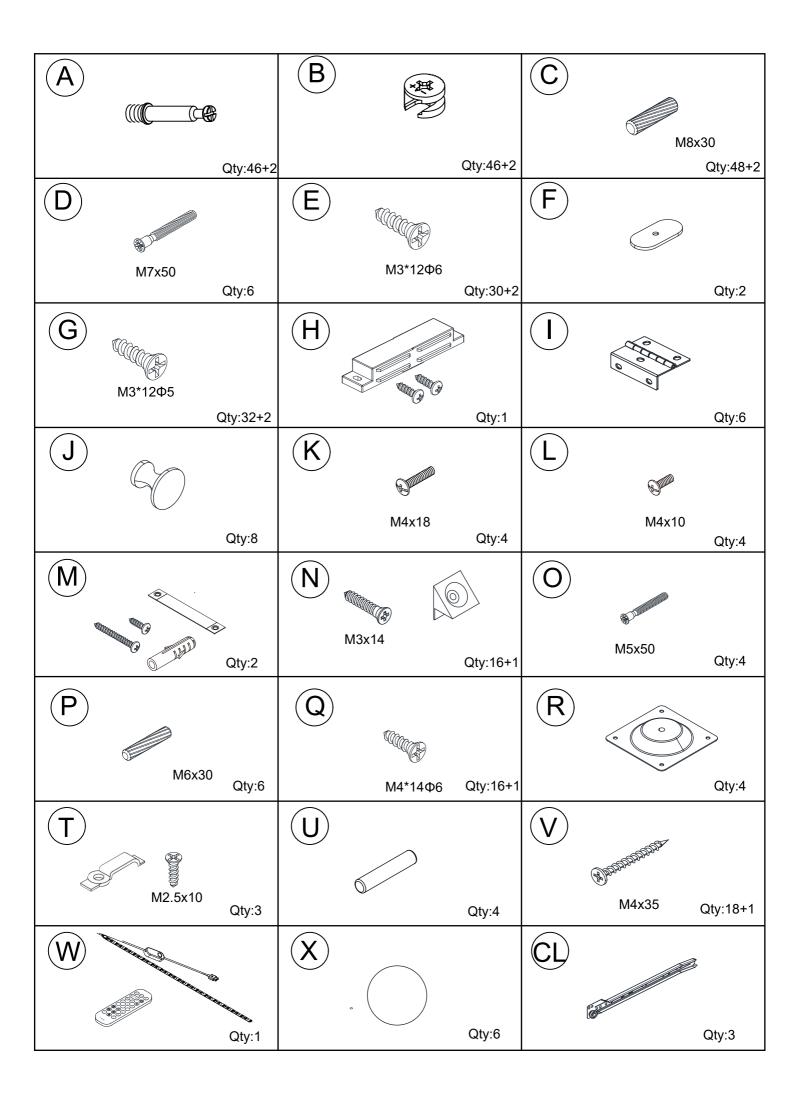


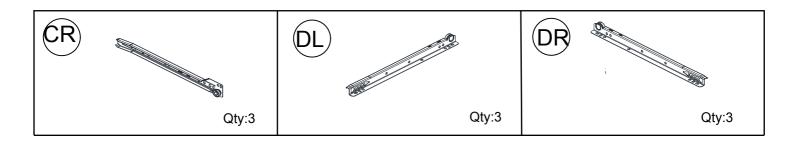



Make sure the pins are installed correctly as shown with the "check mark" below

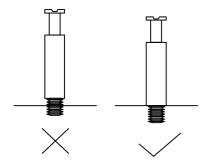



Below shows how the pins are used to assemble the panels together.

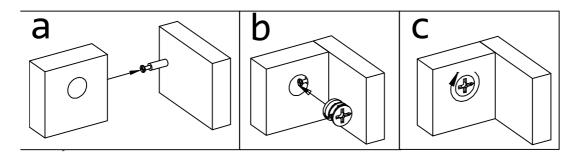

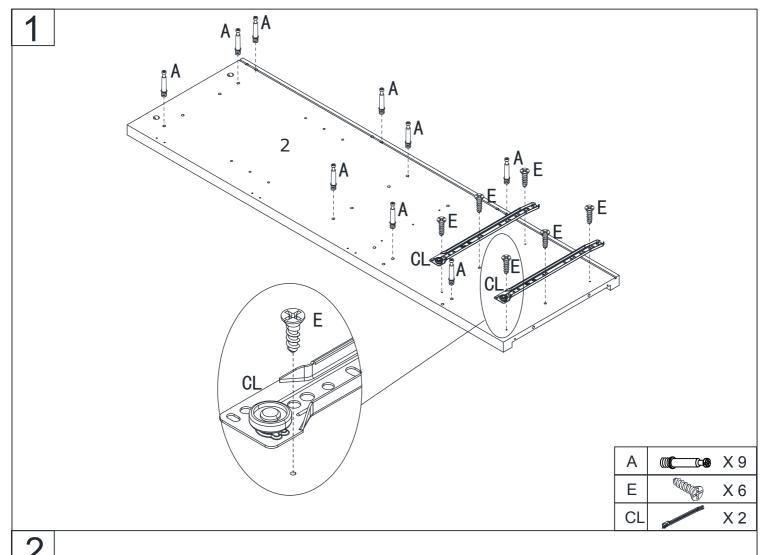


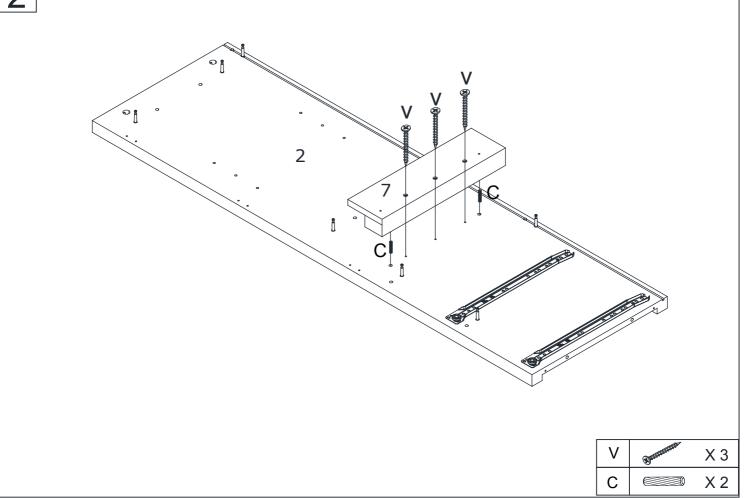


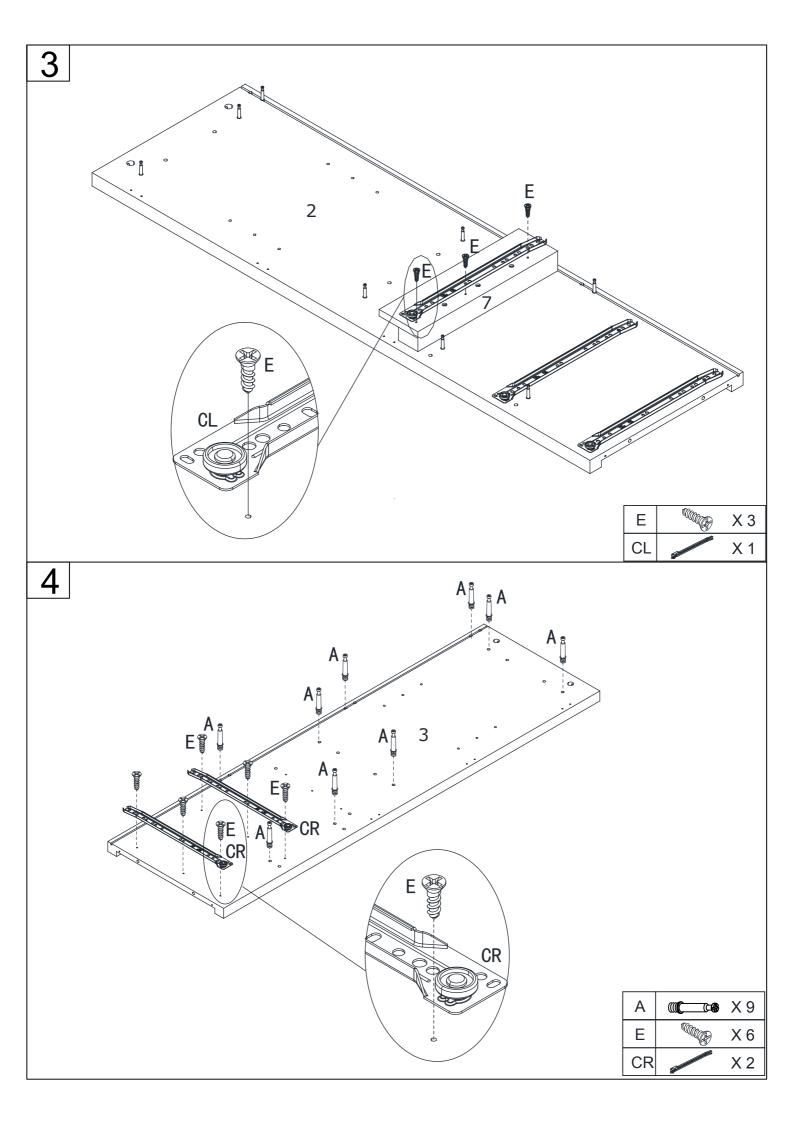


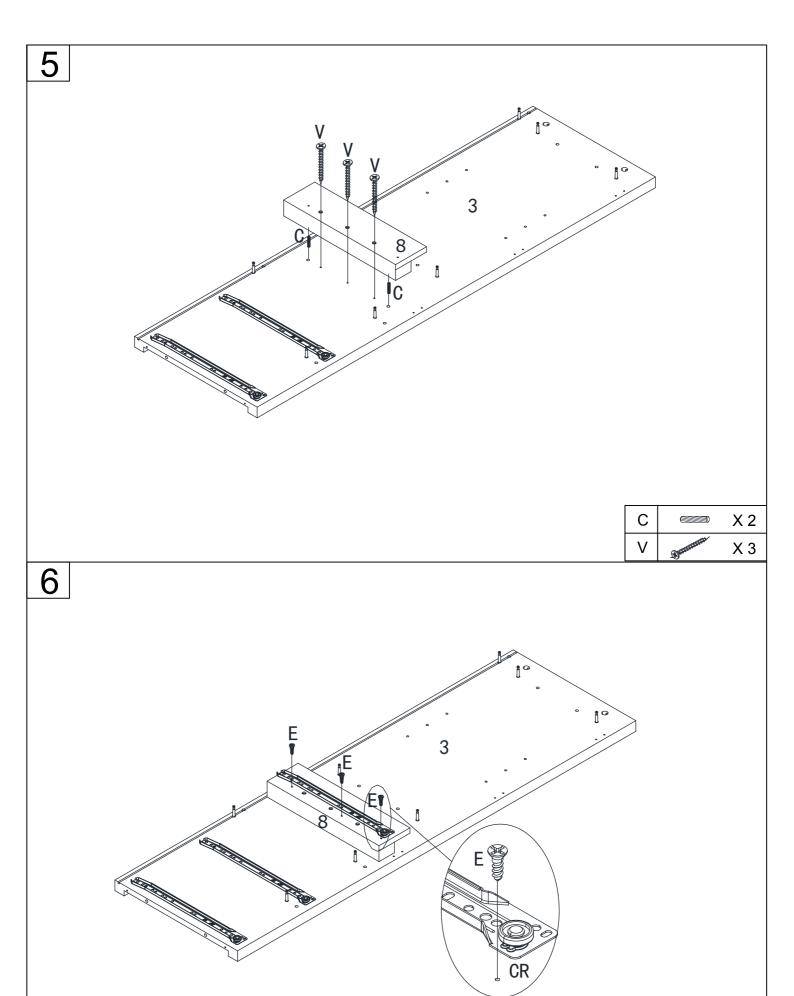



Е	X 3
CR	X 1

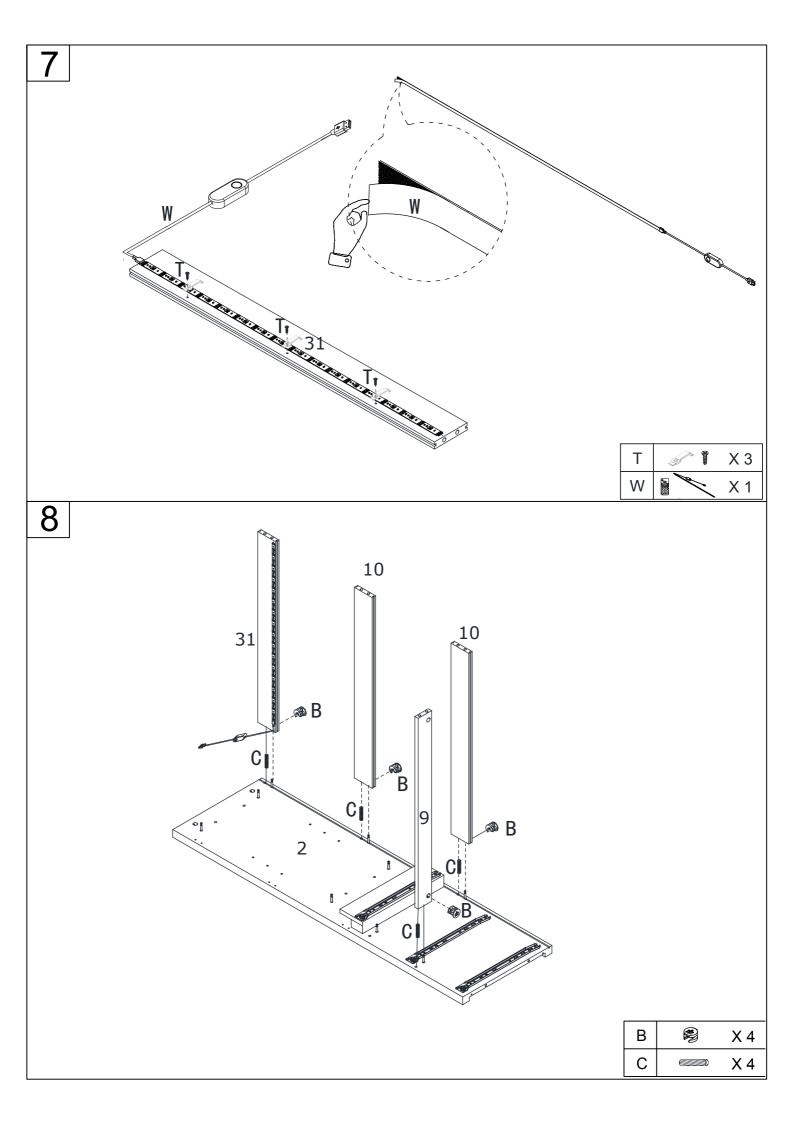


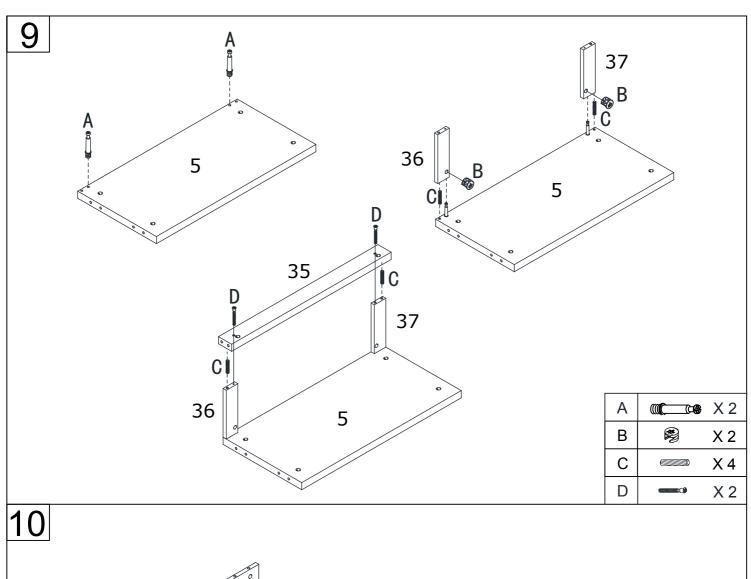


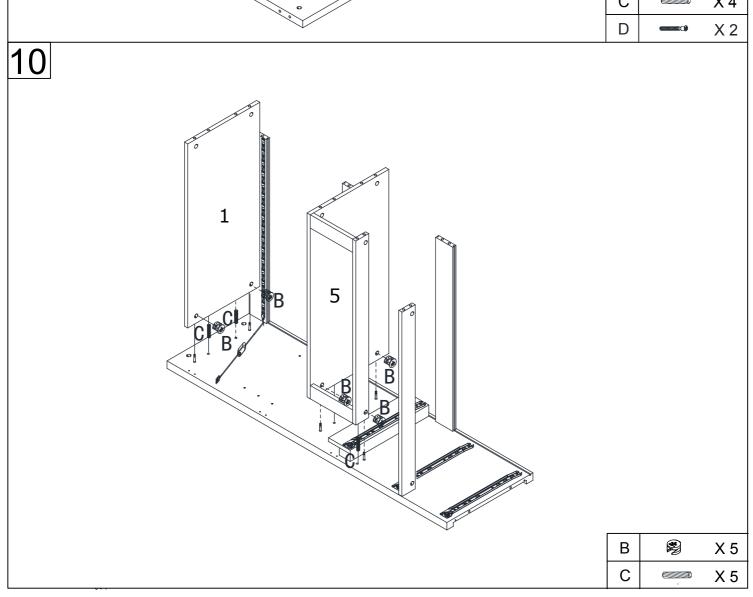

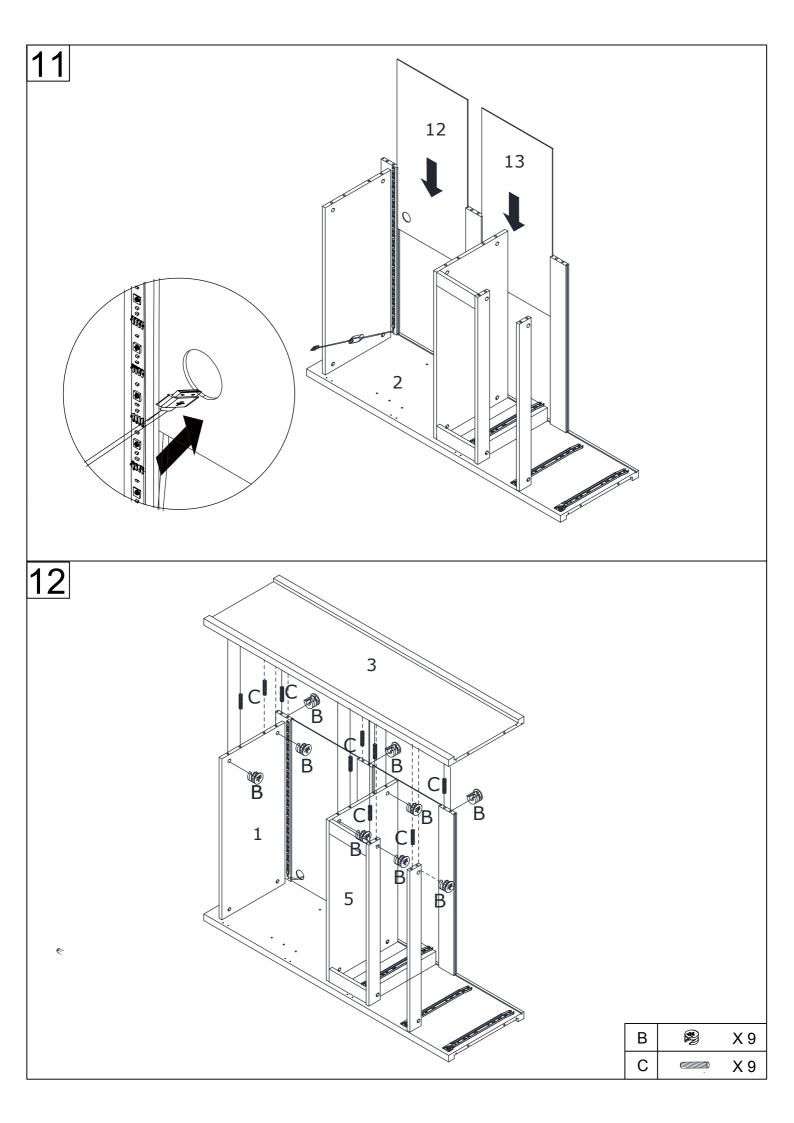


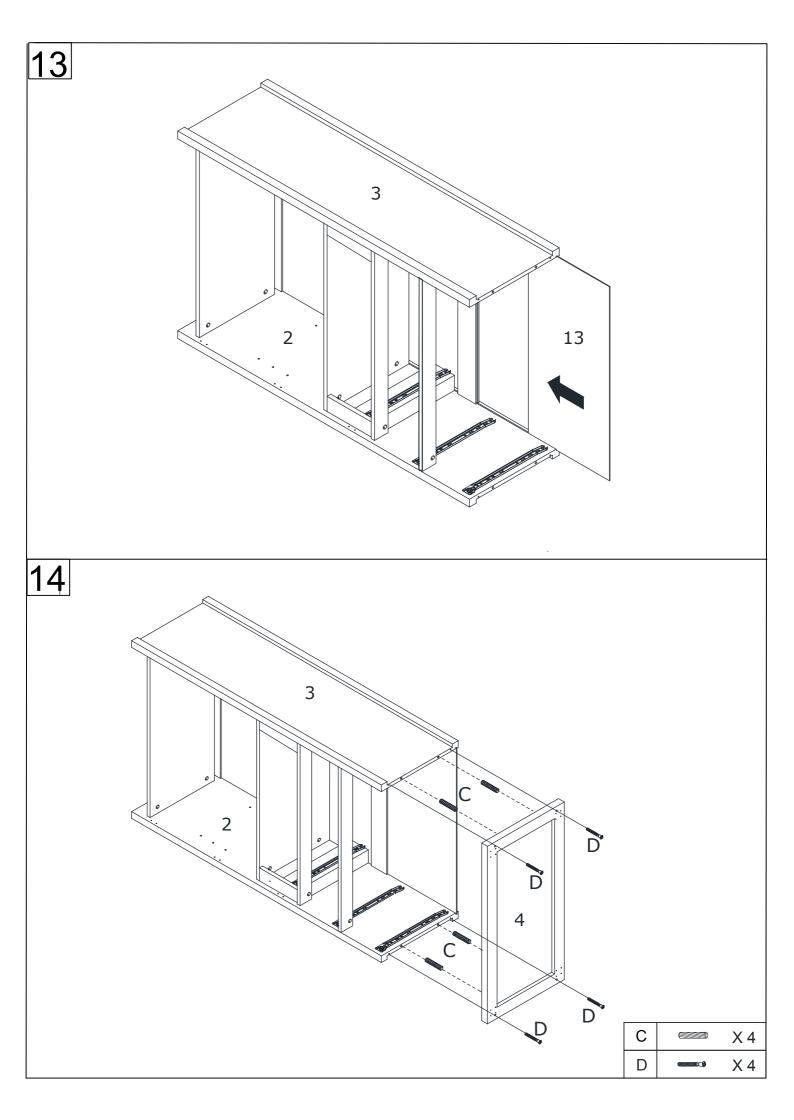

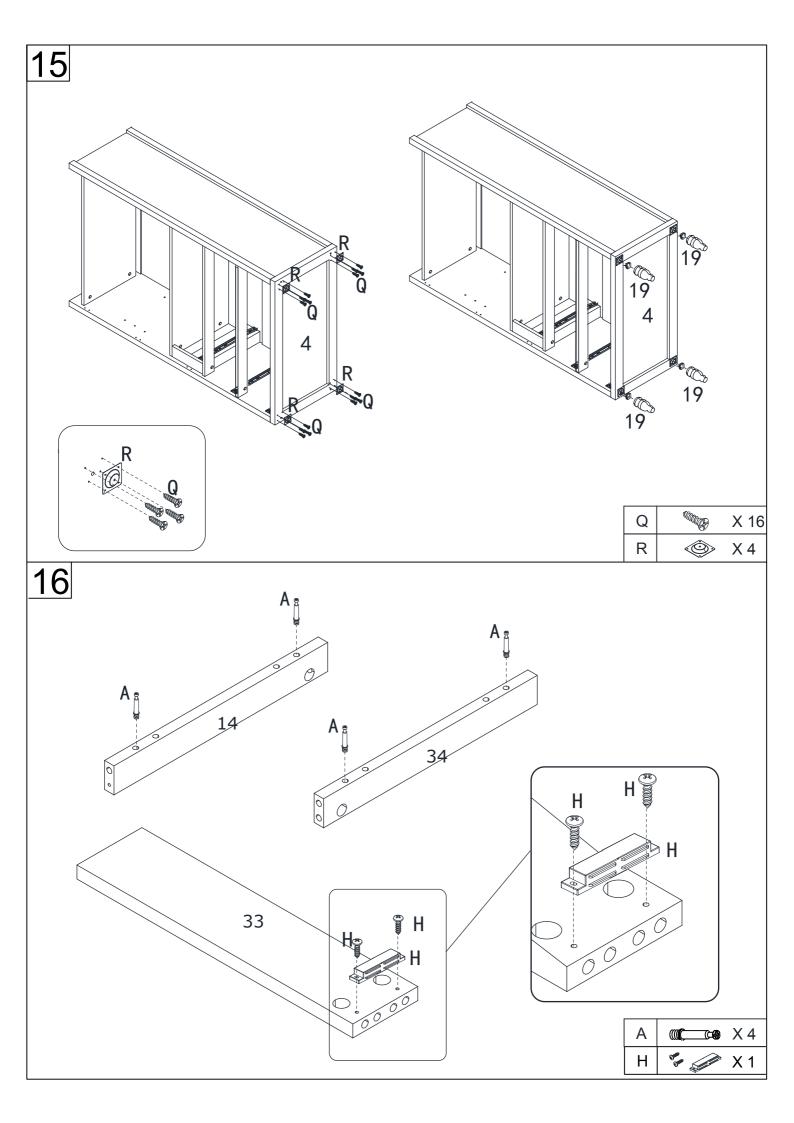


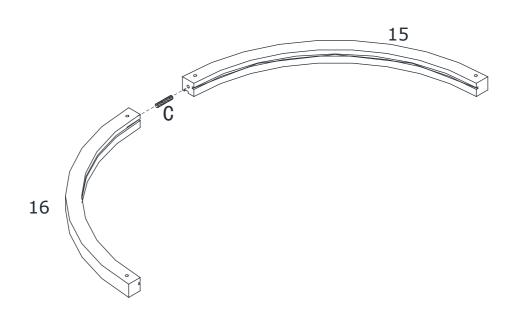


C X1

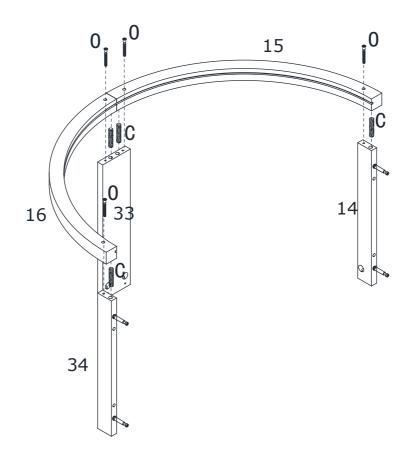


С		X 4
0	N. T. Sandan	X 4

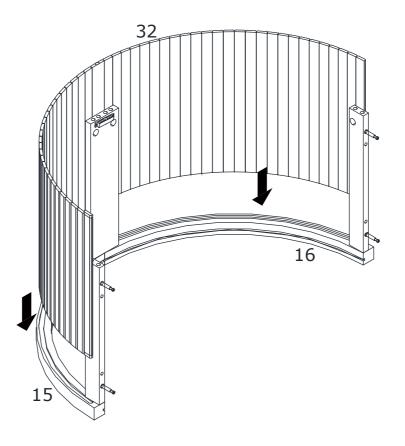

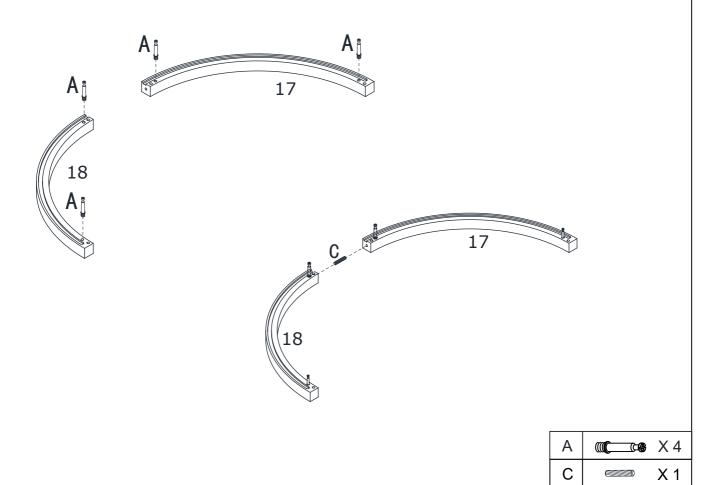





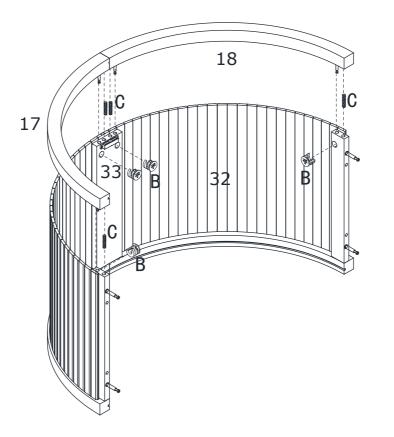



В	X 4
С	X 4


<u>22</u>

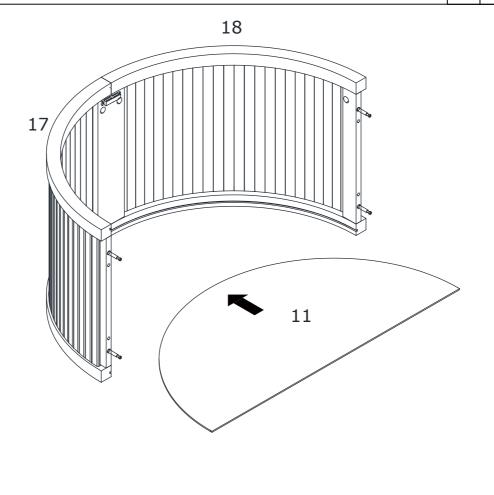

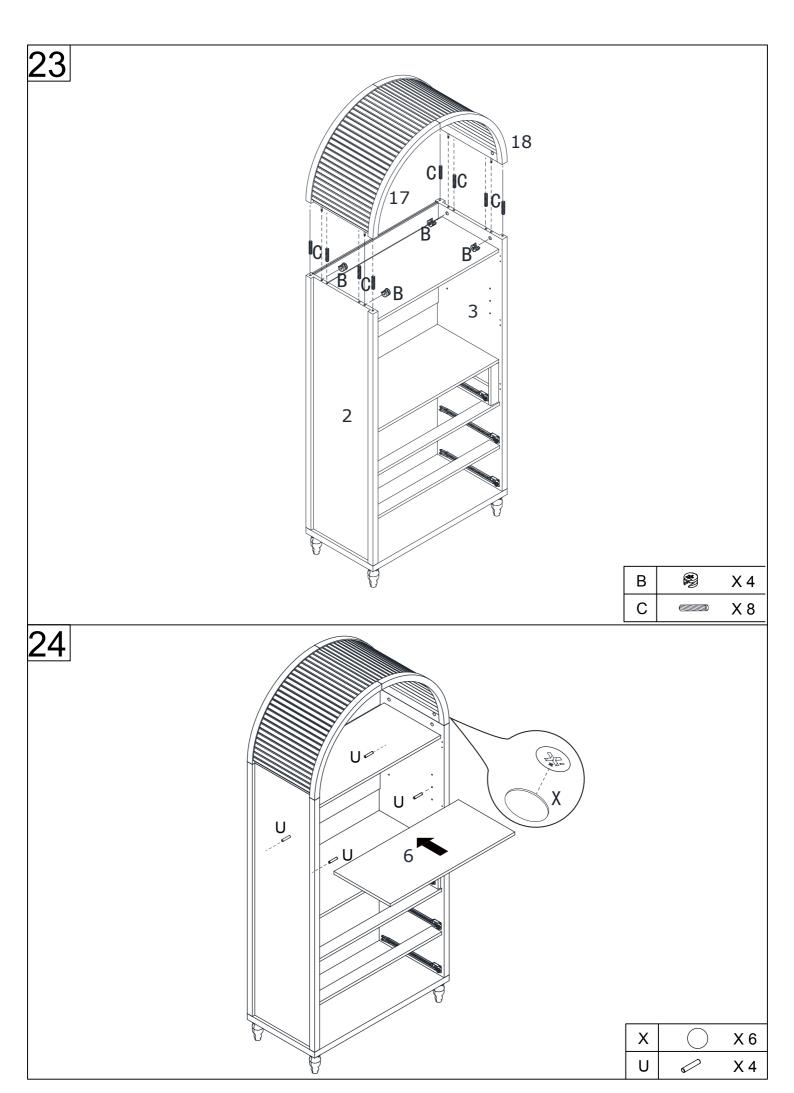


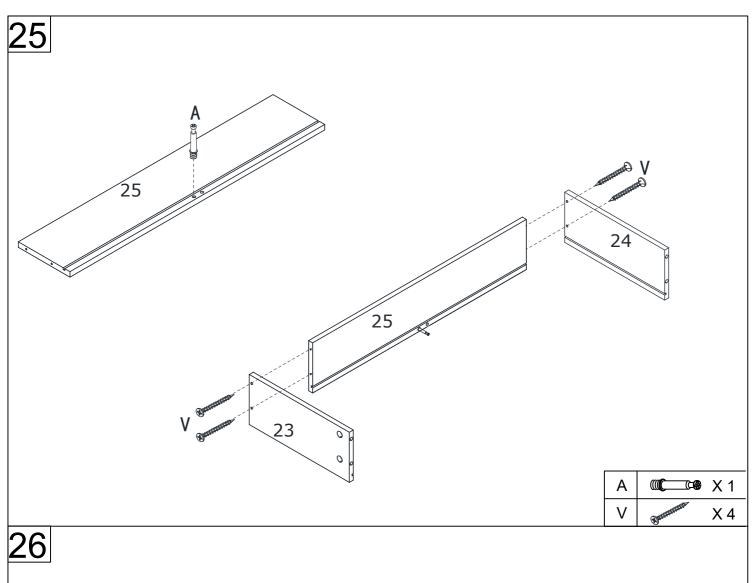

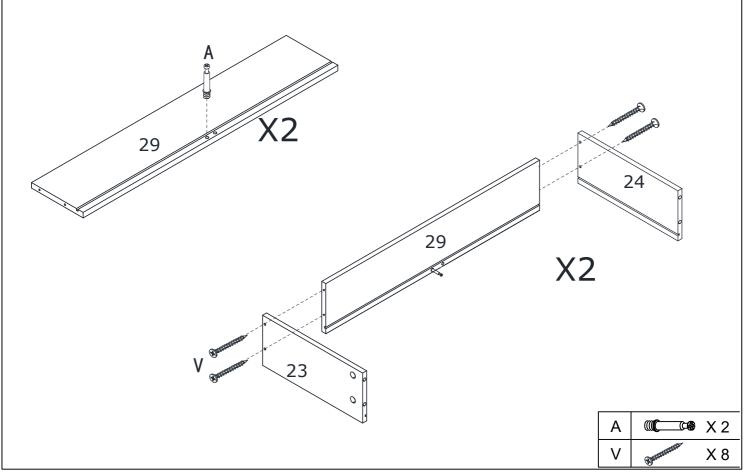


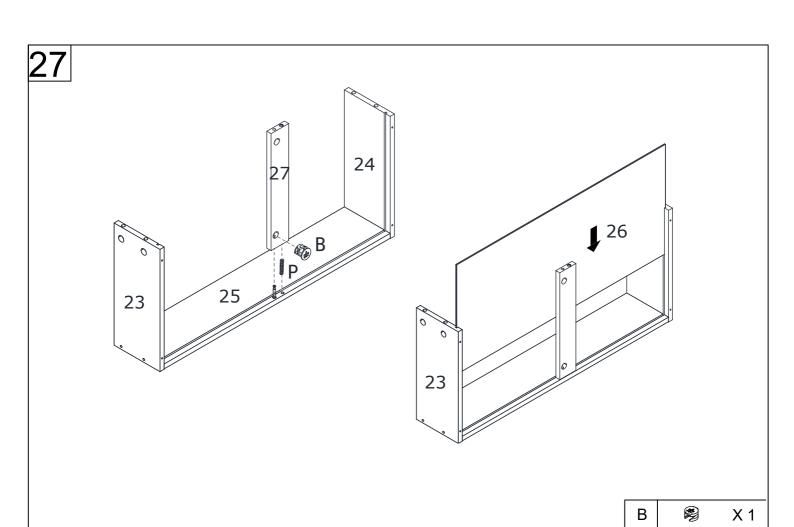


Ρ

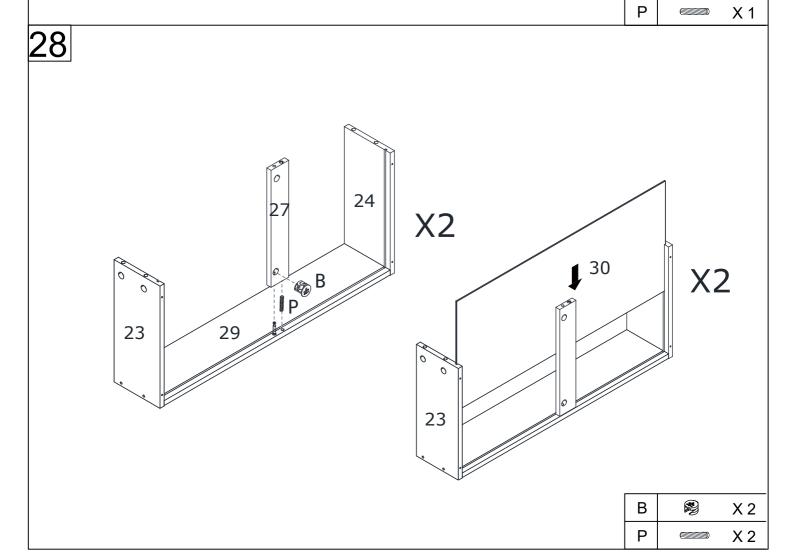




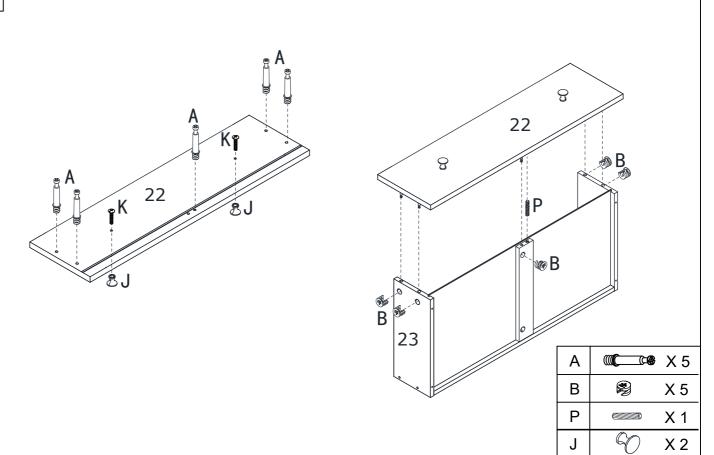





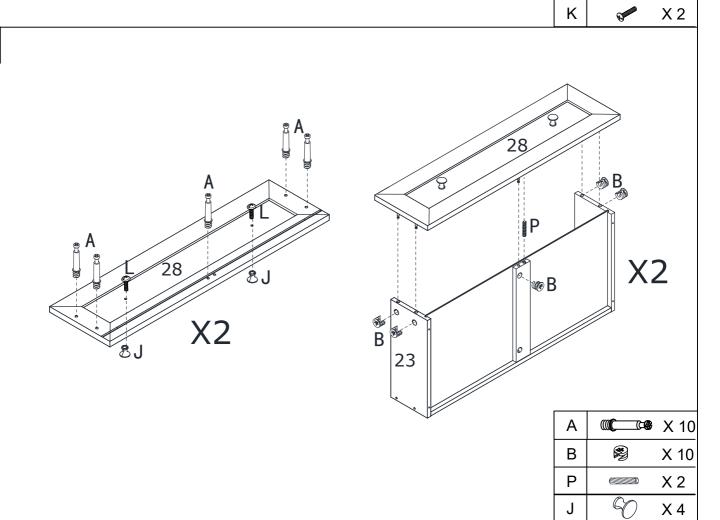

X 4

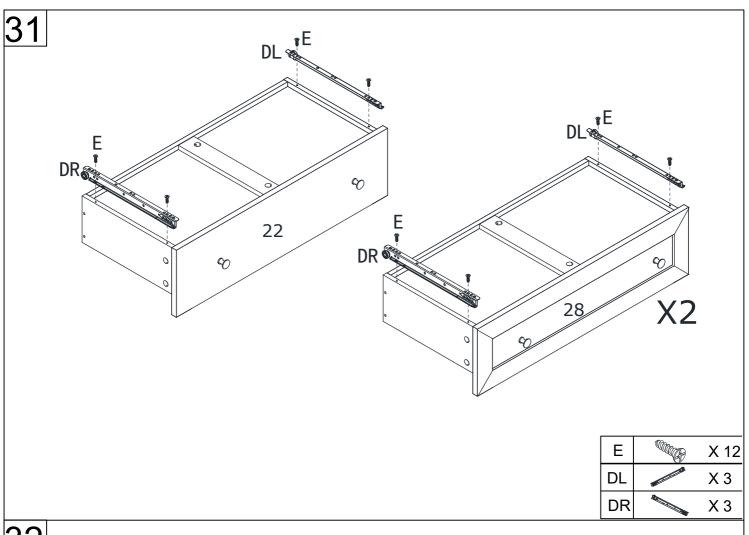

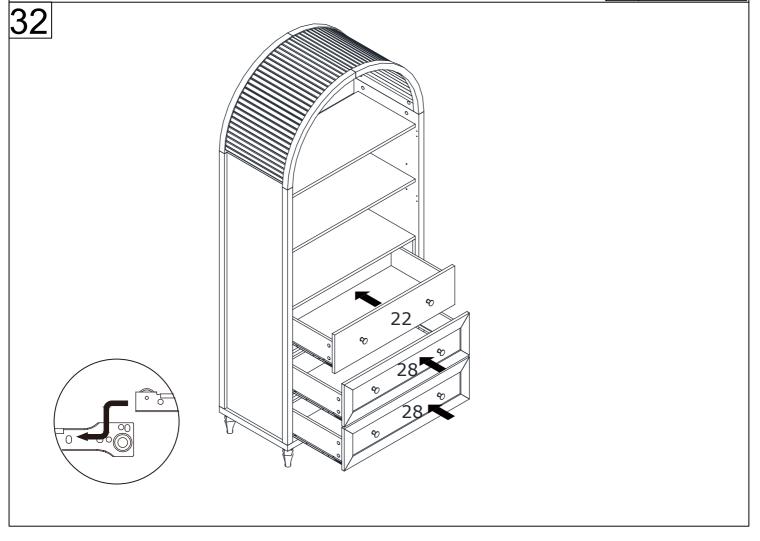

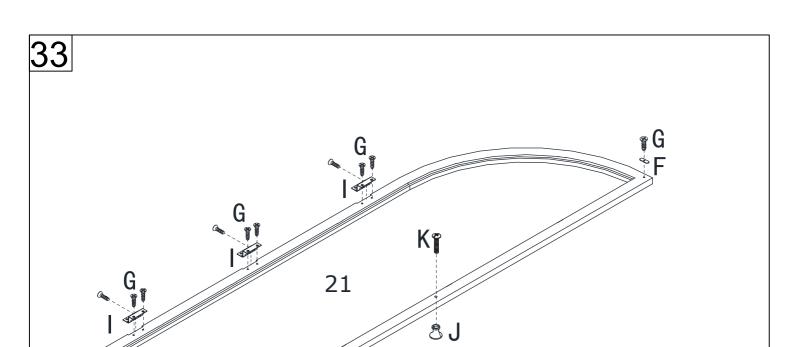

G	<b>EDITION</b>	X 10
F	0	X 1
ı		X 3
J	80	X 1
K	<b>%</b>	X 1

