 


INSTALLATION

 
 
Product Manual

Version: 020563US-01-25A-LY

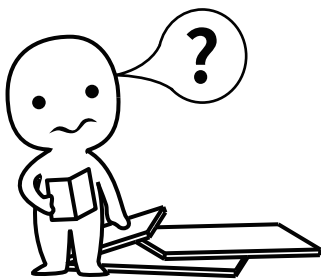


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

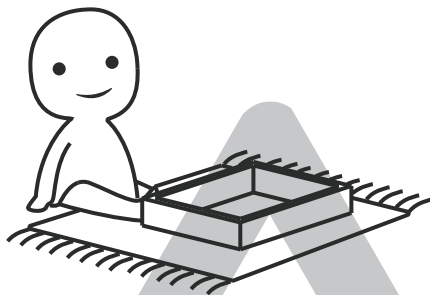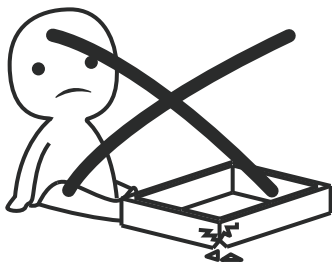



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

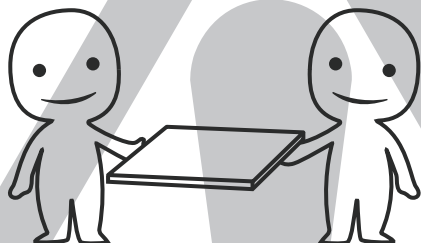

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

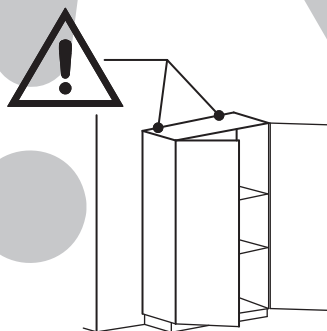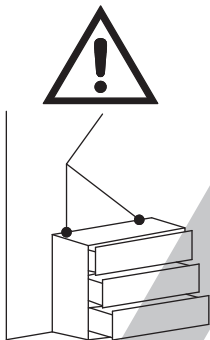

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

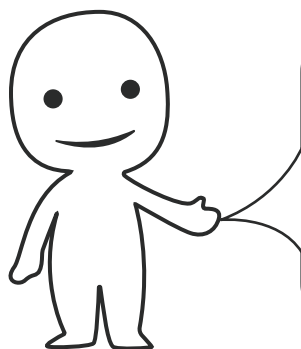


Please prepare the following tools

   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 44

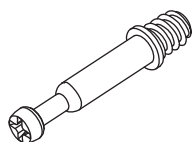

Ø 6 x 35 mm

 B x 48




Ø 14 x 9 mm

C x 38




Ø 6 x 30 mm

 D x 4




Ø 6 x 15 mm

 E x 6




Ø 4 x 20 mm

 F x 14




Ø 4 x 30 mm

 G x 24




M6 x 20 mm

 H x 4

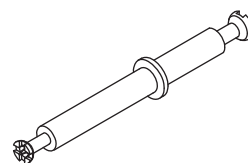


Ø 6 x 71 mm

 I x 2

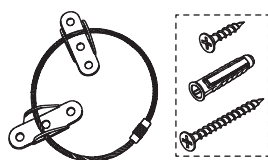

x2

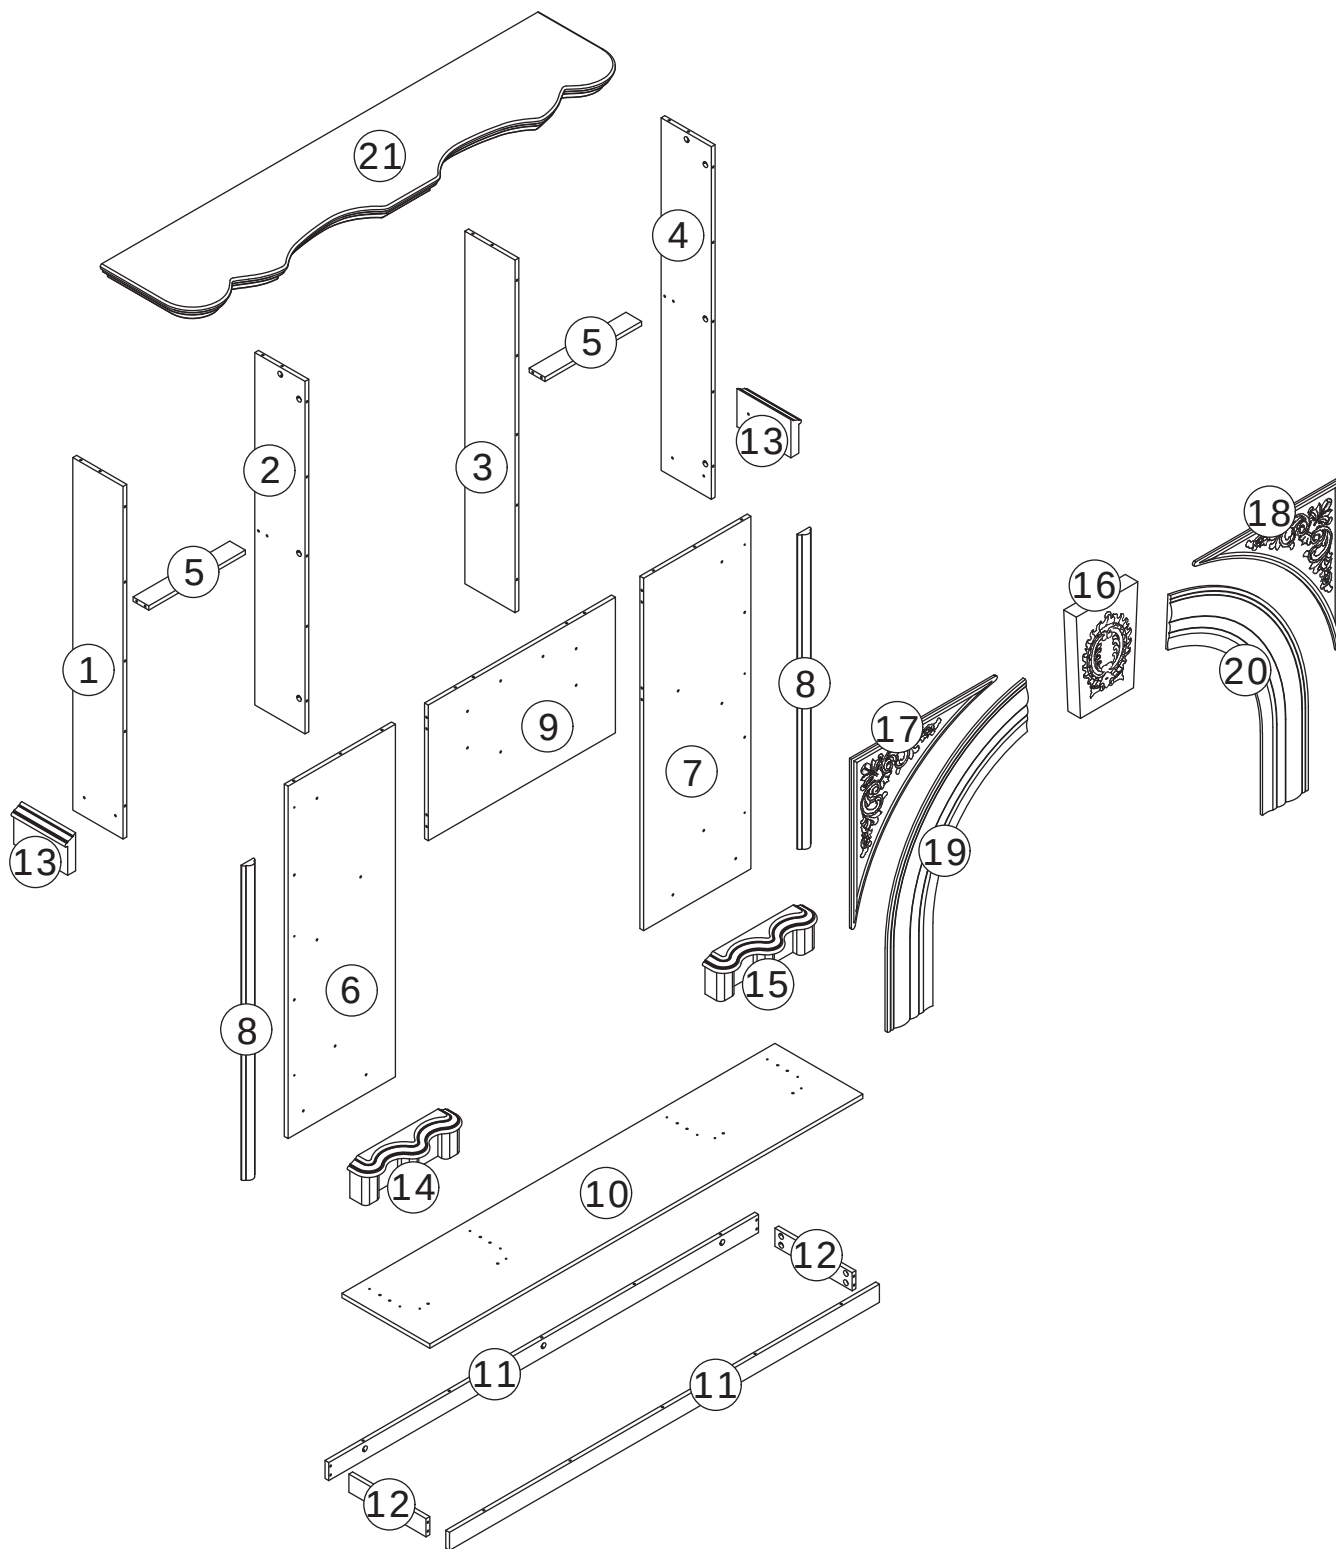 


⚠ WARNING




















Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



 
*This is a permanent label.
Do not remove!*

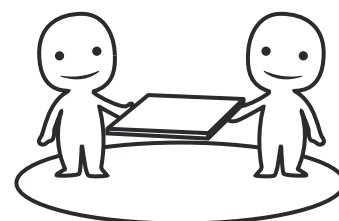





ASSEMBLED BY 2 ADULTS

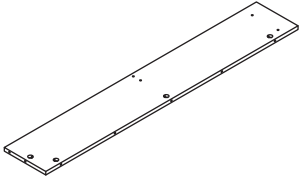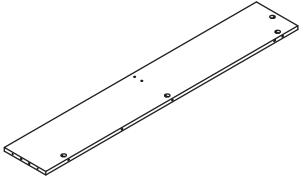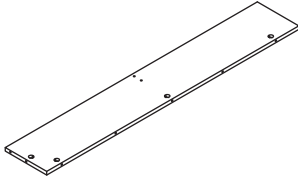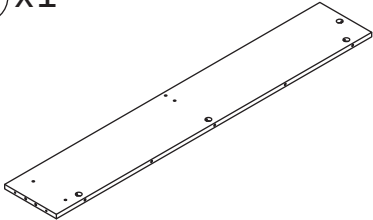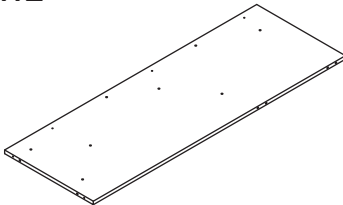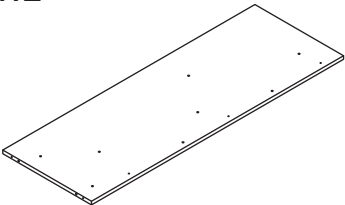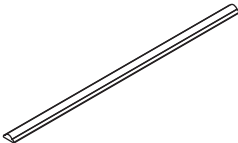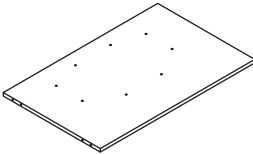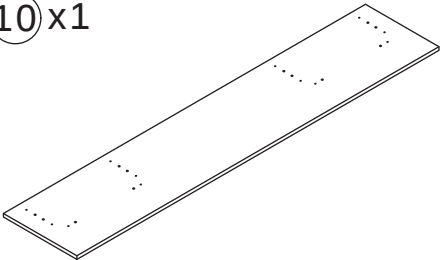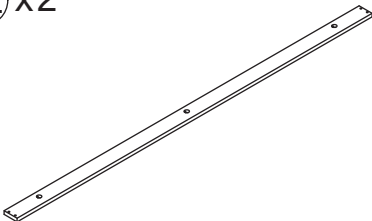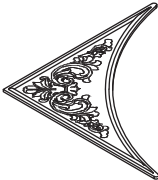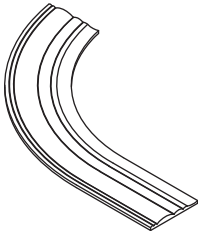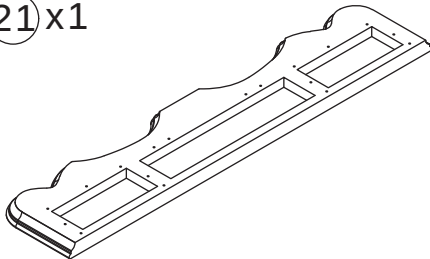                 ① x1 	② x1 	③ x1 
④ x1 	⑤ x2 	⑥ x1 
⑦ x1 	⑧ x2 	⑨ x1 
⑩ x1 	⑪ x2 	⑫ x2 
⑬ x2 	⑭ x1 	⑮ x1 
⑯ x1 	⑰ x1 	⑱ x1 
⑲ x1 	⑳ x1 	㉑ x1 
5/22		

  
 
1

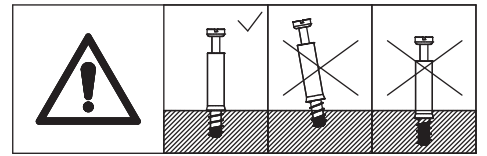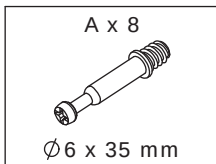

   
 
Screw eccentric rod A onto plates 1, 2, 3, and 4.

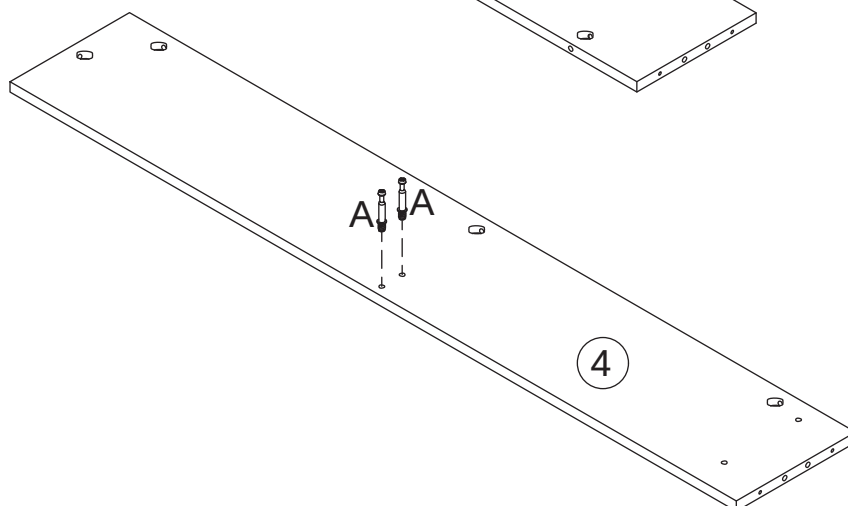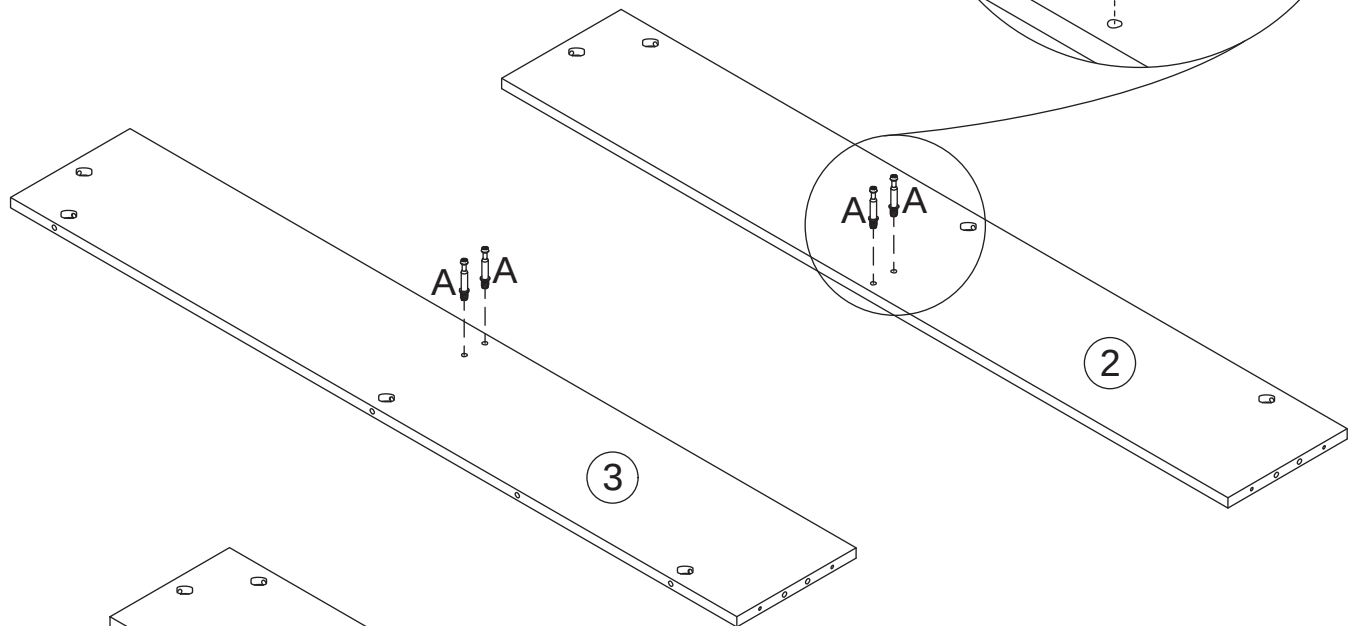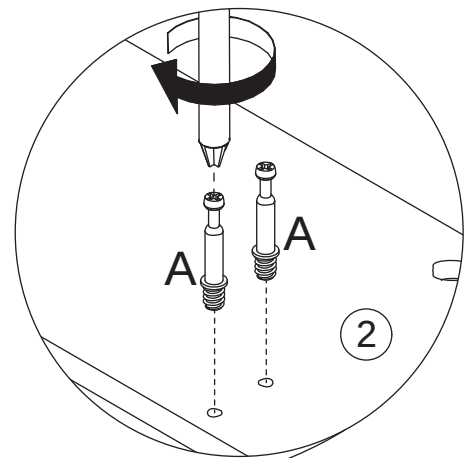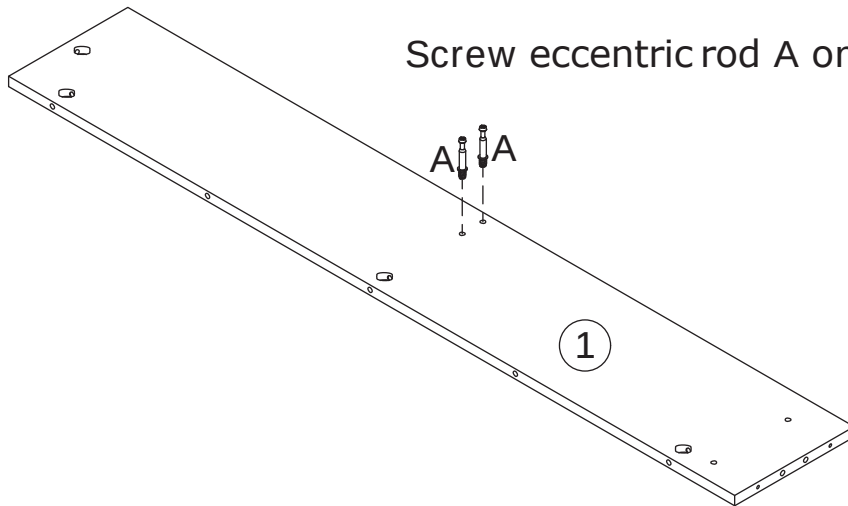




2

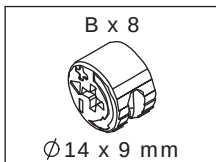  

 
 
Connect plate 5 to plates 1 and 2,
connect plate 5 to plates 3 and 4.
Tighten by turning cam lock B clockwise.

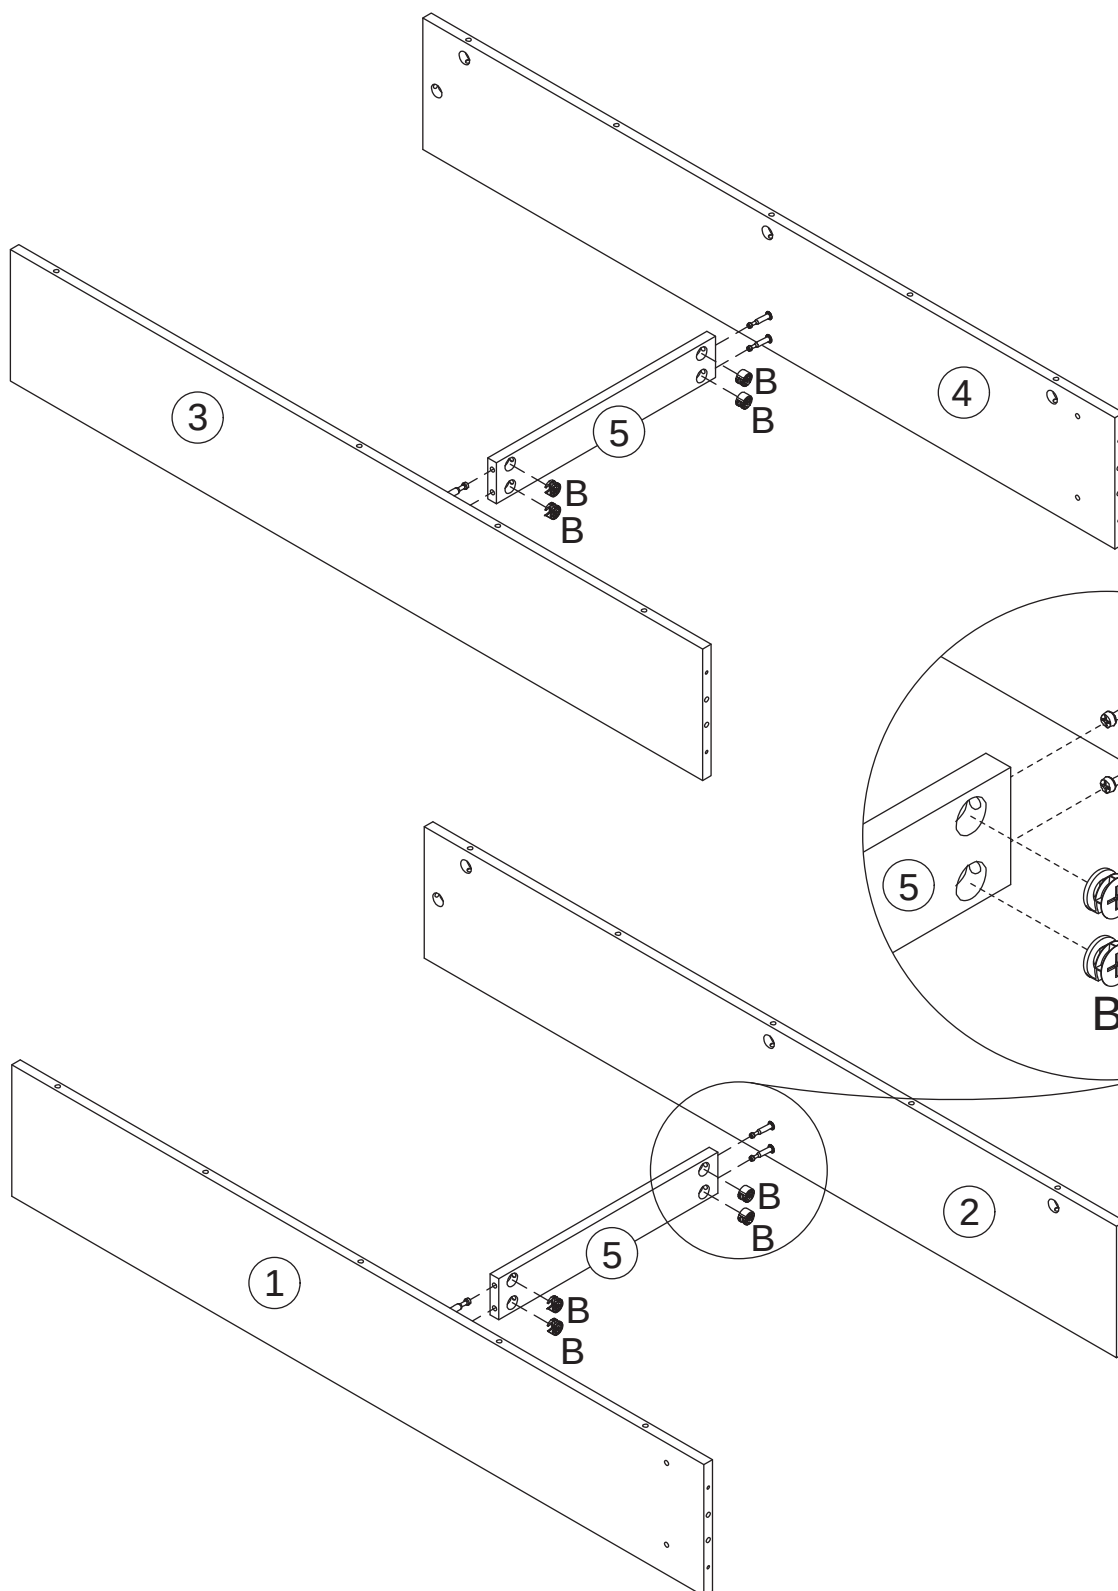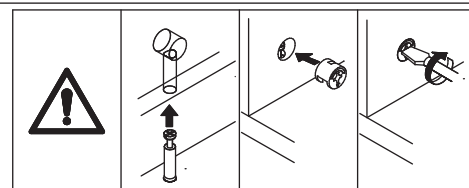

3

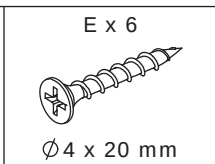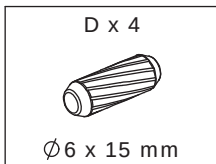   

  Connect plate 8 to plates 6 and 7 respectively using wooden dowel D and secure with screw E.

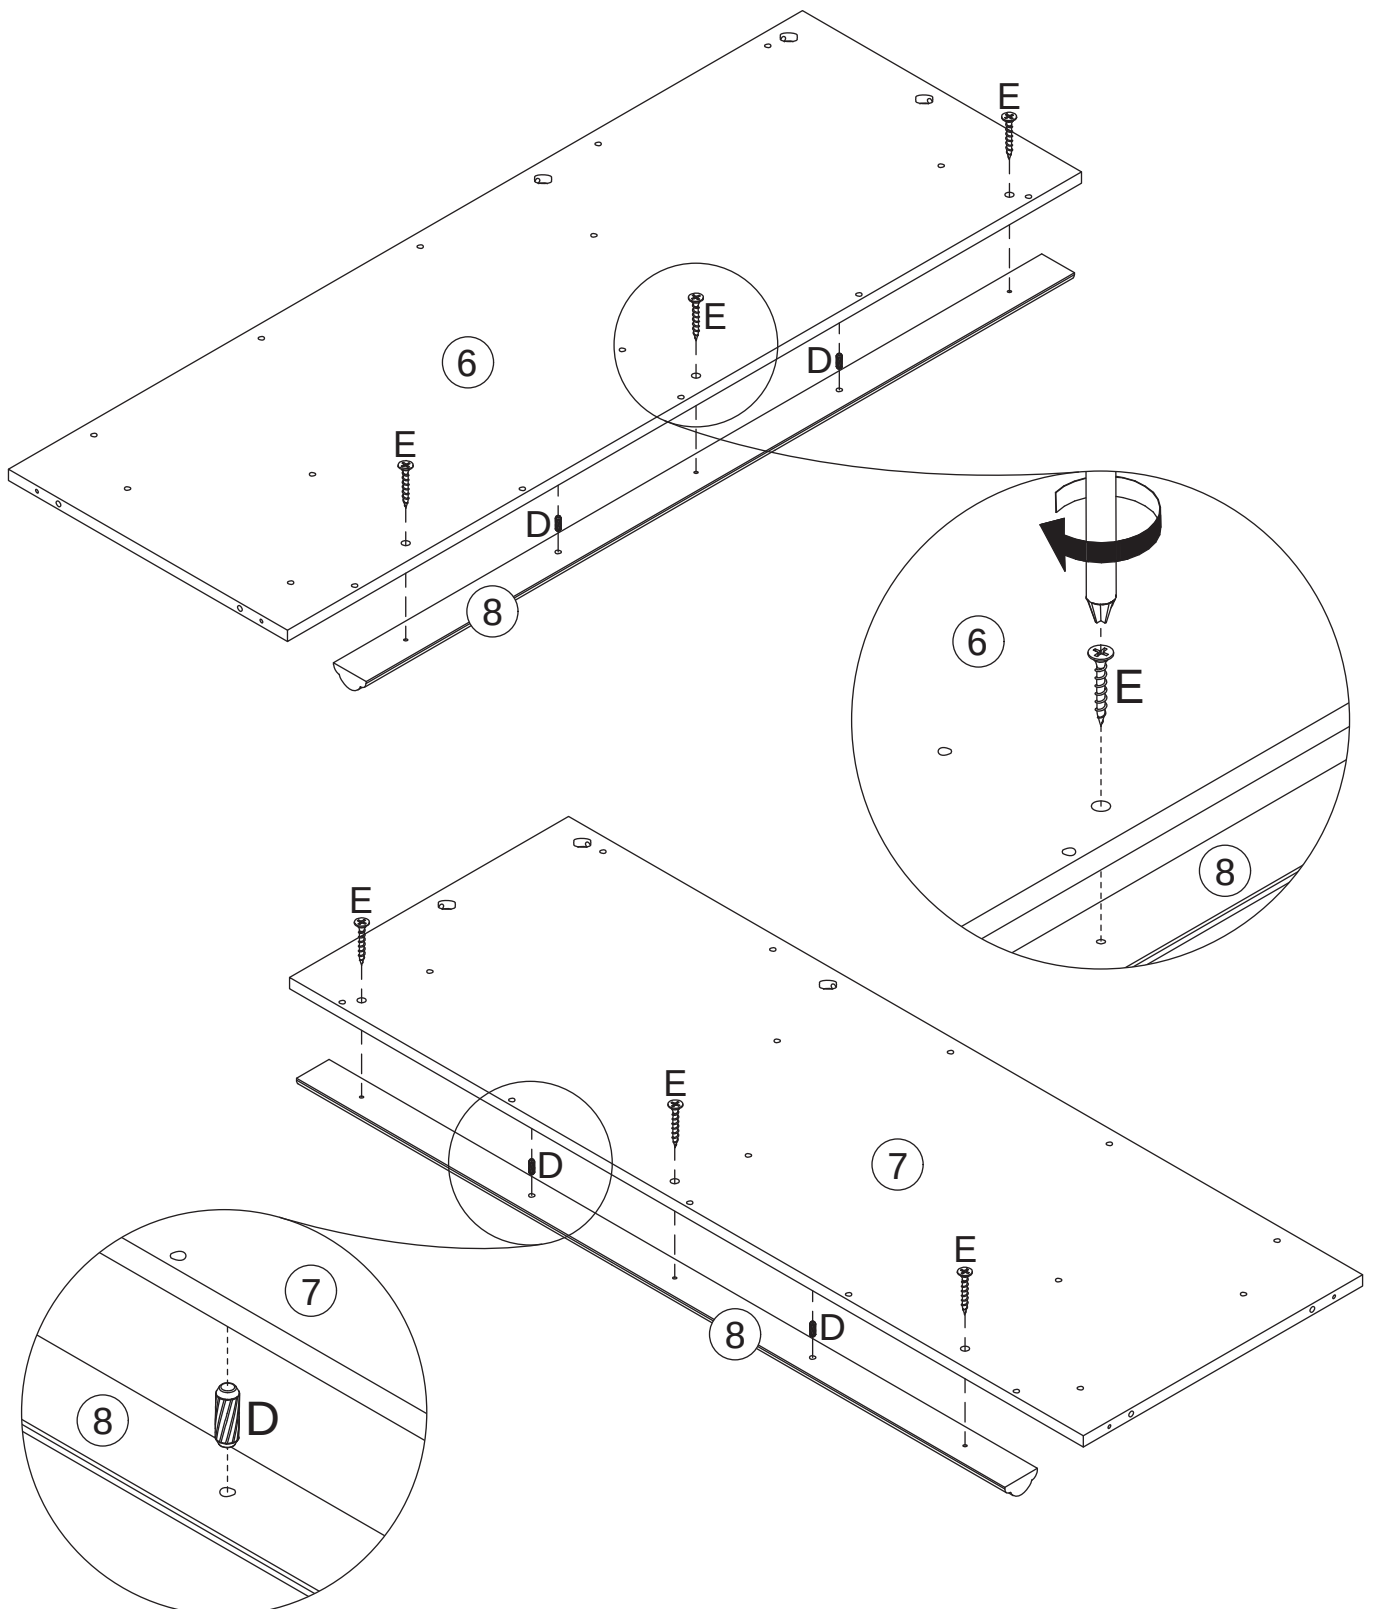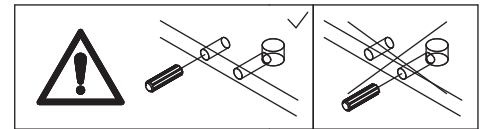

4


A x 6





B x 6






C x 4

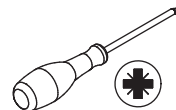

 
 
Screw eccentric rod A onto plate 6.
Connect plates 1 and 2 to plate 6
using dowel C, then tighten by
turning cam lock B clockwise.

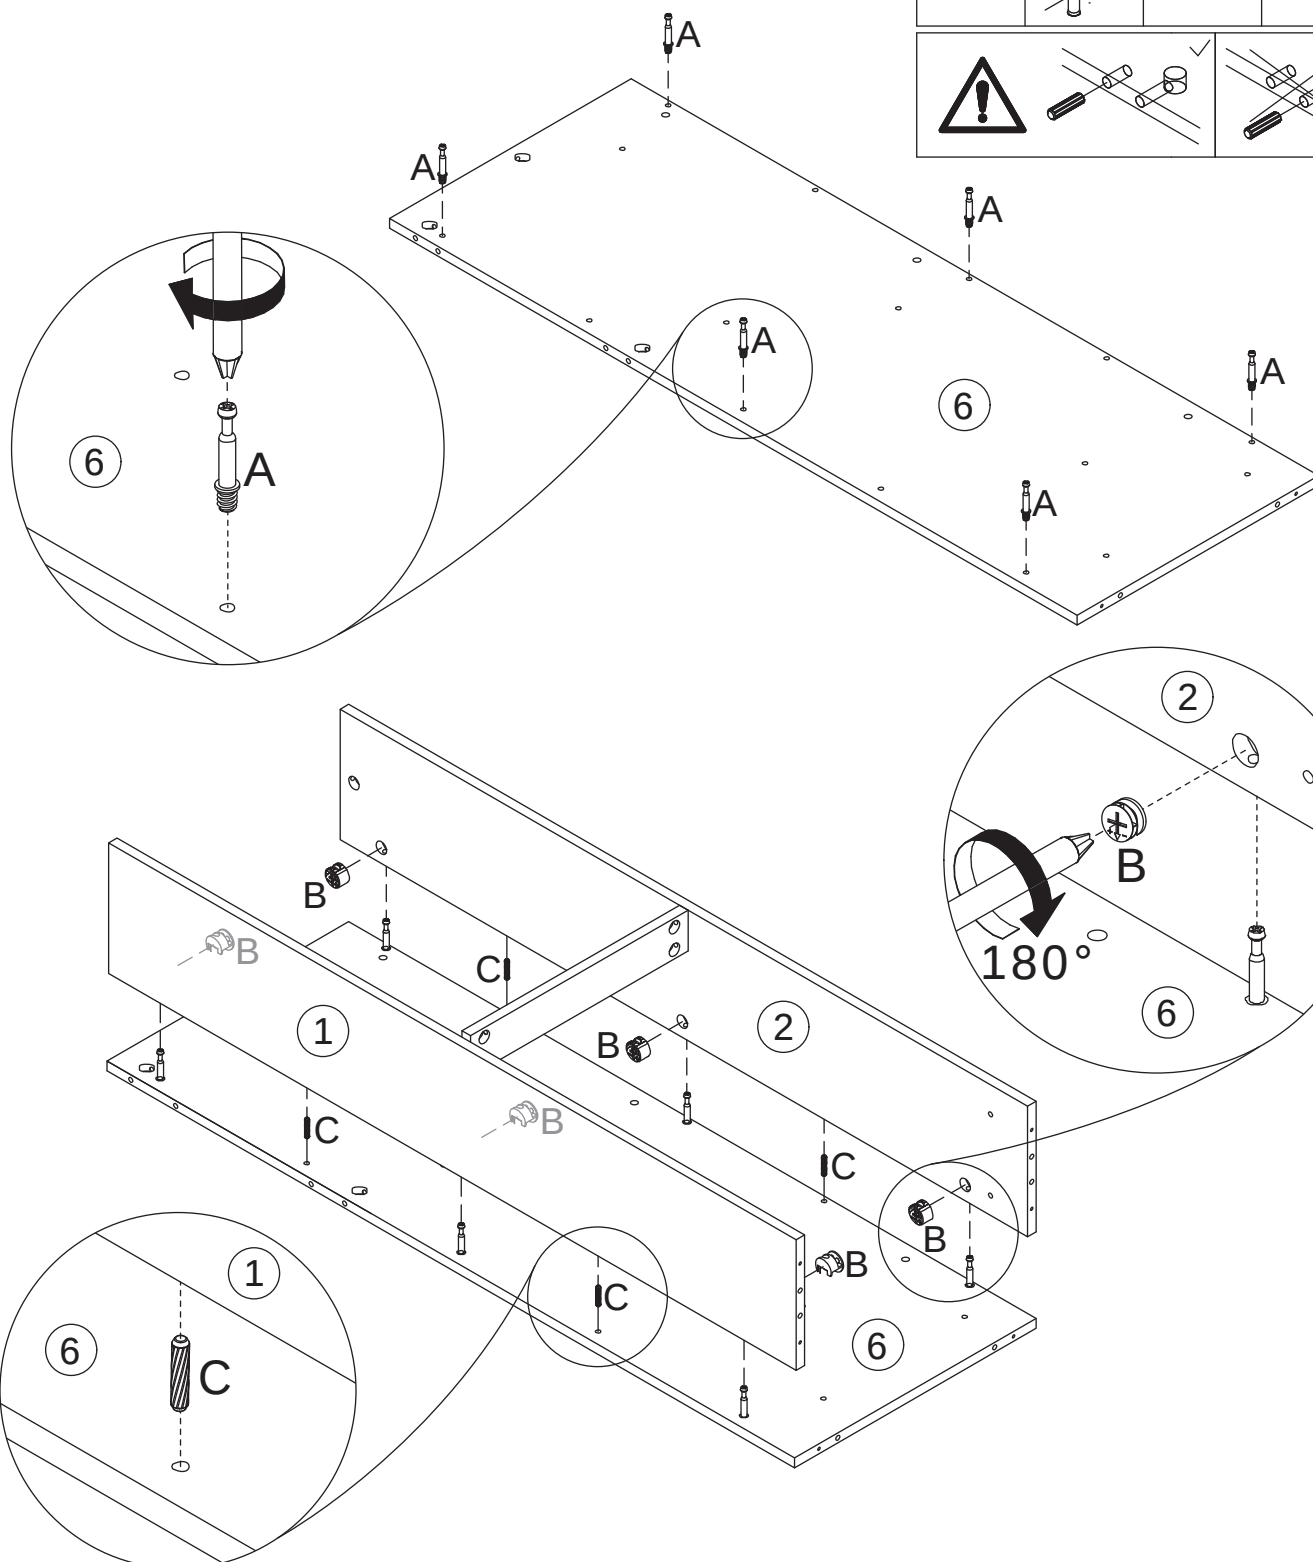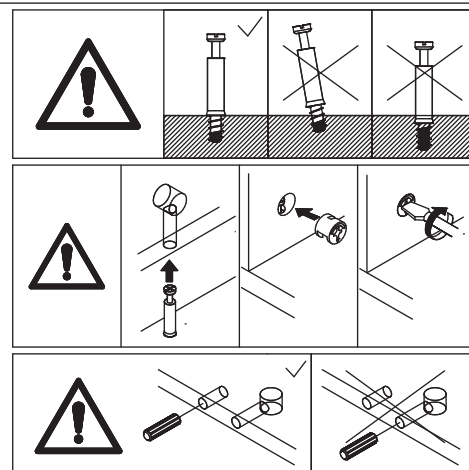

5

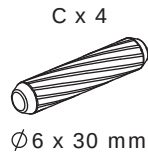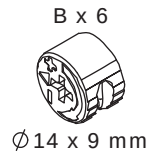   


  Screw eccentric rod A onto plate 7.
 Connect plates 3 and 4 to plate 7 using
 dowel C, then tighten by turning cam
 lock B clockwise.

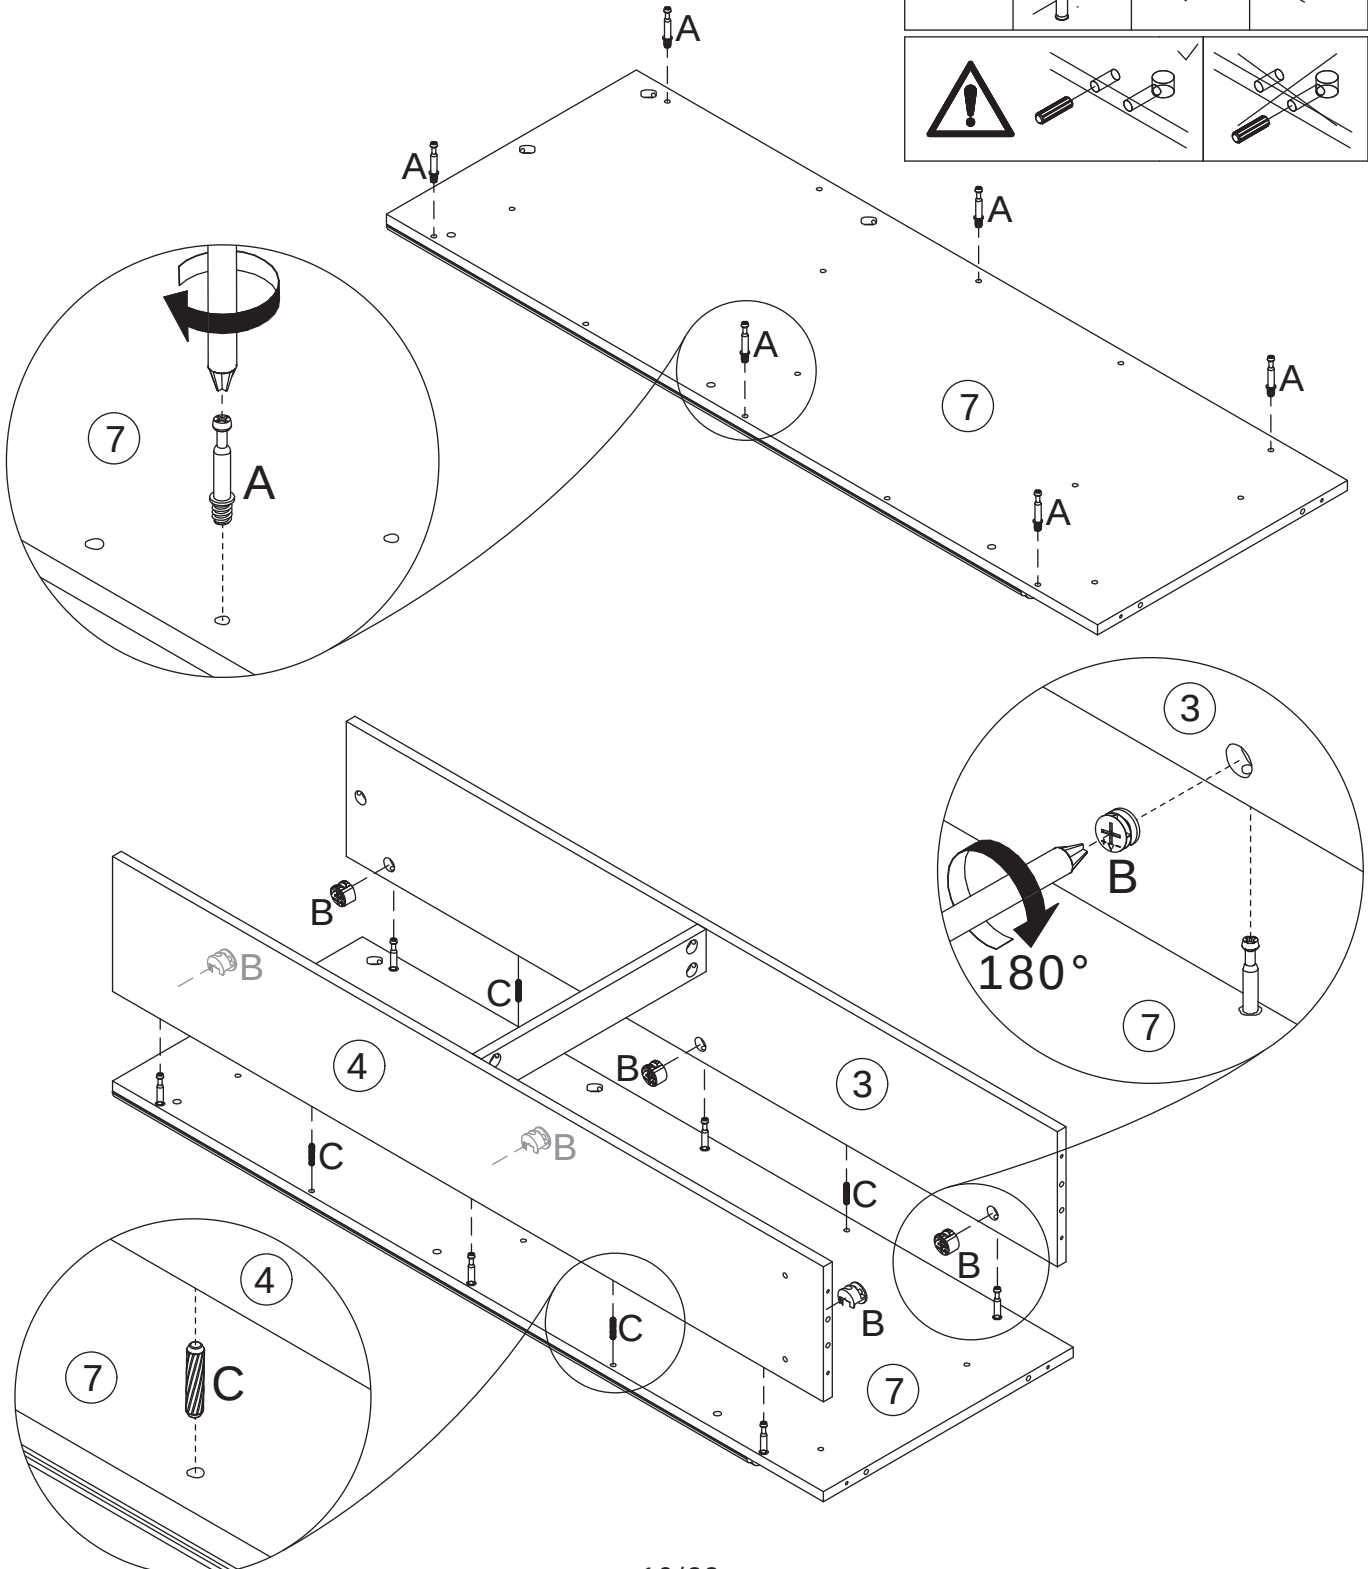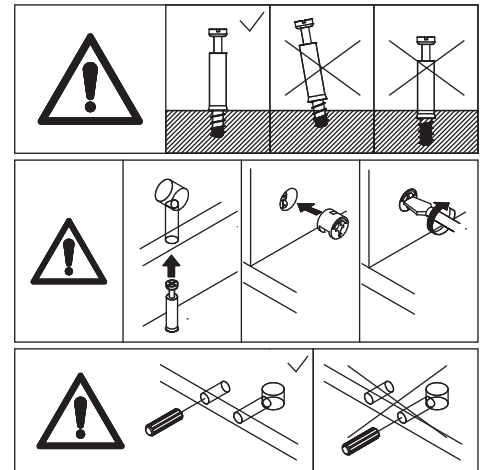


6

 B x 6

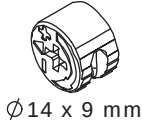


Ø14 x 9 mm

 C x 4

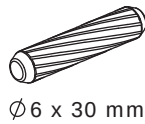


Ø6 x 30 mm


 
H x 4

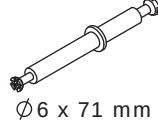


Ø6 x 71 mm

 






 
 
Insert eccentric rod H (4CM) into plate 9, and tighten by turning cam lock B clockwise. Connect plates 6 and 7 to plate 9 using dowel C, then tighten by turning cam lock B clockwise.

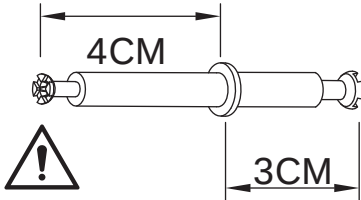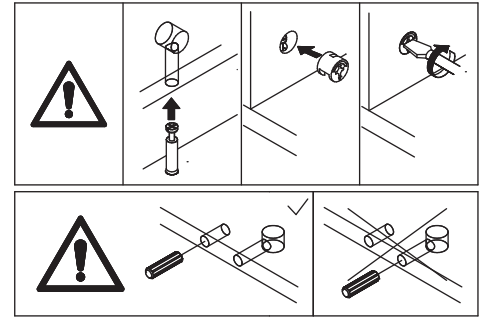

 Make sure that the 4cm section is inserted into plate 9.




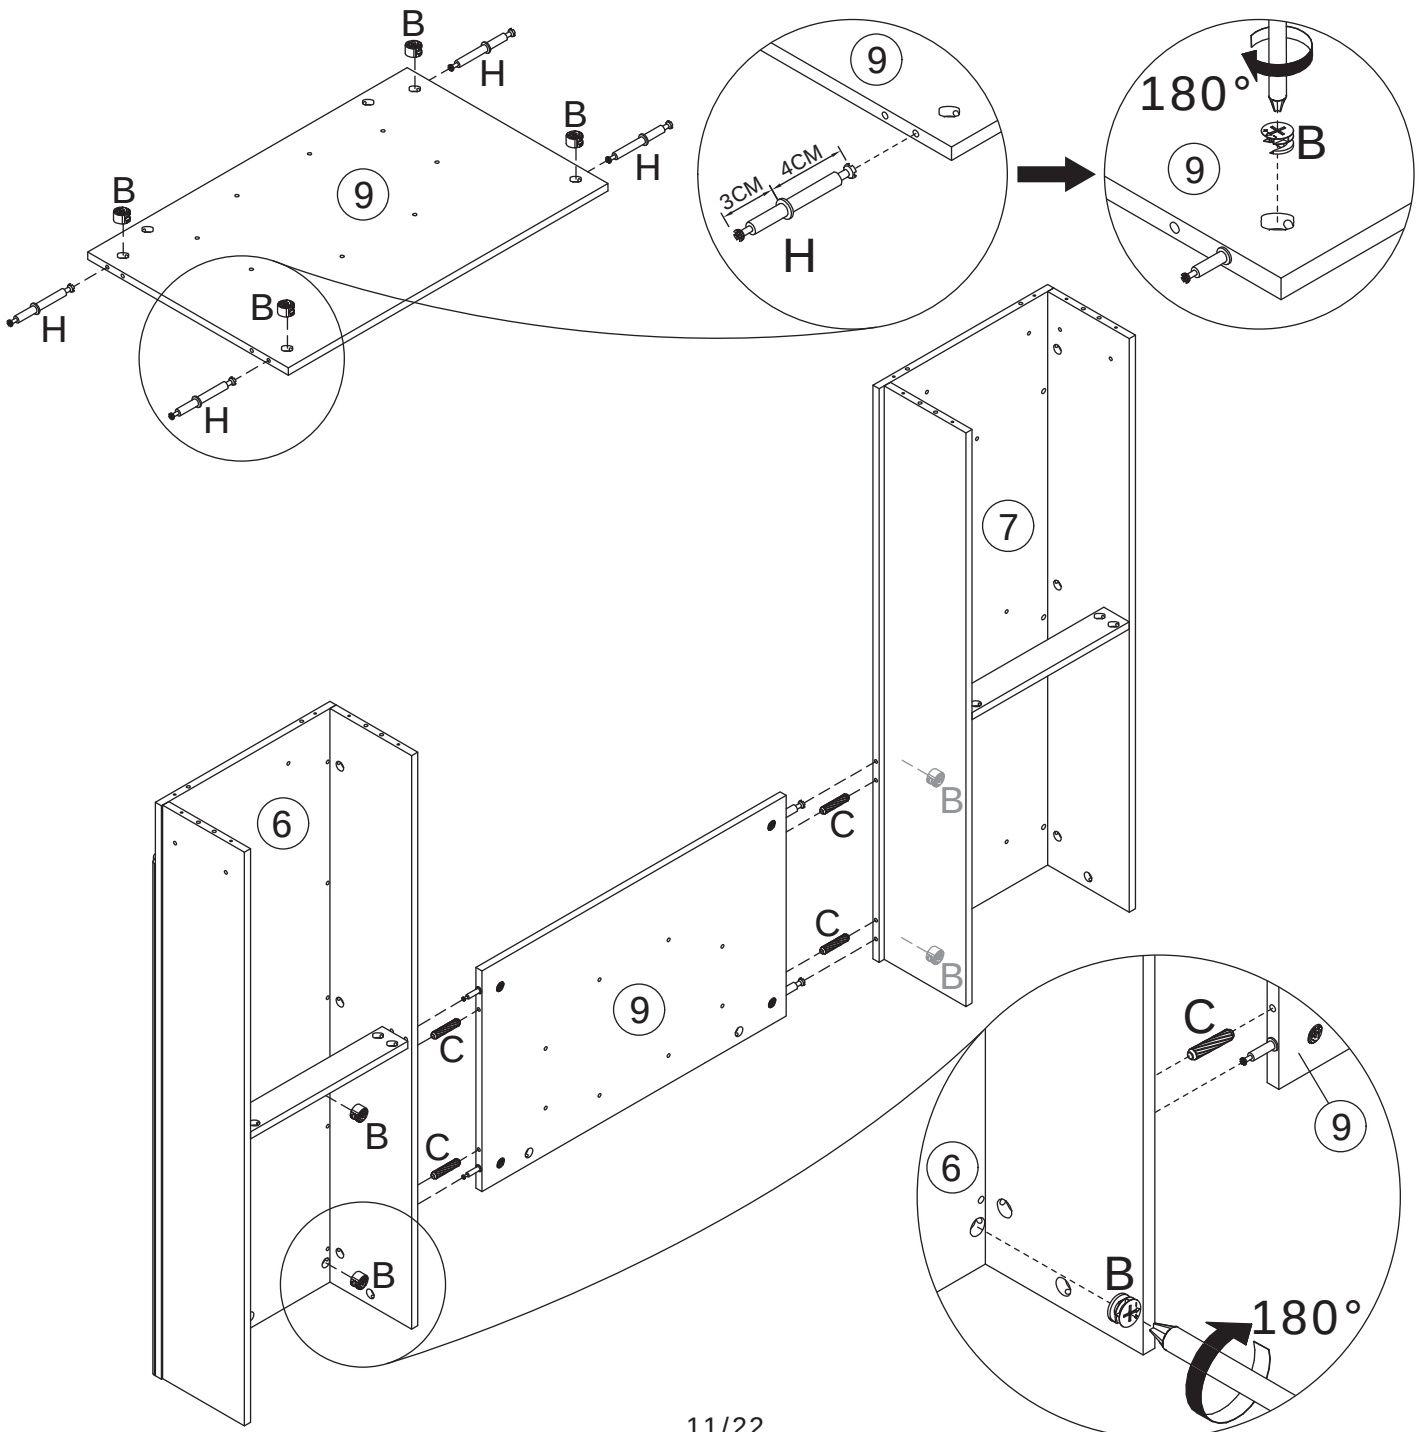


7

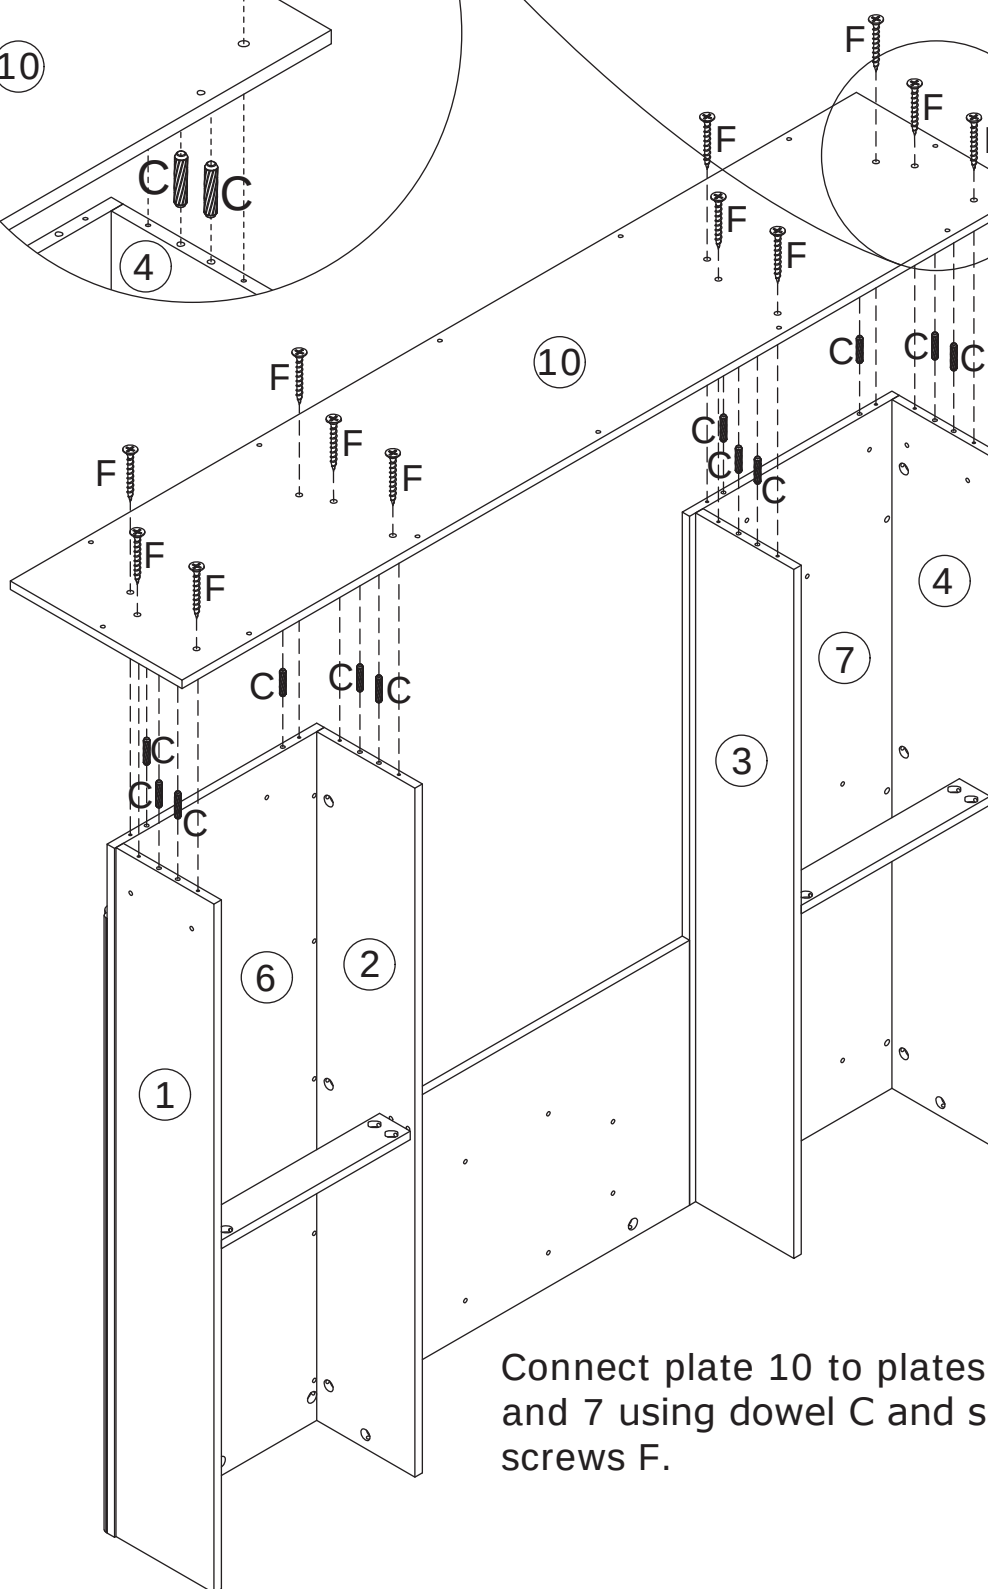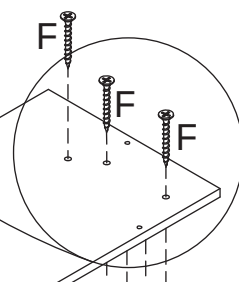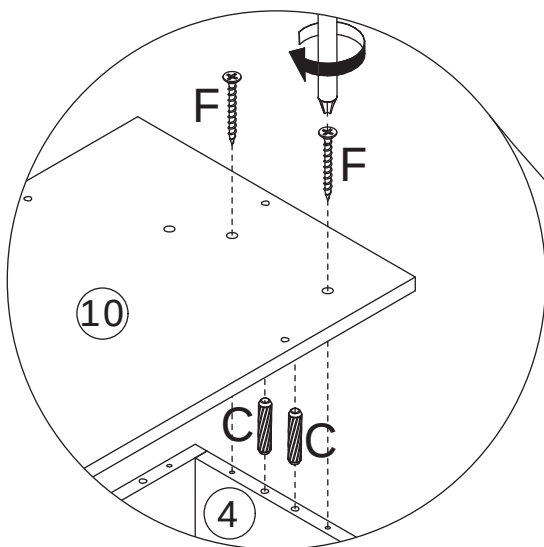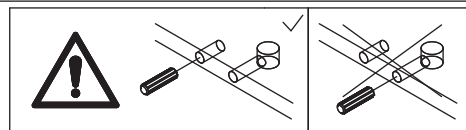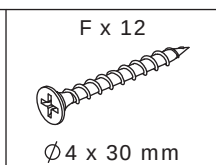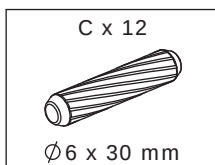       


Connect plate 10 to plates 1, 2, 3, 4, 6, and 7 using dowel C and secure with screws F.

   
 
8

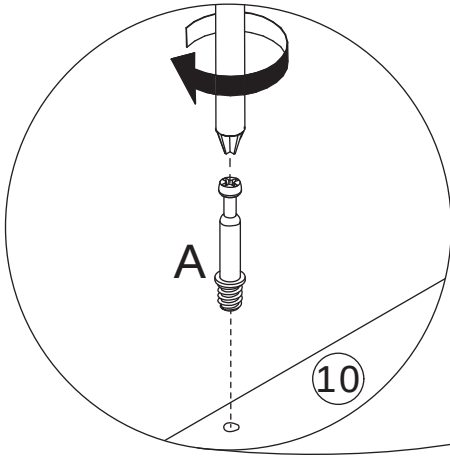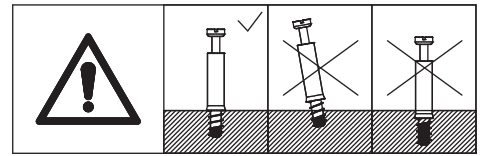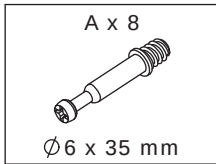

Screw eccentric rod A onto plate 10.


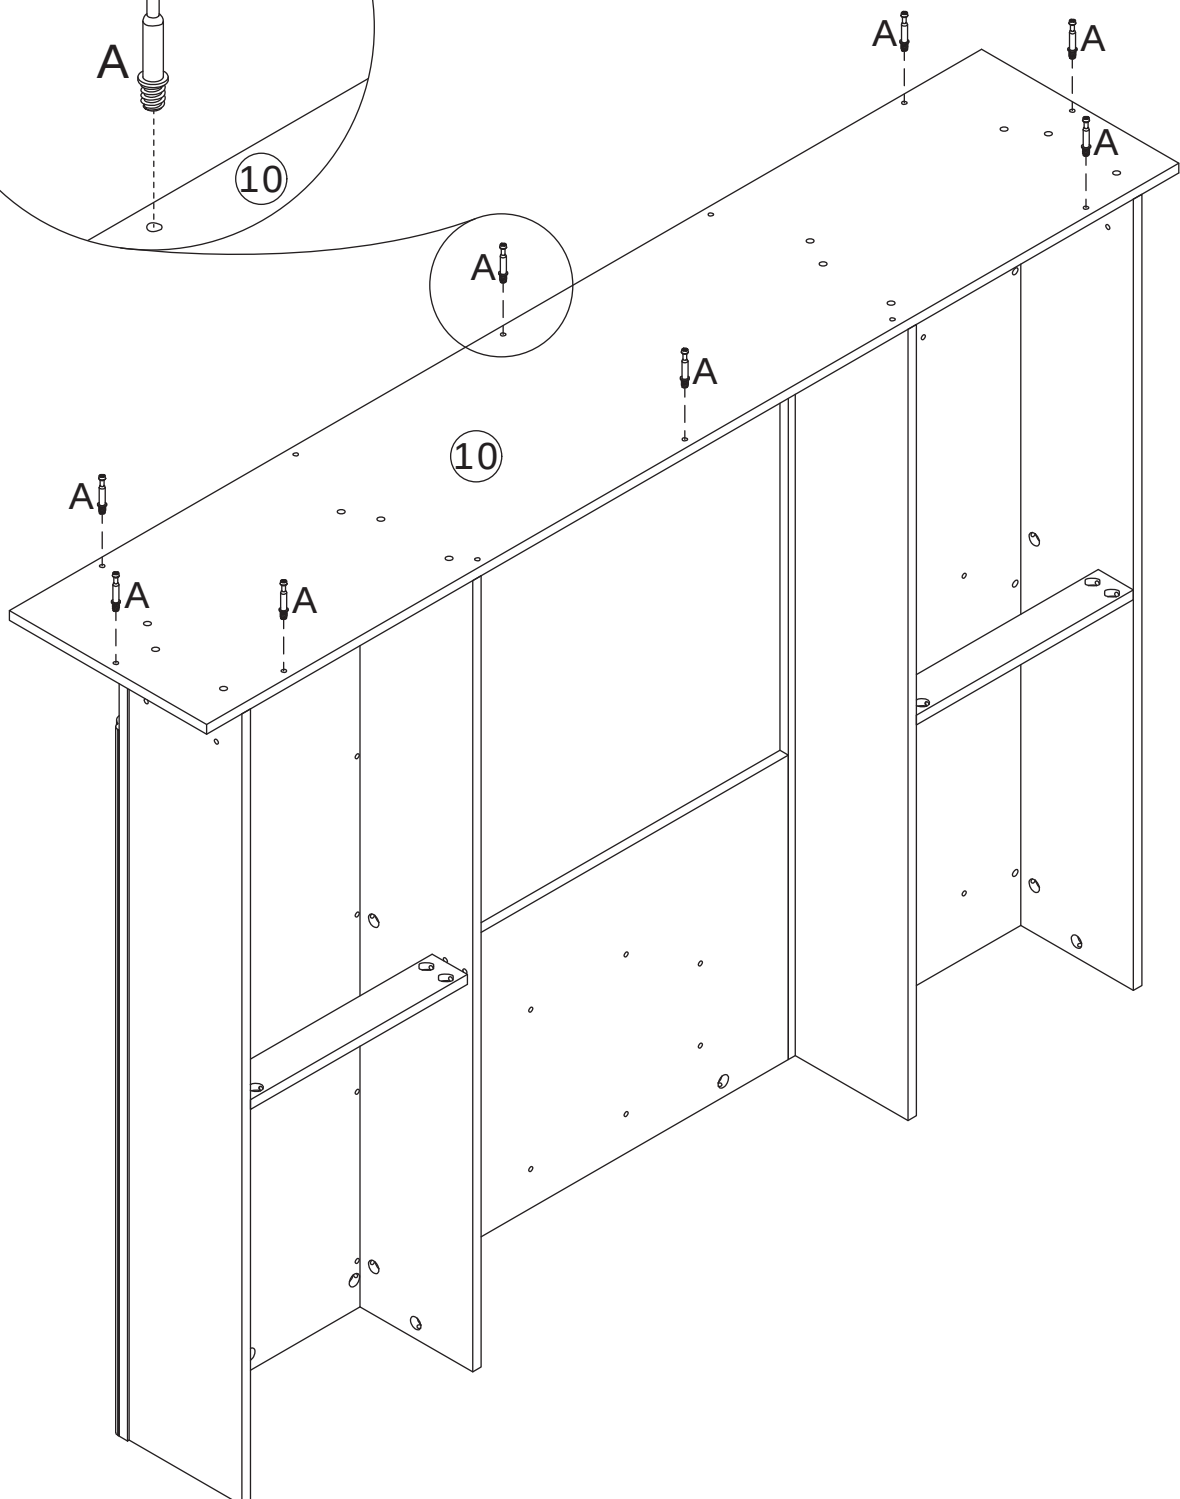 


9


 
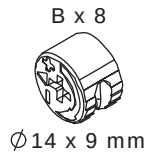 


Screw eccentric rod A onto two pieces of plate 11.


 
 
Connect plate 11 to plate 12, tighten by turning cam lock B clockwise.

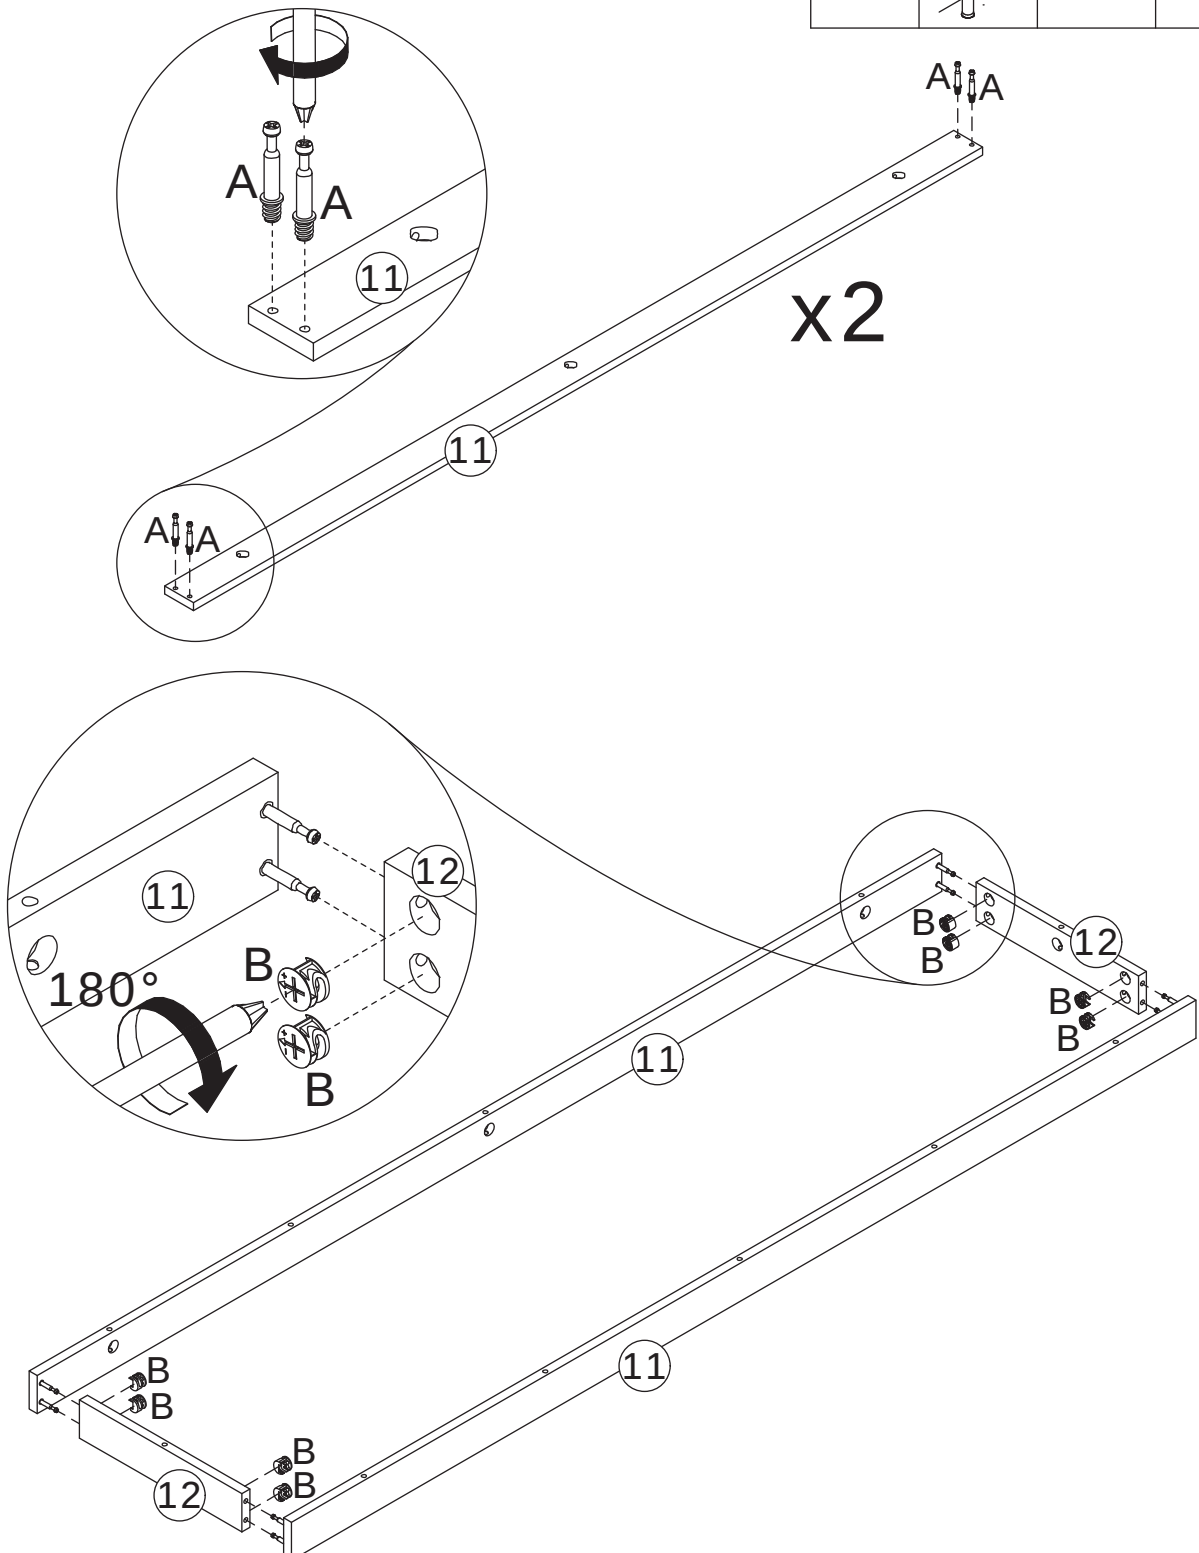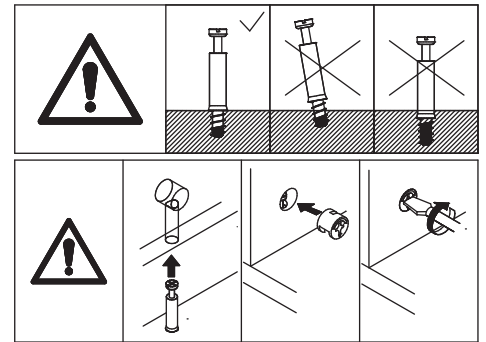



10

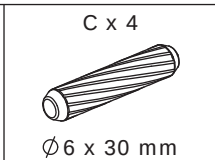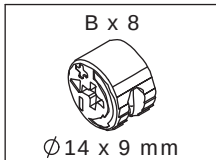   

   
Connect plates 11 and 12 to plate 10 using dowel C, then tighten by turning cam lock B clockwise.

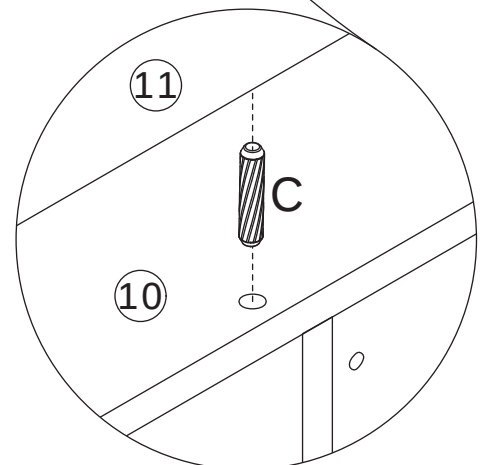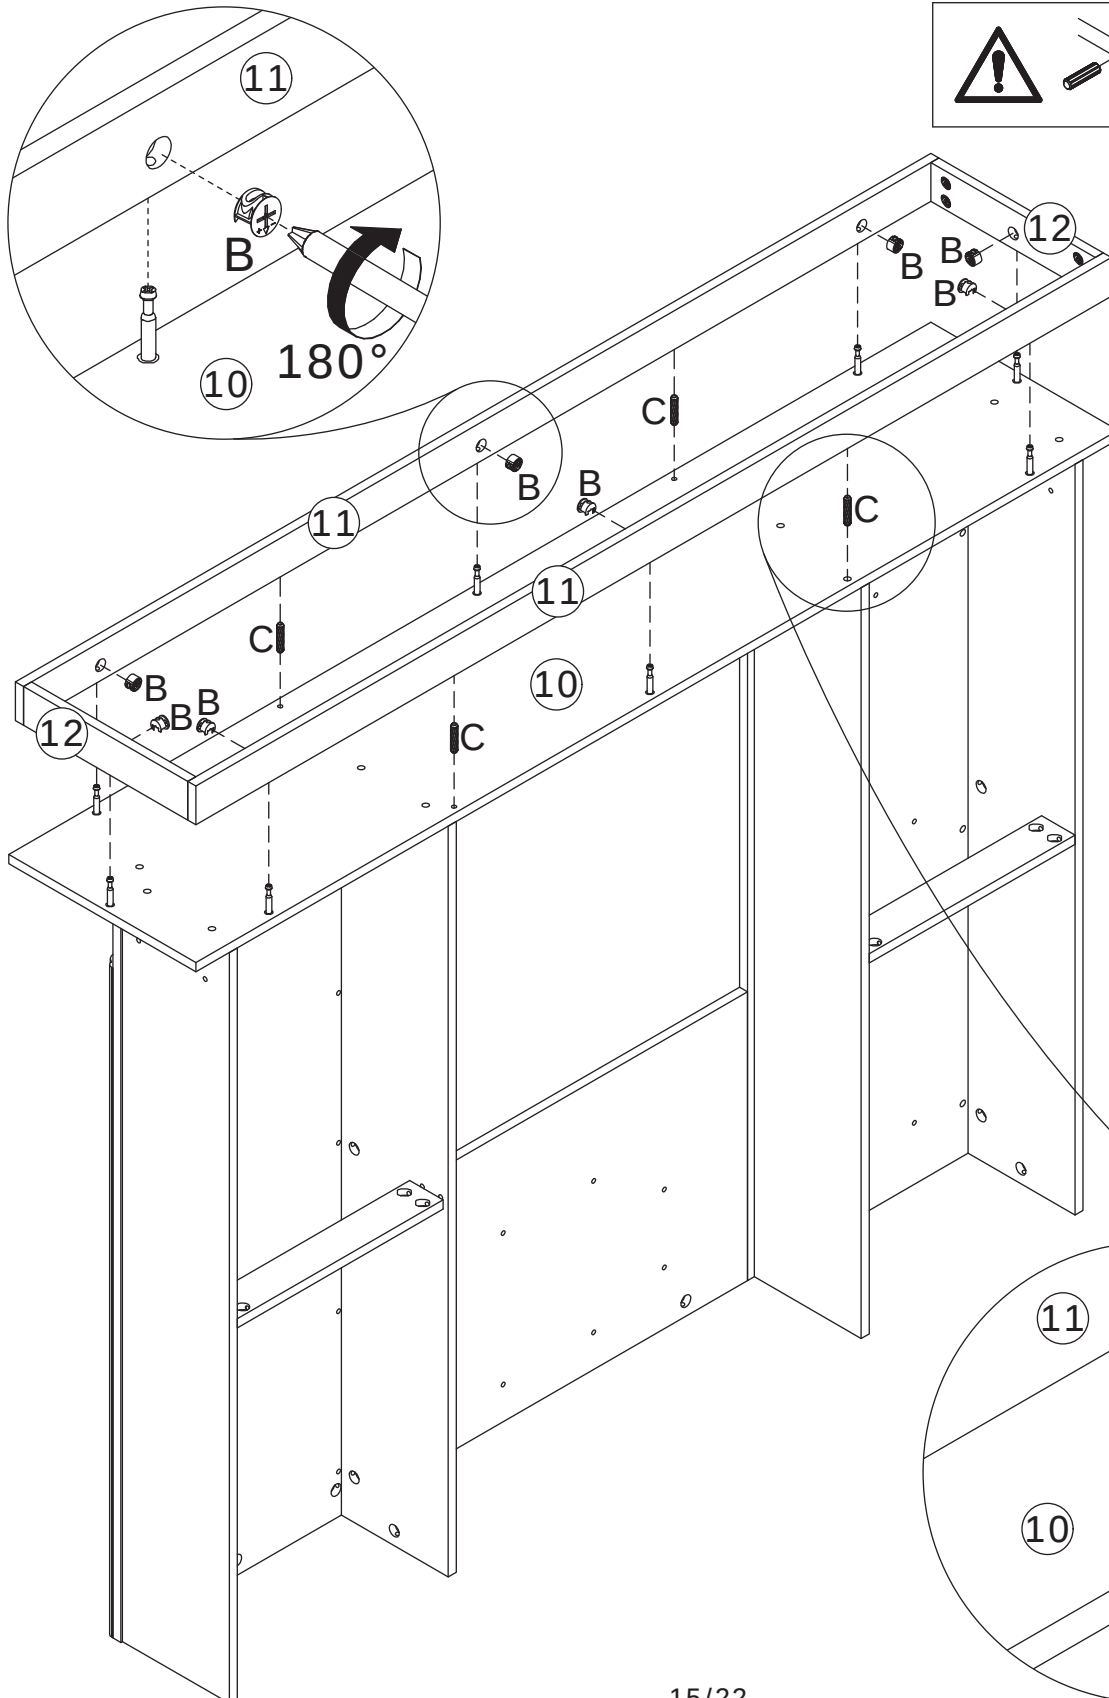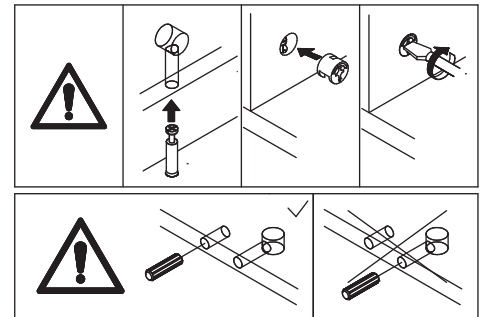

11

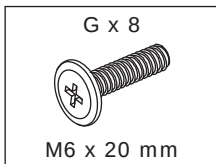  


 Secure plate 13 to plates 1 and 4, plate 14 to plate 6, plate 15 to plate 7 using screws G.



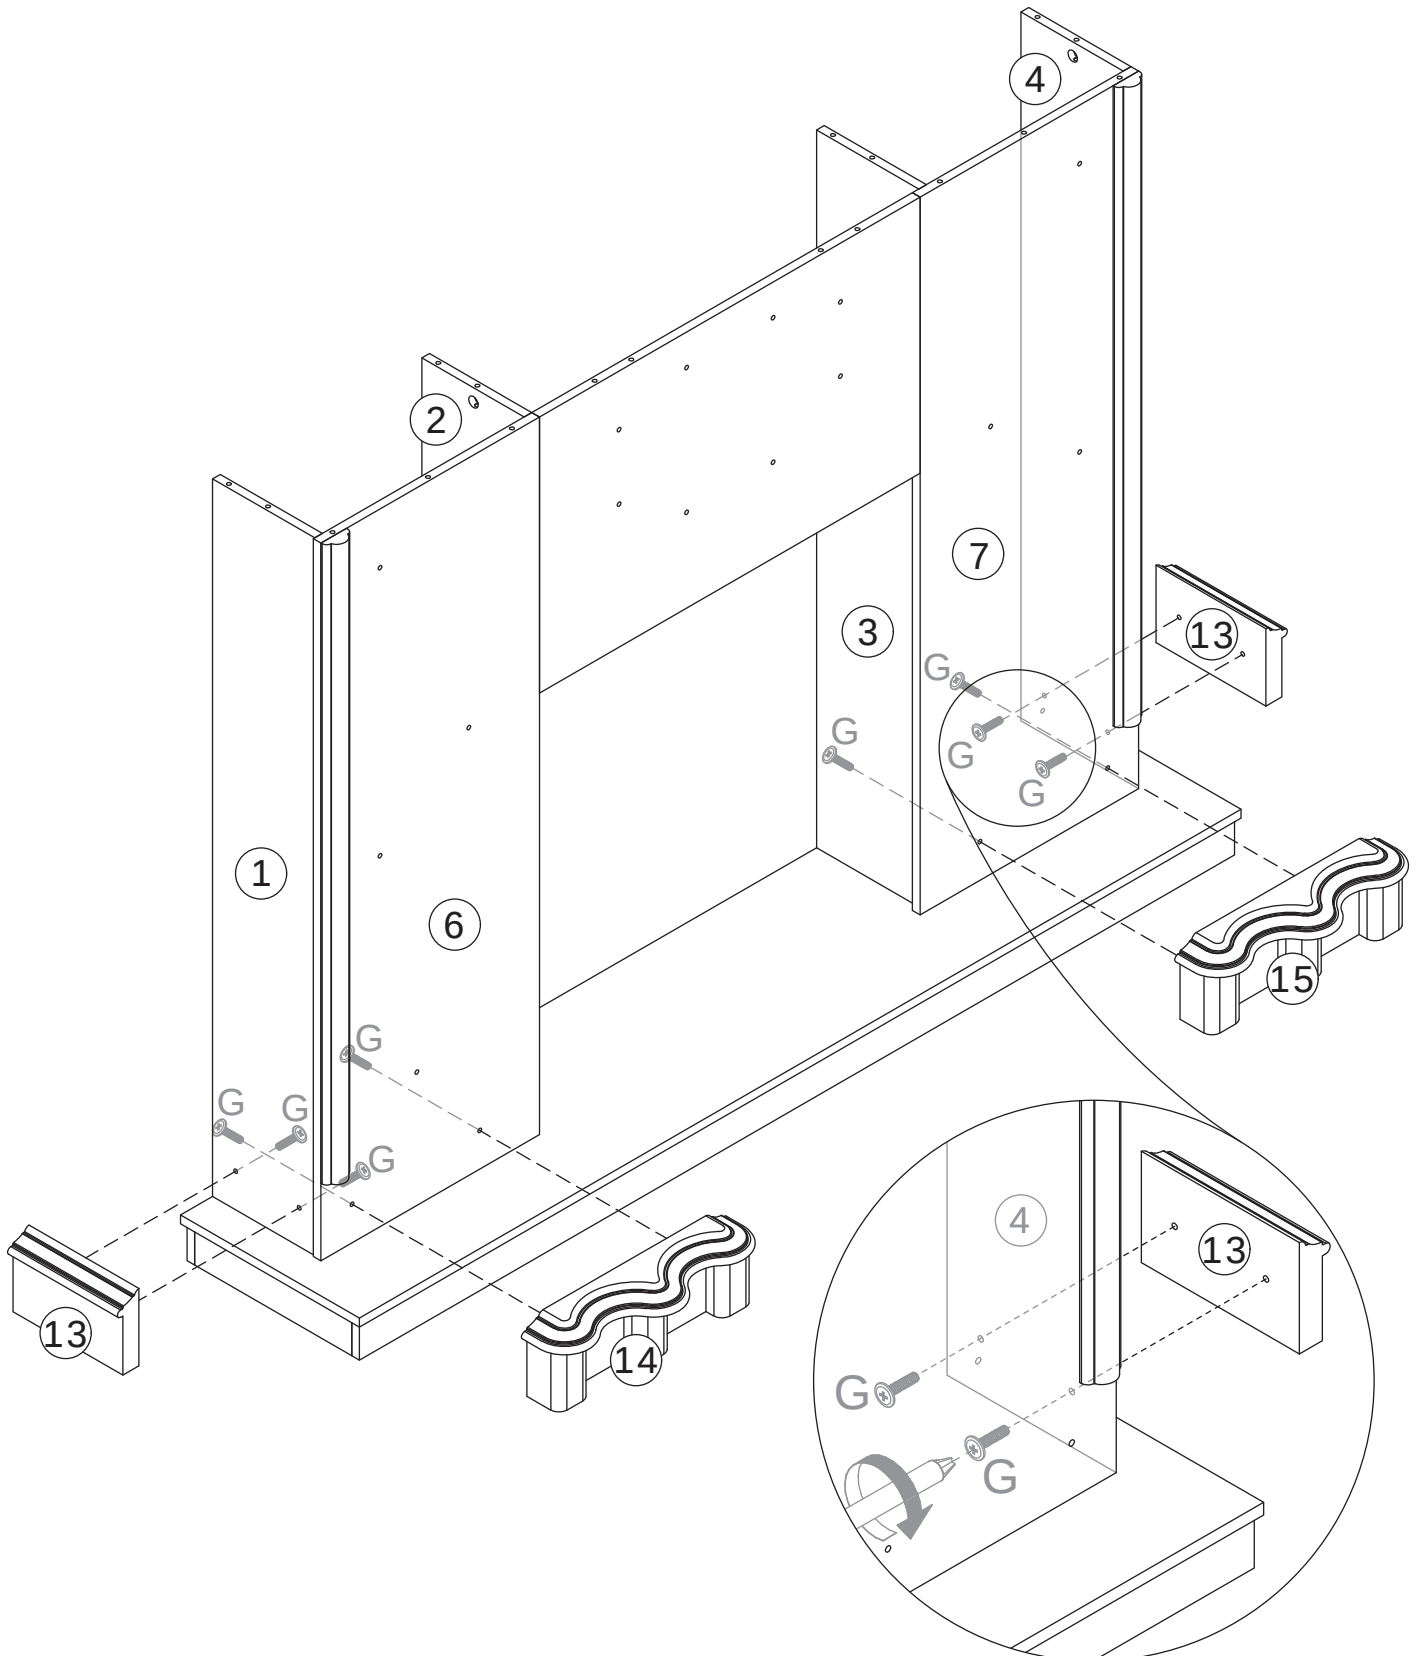


12

 G x 4




M6 x 20 mm

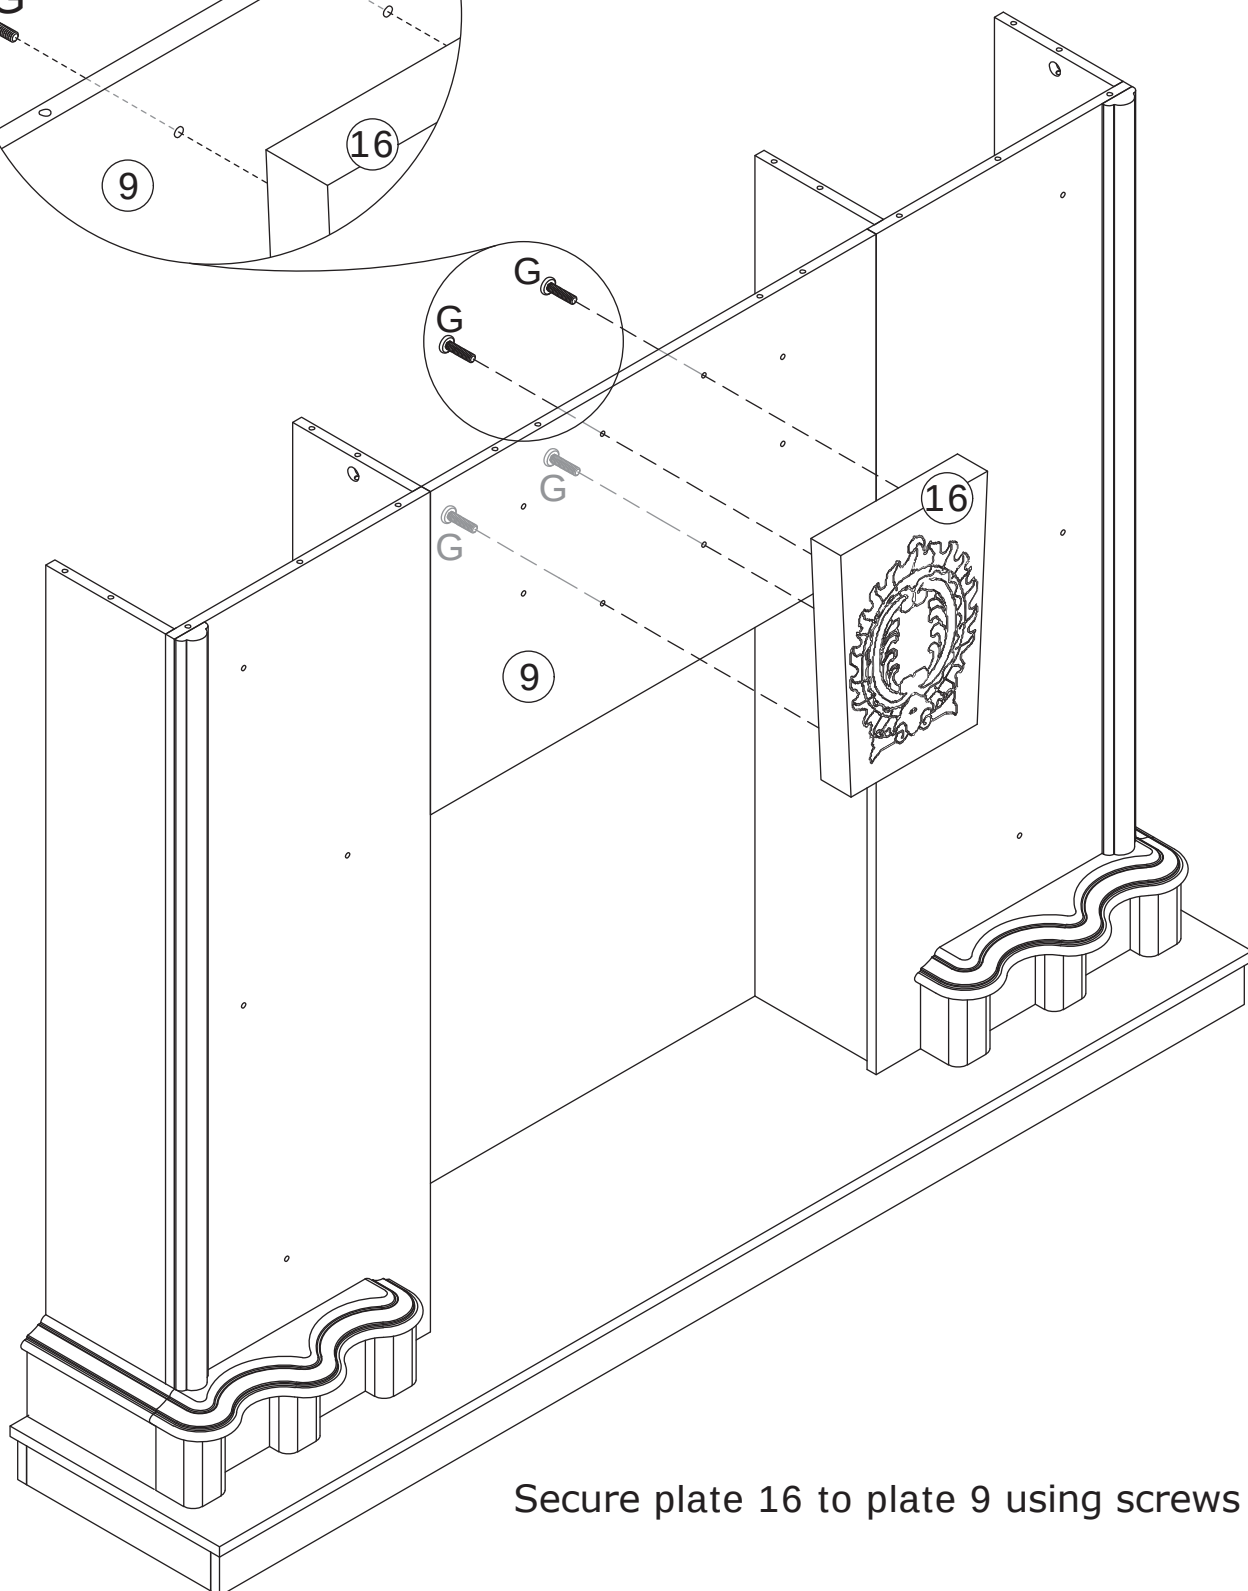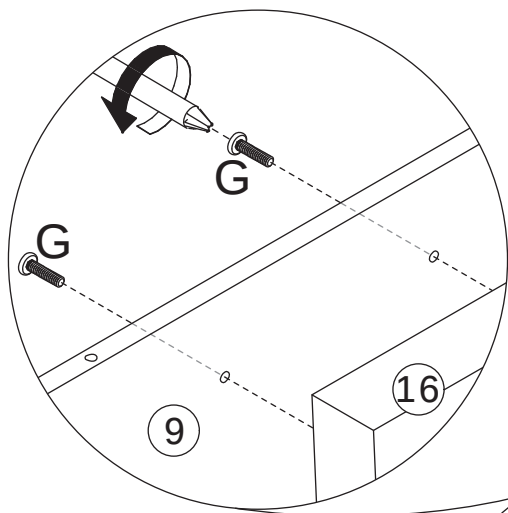   





Secure plate 16 to plate 9 using screws G.

13

 G x 6





M6 x 20 mm

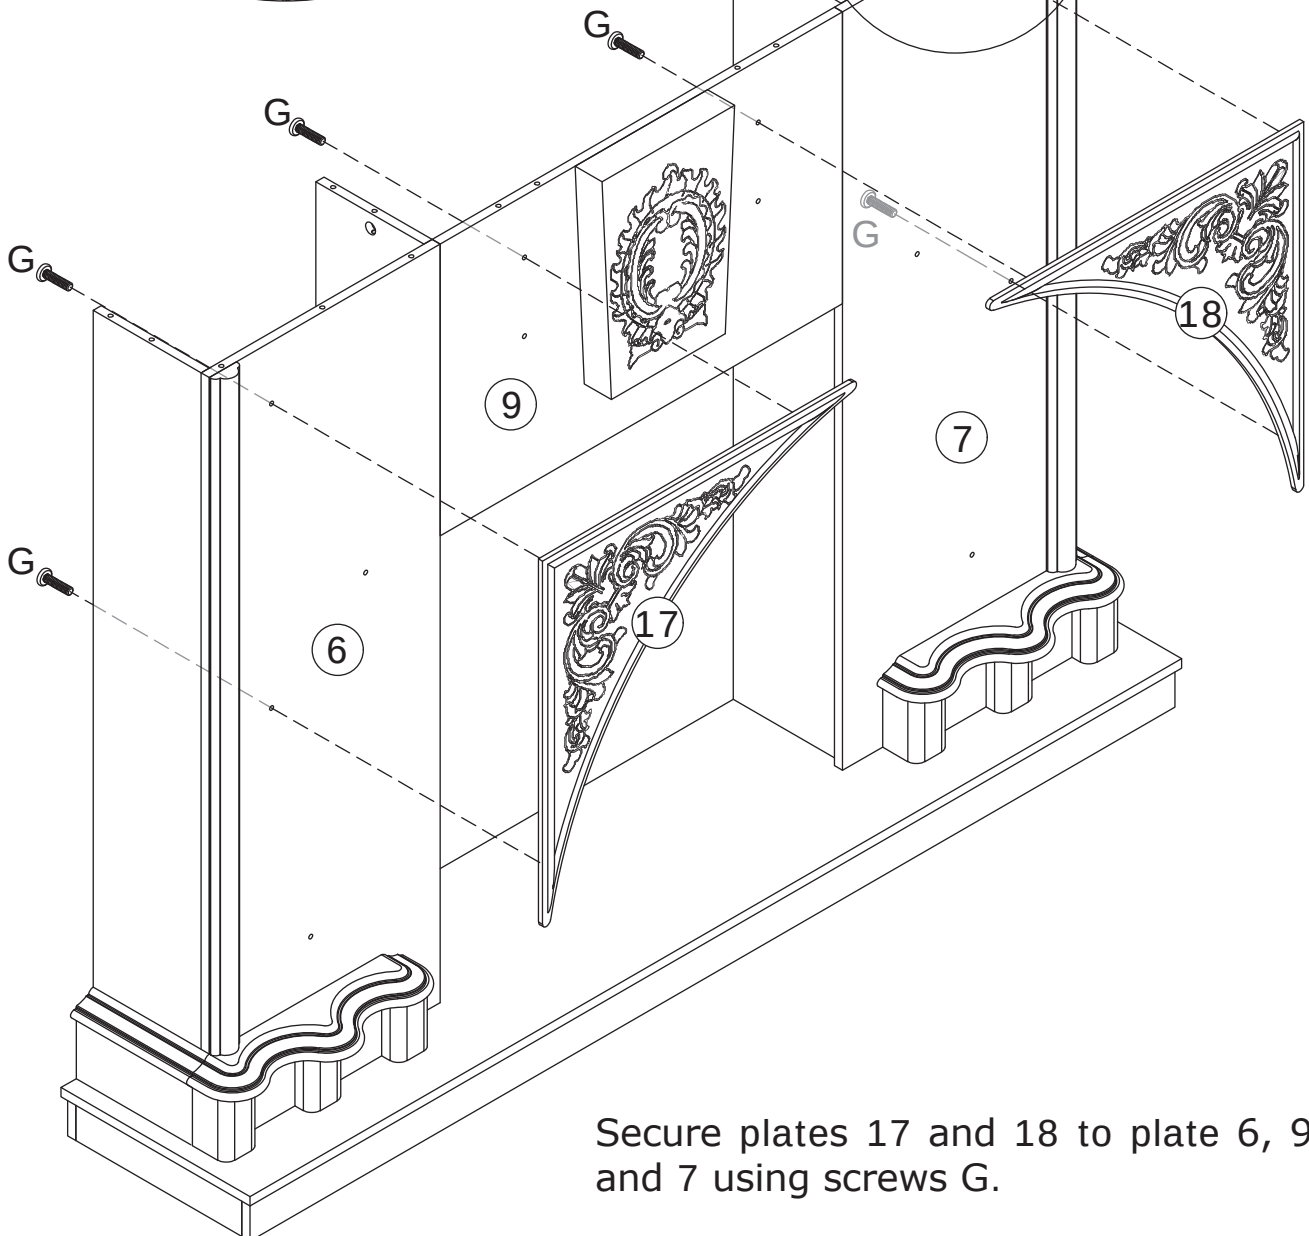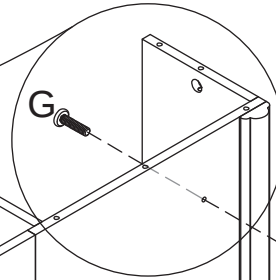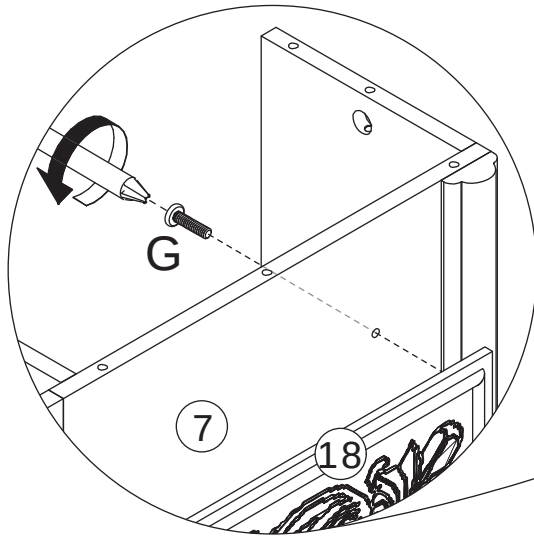    


Secure plates 17 and 18 to plate 6, 9 and 7 using screws G.

  
14

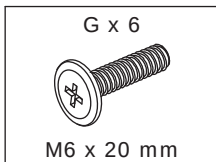

 
Secure plates 19 and 20 to plate 6, 9 and 7 using screws G.

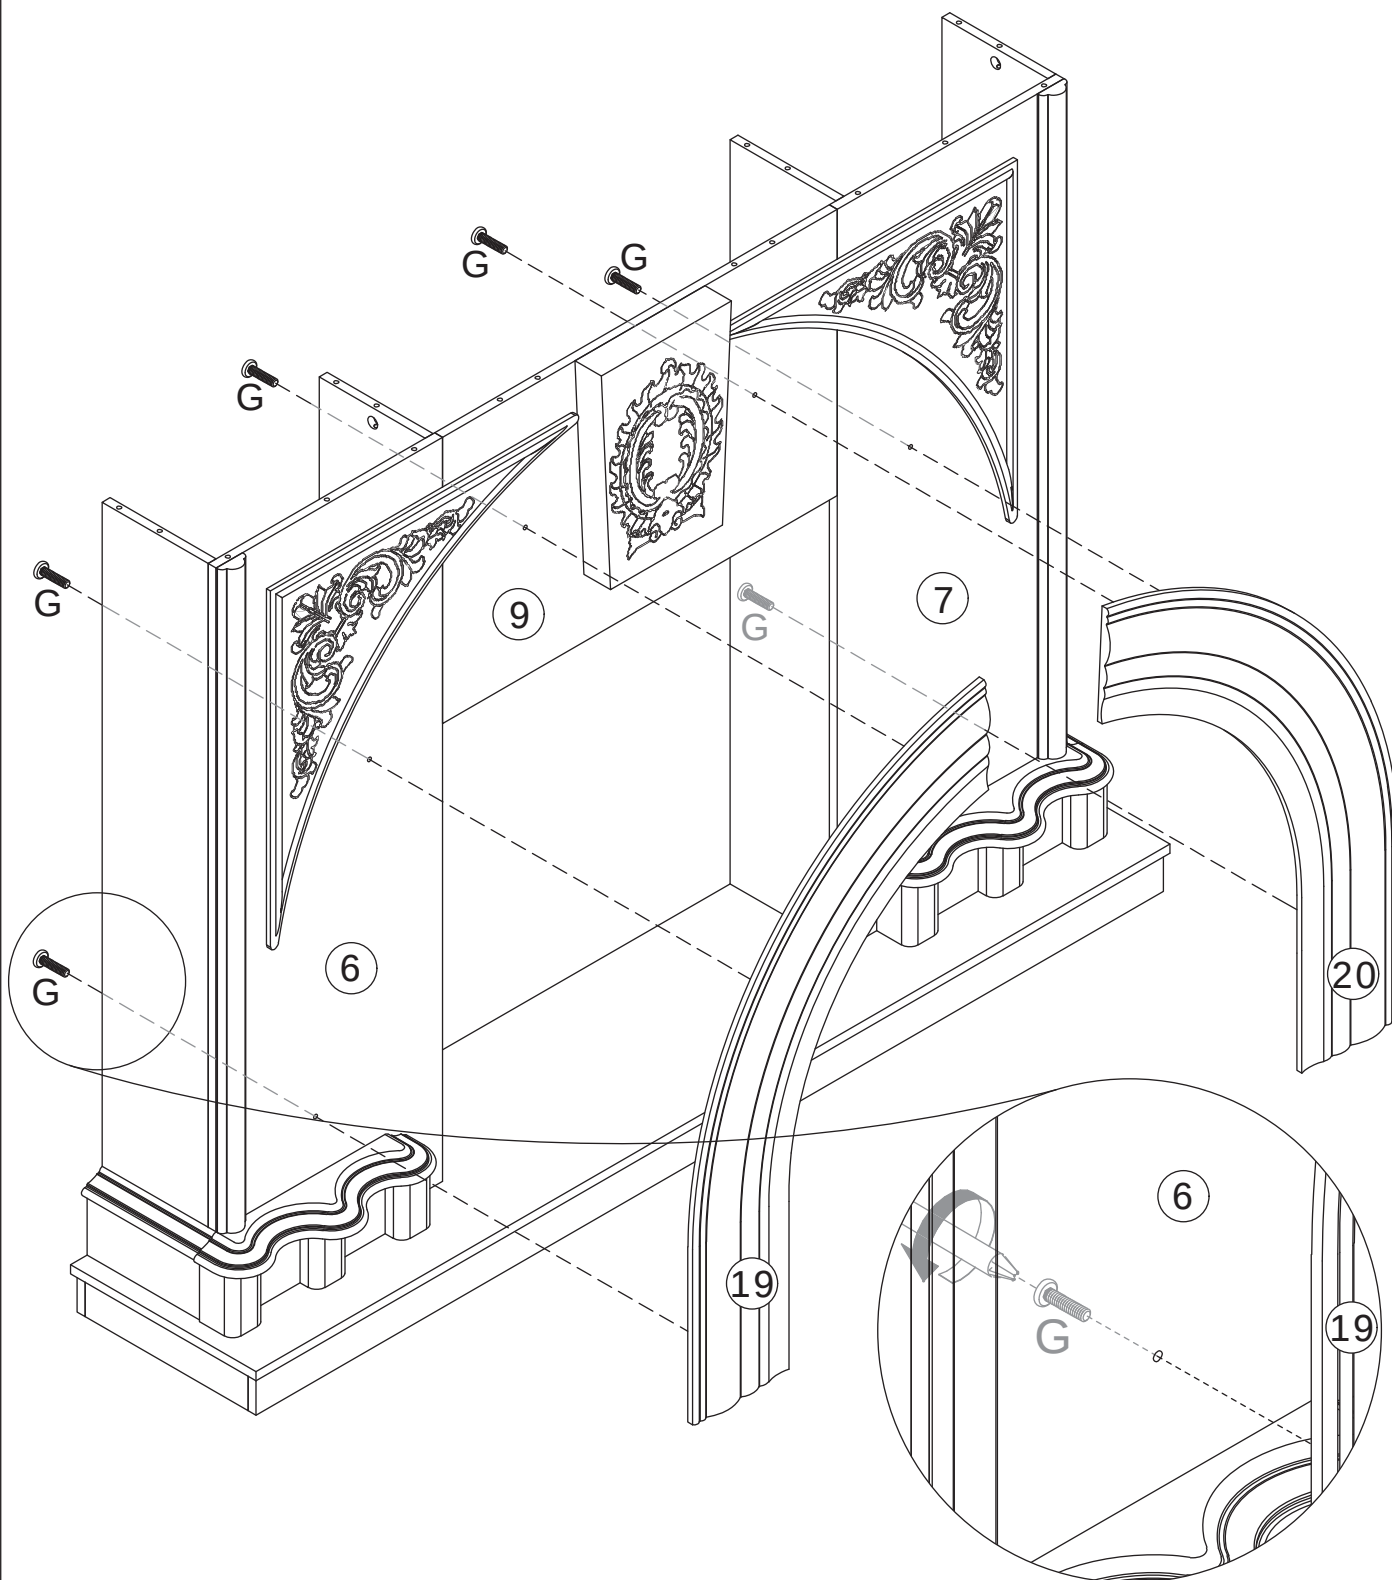

15

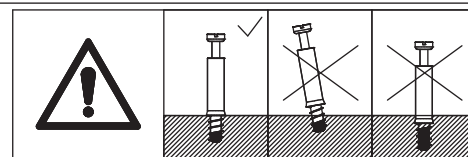 

Screw eccentric rod A onto plate 21.

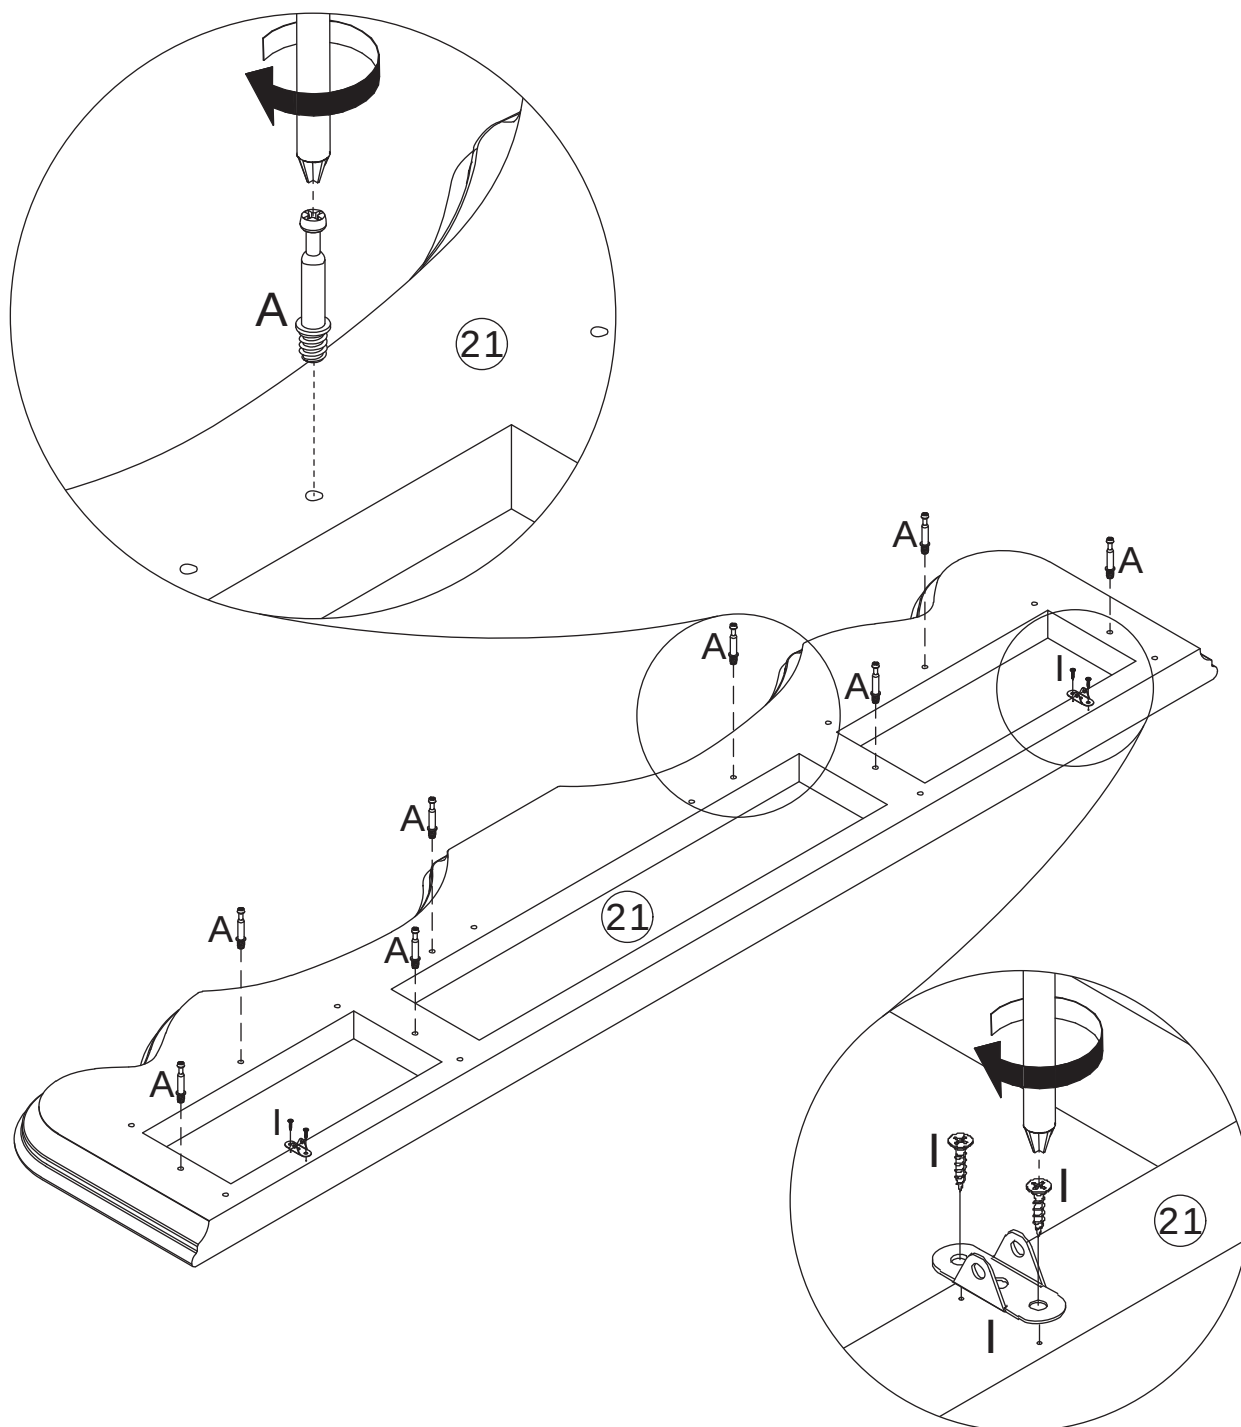 


16

B x 8




Ø14 x 9 mm


 
C x 10







Ø6 x 30 mm

 





 
 
Connect plate 21 to top of the unit using dowel C, then tighten by turning cam lock B clockwise.

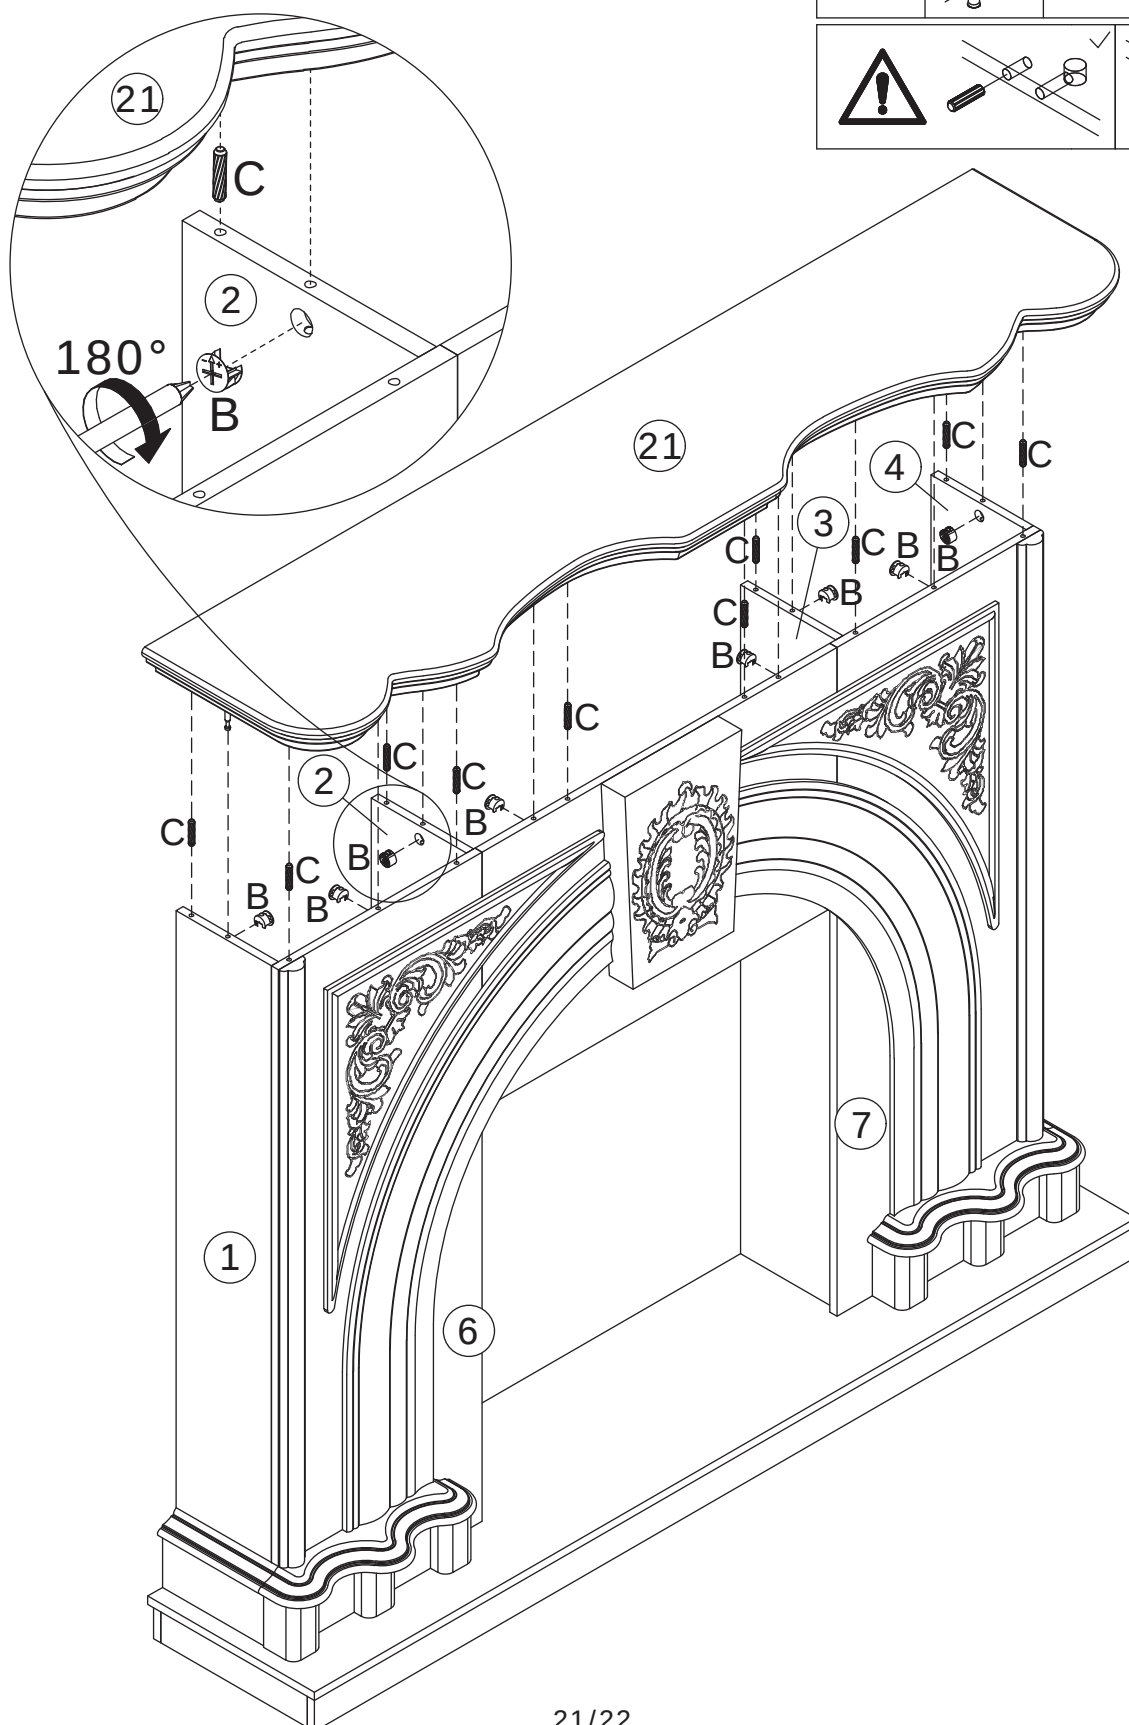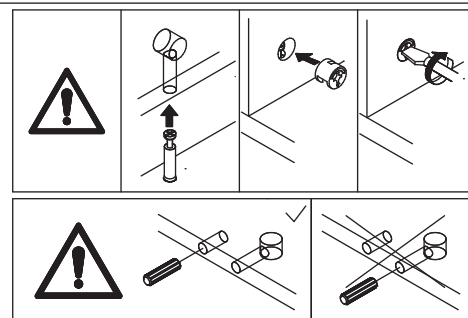

17

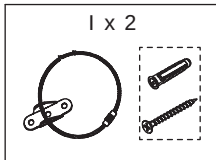    

Install anti-tipping device as shown.

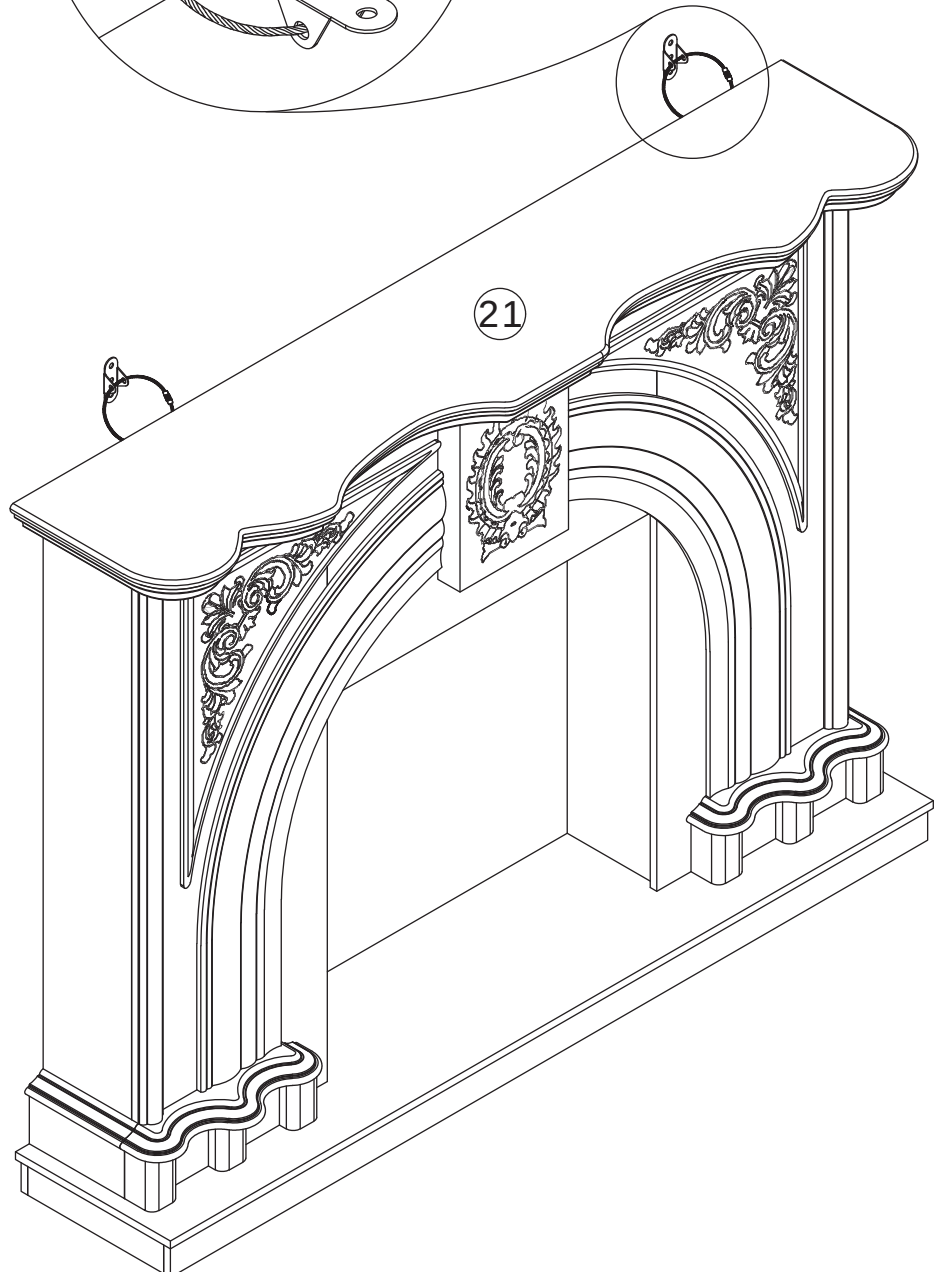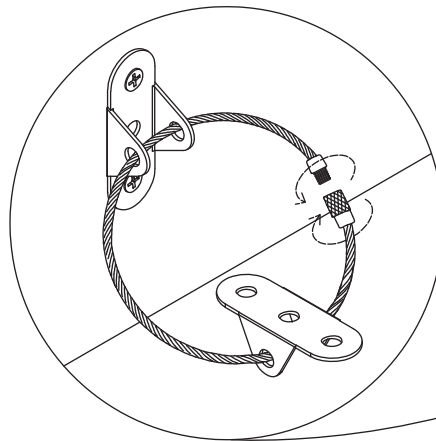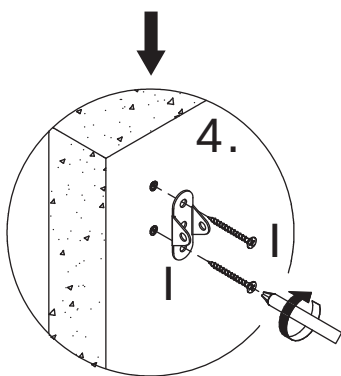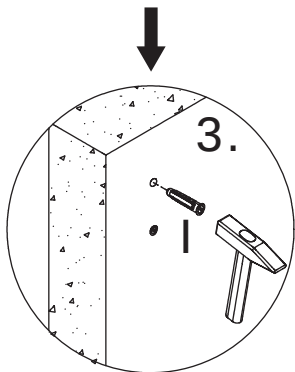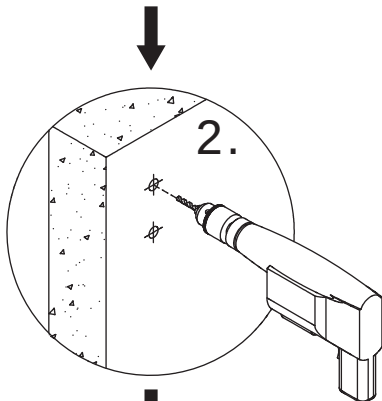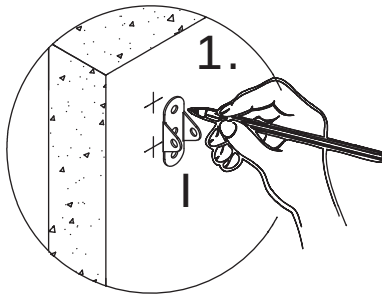      

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



 
00000000000000000000



000000000000

DECORATIVE BUILD IN ELECTRIC FIREPLACE

OWNER'S MANUAL

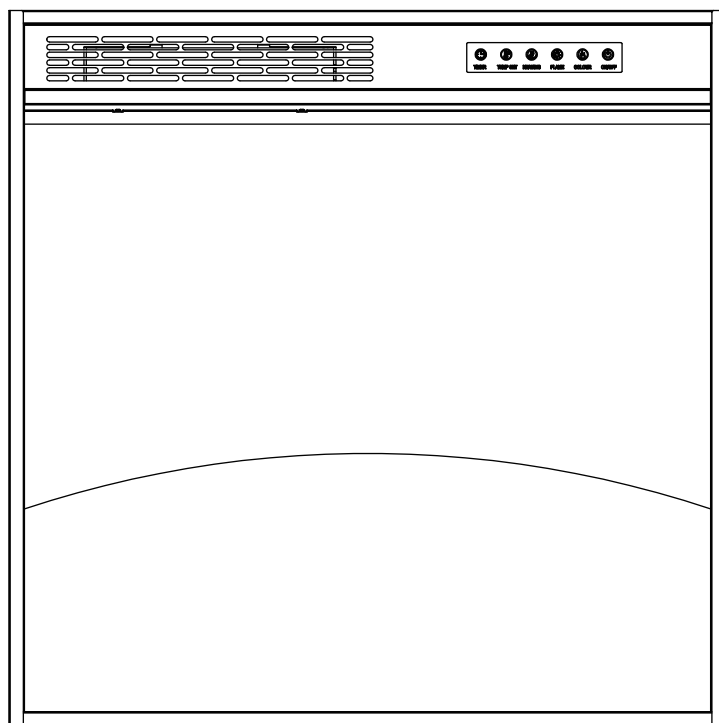

Model: IF-1828B



CONSUMER SAFETY INFORMATION

- Read this manual before installing and operating this appliance
- Failure to follow these instructions may result in electric shock, fire property, or personal injury
- Do not store or use gasoline or other flammable liquids in vicinity of this appliance.

 
IMPORTANT SAFETY INFORMATION!



WARNING



- **Read all instructions before using this heater!**
- This heater is hot **when in use**. To avoid burns, **DO NOT** let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep **combustible materials**, such as furniture, pillows, bedding, papers, clothes, and curtains at least **3 feet (0.9m)** from the front of the heater, and **keep them away from the sides and rear**.
- **Extreme caution** is necessary when any heater is used by or near children or invalids and whenever the heater is left **operating and unattended**.
- **DO NOT** operate any heater with a **damaged cord or plug** or after the **heater malfunctions**, has been **dropped** or **damaged in any manner**. Discard heater, or return to authorized service facility for examination and /or repair.
- **DO NOT** run power cord under carpeting. **DO NOT** cover power cord with throw rugs, runners, or similar coverings. **DO NOT** route power cord under furniture or appliances. Arrange power cord away from **traffic area**, and where it will not be tripped over.




WARNING



- **Connect to properly grounded outlets ONLY.**
- **DO NOT** insert or allow foreign objects to **enter any ventilation or exhaust openings**, as this may cause **electric shock** or **fire**, or **damage the heater**.
- To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. Doing so could cause a fire. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
- A heater has **hot and arcing or sparking parts inside**. **DO NOT** use it in areas where **gasoline, paint, or flammable liquids** are used or stored.
- **Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.**
- **ALWAYS** plug heaters directly into a wall outlet/receptacle. **Never use with an extension cord or relocatable power tap (outlet/power strip).**
- **DO NOT** place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- **NEVER** use this heater in **bathrooms, laundry rooms**, or any other location where the heater could fall into a **bathtub or pool, become damp or come in contact with water**.
- **AVOID FIRE!** Regularly inspect all air vents to make sure they are free from dust, lint, or other Blockage. **Unplug the unit** and clean with a **vacuum ONLY**. **DO NOT** rinse or get wet.

- **ALWAYS** mount to wall bracket before use. DO NOT set on the floor, or other surface, to use.
- **NEVER** use a wall mount bracket from another manufacturer.
- This product is **not intended** to be a **primary heat source**. It is for **supplemental heat only**.
- **INDOOR use only! NEVER** use this heater **outdoors!** Doing so may result in **electric shock!**
- **Risk of electric shock! DO NOT OPEN!** No user-serviceable parts inside!
- **ALWAYS** turn this heater off before unplugging it from the outlet.
- **ALWAYS disconnect** this unit from the **power** supply **before** performing any assembly or cleaning, or before relocating the electric fireplace.
- **NEVER** leave this heater unattended. **ALWAYS** unplug this heater when not in use.
- **ALWAYS** store this heater in a dry location. **NEVER** use the fireplace if it has become wet.
- **NEVER** plug this heater into an outlet that is **old, cracked,** or has any **loose wires or connections**. Plugging this heater into a faulty outlet could result in **electric arcing** within the outlet that could cause the **outlet to overheat or catch fire**.
- **ALWAYS** check your heater cord and plug connections with **each use!**
 - i) **MAKE SURE** the plug fits tight in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
 - ii) **Heaters draw more current** than small appliances. **Overheating** may occur even if it has not occurred with the use of other appliances.
 - iii) During use **check frequently** to see if the **plug outlet or face plate is HOT!**
 - iv) If the outlet or face plate is **HOT, discontinue use immediately** and have a qualified electrician inspect and/or replace the faulty outlets.

 - The power cord supplied with the heater has a plug with two flat blades (live and neutral) and one round pin (ground). If a 3-slot receptacle is not available, an adapter **MUST** be used. The adapter **MUST** be **properly grounded** to the outlet box (see figure at right). (Note: Adapter NOT INCLUDED.)

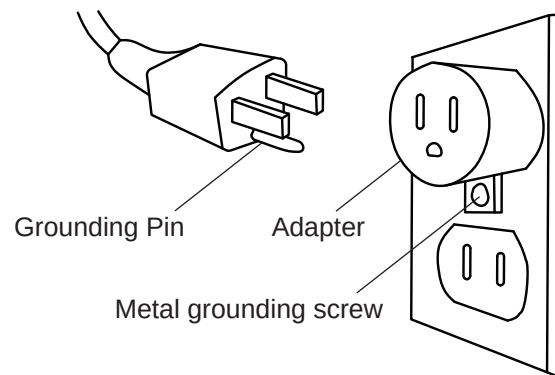

- **SAVE THESE INSTRUCTIONS!**

PREPARATION

 
 
 
 


This product includes a **GLASS panel!** Always use **extreme caution** when handling **glass**. Failure to do so could result in **personal injury or property damage**.

Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grounded for wall-hanging or recessing use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever

possible. You will need the following tools (not included): Phillips screwdriver; stud finder; level; tape measure; electric drill; 1/4" wood drill bit, hammer.


PARTS & HARDWARE

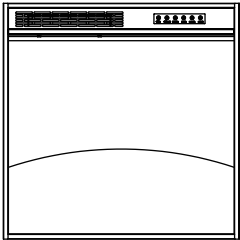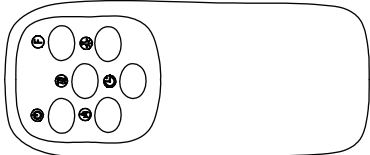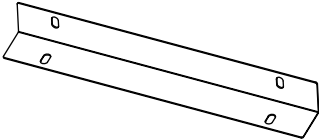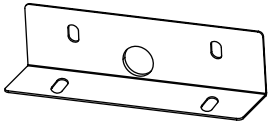No.	Parts	Qty.
A	 Electric Fireplace	1
B	 M4x8mm Screws	8
C	 Remote Control	1
D	 Instruction	1
E	 Metal A	1
F	 Metal B	1



ALWAYS KEEP THESE PARTS OUT OF REACH OF CHILDREN.LEAVE NO PLACE WHERE CHILDREN CAN FIND THEM.FAILURE TO DO SO COULD CAUSE A CHOKING HAZARD.

 CONTROL PANEL

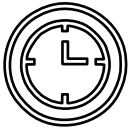

TIMER



TEMP SET



HEATING



FLAME



COLOR




POWER

BUTTON	FUNCTION	ACTION AND INDICATION
 POWER	ON: Enables control panel and remote control function. Turns on the flame effect. OFF: Disables control panel and remote control function. Turns off the flame effect.	1. Press once. Indicator light turns on. Power turns on. All functions are enabled. 2. Press again, power and all functions turn off. Unit goes to standby.
 COLOR	COLOR button: Changes the color flame effect. 12 color settings: C1, C2, C3....10,11,12	1. Press once to change the color flame effect. 2. Press again until desired setting is reached.
 FLAME	FLAME button: Makes flame effect brighter and dimmer. NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for the heater to turn on. 5 brightness settings: L1, L2, L3....L5	1. Press once to change flame color brightness. 2. Press again until desired setting is reached; L1 is dimmest, L5 is brightest.
 HEATER	HEATER button: Turns heater on and off. NOTE: To prevent overheating, the heater fan will blow out cool air for 30 seconds after the heater turn off. 00, LL, HH will show on the display.	1. Press button, LL (low heat) about 750W. 2. Press button, HH (high heat) about 1500W. 3. Press button, 00, heat function is off.
 TEMPERATURE	TEMPERATURE button: Changes the temperature setting. Setting ranges from 62°F to 82°F 62, 63, 64....82 will show on the display.	Press button until desired setting is reached. LED display shows selected setting. Once the desired temperature is reached, the heater will stop heating the room. Heat will automatically turn back on when room temperature falls below the set temperature.
 TIMER	TIMER button: Controls the timer settings to automatically turn the fireplace off. Settings range from 1 hour to 8 hours. 0H, 1H, 2H....8H will show on the display.	Press button until desired setting is reached. LED display will show the setting. When time reaches the selected setting, the unit will automatically turn off. 0H disables the timer function.

NOTICE

 When the heater is first turned on, a slight odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.

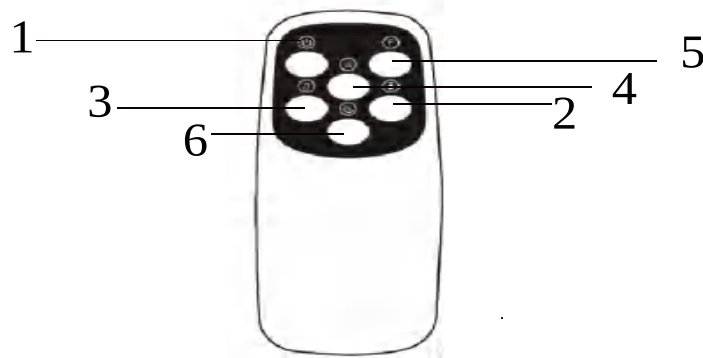

Remote Control Battery Information

- This remote control uses **two batteries (not included)**.
- Instructions for battery installation are on the Remote Control battery compartment.

Remote control Operation

BUTTON	FUNCTION	ACTION&INDICATION
1  POWER	ON: Enables control panel functions Turn on flame effect. OFF: Disables control panel functions Turn off flame effect.	1. Press once. Indicator light turns on. Power turns on. All functions enabled. 2. Press again, turn off the power.
2  COLOR	COLOR button: Makes the color flame effect changing. Total 12 different color , Display will be showed C1,C2,C3..... C9,10....12.	1. Press once. Flame color effect gets changing. 2. Press again until desired setting is reached.
3  FLAME	NOTE: Flame effect stays on until power button is turned off.Flame effect must be on for heater to turn on. Total 5 different brightness, L1,L2,L3..L5	1. Press once. Flame brightness effect gets changing. 2. Press again. Until desired setting is reached. L5 is brightest. and L1 is darkest.
4  HEATING	HEATER button:Turn heater on and off. NOTE: To prevent overheating, the heater fan will blow out cool air for 2 minutes after the heater turn off. OF, LL, HH will be showed on the display.	1. Press this button , LL , low heating, about 750W. 2. Press this button, HH, high heating, about 1500W. 3. Press this button, OF , turn off the heating.
5  TEMPERATURE	TEMPERATURE button: Changes the temperature setting. Setting ranges from 62°F to 82°F. 62,63,64....82 will show on the display.	Once the desired temperature is reached, the heater will stop heating the room. Heat will automatically turn back on when room temperature falls below the set temperature.
6  TIMER	TIMER button: Control timer settings to turn off fireplace at selected time. Settings range from 1 hours to 8 hours. 0H,1H,2H,3H....8H will be shown on the display.	Press button until desired setting is reached. LED display show setting. When time reaches your setting, the whole product is power off. 0H turn off the timer.

NOTICE

When the heater is first turned on, a slight odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature the heater will automatically turn OFF. To reset:

1. Unplug the power cord from the outlet.
2. Wait for about 15S to 1 minute, plug the power cord back into the outlet. Heating will rework.
3. Inspect the fireplace to make sure no vents are blocked, or clogged with dust or lint. If they are, use a vacuum to clean the vent areas.
4. If the problem continues, have your outlet and wiring inspected by a professional.

How to assemble

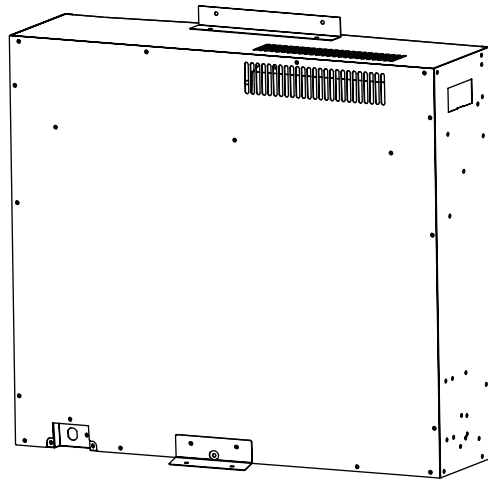 


Figure 1

A: As shown in the figure 1, fix the unit with mantel with 8X M4x8mm screws

CARE AND MAINTENANCE

Cleaning



ALWAYS turn the heater **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury**.



NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- **DO NOT** use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- Use a good quality glass cleaner and dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.
- Clean the exterior of the fireplace with a slightly damp cloth or duster.

Maintenance



Risk of electric shock! DO NOT OPEN! No user-serviceable parts inside!



ALWAYS turn the heater **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury**.

Electrical and Moving Parts:

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage:

- Store heater in a clean dry place when not in use.



WARNING! No other servicing should be performed by the consumer. Do not attempt to service the unit yourself.