



INSTRUCTIONS

PXJFCT060BG

SIZE

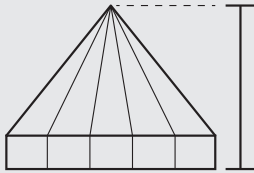

2.5m
98.43inch

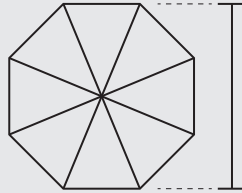


4m
157.48inch


ACCESSORY



Storage bag * 1

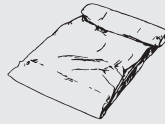

Main body*1

 


Support rod*1



Support rod*1



 Ground nail* 19




Hook*1



Wind rope*9


INSTALLATION STEPS

01

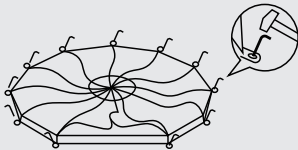


Spread out the tent and nail down the ground.

02

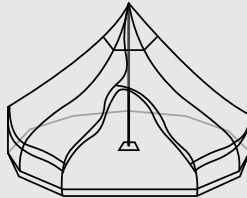


Attach the support poles and set up the tent.


03

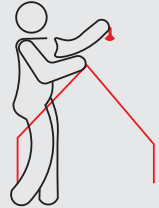


Pre-assemble the door frame and then tilt it over to move it inside the tent.

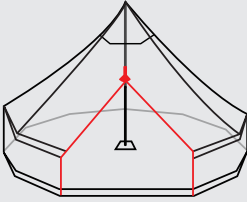04

Adjust the angle of the door frame so that the tip of the door frame passes through the holes in the tent, while allowing the two legs of the door frame to snap into place in a fixed position. Finally, attach the rain cover to the tip of the door frame.

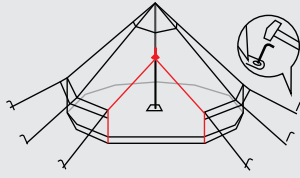05

One person needs to stand in the tent and hold the center pole to keep it stable. The other person secures the wind rope with ground stakes around the tent. Please note that the wind rope should be extended in the same direction as the angle around the tent. The farther the stakes are from the tent, the more upright and stable the tent will be.

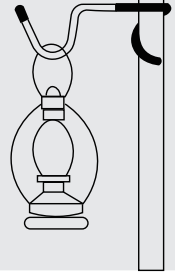06

The pole in the center of the tent can be used to hang a camping light.

STORAGE INSTRUCTIONS

- Store in a completely dry place to prevent damage from mold. The tent can be damaged if stored in a damp condition.
- If you pack the tent after it has been rained on or when dew has condensed in the morning, please set it up immediately after returning home to allow it to fully dry before long-term storage.
- Extra caution must be taken in the high humidity climate conditions to prevent mold damage. Mildew can be cleaned with a diluted solution of white vinegar (5 parts water to 1 part white vinegar).

CARE INSTRUCTIONS

- Clean before storage (including tent poles). Before storing, clean off any dirt and other natural debris. Keep tent poles, stakes, and other accessories clean as well.
- The best way to clean the tent is to use water and a soft brush, then allow it to air dry.
- We strongly recommend using a separate ground cloth to prolong the lifespan of the tent floor and help maintain cleanliness. Keep the zippers clean and occasionally use zipper lubricant.