



Important notes:

Lay out all components
prior to start of assembly.

A flat level surface is
recommended.

If any components are missing
or damaged, please call Rugged
Ranch 760-734-3748

Assembly Guide Chalet Pen

List of parts:

- Panel A- Front gate panel (1)
- Panel B- Hinged side panel (2)
- Panel C - Back pop-out panel
(1)
- Panel D - Roof panel (2)



F
Clamp (24)

Step 1

Lay out Front (A), Back (C) and Side Panels (B) as shown.



Step 2


Starting with the Back (C) and Side Panel (B), attach the two panels together with the Back Panel on the **outside** using two Clamps (F) in the cut out spaces provided.

*Note: If you are removing the Pop-Out Panel, take it out before step 3.



Step 3

Attach opposite Side Panel (B) and then Front Panel (A) (with two Clamps (F) per corner) making sure that the Front and Back Panels are on the **outside** of the Side Panels.

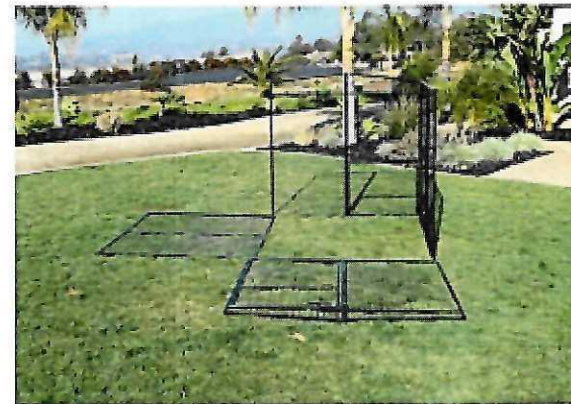

Step 4

Clamp Roof Panels to top of cage using two Clamps per panel. Keeping the cage and roof corners square is very important.



Step 5

Repeat Step 4 for the 2nd roof panel.



****Some images show walk in pen panels but same concept applies to Chalet Pen**