
Dressing Table

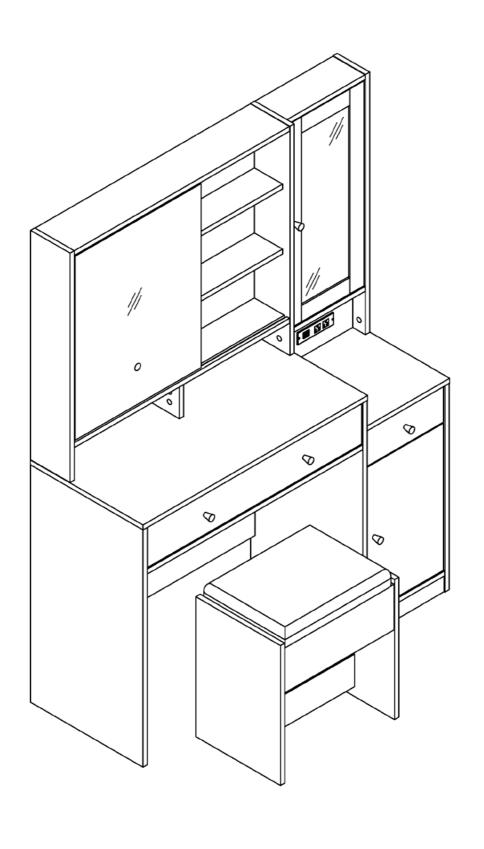



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.





AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY!

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.









ANTI-TOPPLE WARNING!

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT!


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


Board Identification

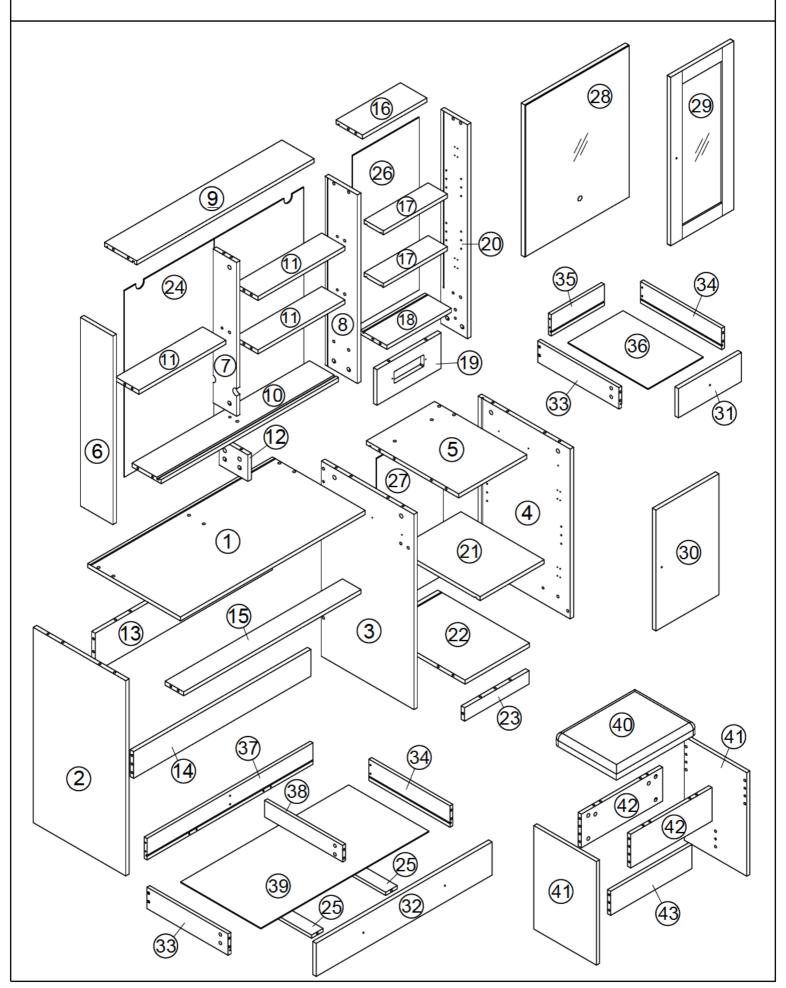


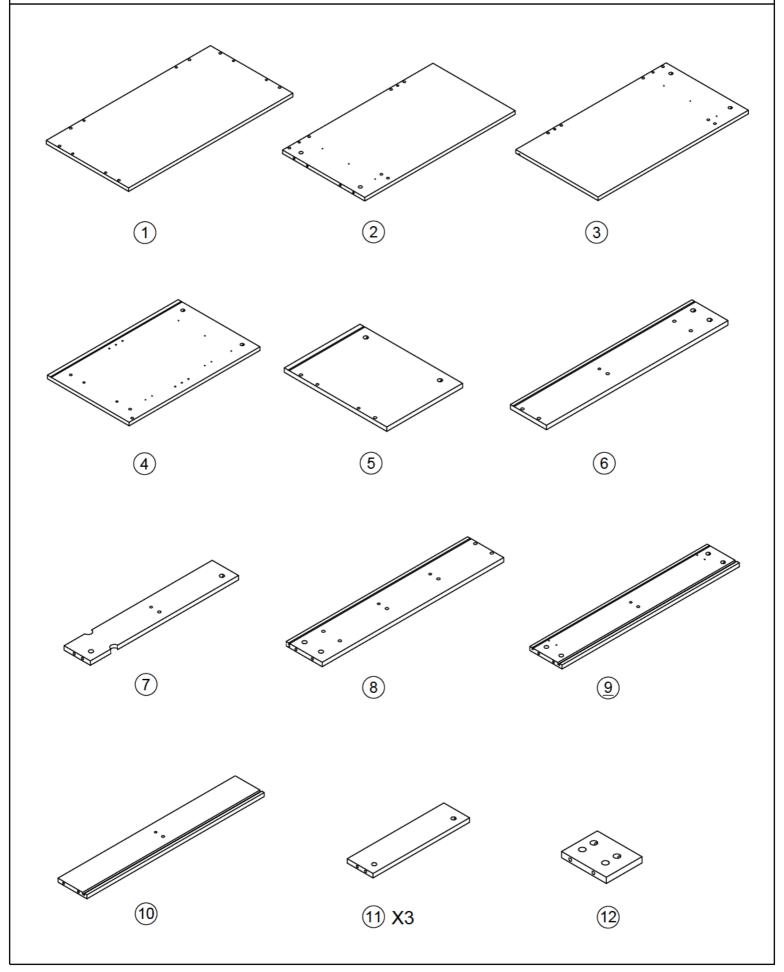


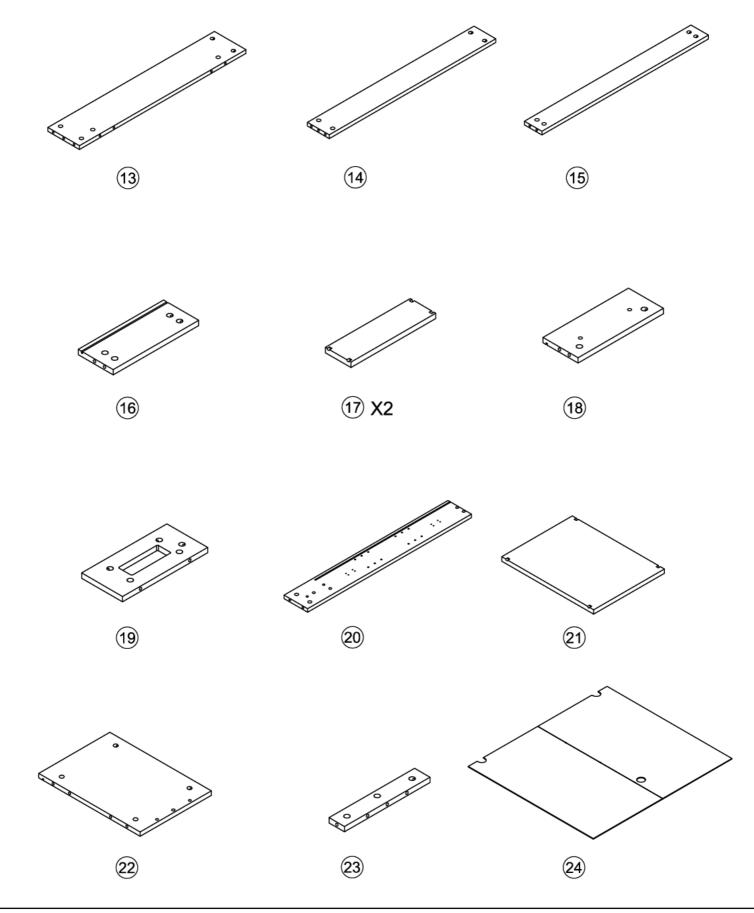

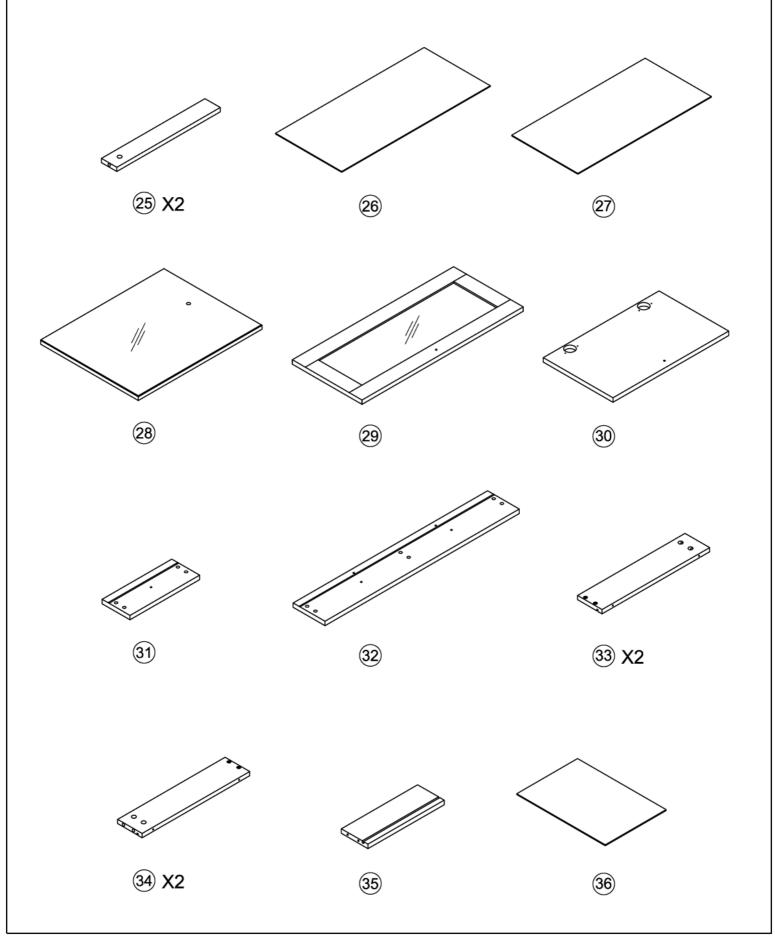


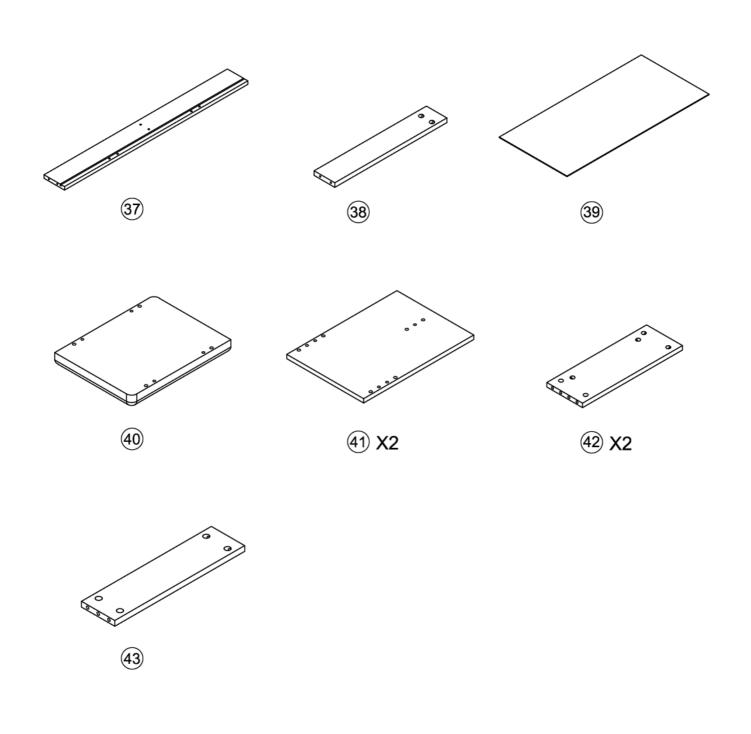


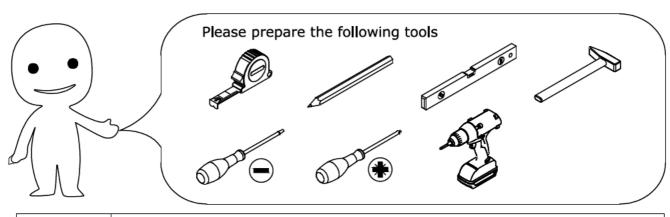


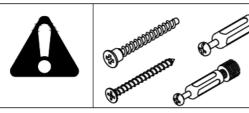



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

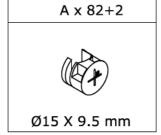


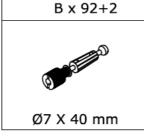


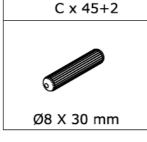


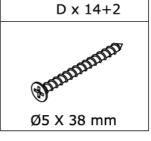


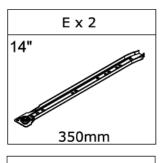


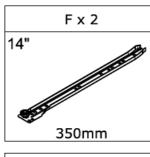


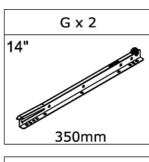


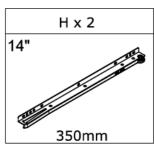


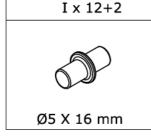


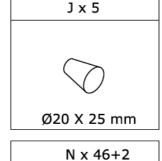


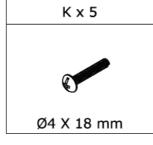


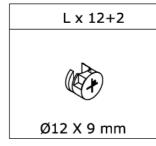


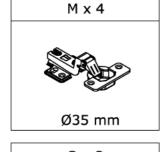


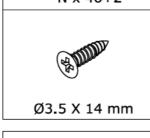


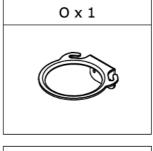


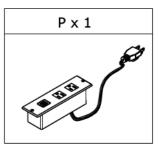


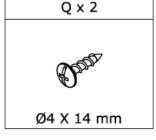


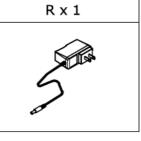


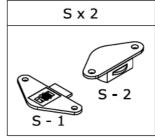


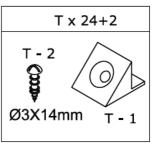


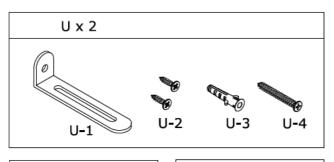


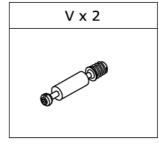

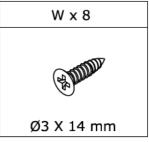

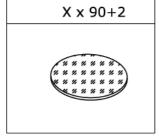

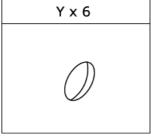


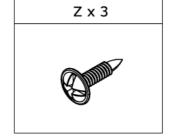






Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

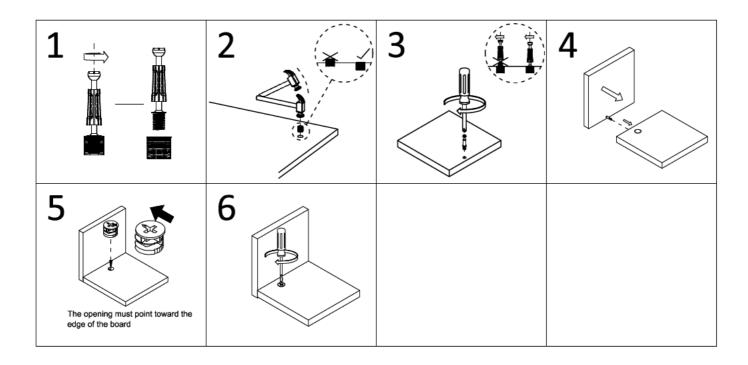


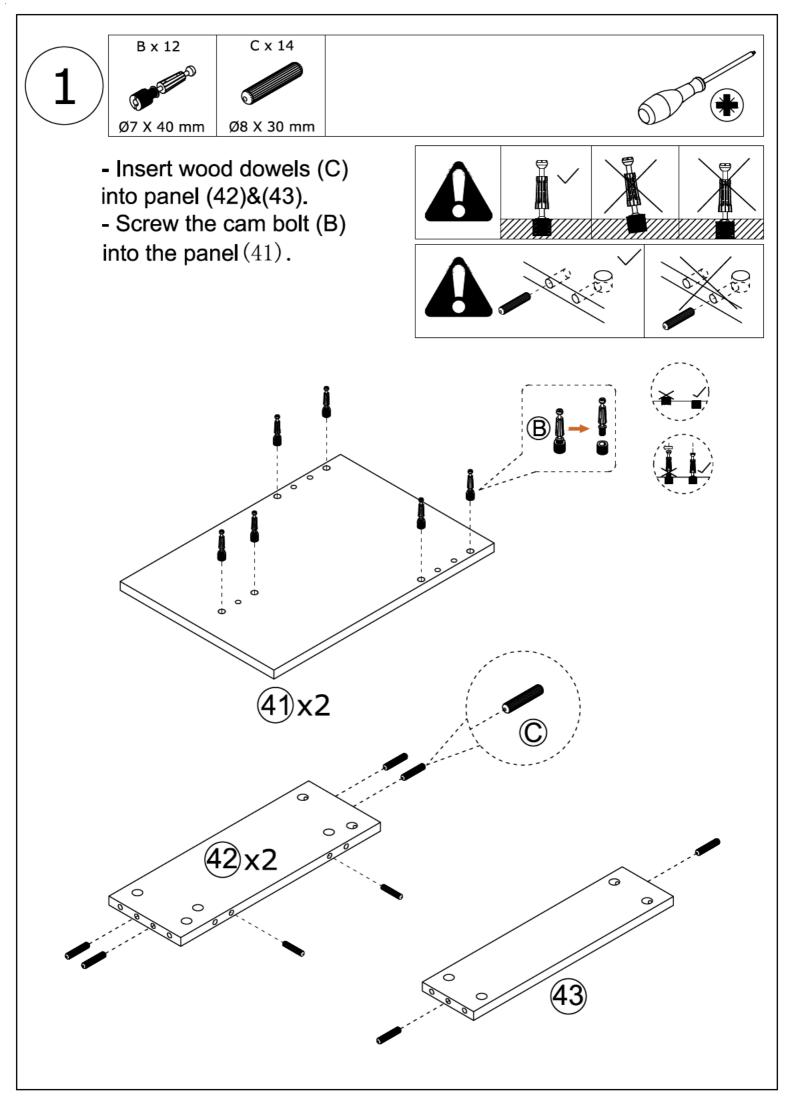


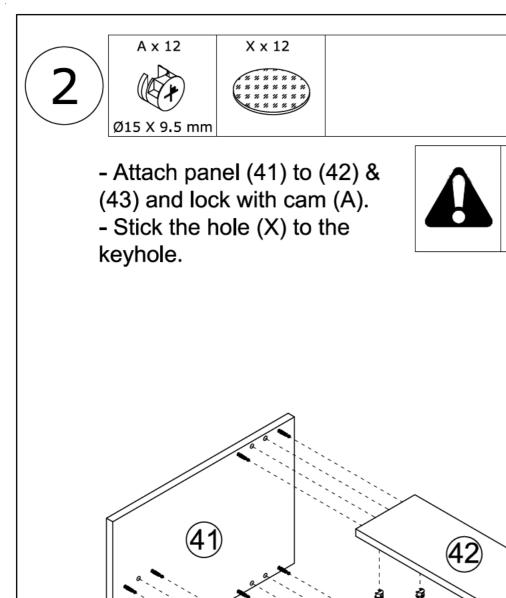


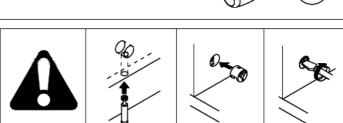

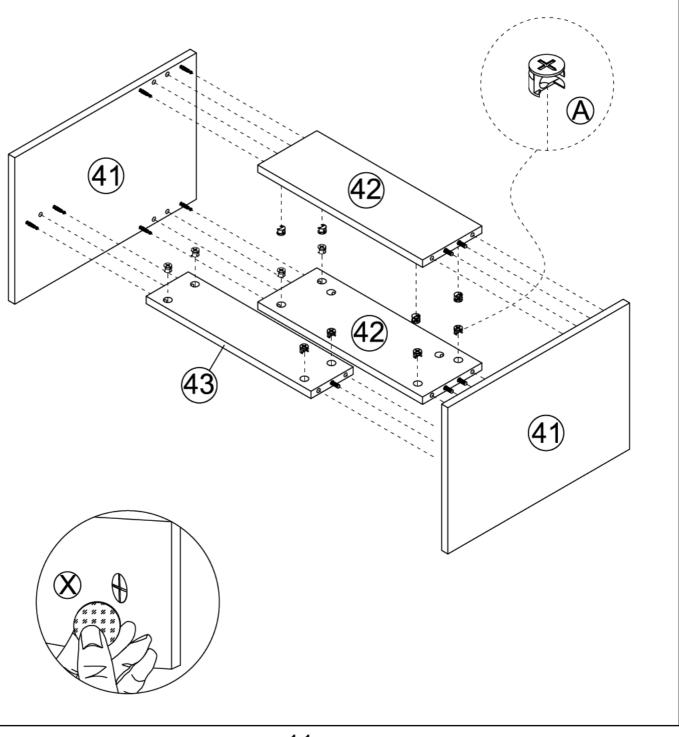


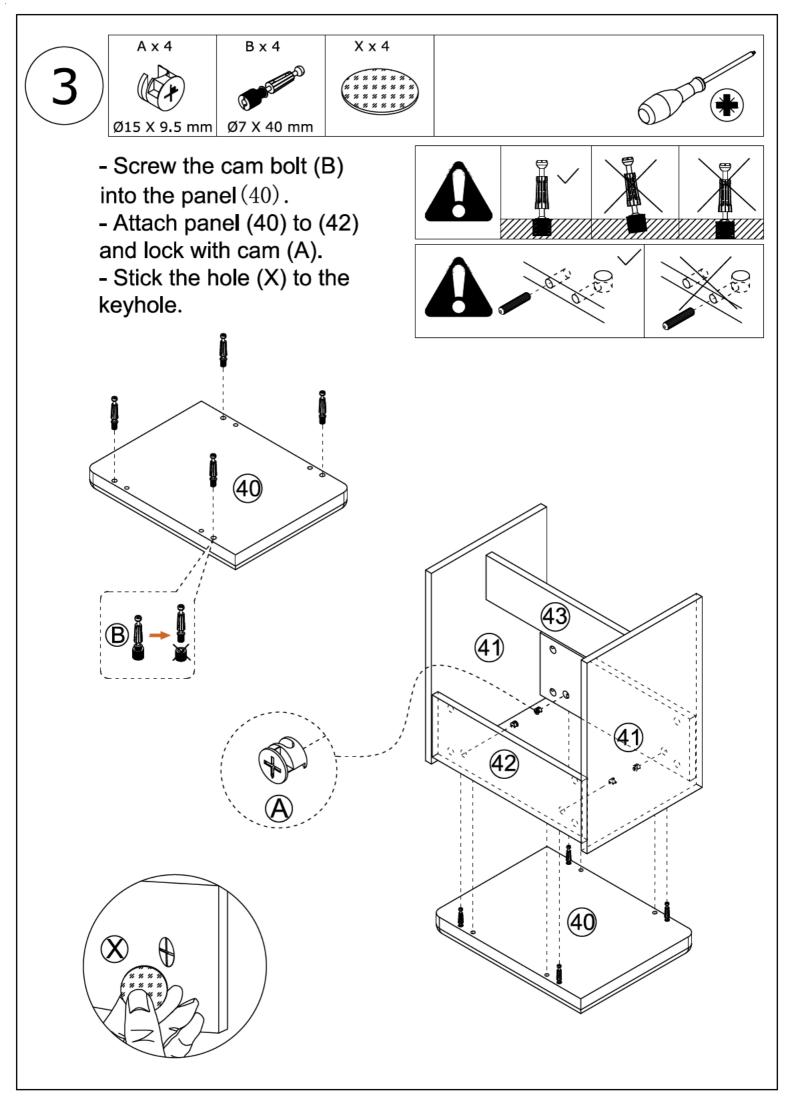


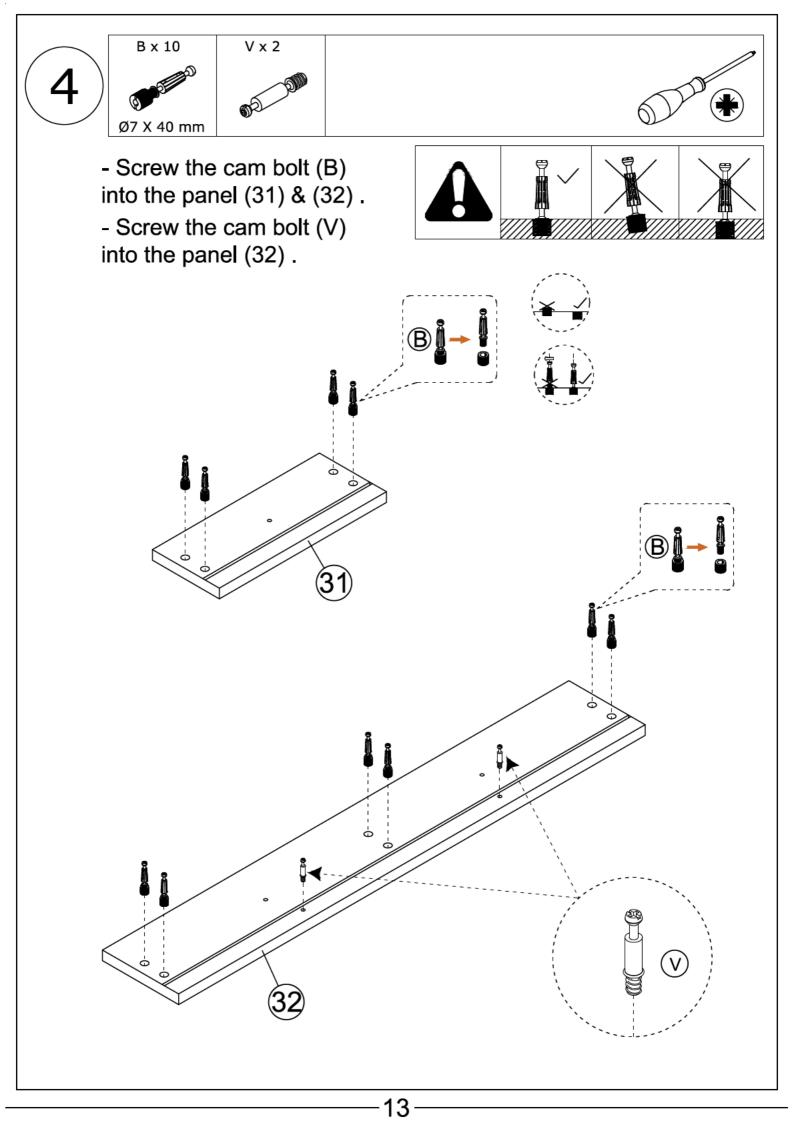

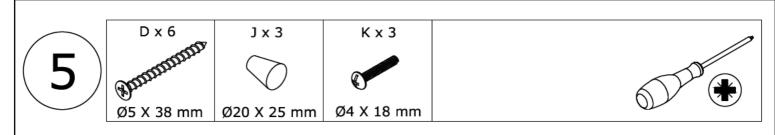


- Install handle (J) to panel (31) & (32) with bolts (K).
- Attach panel (37) to (38) & (25) with screws (D)

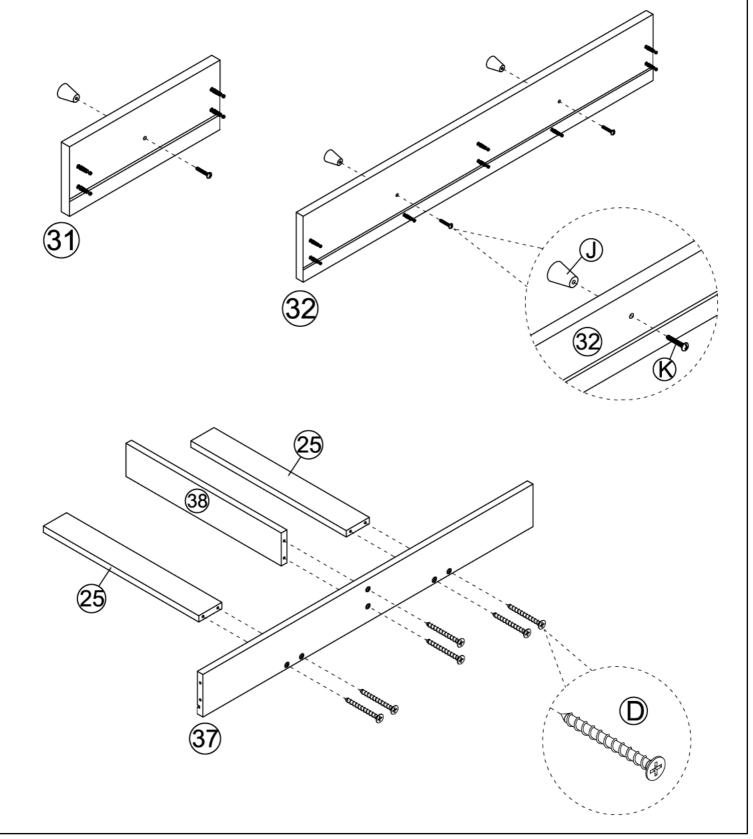


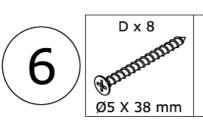






- Attach panel (33) & (34) to (35) with screws (D).
- Attach panel (33) & (34) to (37) with screws (D).

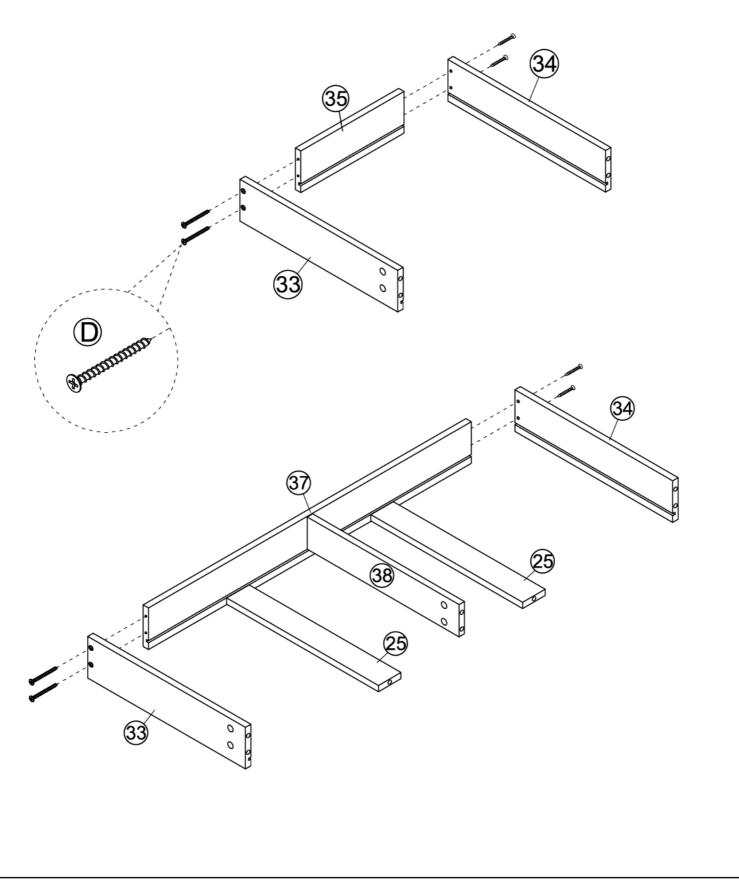


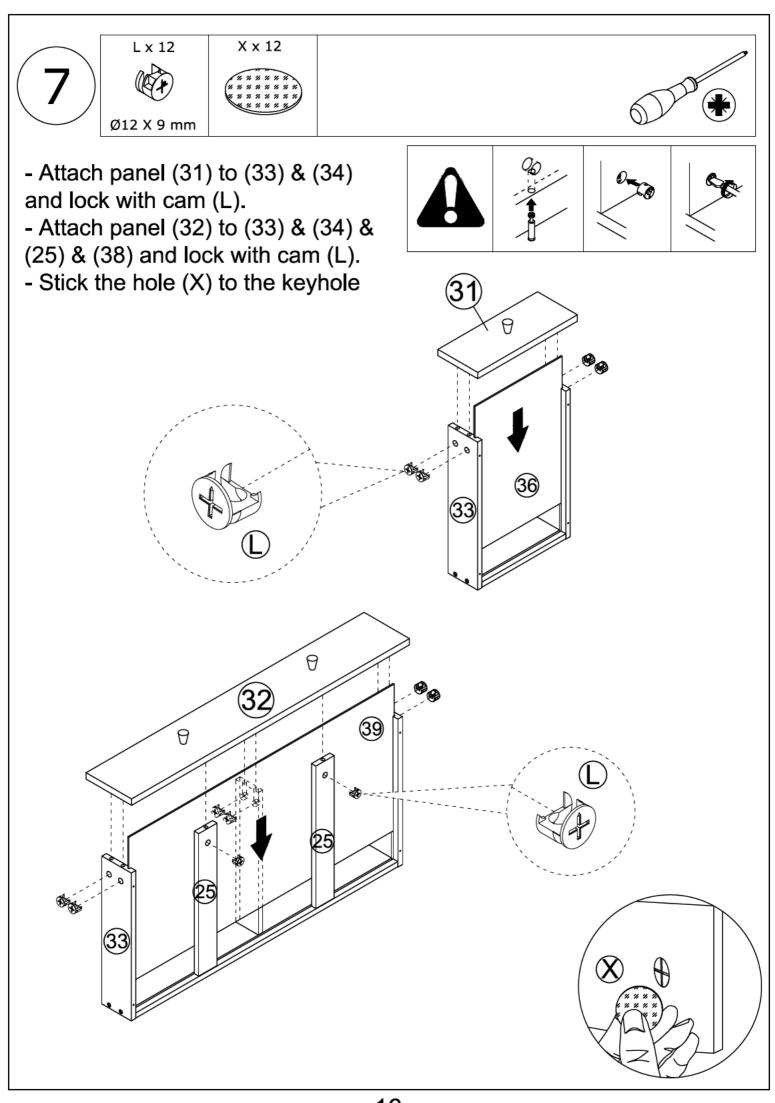


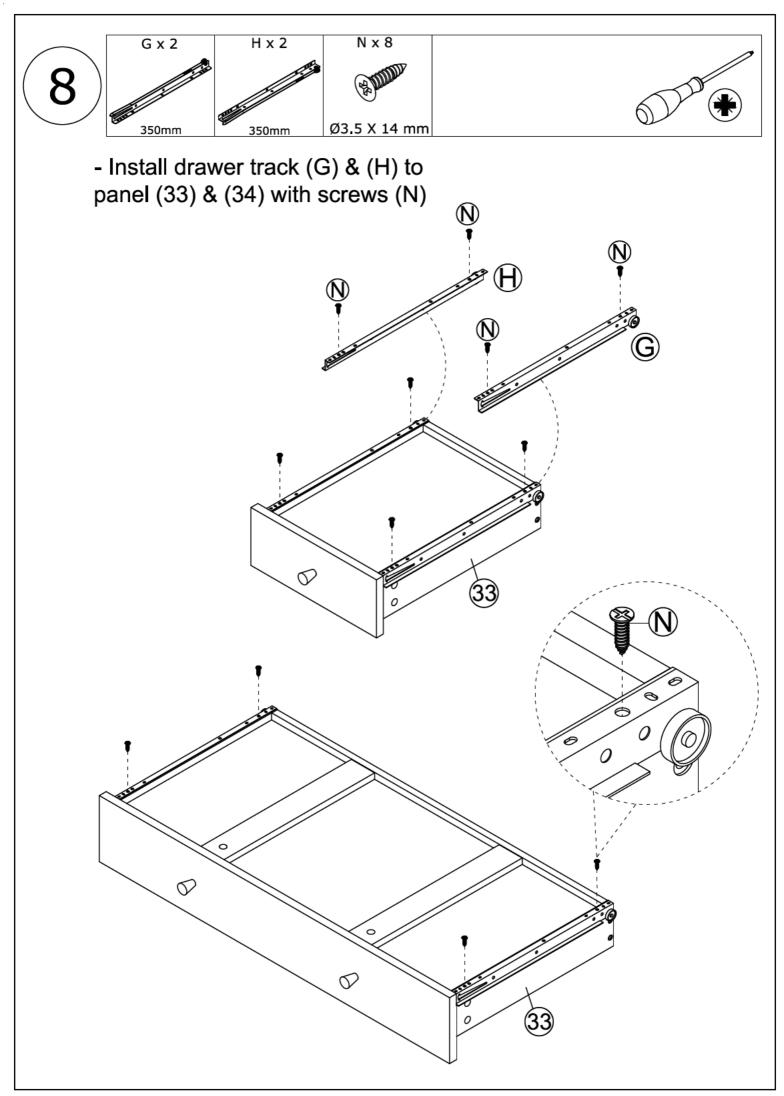

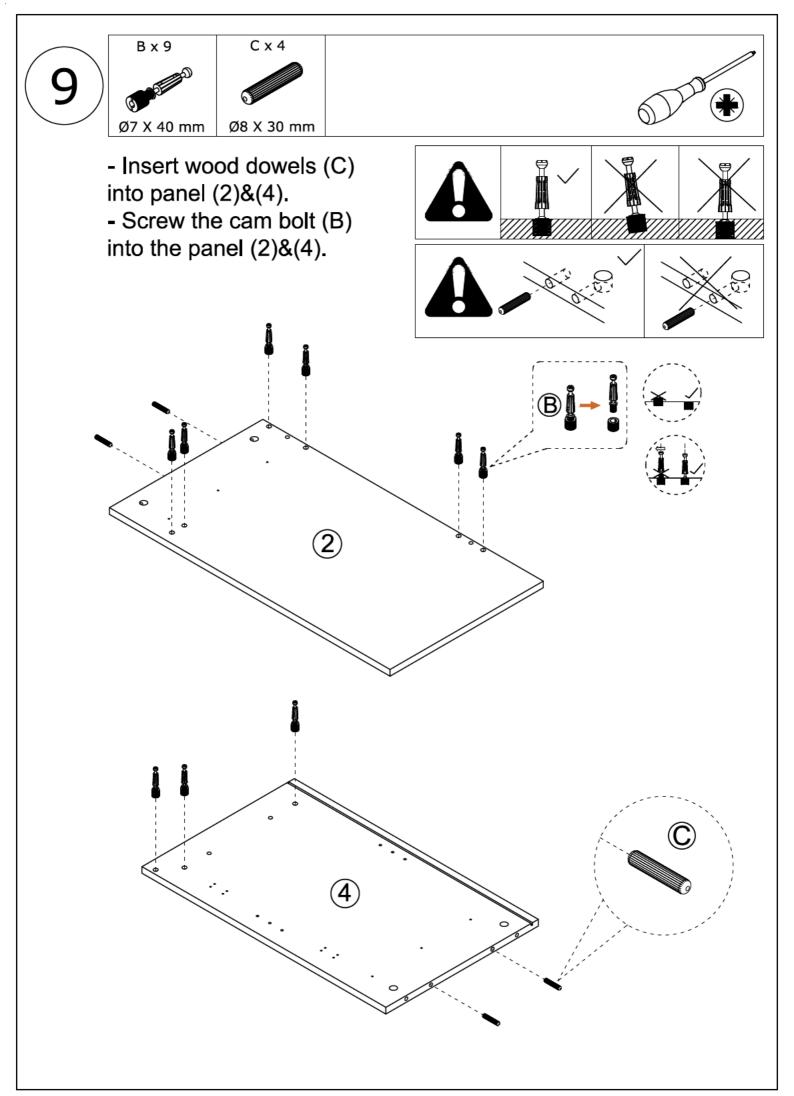


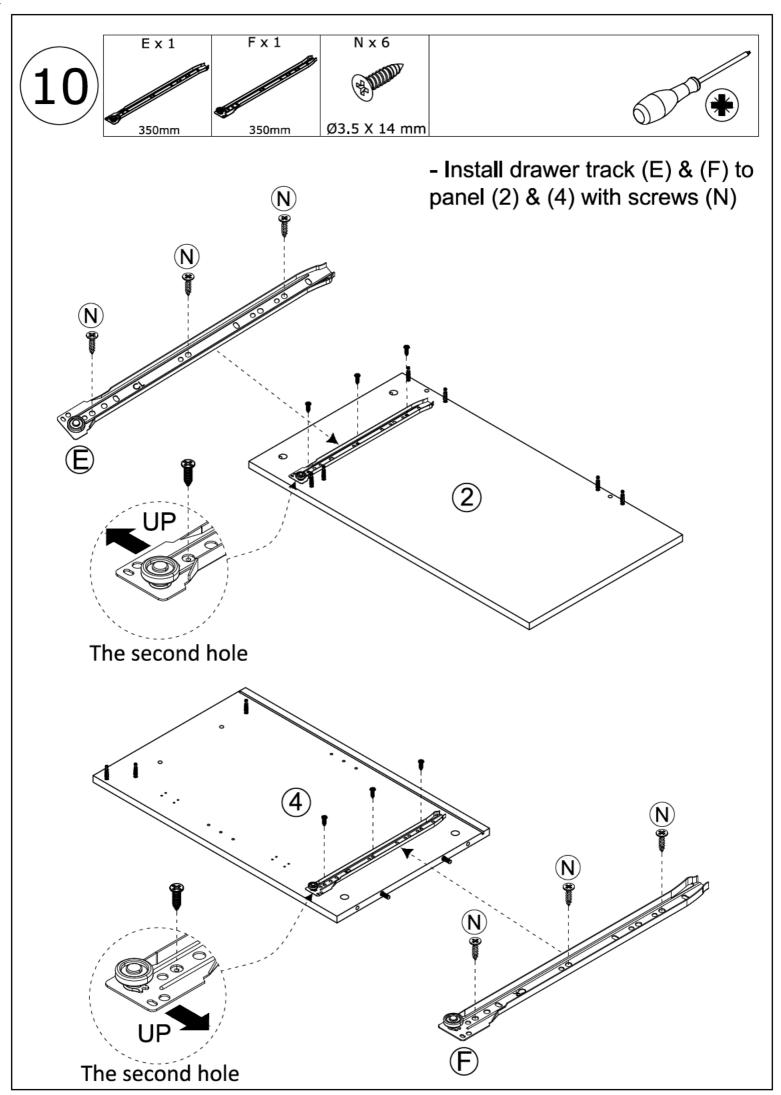


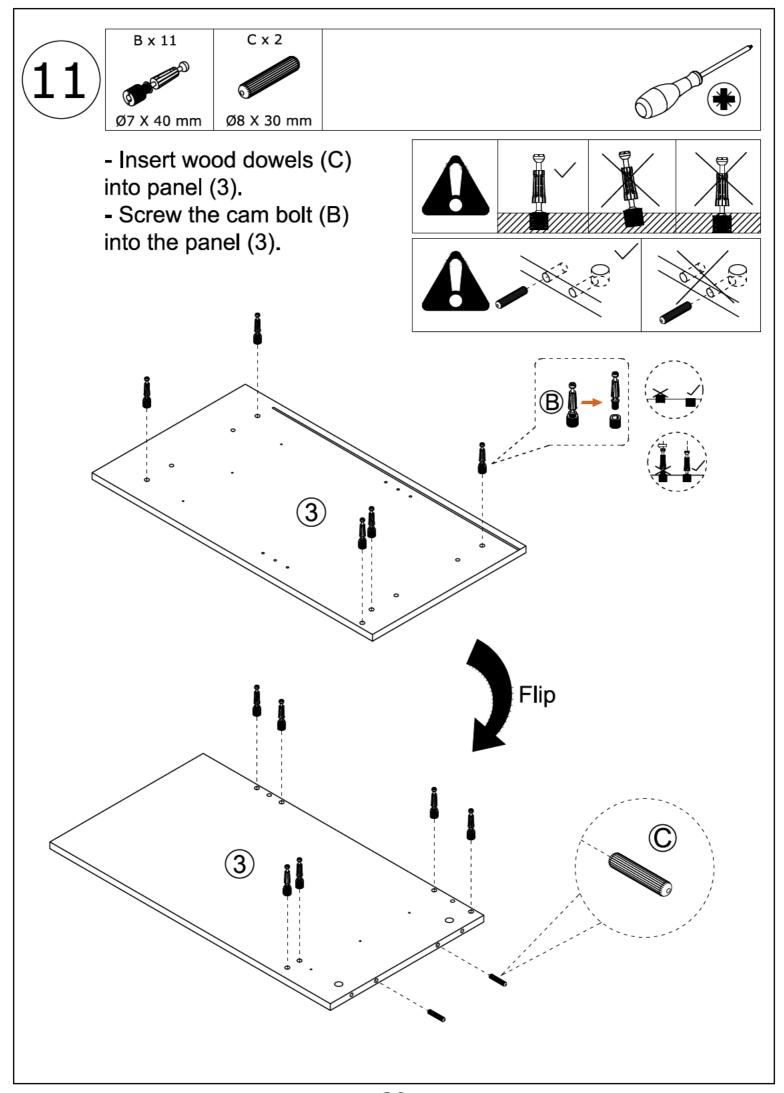

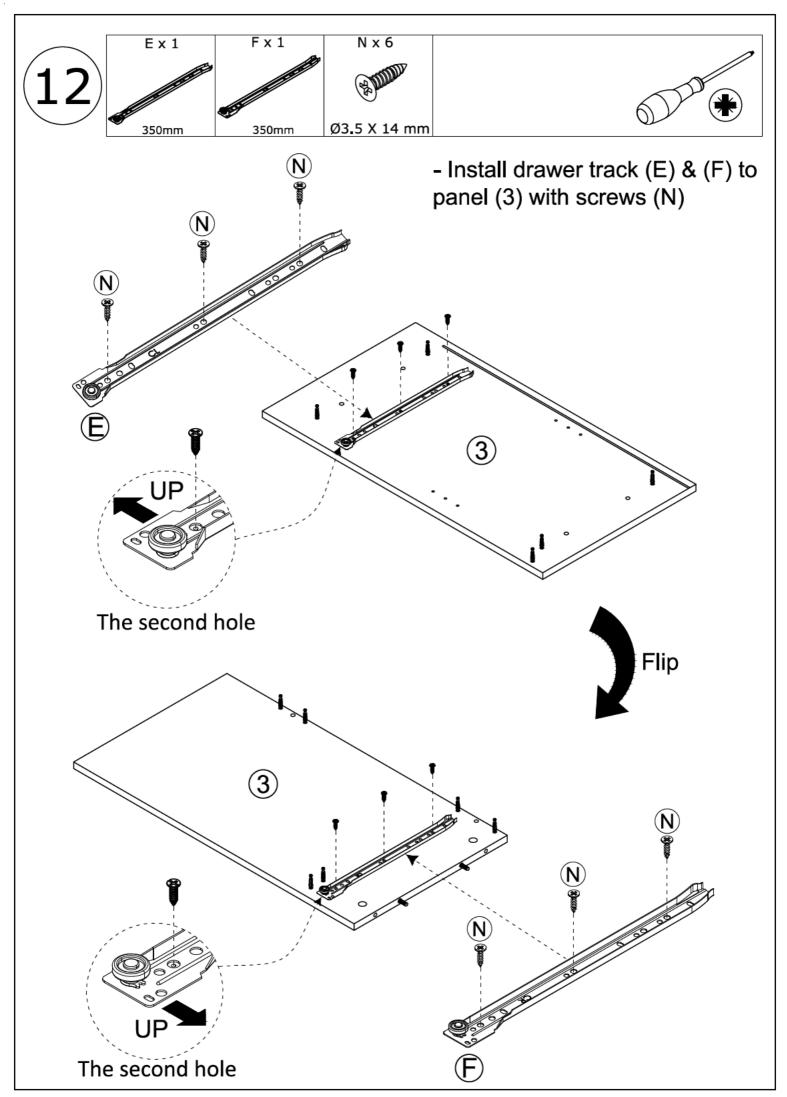





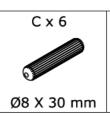


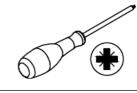


- Insert wood dowels (C) into panel (13)&(14).

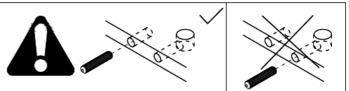


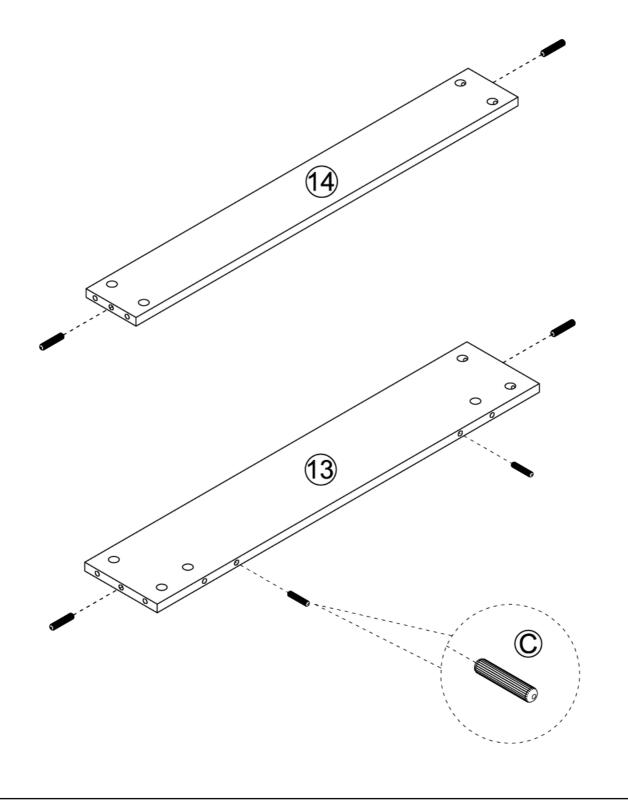

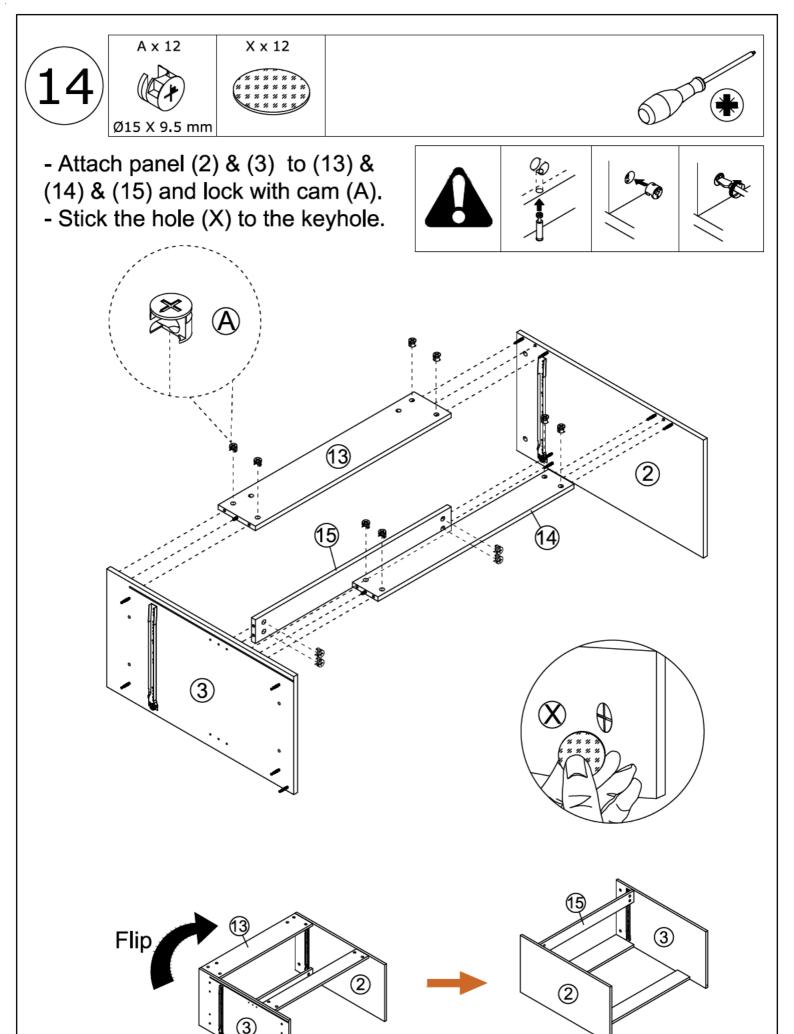

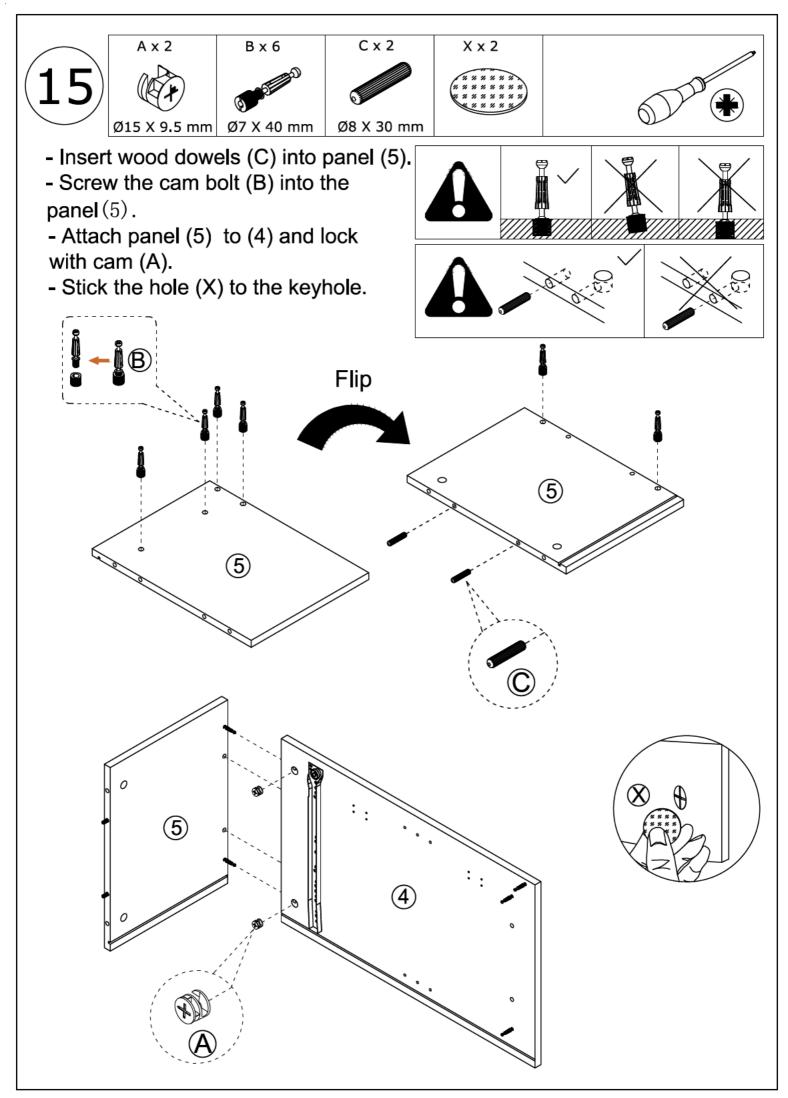




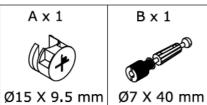







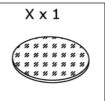




- Insert wood dowels (C) into panel (22)&(23).
- Screw the cam bolt (B) into the panel(22).
- Attach panel (22) to (23) and lock with cam (A).
- Stick the hole (X) to the keyhole.

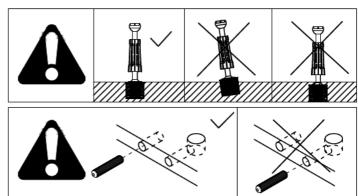


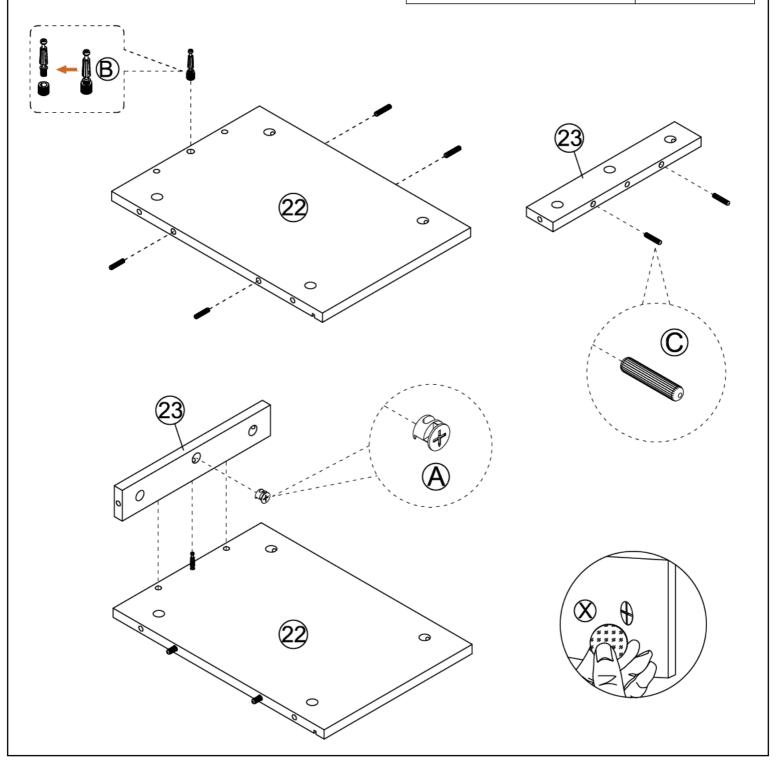




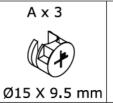




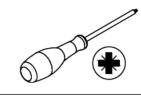


- Attach panel (4) to (22) & (23) and lock with cam (A).
- Stick the hole (X) to the keyhole.
- Insert panel (27) into the grooves .

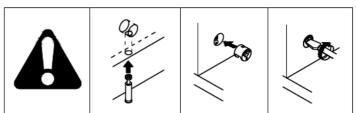

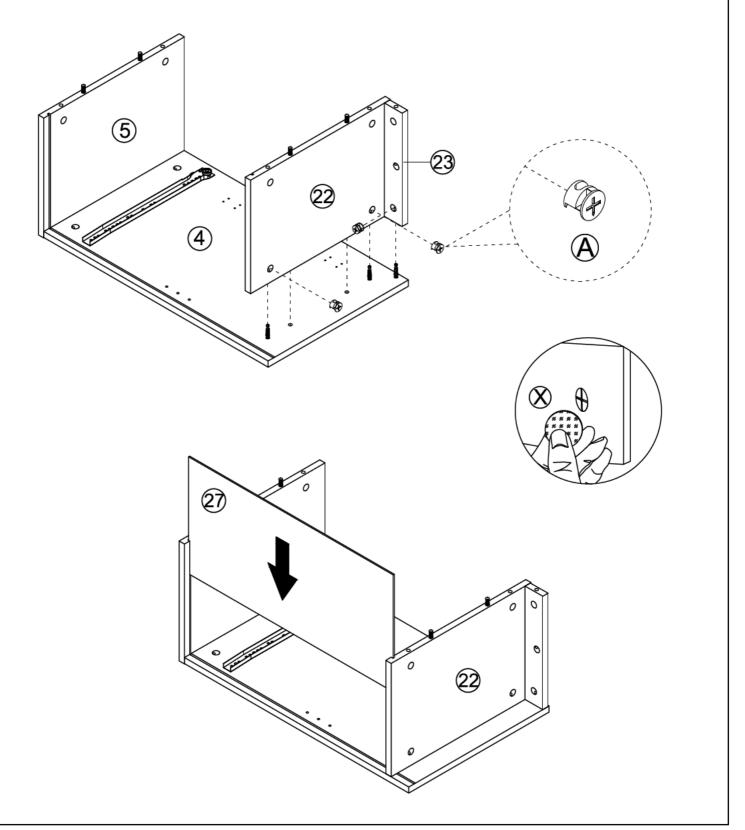




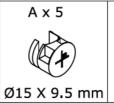







- Attach panel (3) to (5) & (22) & (23) and lock with cam (A).
- Stick the hole (X) to the keyhole.

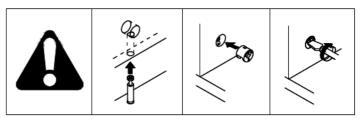

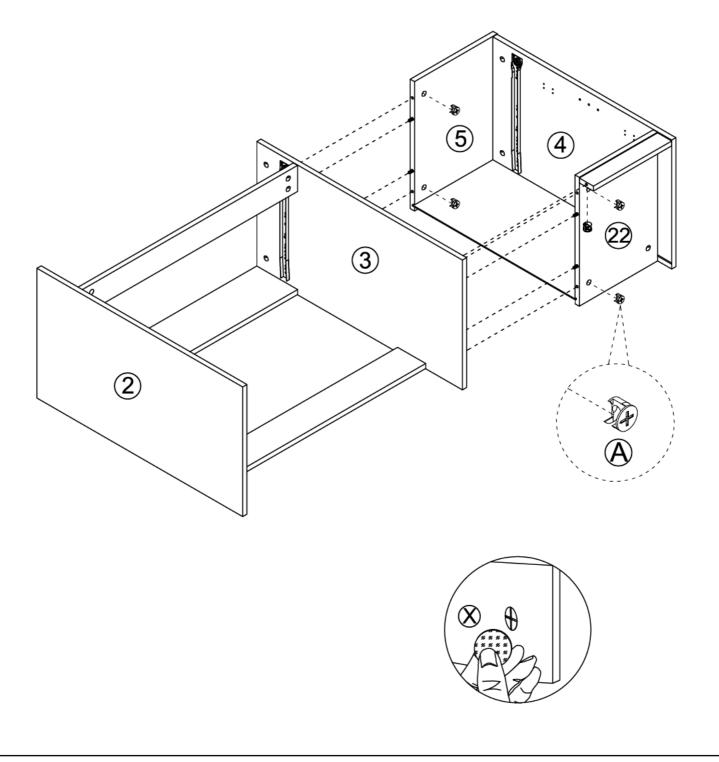





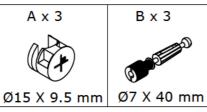







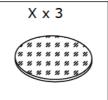


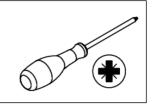



- Insert wood dowels (C) into panel (11)&(7).
- Screw the cam bolt (B) into the panel(7).
- Attach panel (7) to (11) and lock with cam (A).
- Stick the hole (X) to the keyhole.

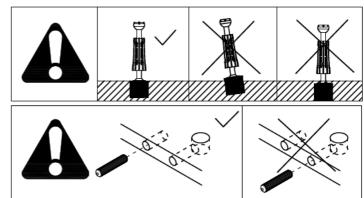


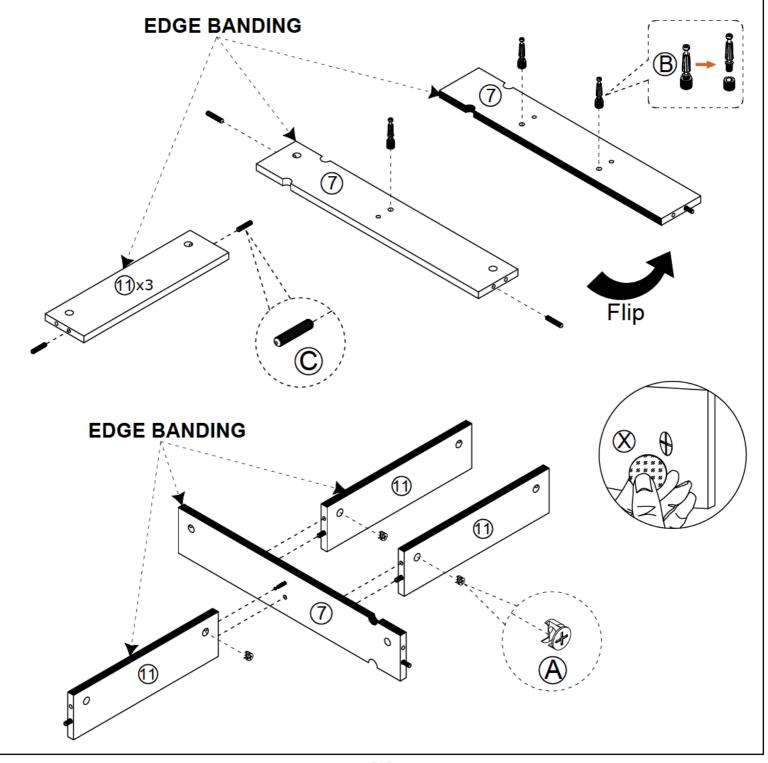


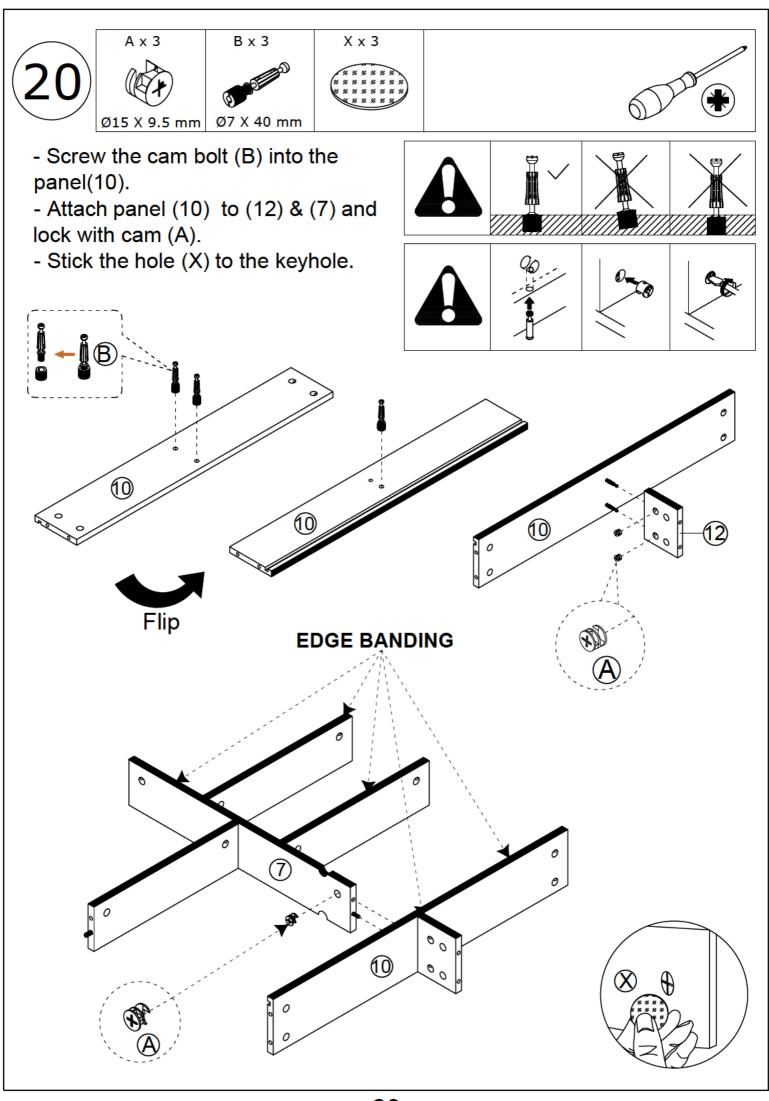

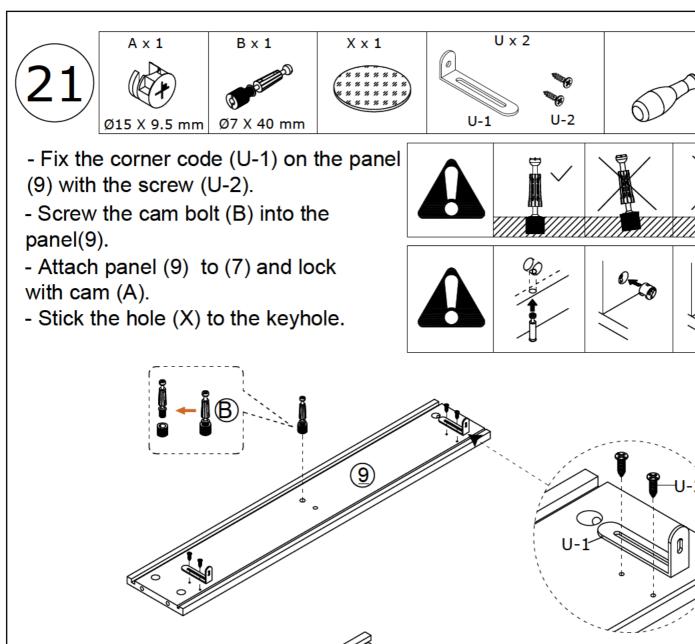


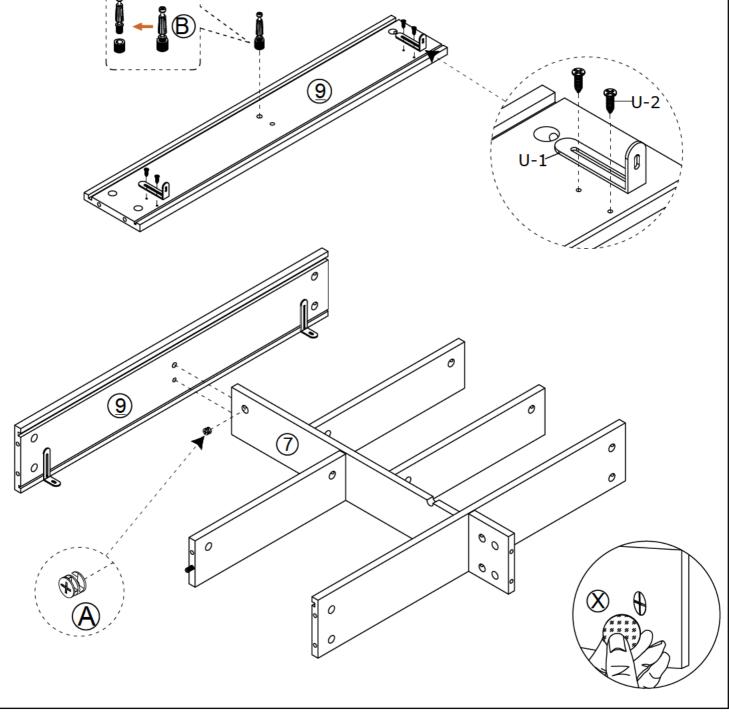

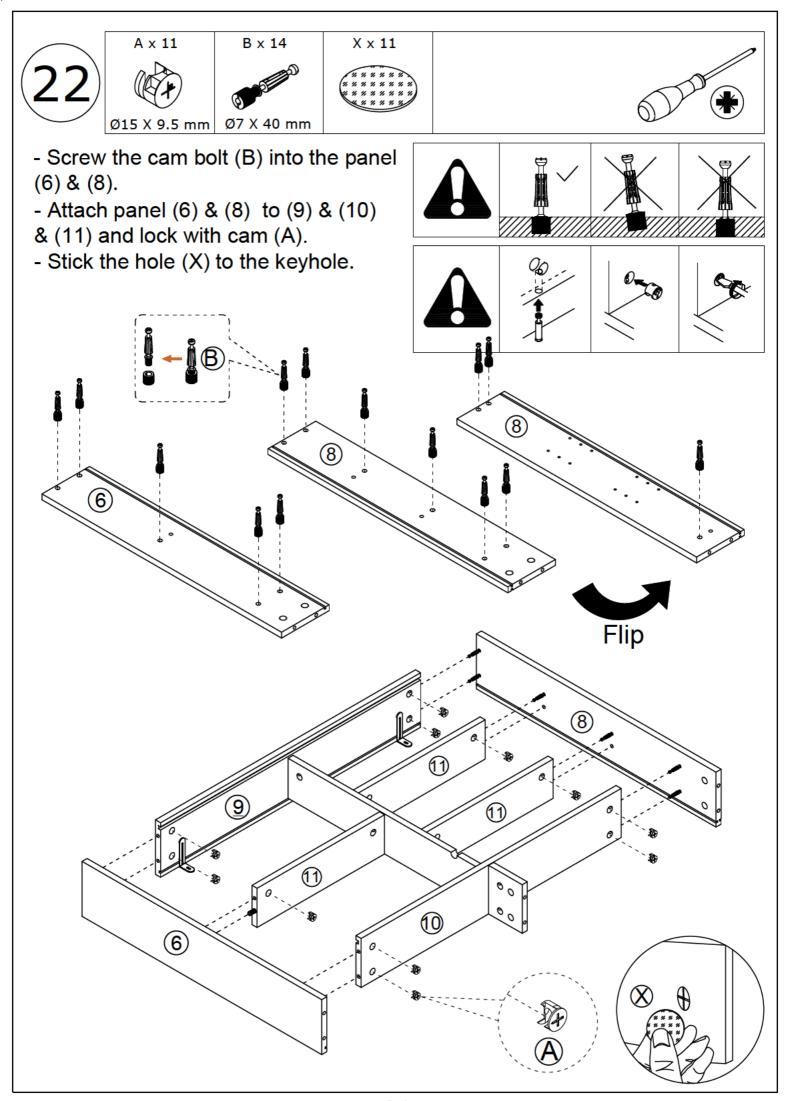


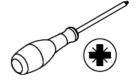

- Insert panel (24) into the grooves .

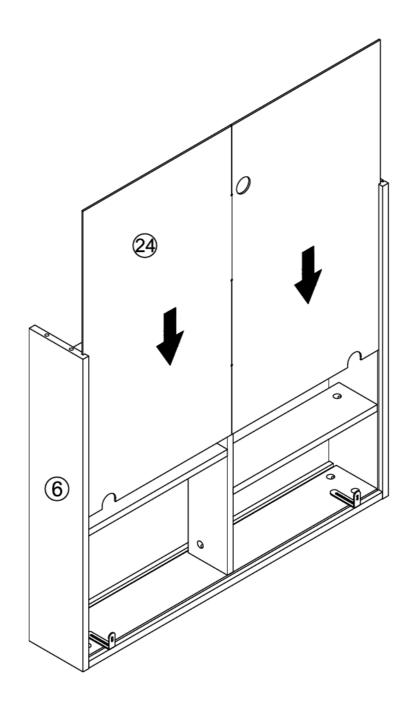





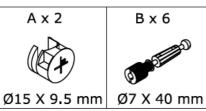







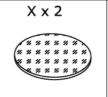

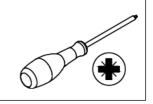



- Insert wood dowels (C) into panel (18)&(19).
- Screw the cam bolt (B) into the panel(18)&(20).
- Attach panel (18) to (19) and lock with cam (A).
- Stick the hole (X) to the keyhole.

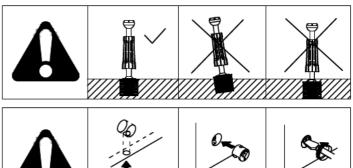

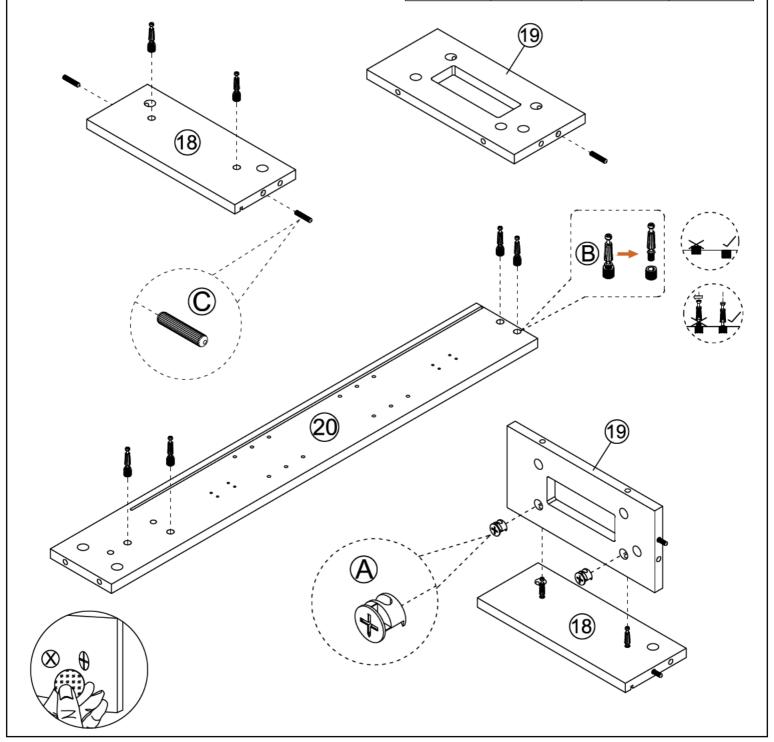




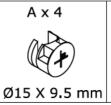


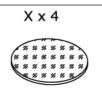





- Attach panel (20) to (16) & (18) & (19) and lock with cam (A).
- Stick the hole (X) to the keyhole.
- Insert panel (26) into the grooves .

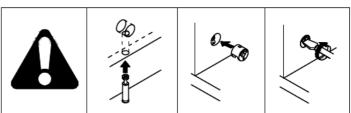


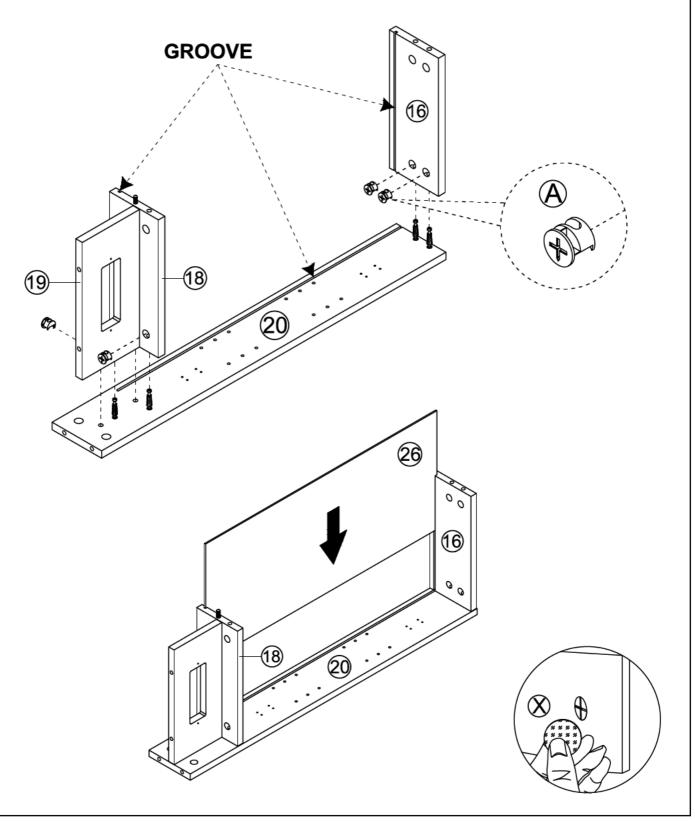




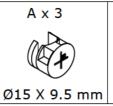


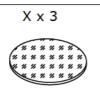

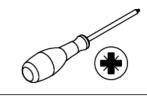


- Attach panel (8) to (16) & (18) and lock with cam (A).
- Stick the hole (X) to the keyhole.

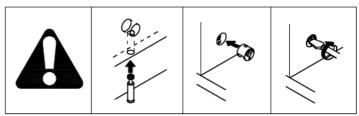


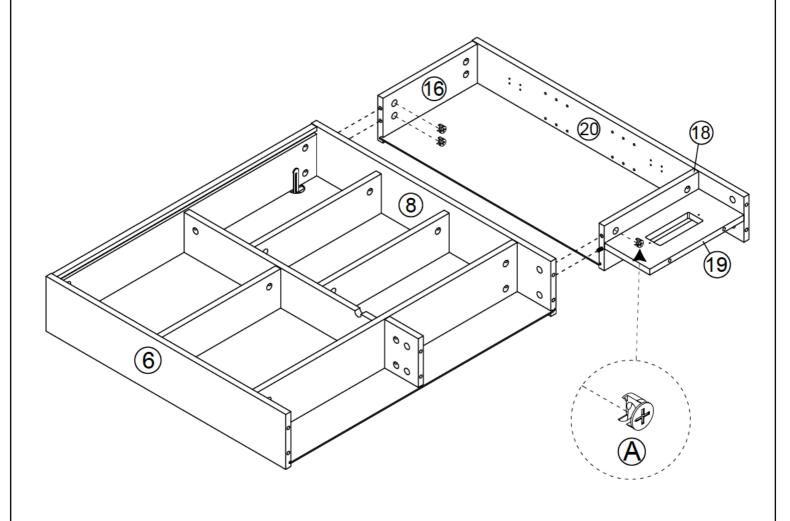





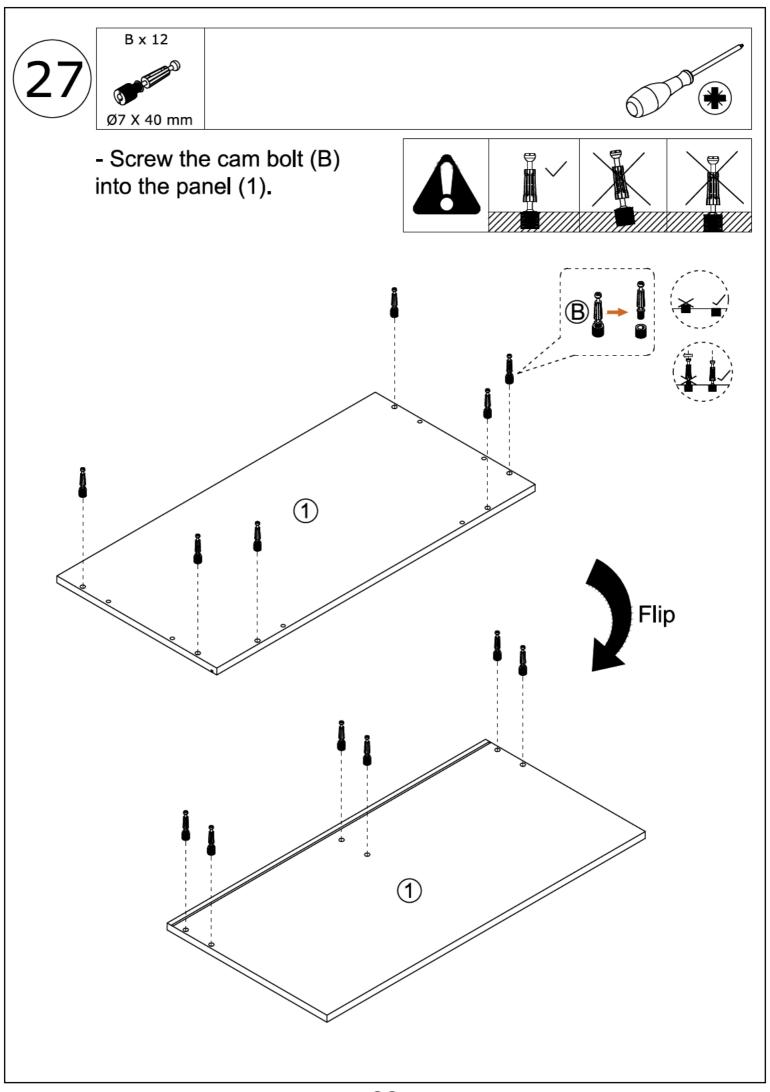




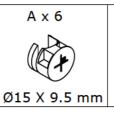


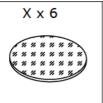

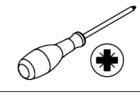



- Attach panel (1) to (6) & (8) & (12) and lock with cam (A).
- Stick the hole (X) to the keyhole.

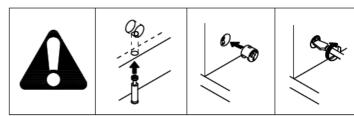

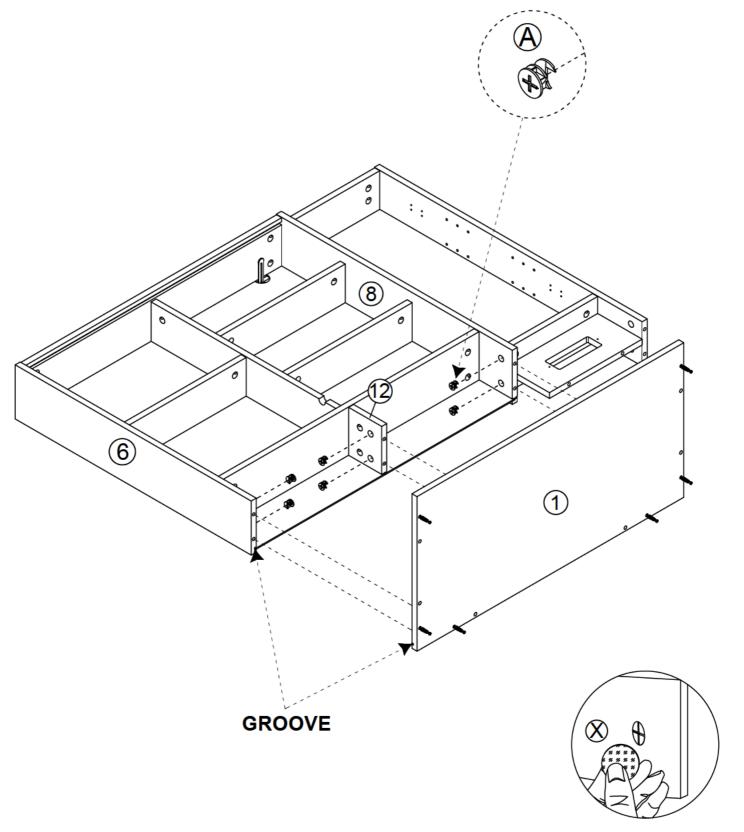




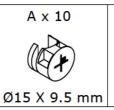

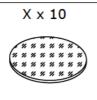





- Attach panel (1) to (2) & (3) & (13) and lock with cam (A).
- Attach panel (5) to (19) & (20) and lock with cam (A).
- Stick the hole (X) to the keyhole.

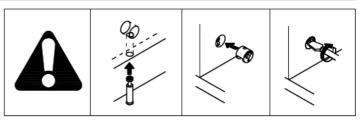


THIS STEP REQUIRES 2 PEOPLE

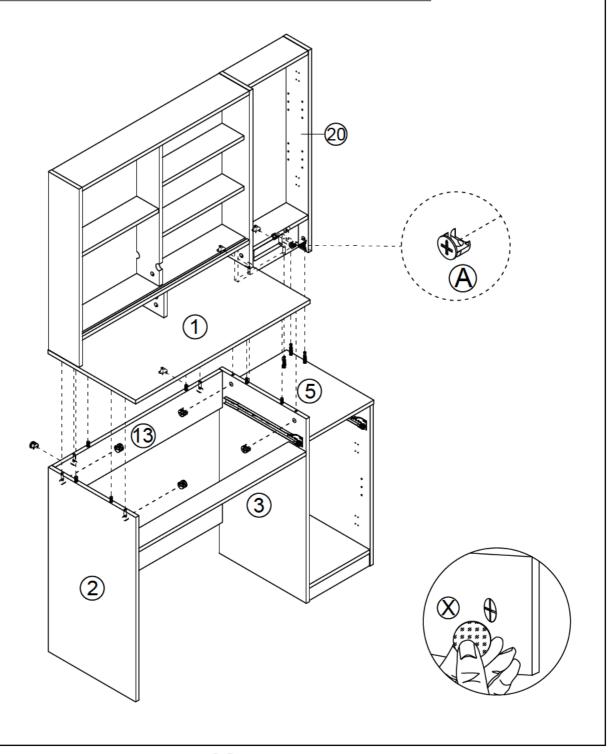


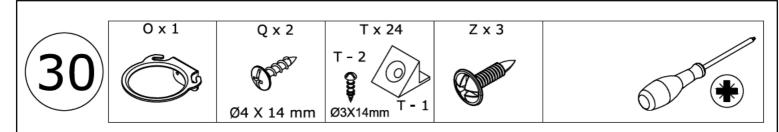



- Insert buckle (T-1) into back slots and fix with screw (T-2) as shown.

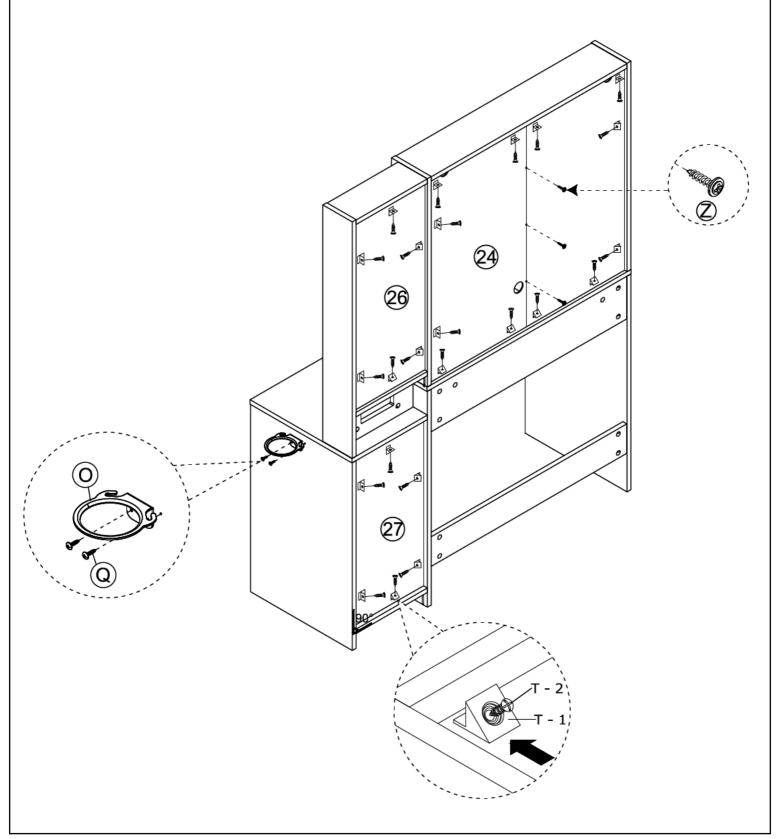




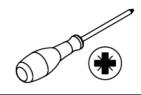

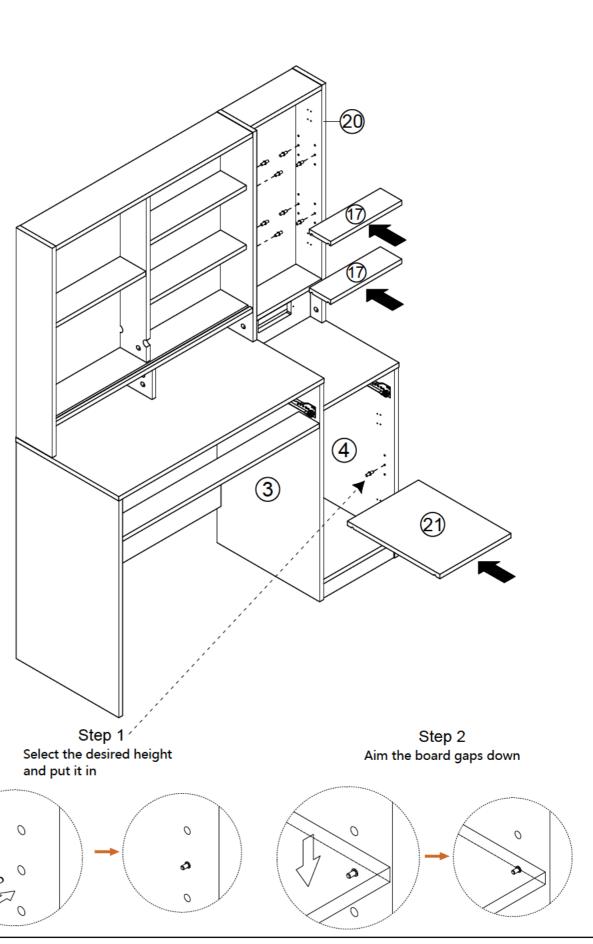

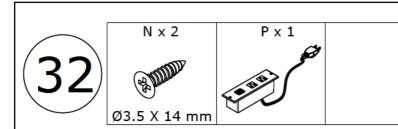


- Attach socket (P) to panel (19) with screws (N).
- Insert the drawers.

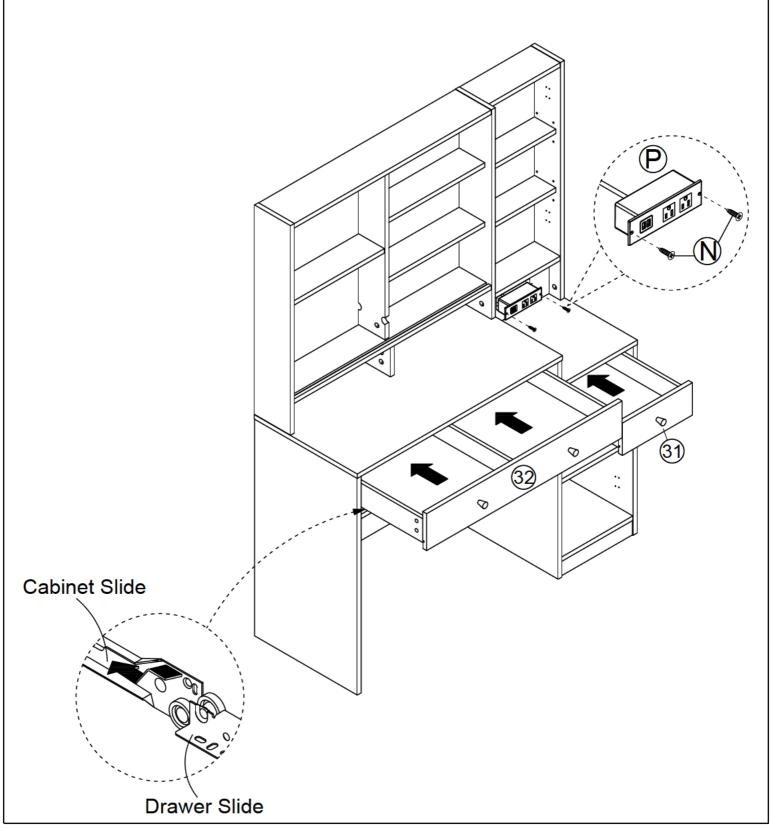







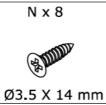




- Attach hinge (M) to panel (29) & (30) with screws (N).

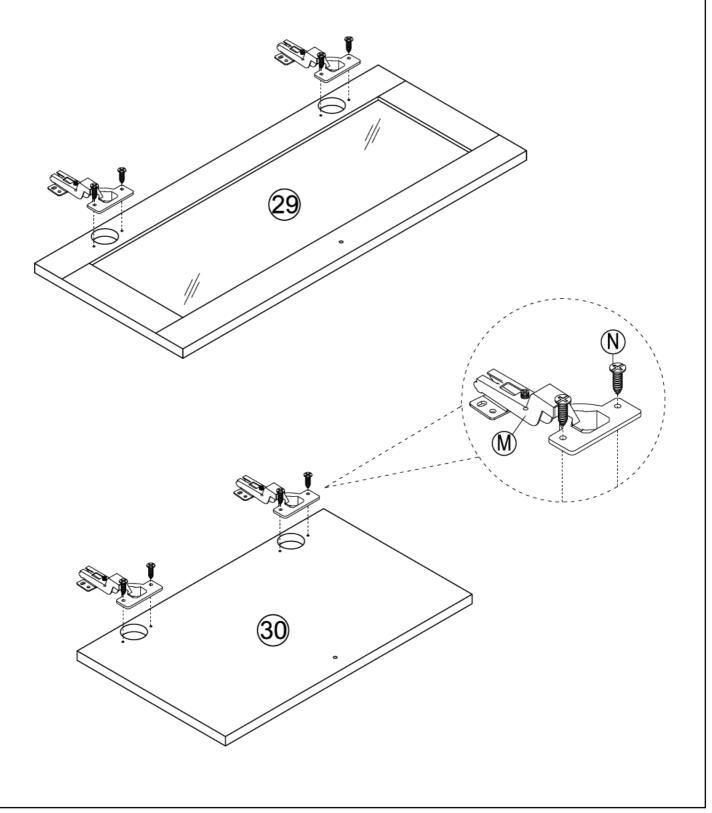

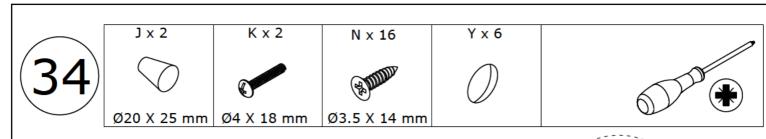


- Attach hinge (M) to panel (4) & (20) with screws (N).
- Install handle (J) to panel (29) & (30) with bolts (K).

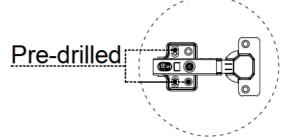



Locked with panel Pre-drilled.

After you adjustable the gap, You can Locked the other three screws.

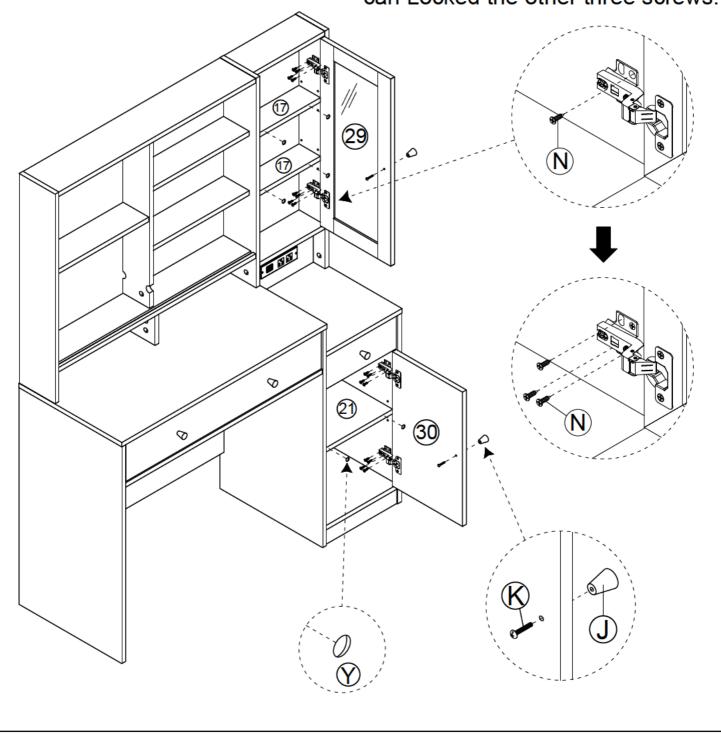




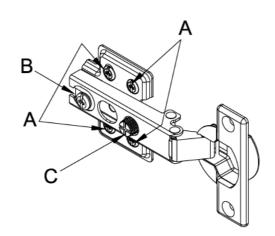

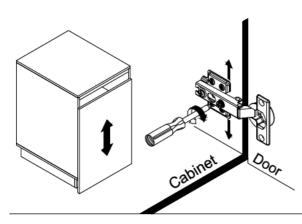


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

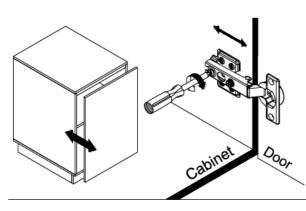


To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

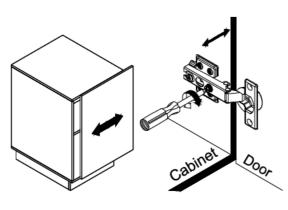


To adjust side ways.


Turning the screw "C" on BOTH hinges on each door.

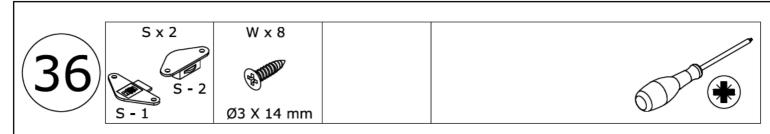


- Attach hinge (S) to panel (28) with screws (W).

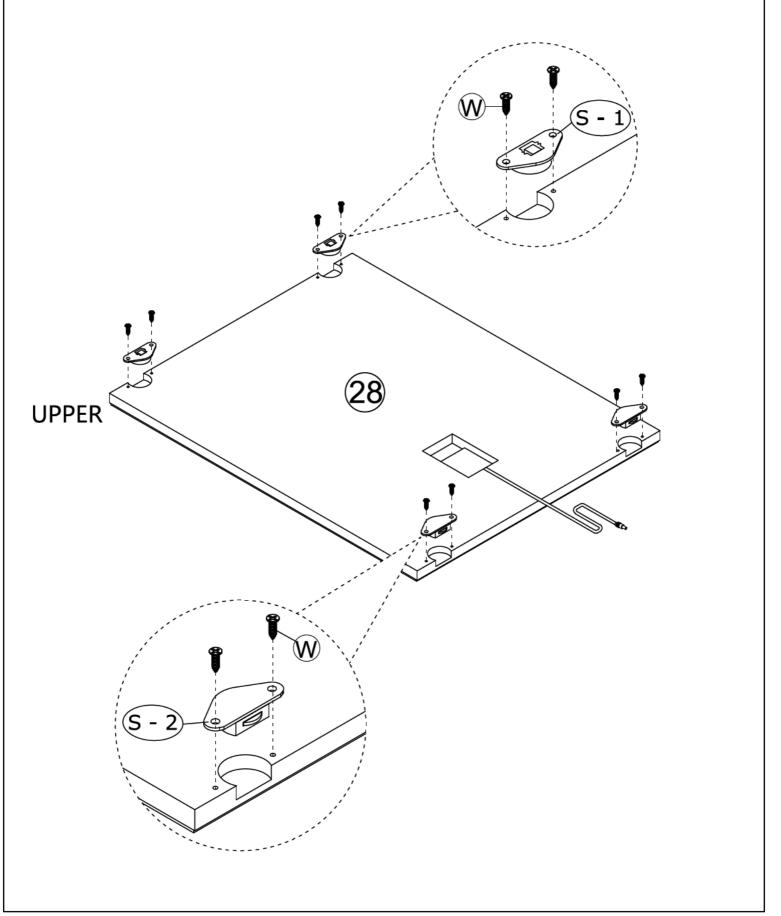




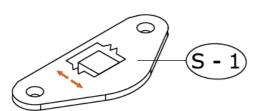


Retractable up and down

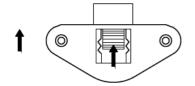




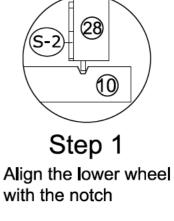


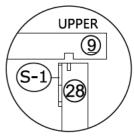

Step 2
The upper wheel is aligned with the notch

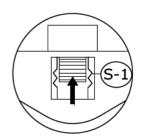


Step 3
The hardware switch opens upward

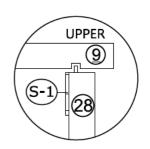

Step 4



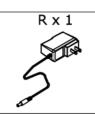



When making up can use the switch to turn on or off the light, the dressing table brings you 3 temperature light modes, touch the button you can easy light up the mirror and change et your different needs, long press to adjust the brightness

TOUCH SWITCH

