 


N893P541709
N893P541710
Product Manual

Manuel du produit

Wardrobe Cabinet

Armoire-penderie

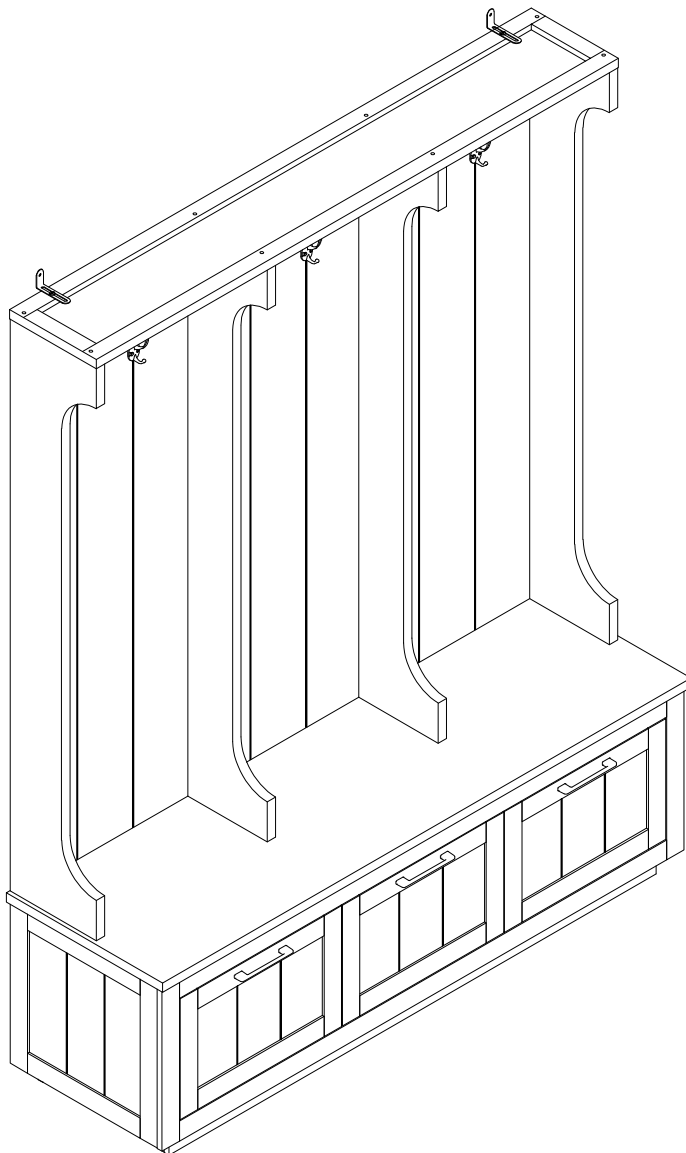

AVERTISSEMENT



Ce produit N'EST PAS une unité de rangement pour vêtements (CSU). NE l'utilisez PAS pour le rangement de vêtements.
Une utilisation impropre peut entraîner un basculement des meubles.



WARNING



This product Is NOT a Clothing Storage Unit(CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them
- Keep children and pets away from the installation area, which may cause choking if small parts are swallowed.
- Make sure you have enough space to layout the parts before

- Do not stand or apply weight to the product during assembly. This may cause damage.



- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damage to the unit or floor.

- It's easier for two people to assemble the parts together.

- To reduce the likelihood of damage to your product, make sure your power drill is set to a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Check for loose screws on this unit from time to time.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are correctly tightened.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

 
please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

Conseils de sécurité et de soins

Important - veuillez lire ces instructions complètement avant de commencer l'assemblage

- Vérifiez que vous avez tous les composants et outils énumérés sur les pages suivantes.
- Retirez tous les accessoires des sacs en plastique et les séparez
- Gardez les enfants et les animaux de compagnie loin de la zone d'installation qui peut causer l'étouffement si de petites pièces sont avalées.
- Assurez-vous d'avoir suffisamment d'espace pour mettre en place les pièces avant.
- Ne pas se tenir debout ou appliquer le poids à l'unité pendant l'assemblage. Cela peut causer des dommages.
- Assemblez l'élément le plus près possible de sa position finale (dans la salle de séjour).
- Assemblez sur un niveau doux Surface pour éviter les dommages à l'unité ou à l'étage.
- Il est plus facile pour deux personnes de se réunir les parties ensemble.
- Pour réduire la probabilité de dommages à votre produit, assurez-vous que votre perceuse électrique est réglée sur un réglage de couple faible.

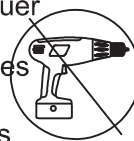

Entretien et entretien

- Nettoyer uniquement à l'aide d'un détergent doux à linge humide, ne pas utiliser d'eau de javel ou de nettoyeurs abrasifs
- Vérifiez les vis desserrées sur cette unité de temps en temps.
- Ce produit ne doit pas être jeté avec les ordures ménagères, emporter au centre d'élimination des déchets de votre collectivité locale

Conseils pratiques

- Assemblez toutes les pièces et boulons pendant l'assemblage, uniquement lorsque le produit est complètement assemblé, serrez entièrement les boulons
- Vérifiez et assurez régulièrement que tous les boulons et raccords sont correctement serrés.

Avertissement Afin de prévenir le renversement Veuillez suivre ces instructions

Pour aider à prévenir le renversement du produit, veuillez suivre les étapes suivantes :-

Utilisez la méthode anti-tip stap ou de fixation murale fournie (le cas échéant)
Ne laissez pas les enfants grimper ou accrocher aux meubles
N'ouvrez pas plus d'un tiroir à la fois
Ne placez pas d'objets lourds dans les tiroirs supérieurs
Ne placez pas d'objets lourds sur le dessus des meubles, sauf si les meubles ont été conçus à cet effet

Veuillez noter que seule la courroie anti-pointe est fournie.

 
Vous devrez fournir des bouchons muraux et des vis applicables pour votre type de mur

Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.


1 DO NOT OVER TIGHTEN.

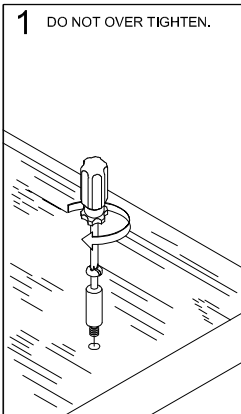

Step 2

Push the male camlock into the entry hole.

 2

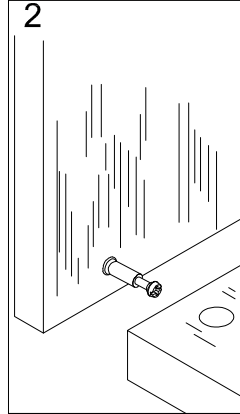


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

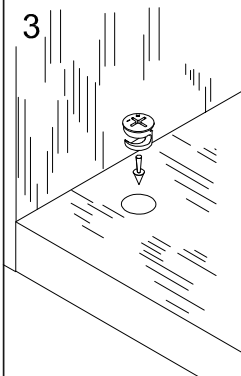


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

 4

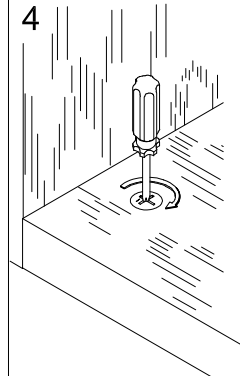


Utilisation de Camlocks

Étape 1

Connectez le mâle Camlock tel que dicté dans Les instructions de montage Utiliser un driver scewdriver.

1

 
Ne pas trop serrer.
NE PAS SERRER EXCESSIVEMENT.

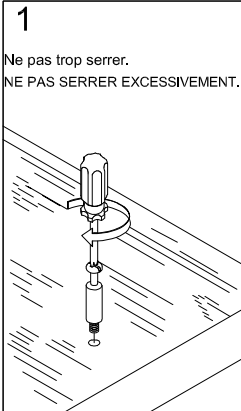

Étape 2

Poussez le camlock mâle Dans le trou d'entrée.

 2

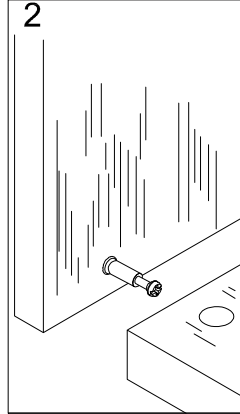


Étape 3

Insérer le femelle Camlock comme indiqué dans le Instruction.

Note: assurez-vous que le Flèche sur le haut de la Camlock pointe vers Le trou d'entrée pour la Mâle camlock.

 3

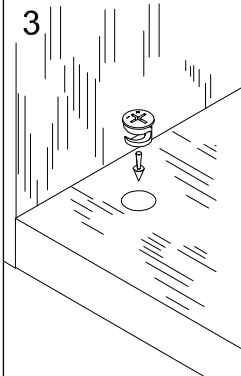


Étape 4





Tournez la femelle camlock Dans le sens horaire avec un Tournevis.

Vous devriez sentir un clic Lorsque le camlock est Verrouillé en place.














Le joint est maintenant sécurisé.

     4
















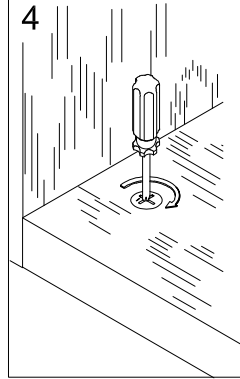


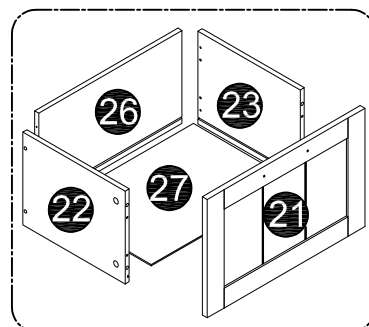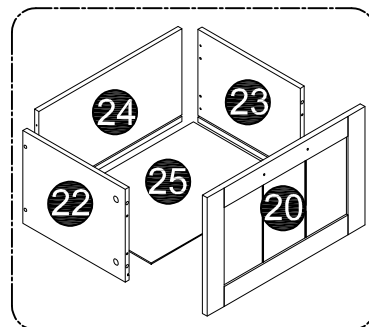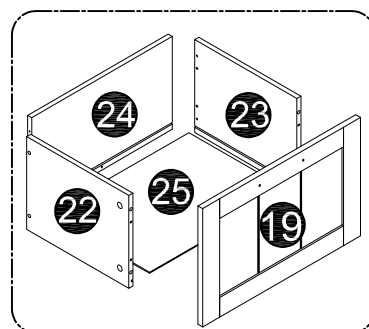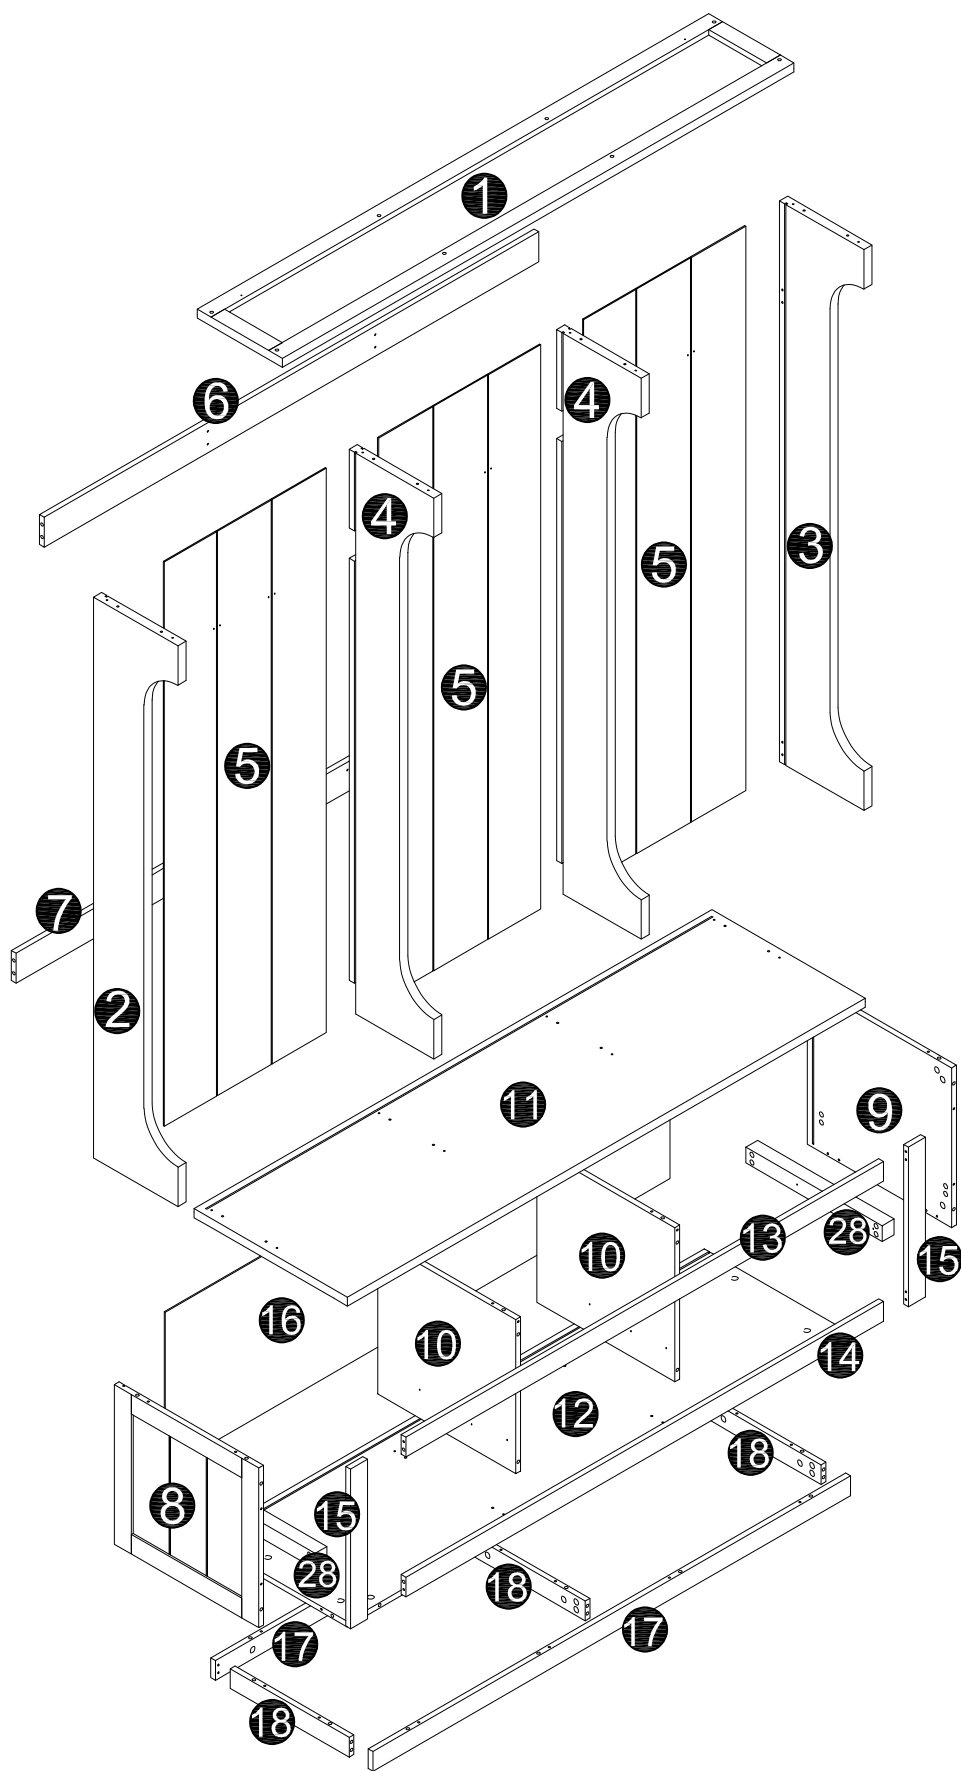

  
 
 
 
 
 
 
 
 
 
 
 
Parts List for/Liste des pièces pour N893P541709

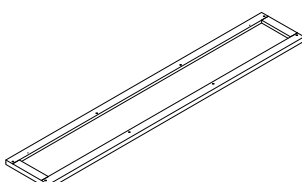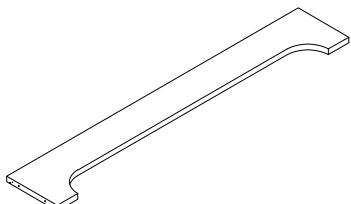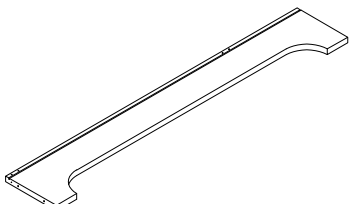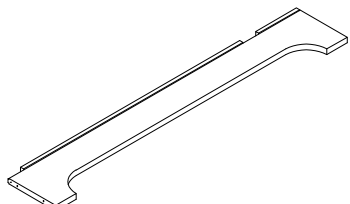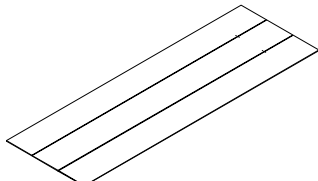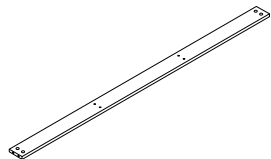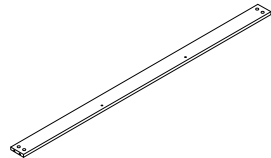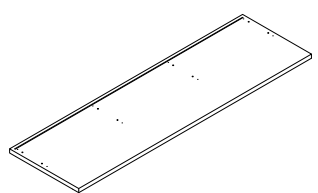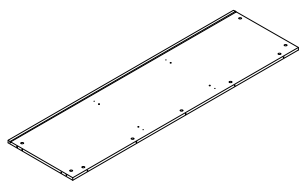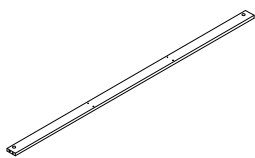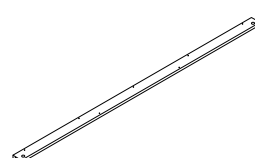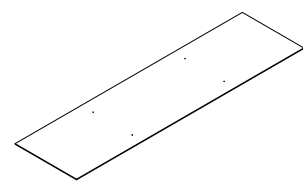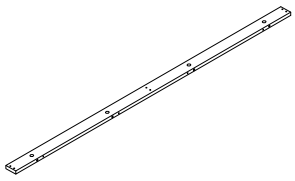 x1	 x1	 x1	 x2
①	②	③	④
 x3	 x1	 x1	 x1
⑤	⑥	⑦	⑪
 x1	 x1	 x1	 x1
⑫	⑬	⑭	⑯
 x2			
⑰			

                
Parts List for/Liste des pièces pour N893P541710

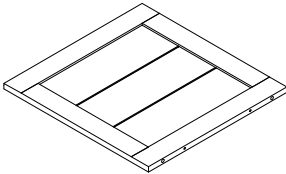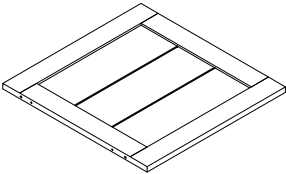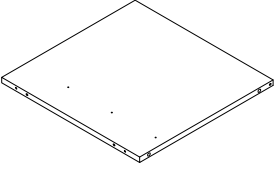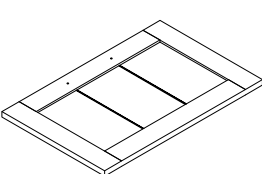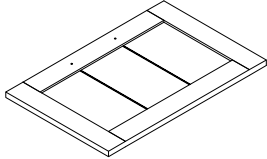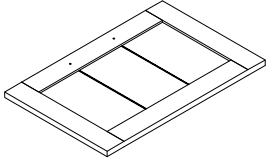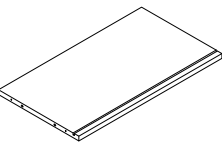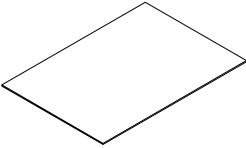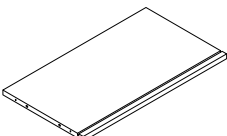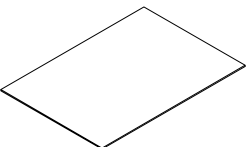
			
x1	x1	x2	x1
8	9	10	19
			
x1	x1	x3	x3
20	21	22	23
			
x2	x3	x2	x2
15	18	24	25
			
x1	x1	x2	Hardware box (1pc)
26	27	28	

            
Hardware list / Liste du materiel
N893P541710

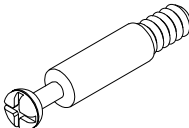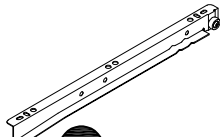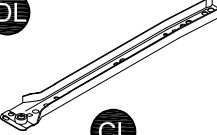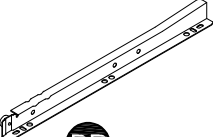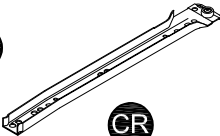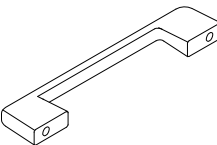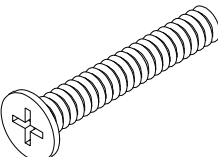			
Ø6x33	Ø15*10	M5*45	Ø6*30
A x75+3	B x75+3	C x26+2	D x80+5
	 DL  CL  DR  CR		
M4*35	12 INCH		M3.5*12
E x12+1	F x3		G x34+1
			
H x6	M3.5*20 I x12+1	J x16+2	M3*16 K x16+2
			
Ø13 L x6+2	M4*18 M x6	N x3	M6*30 x8 O
 x1  x1  x1  x1	 M3 Q x1	 R x1	 S x20
P x2	Q x1	R x1	S x20

  
Step 1/Étape 1


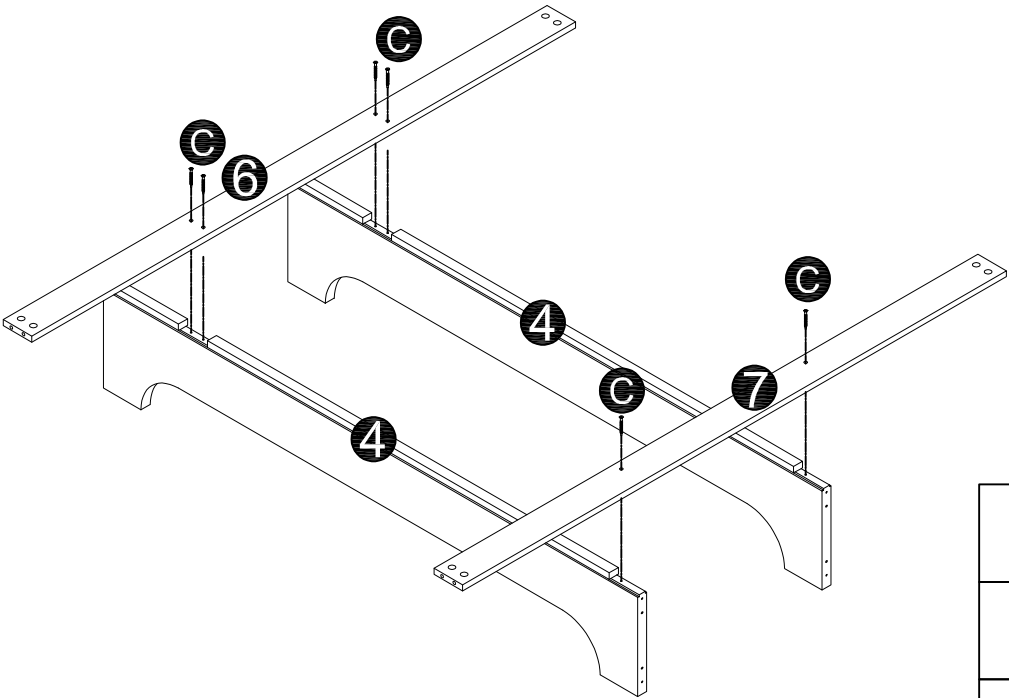



	7 x1
	6 x1
	4 x2
C	 x6

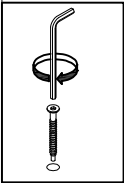 

  
 
Step 2/Étape 2


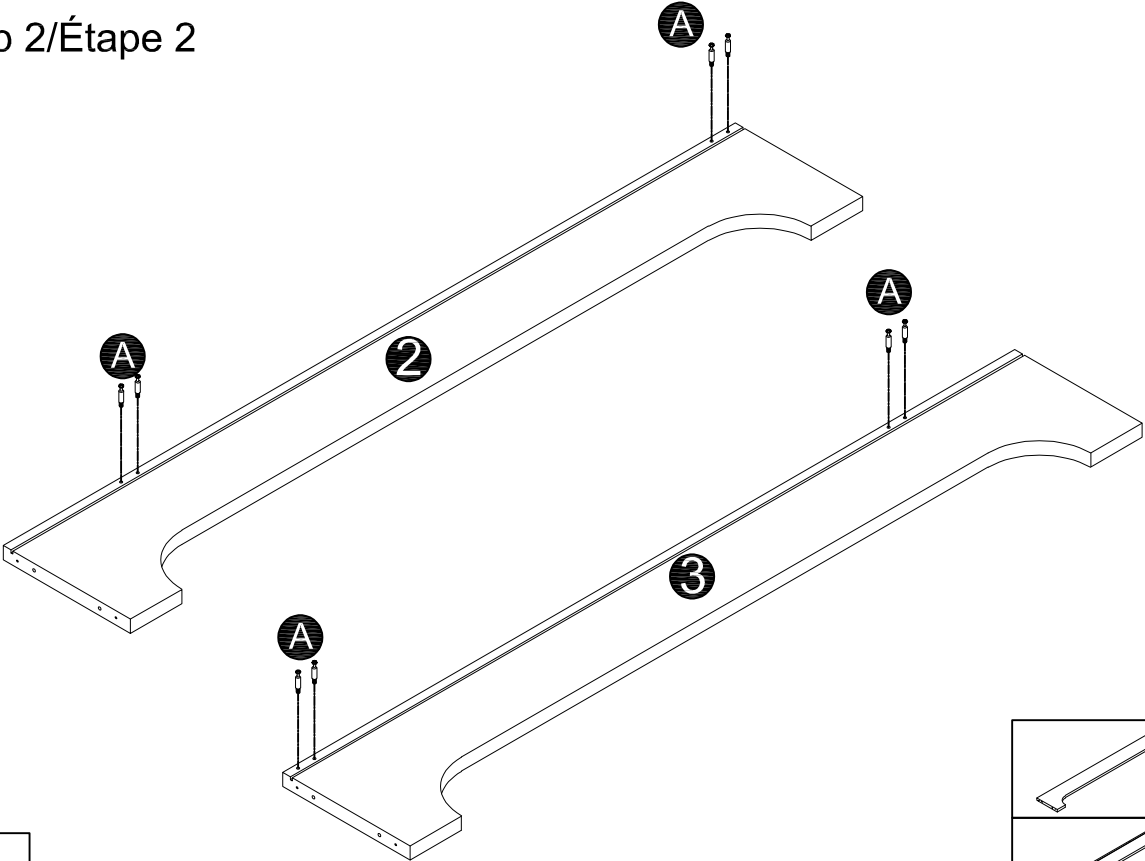


	2 x1
	3 x1
A	 x8


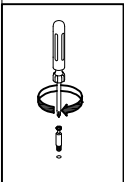 


    
Step 3/Étape 3

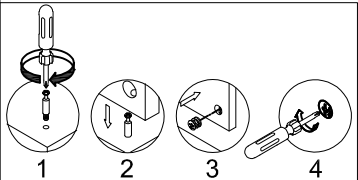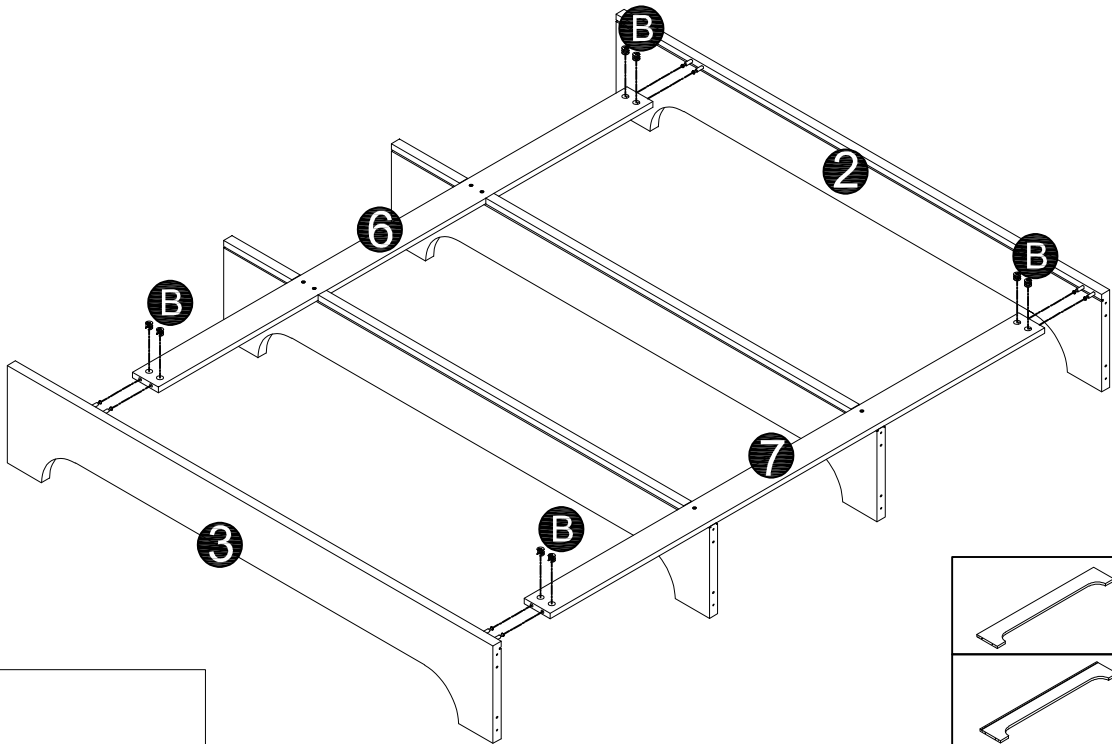



	2 x1
	3 x1
B	 x8

   Step 4/Étape 4

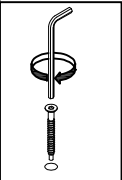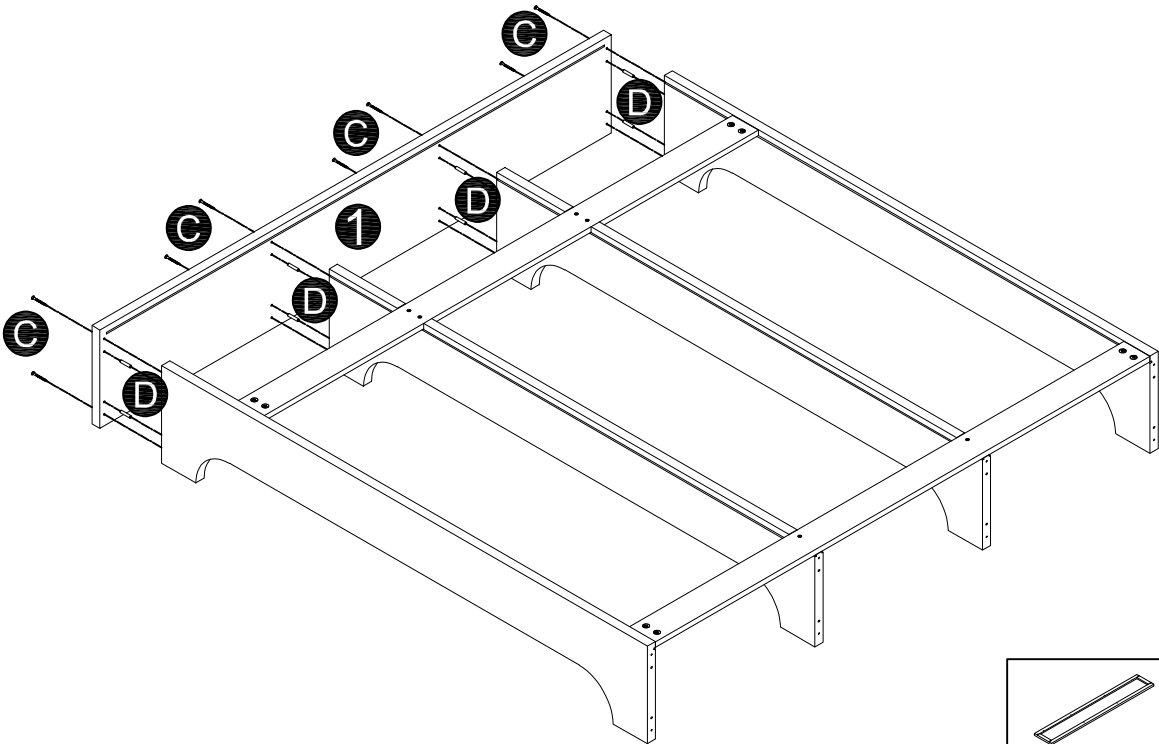


	1 x1
D	 x8
C	 x8

 
 
Step 5/Étape 5

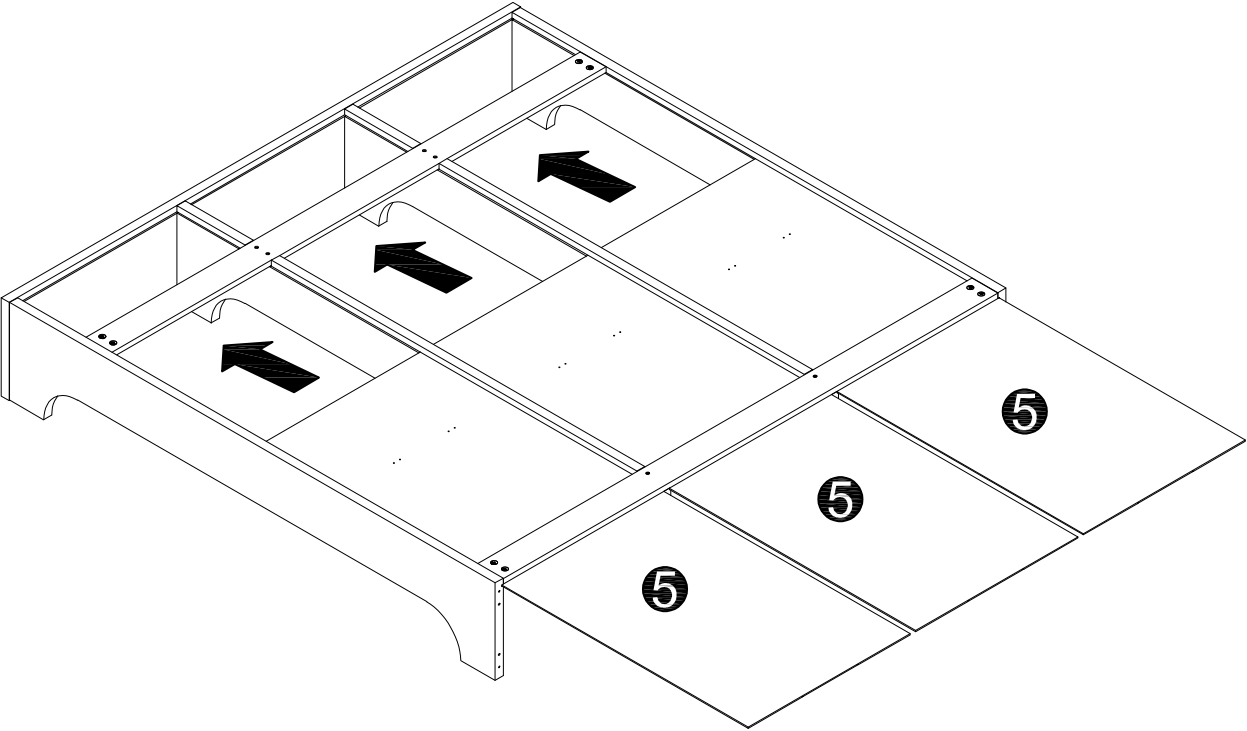


 Step 6/Étape 6


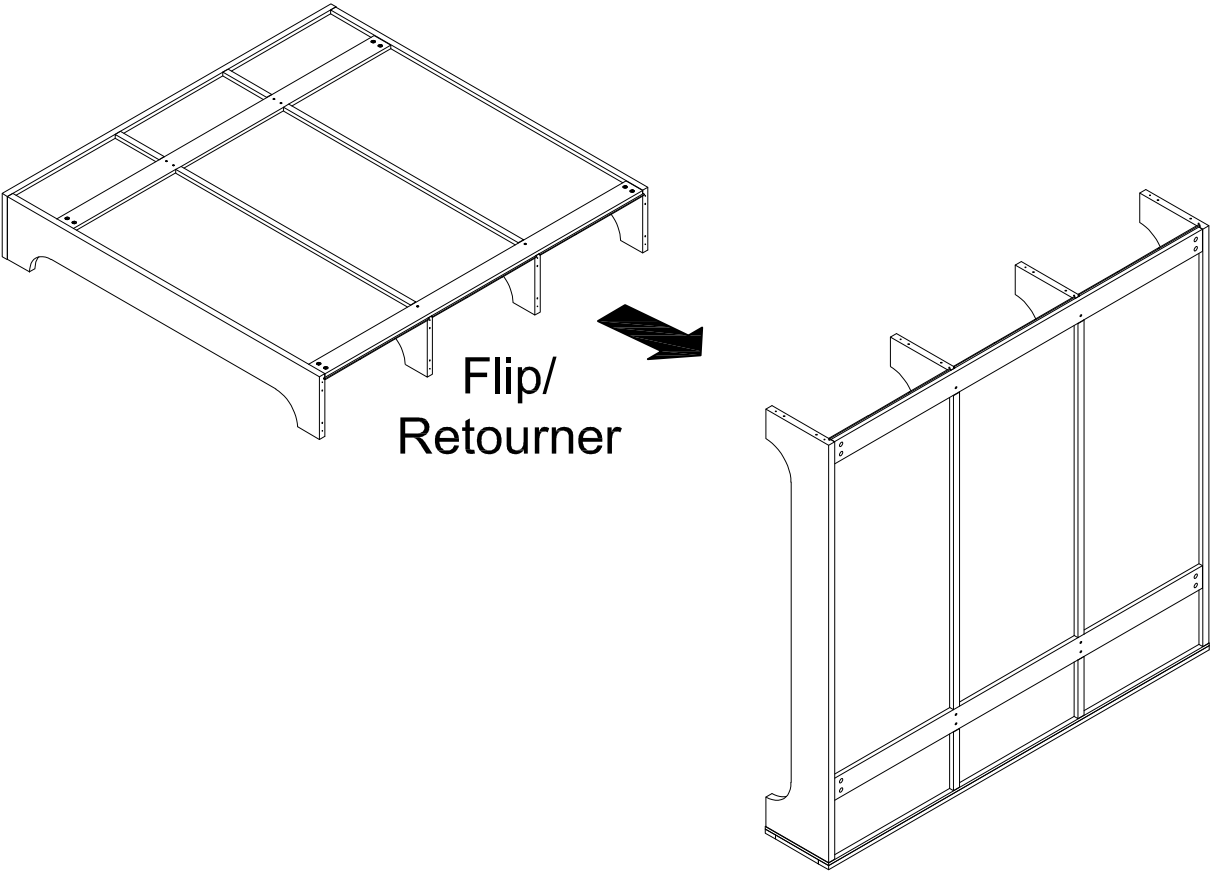


   Step 7/Étape 7

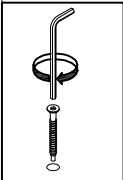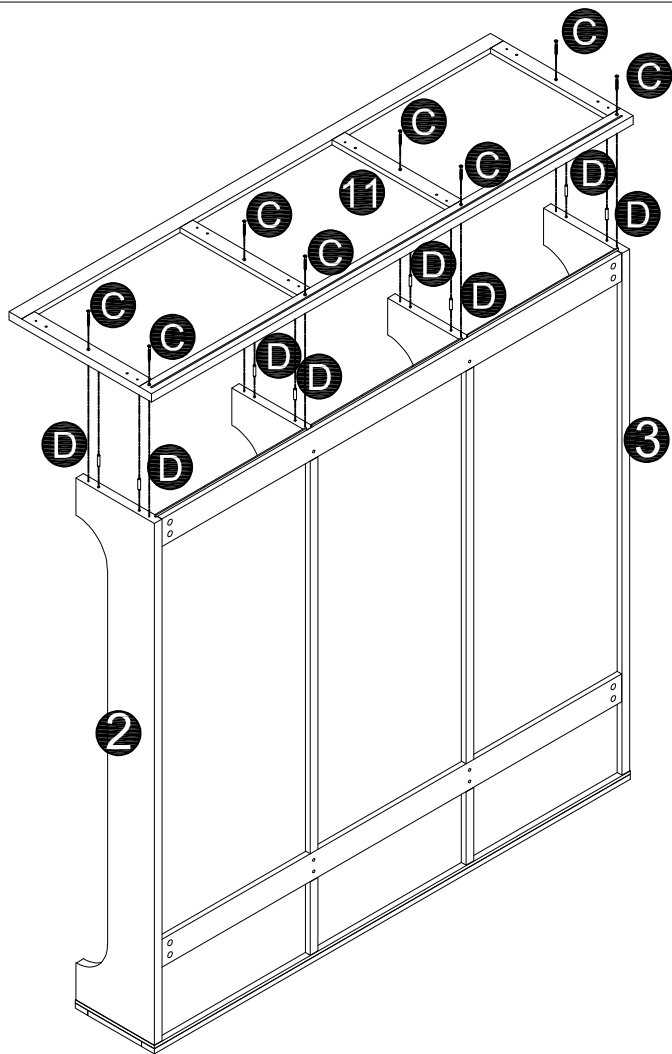



 11 x1	
D	 x8
C	 x8

  
Step 8/Étape 8

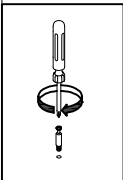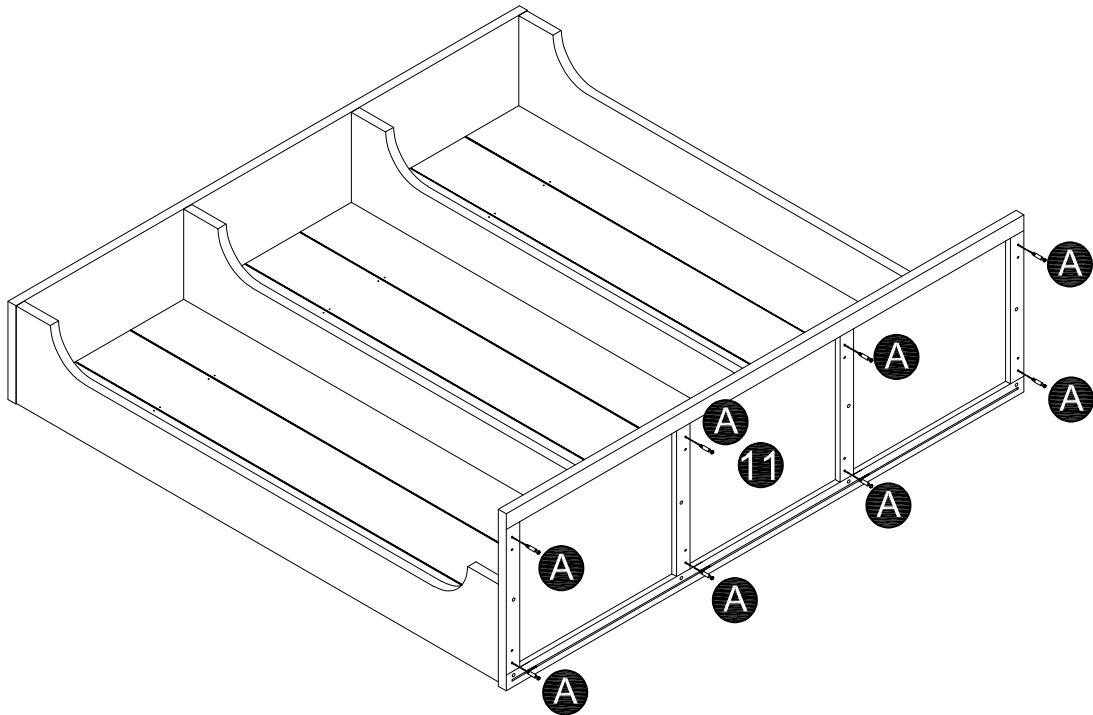



A	 x8
----------	--

   
Step 9/Étape 9

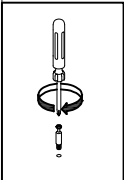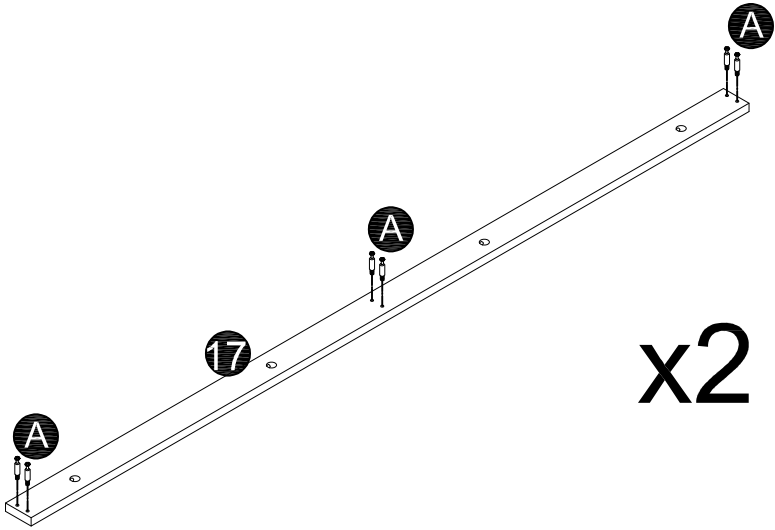



 17 x2	
A	 x12

   Step 10/Étape 10

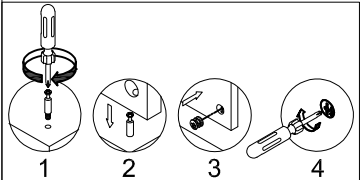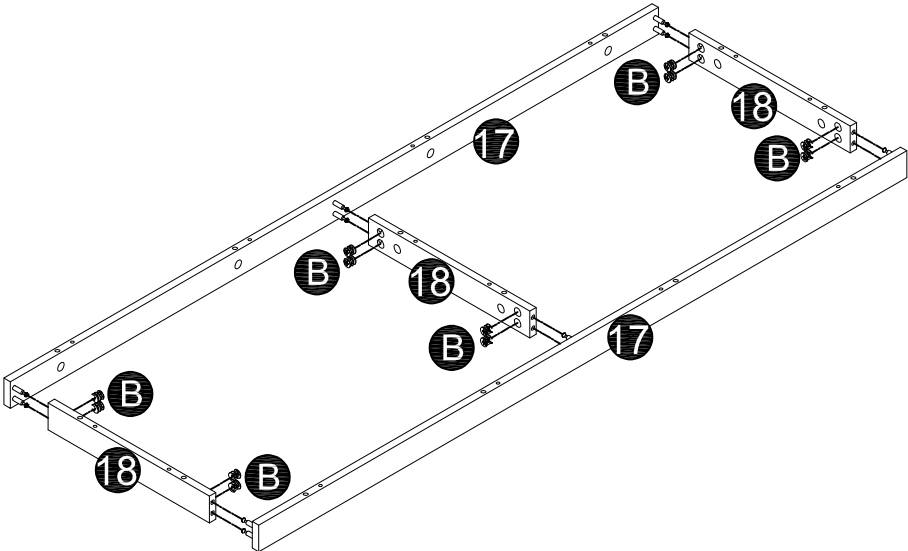



 18 x3	
B	 x12

  Step 11/Étape11

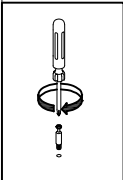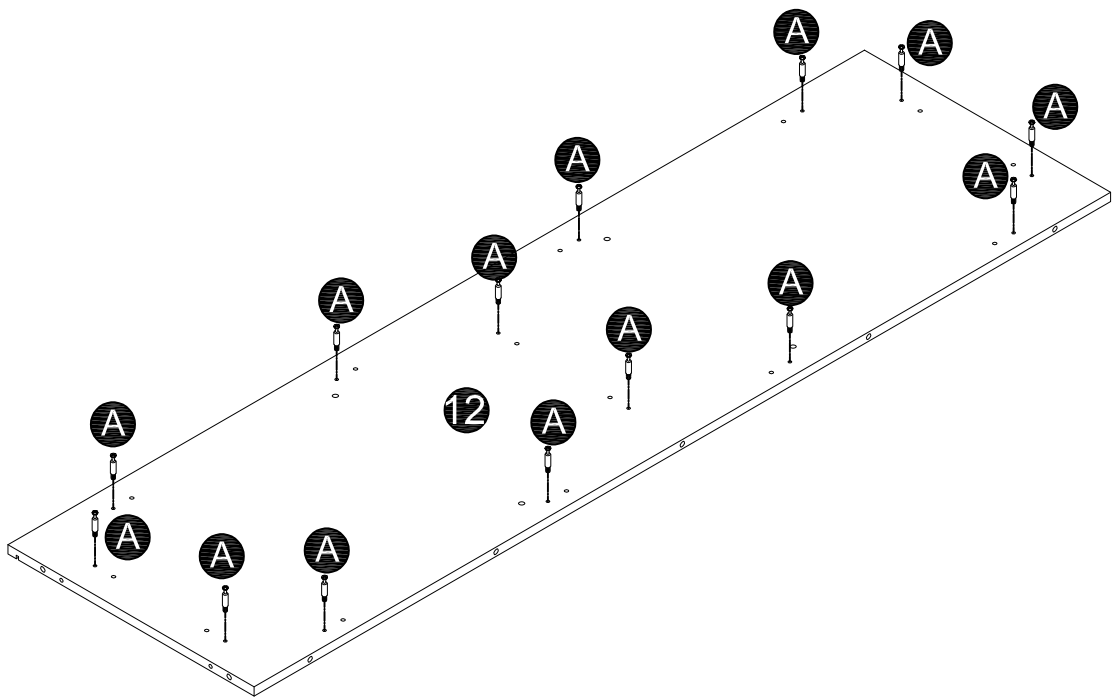

 12 x1	
A	 x14

  Step 12/Étape12

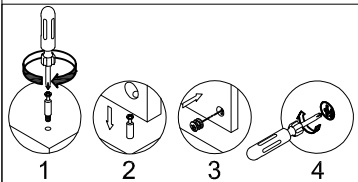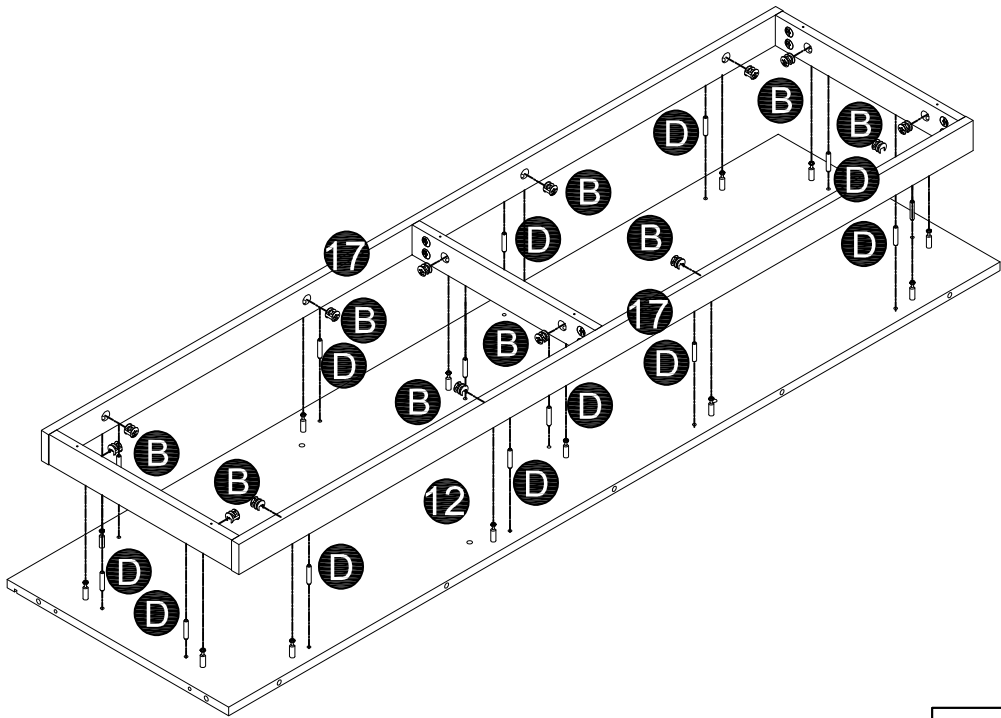

D	 x14
B	 x14

Step 13/Étape13

Short slide/
court glissade

Flip/
Retourner

x2

	10 x2
F	CL x2
F	CR x2
G	x12

Step 14/Étape14

Short slide/
court glissade

Flip/
Retourner

x2

	28 x2
	9 x1
	8 x1
A	x4
O	x8

Step 15/Étape15

Short slide/
court glissade

Short slide/
court glissade



F		x1
F		x1
G		x6

Step 16/Étape16

10


	10 x2	
D		x4
L		x6
C		x4

  Step 17/Étape 17

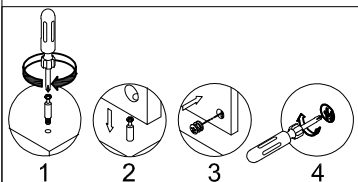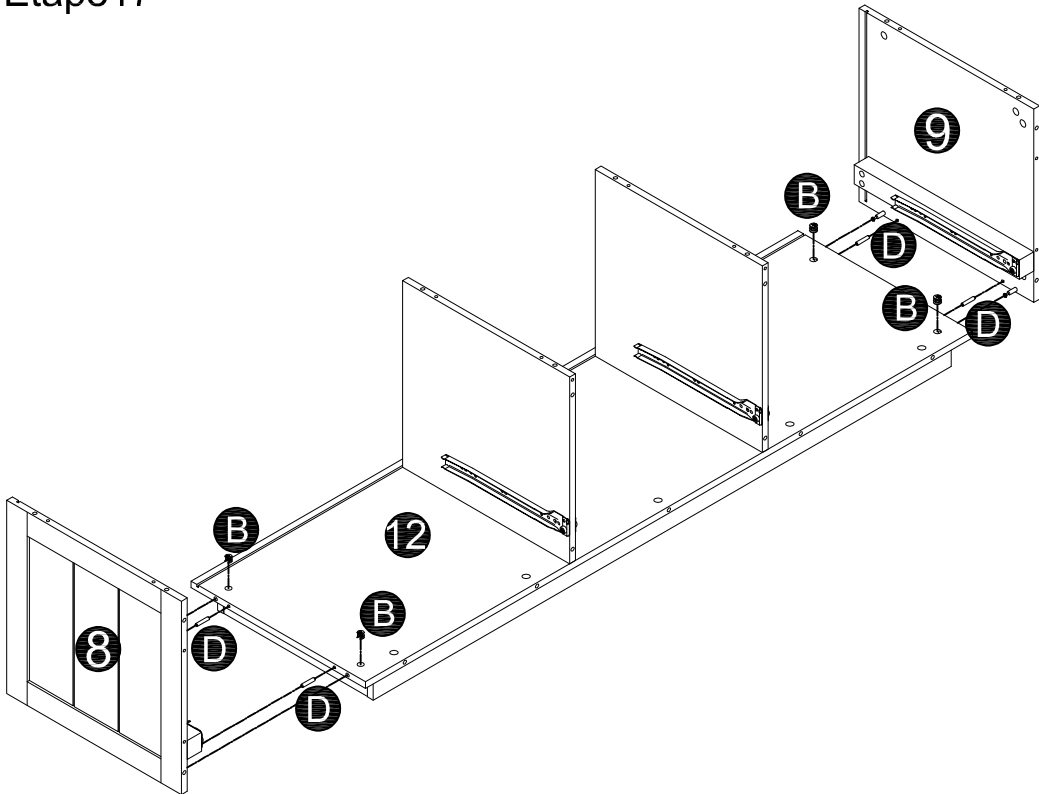



D		x4
B		x4

 Step 18/Étape 18

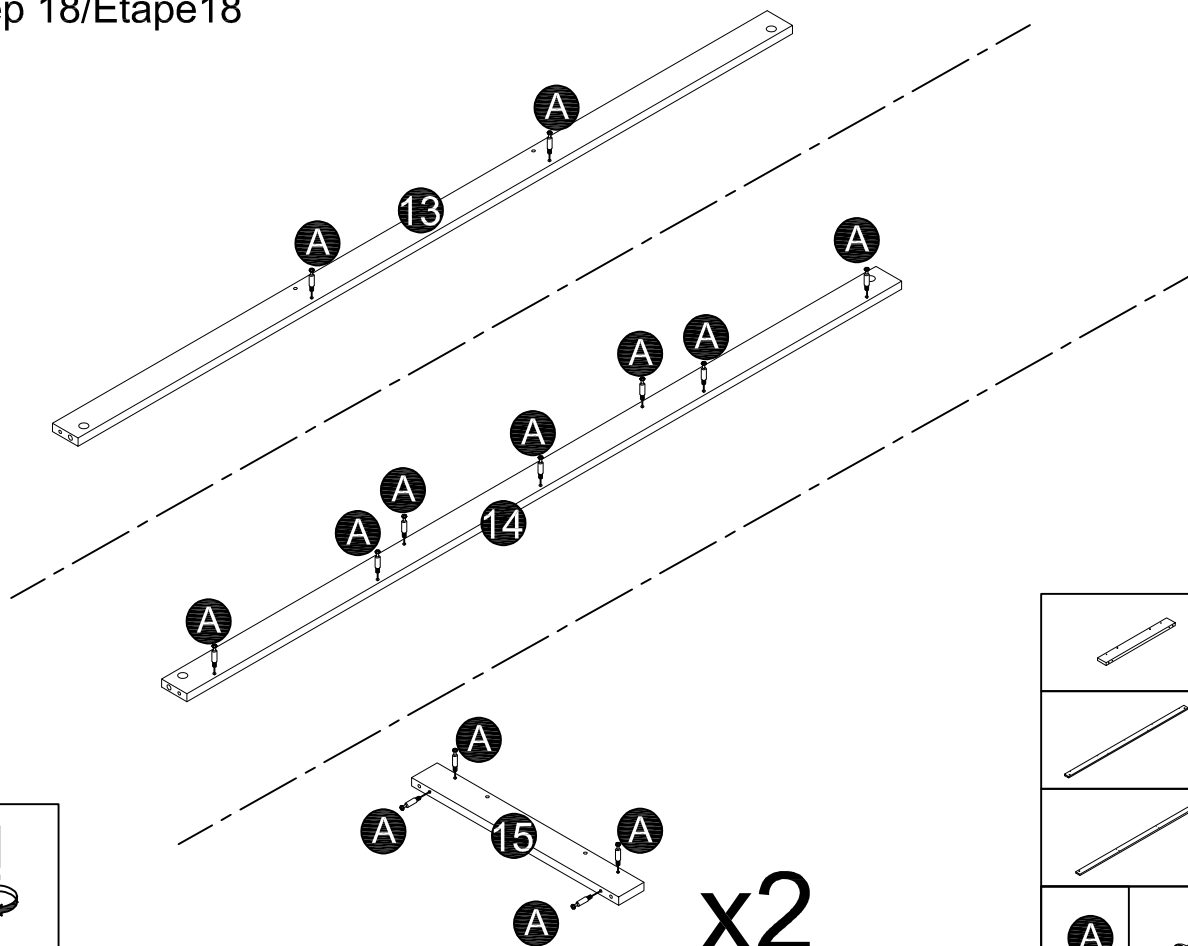



	15 x2
	14 x1
	13 x1
A	 x17

  Step 19/Étape19

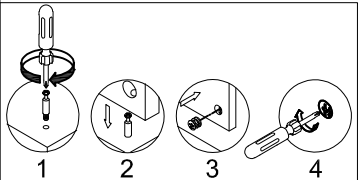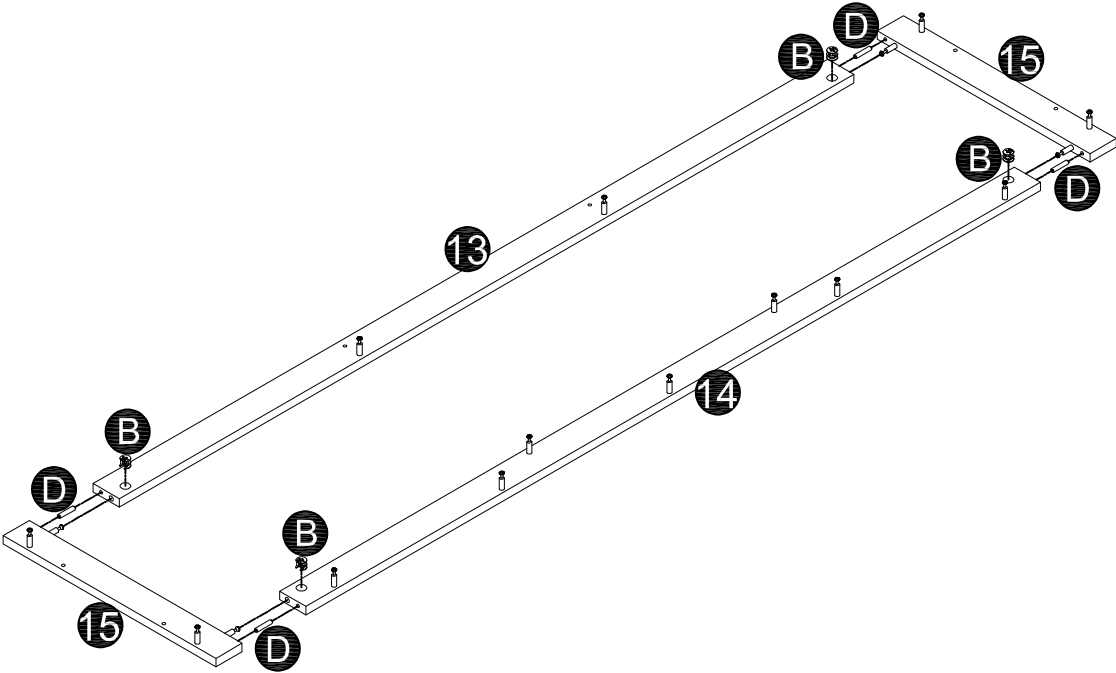



D		x4
B		x4

  Step 20/Étape20

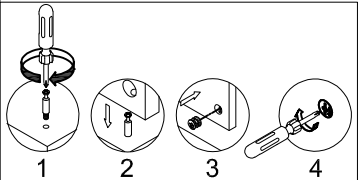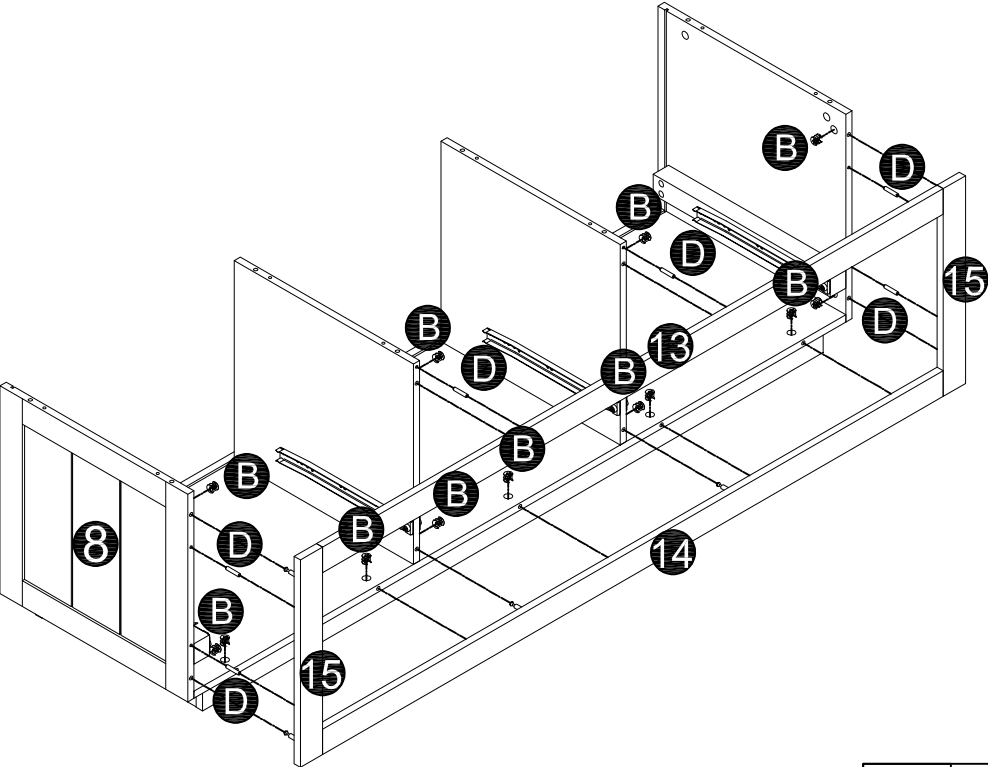


D		x6
B		x13

 
 
Step 21/Étape21

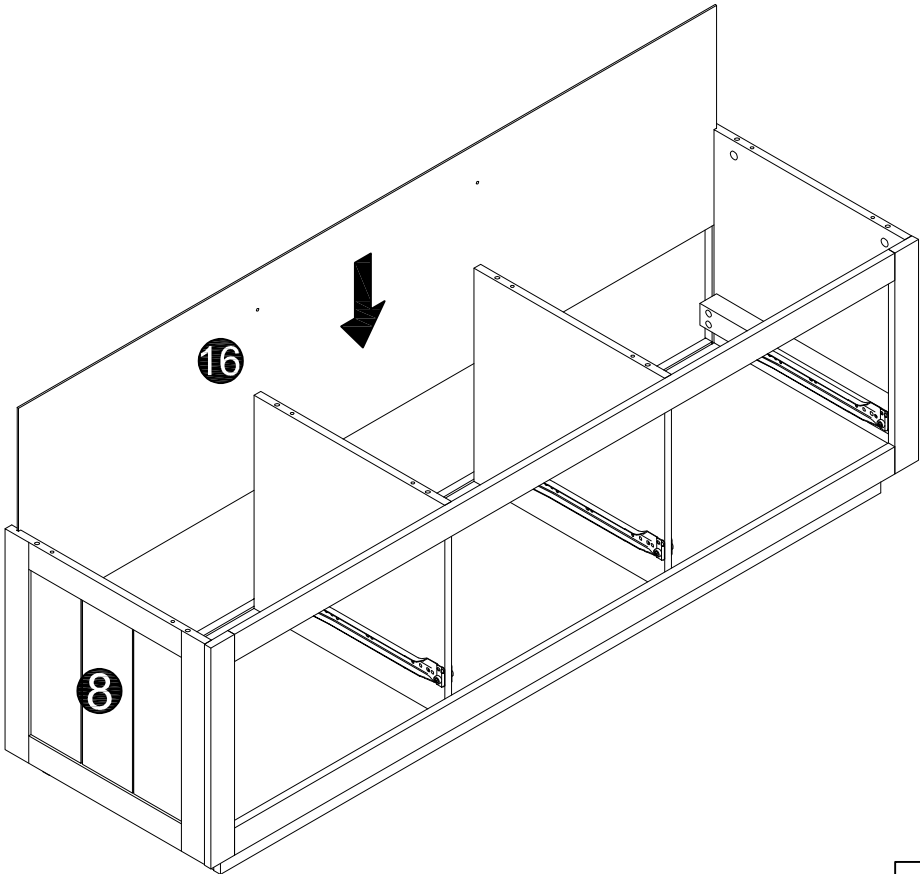

 Step 22/Étape22



  Note: Requires two people.
Remarque : nécessite deux personnes.

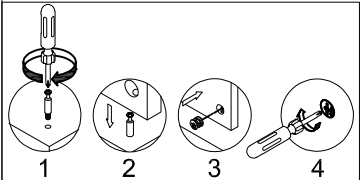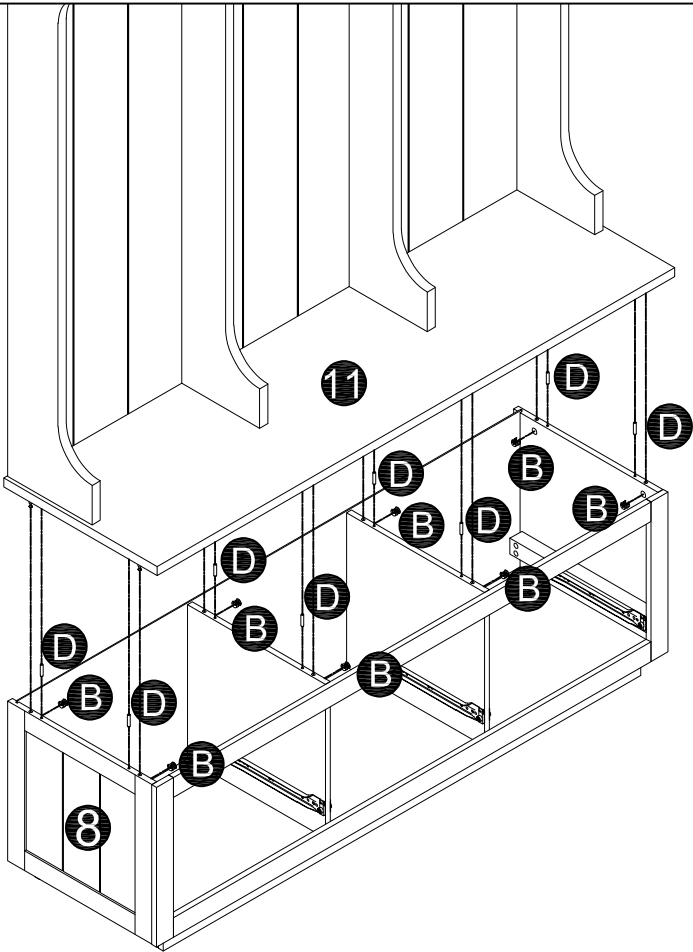

D		x8
B		x8

Step 23/Étape23

Diagram illustrating the assembly of three rectangular panels (19, 20, 21) using screws (A). The panels are shown in a perspective view, with screws (A) being inserted into pre-drilled holes along the edges.

Icon of a screwdriver.

	21x1
	20x1
	19x1
A	x12

Step 24/Étape24


x2


Diagram illustrating the assembly of two sets of panels (22, 23, 24, 26) using screws (D, E). The panels are shown in a perspective view, with screws (D) being inserted into pre-drilled holes along the edges. The assembly is shown in two identical units, indicated by the 'x2' multiplier.

Icon of a screwdriver.



	26x1
	24x2
	23x3
	22x3
D	x12
E	x12

  Step 25/Étape25

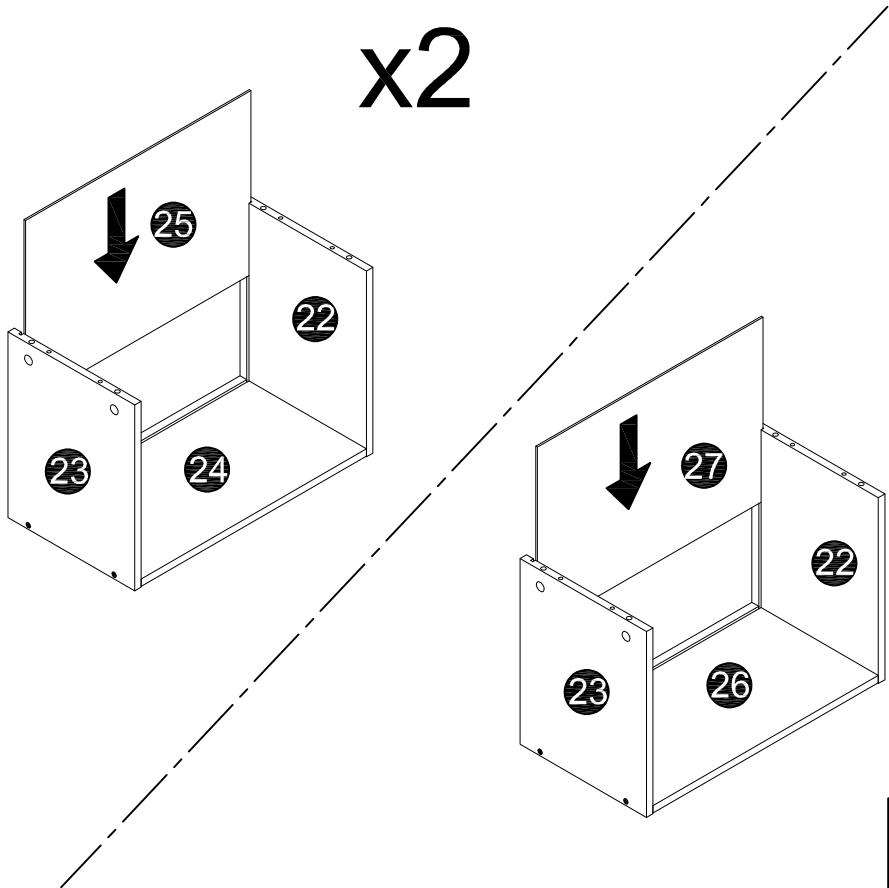

	27 x1
	25 x2

  Step 26/Étape26

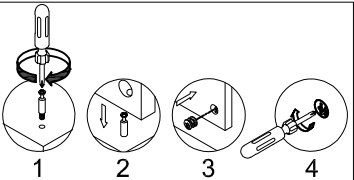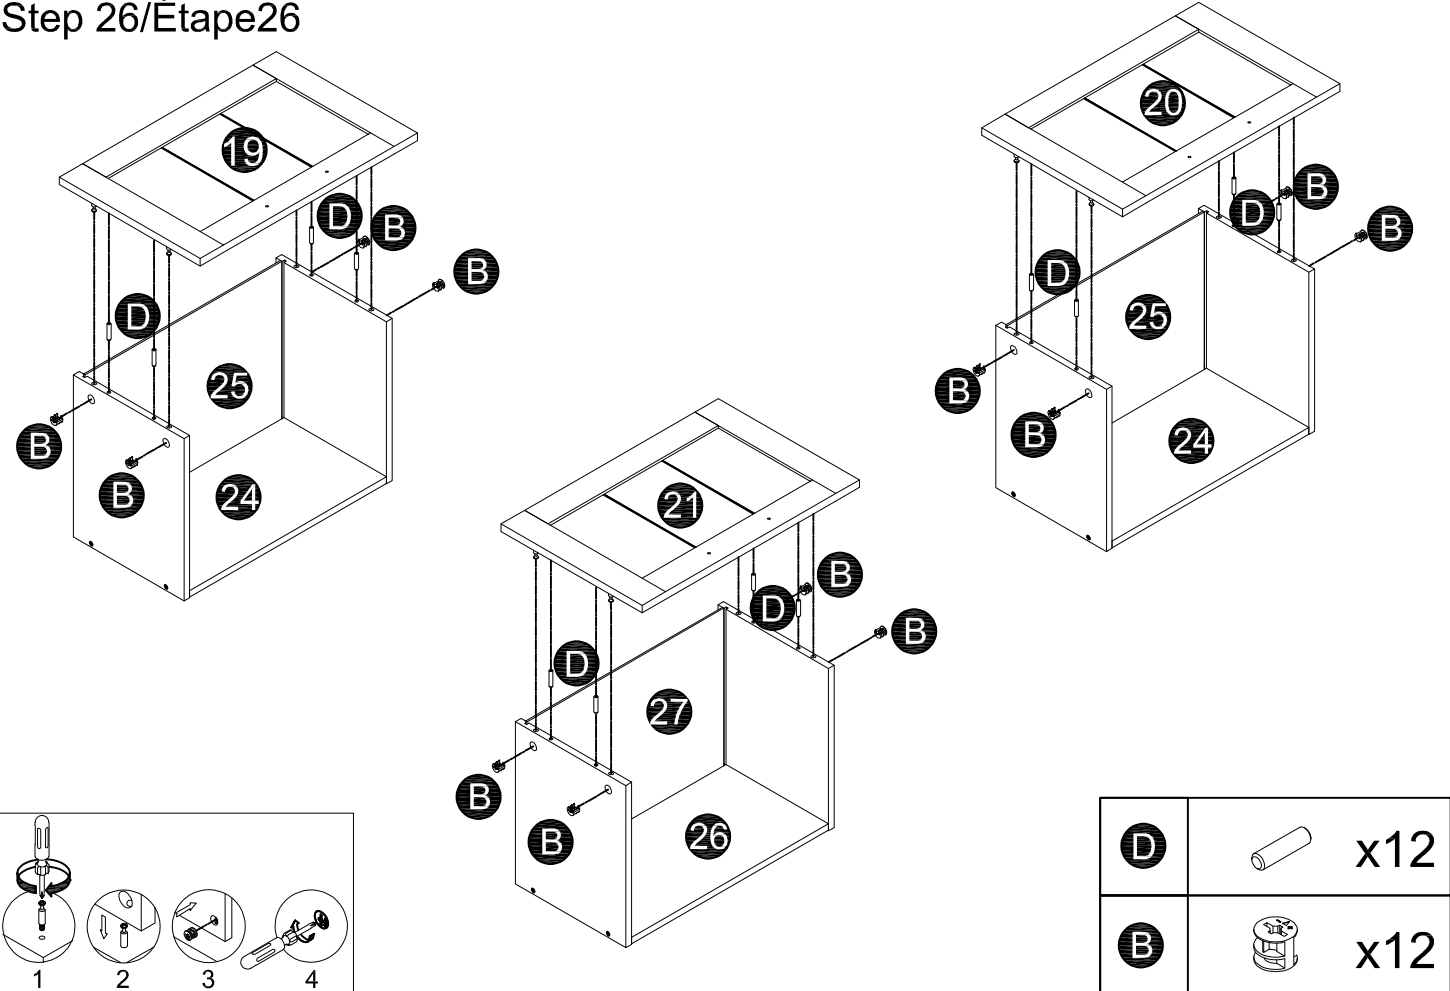

D	 x12
B	 x12

Step 27/Étape27

Long slide/
Longue glissade




Long slide/
Longue glissade

F		DLx3
F		DRx3
G		x12


Step 28/Étape28

N		x3
M		x6

   Step 29/Étape29

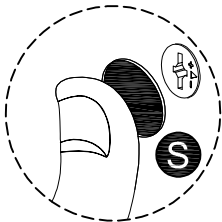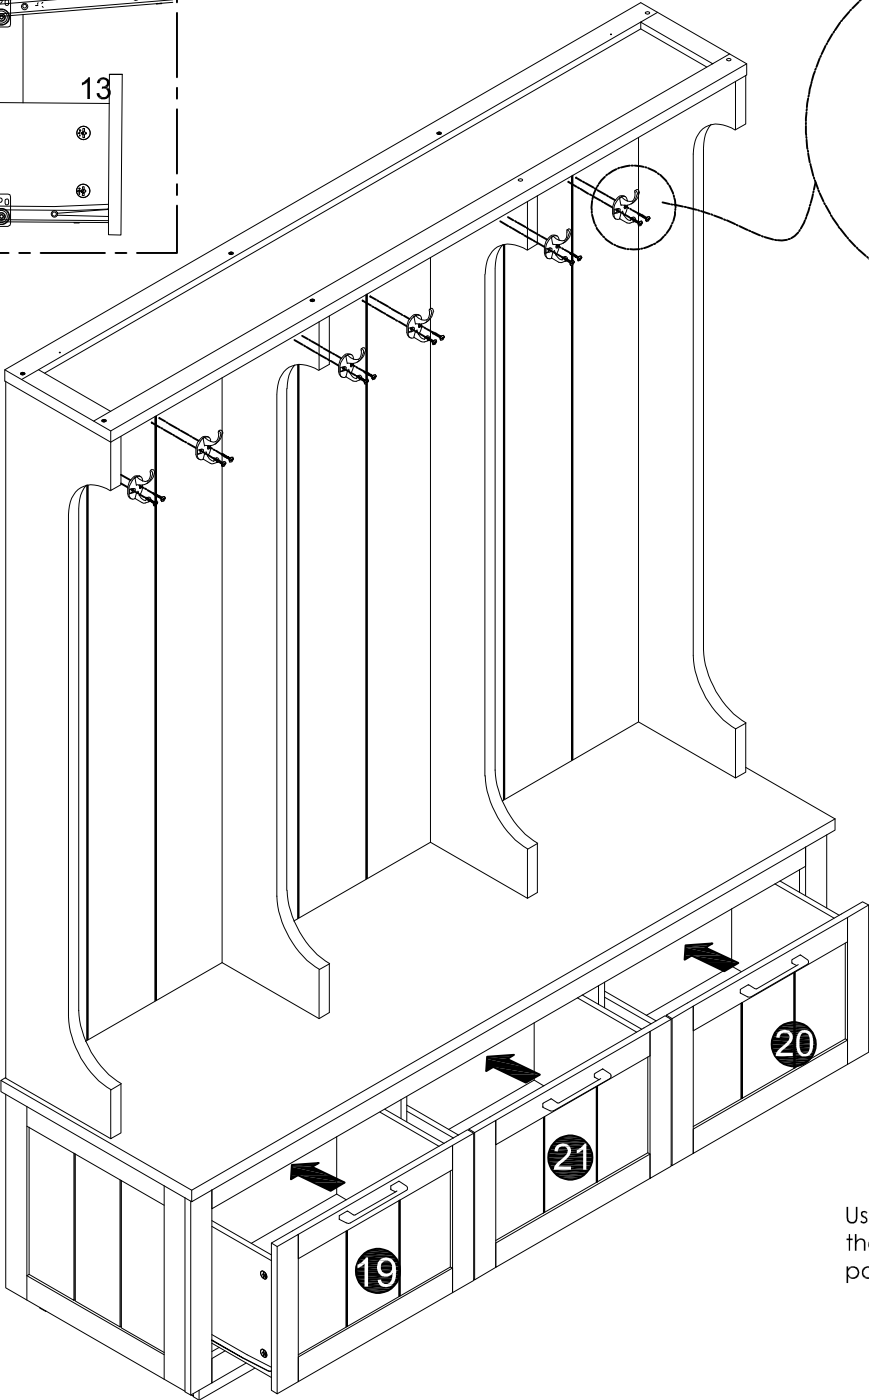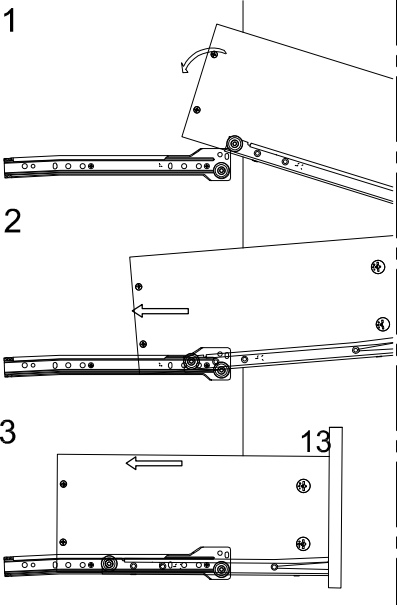


 Use Perfect Sticker (S) to cover the Camlock's holes on the all position we can see !

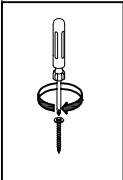

S		x20
I		x12
H		x6

 Step 30/Étape30

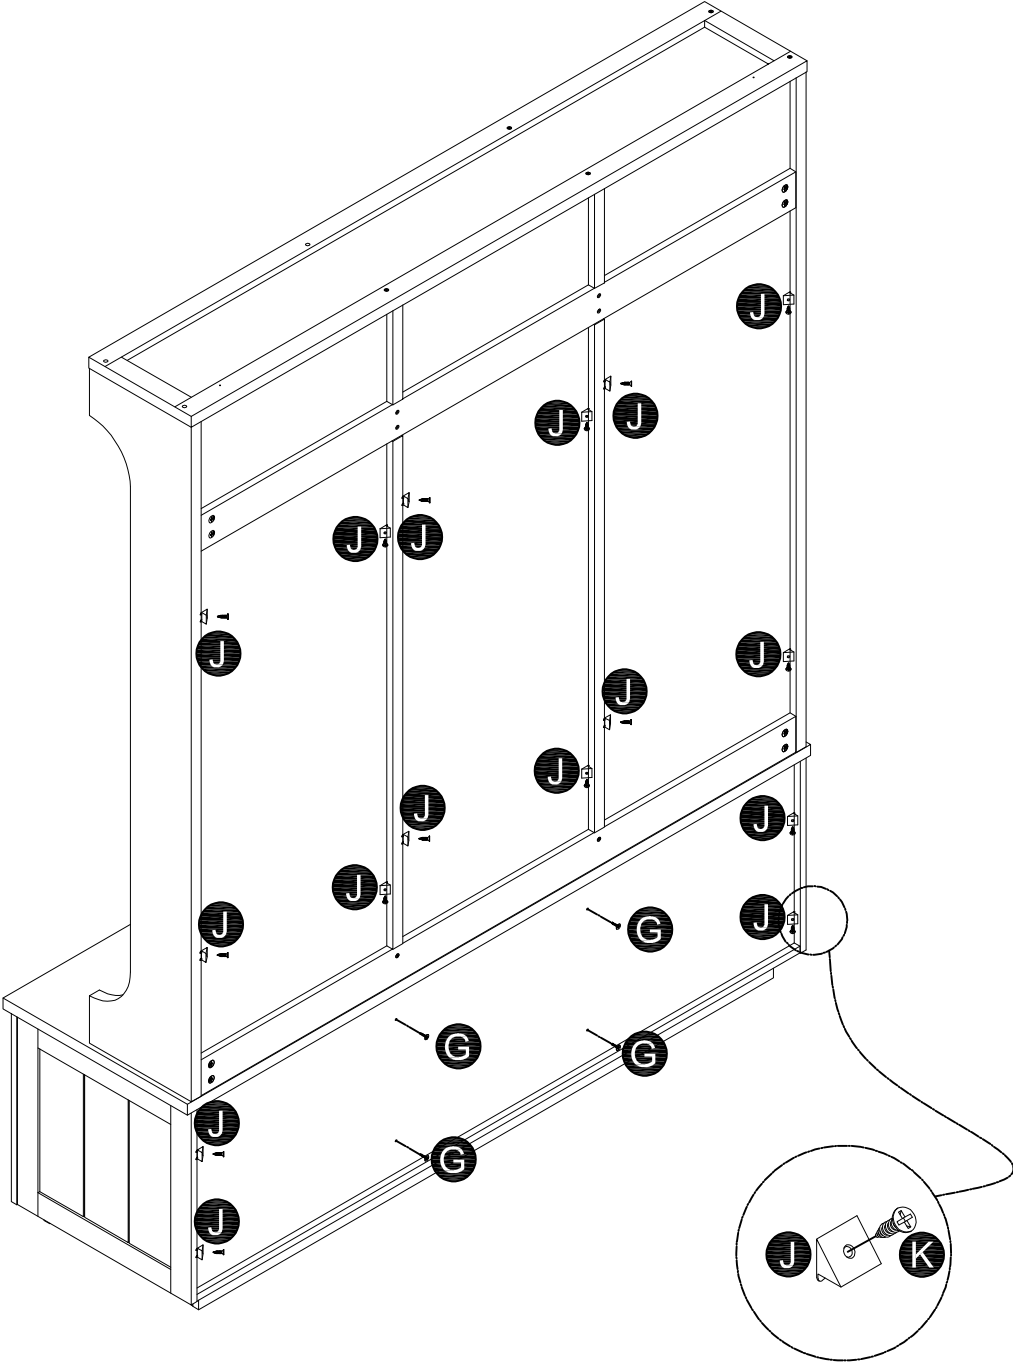


G		x4
K		x16
J		x16

Step 50/Étape50




DANGER - To prevent furniture from toppling attach, mount, bolt or otherwise secure to walls and floors.
Do not put heavy items on top shelves.
Do not place unstable furniture near where children play.
An anchor kit suitable for plaster walls is included with this item, if you require a different kit consult your nearest hardware store.




 
DANGER - pour empêcher le mobilier de se renverser attacher, Montez, bolt or sinon fixer aux murs et planchers.
Ne mettez pas d'objets lourds sur les étagères supérieures.
Ne placez pas de meubles instables près de l'endroit où les enfants jouent.
Un kit d'ancrage adapté aux murs en plâtre est inclus avec cet article, Si vous avez besoin d'un kit différent, consultez votre quincaillerie la plus proche.

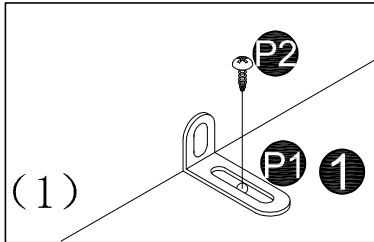

 Step 1: Use screw (P2) to fix the pat L (P1) follow position of holes on the piece ①
Step 2: Determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 3: Drill the hole and then fixed the tacke (P3) on the wall
Step 4: Use screw (P4) to flx the pat L (P1) on the wall

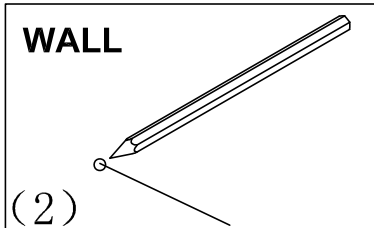


Étape 1 : Utilisez les vis (P2) pour fixer la patte en L (P1) en suivant la position des trous sur la pièce.
Étape 2 : Déterminez l'emplacement du dispositif anti-basculement sur le mur, puis marquez la position après avoir vérifié que le produit est bien équilibré.
Étape 3 : Percez le trou, puis fixez la cheville (P3) dans le mur.
Étape 4 : Utilisez les vis (P4) pour fixer la patte en L (P1) au mur.

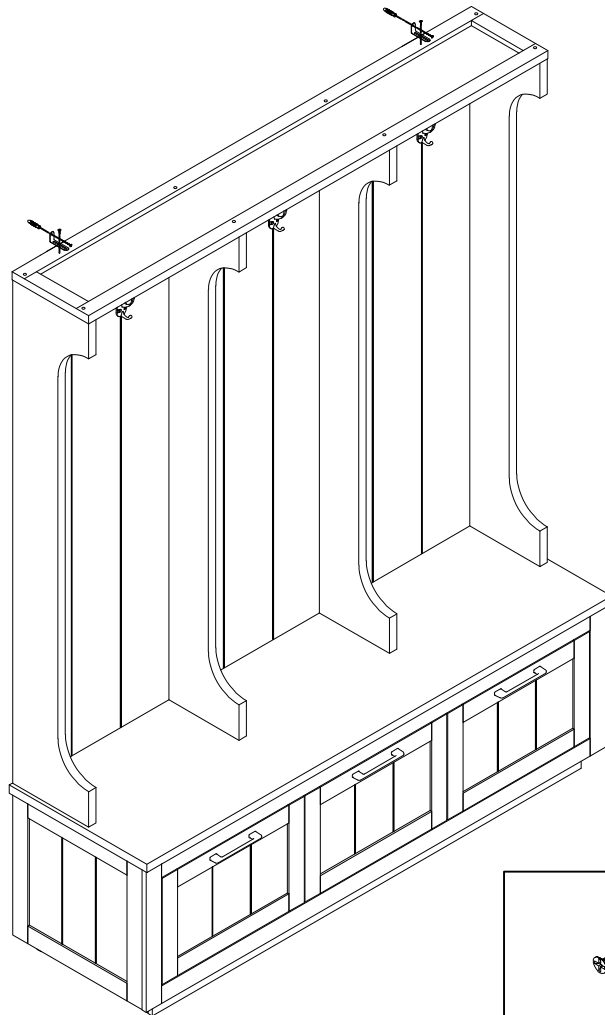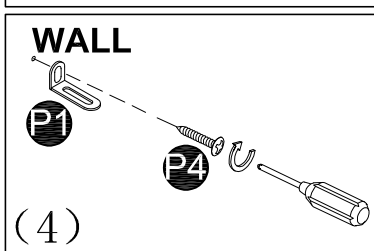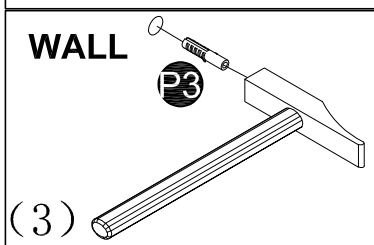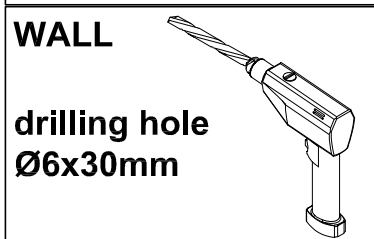    

Finish : The product is fixed, can not move.
Finition : Le produit est fixé et ne peut pas être déplacé

 HUE TRI CREATIVE INTERIOR TECHNOLOGY CO.,LTD
Address: NO 13/11 VINH TAN 21 STREET, GROUP 1, QUARTER 4,
VINH TAN WARD, HO CHI MINH CITY, VIETNAM

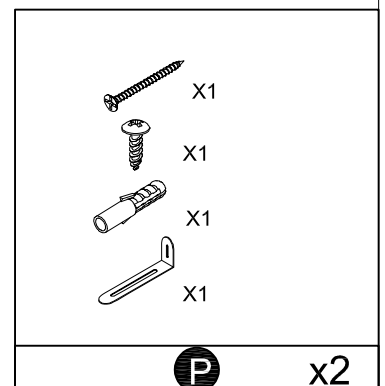

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

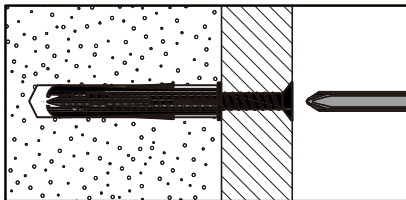


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.3 "Cavity Fixing" wall plug

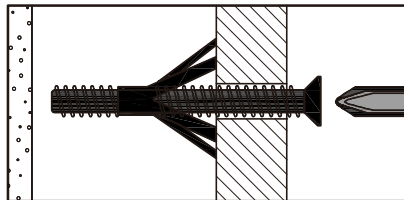


For use with plasterboard partitions or hollow wooden doors.

 No.5 "Hammer Fixing" wall plug

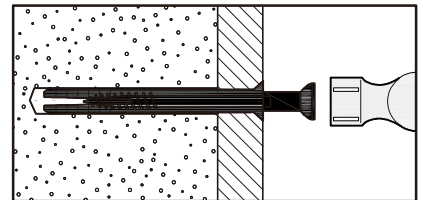


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.2 "Plasterboard" wall plug

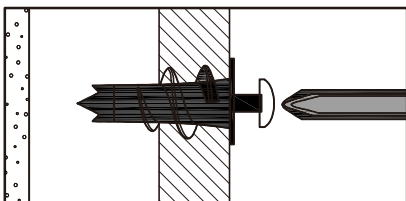


For use when attaching light loads onto plasterboard partitions.

 No.4 "Cavity Fixing - Heavy Duty" wall plug

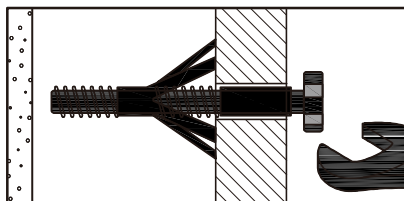

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.6 "Shield Anchor" wall plug - heavy loads

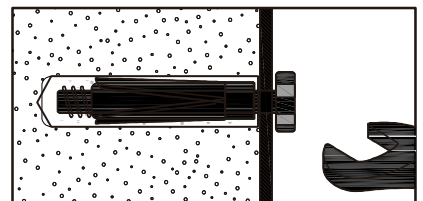

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

