



# User Manual

High Precision Fingerprint Pistol Safe

## CONTENT

Safety Instruction	1
Product Components	2
Type-C Charging	3
Device's Power Switch	3
Master Code Programming	3
Set The Password	3
Set Fingerprints	3
Interior LED Light	3
bluetooth function	4
Clear Fingerprint, Unbind Bluetooth And Reset Password	4
Mute Function	4
Error Alarm Function	4
Undervoltage Function	5
Battery Charging Indicator	5
Mounting	5
Using The Security Cable	5
Warranty Period	5

### Safety Instruction

Read the instructions carefully and retain them for future use. The instructions must be included when the product given to others. Follow the basic safety precautions to reduce the risk of fire, electric shock and/or injury to person when using electrical appliances as followings:

#### Battery Warning

- Keep away from fire and high temperature.
- Do not charge continuously for more than 20 hours.


#### Please pay attention to these instructions before using for the first time

- Check for transport damages.
- Clean the product before first use.

#### DANGER Risk of suffocation! Keep any packaging materials away from children-these materials are a potential source of danger, e. g. suffocation.


- Please use Type-C cable to charge the Safety Device full, and then press and hold the number '4' key (for 3 second) to turn on the device before the first use.

- Opening the safety device with the factory passcode-1234 for first time.

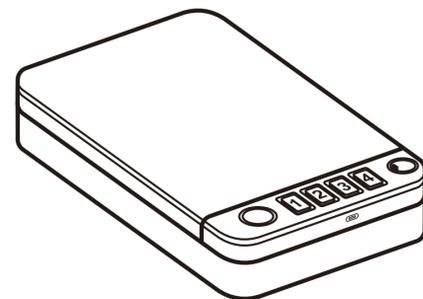

1


### Product Components

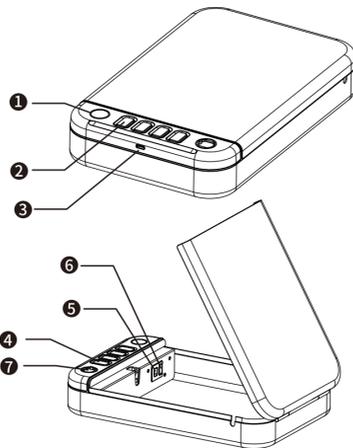

- 1 Fingerprints
- 2 Keypad
- 3 Type-C charging port
- 4 Power switch button
- 5 LED lights
- 6 Setting button
- 7 Emergency Keyhole

### SPECIFICATION

 Item	Size	Weight	Capacity
SF 0301	L284*W180*H50	1.7KG	One Pistol



2

### Type-C Charging

Type-C Charging There is an USB charging port (Type-C) on the front of the safe for the charging by the portable power bank or Power supply

### Device's Power Switch

Please turn on the device before the first use

- Press and hold the number '4' key (for 3 second). The blue light flash one time with a beeping buzzer. The device starts and can be used.
- Press and hold the number '4' key again (for 3 seconds). The blue light flashes, and the buzzer makes a long beeping sound to indicate that the device is turned off. (Note: number '4' key is the power switch button)

### Master Code Programming

The blue indicator light indicates that the device is in setting mode, the door is open, or its charging. The red light indicates an error or low battery. The green light indicates that the device is ready to use. (The factory passcode is 1234. The passcode can be programmed to 4-6 digits)

### Set The Password (The password can be 4-6 characters)

In the standby state, press the "Set" button once. The panel prompt light will shine and the buzzer will sound "beep". Enter the new password and press the "Set" button again.

### Set Fingerprints (20 fingerprints can be registered)

In the standby state, press the "Set" button once, the panel prompt light will shine, and the buzzer will sound "beep". At this time, put the fingerprint on the fingerprint head. When you hear "beep", lift your finger, put the same finger back on the fingerprint head, and press it again for 5 times. If the buzzer beeps long, the fingerprint is successfully set. If the red light is on and the buzzer beeps, the fingerprint is not set successfully.



I. Correct



II. Incorrect

### Interior LED Light

The interior LED light will light up for Fifteen seconds when you open the safety device.

3

### bluetooth function

1. Download Smart Life APP
2. Open Smart Life and keep Mobile bluetooth on
3. Push safe reset button and click ADD DEVICE
4. Click ADD when showing the safe
5. Click complete when showing complete
6. Slide the key to unlock

### Clear Fingerprint, Unbind Bluetooth And Reset Password

Hold down the setting key for 3-5 seconds, the blue light will shine and the buzzer "di, di --" will sound long, indicating that the fingerprint has been cleared successfully. The numeric password is reset to the original 1234 password. (At this point, no fingerprint can be verified.) The bluetooth is unbound successfully.

### Mute Function

- Press and hold the number '1' key (for 3 second). The blue light flashes to indicate that mute is turned on successfully.
- Press and hold the number '1' key again (for 3 seconds). The blue light flashes, and the buzzer makes a long beeping sound to indicate that the mute is turned off. (Note: number '1' key is the mute switch button)

### Error Alarm Function

When the wrong password or fingerprint is entered, the red light flashes twice and the buzzer beeps. After five consecutive incorrect codes or fingerprints, the keys and fingerprints will self-lock for 100 seconds. (The digital key and fingerprint are invalid when the error alarm is given, and will be restored to normal use after the alarm is over)

4

### Low Battery Warning

When the battery is less than 30%, The red indicator light flashes 6 times after the door is open. The buzzer will beep 6 times at the same time to indicate that the battery is low and needs to be charged.

### Battery Charging Indicator

Battery indicator is 4 blue led lights. (The lights on top of the keypads)

- When the battery is charging less than 25%, the first light flashes.
- When the battery is charging 25%-50%, the first light keeps on, and the second light flashes.
- When the battery is charging 50%-75%, the first 2 lights keep on, and the third light flashes.
- When the battery is charging 75%-95%, the first 3 lights keep on, and the fourth light flashes.
- When the battery is more than 95%, all 4 lights keep on.

### Mounting

Turn the expansion bolts clockwise to fix your safe on wooden surface.



### Using The Security Cable

- Open your safe and keep it in the open position.
- Loop the small end of the cable around the fixed object and then through the large end of the cable.
- Place the small end of the cable into the notch of the open safe make sure the metal stud on the cable is inside the safe.
- Close and lock the safe.



### Warranty Period

12 months

5

