





PRODUCT NAME: Bongo 4-Light Semi-Flush Mount
ITEM NUMBER: 10013

Please consult your electrician for hanging fixture and wiring.

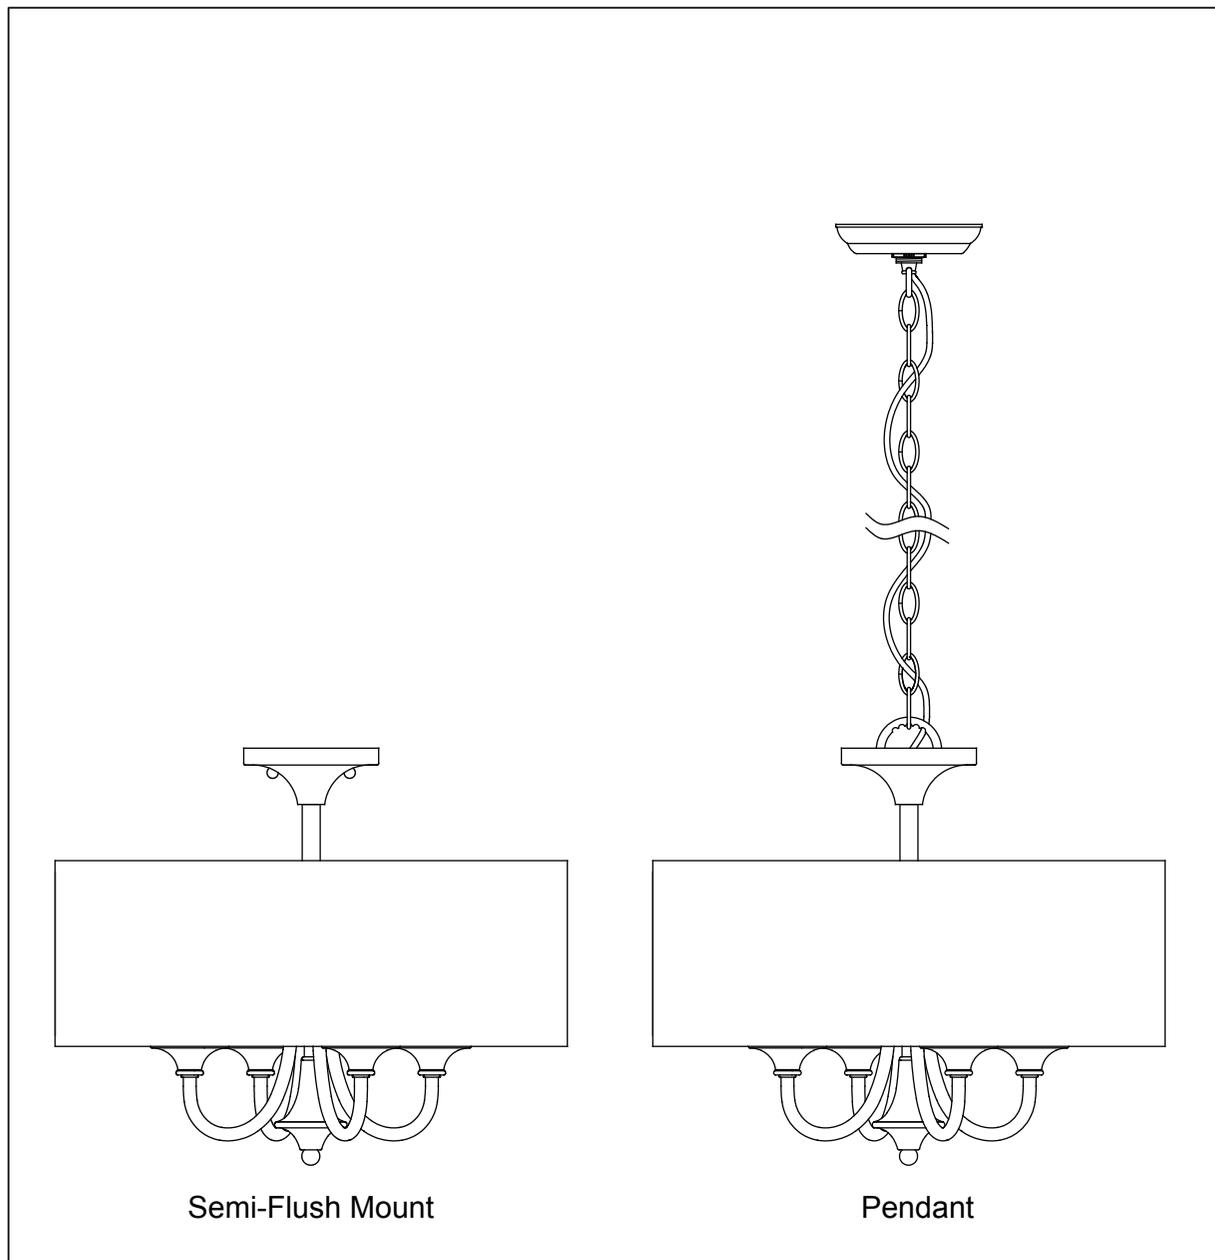


Bulb (not included): 4x60W Medium Base Bulb

 
IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



 
(A) Bracket



 (B) Bracket



 
(C) Decorating part



(D) Canopy



 (E) Loop



(F) Chain



(G) Mounting Screws(4Pcs)





(H) Ball Nuts(2Pcs)




(I) Loop


Locate all hardware & components before discarding packaging

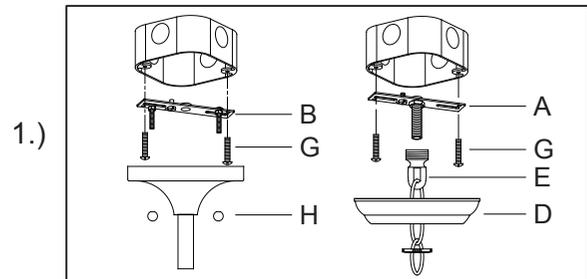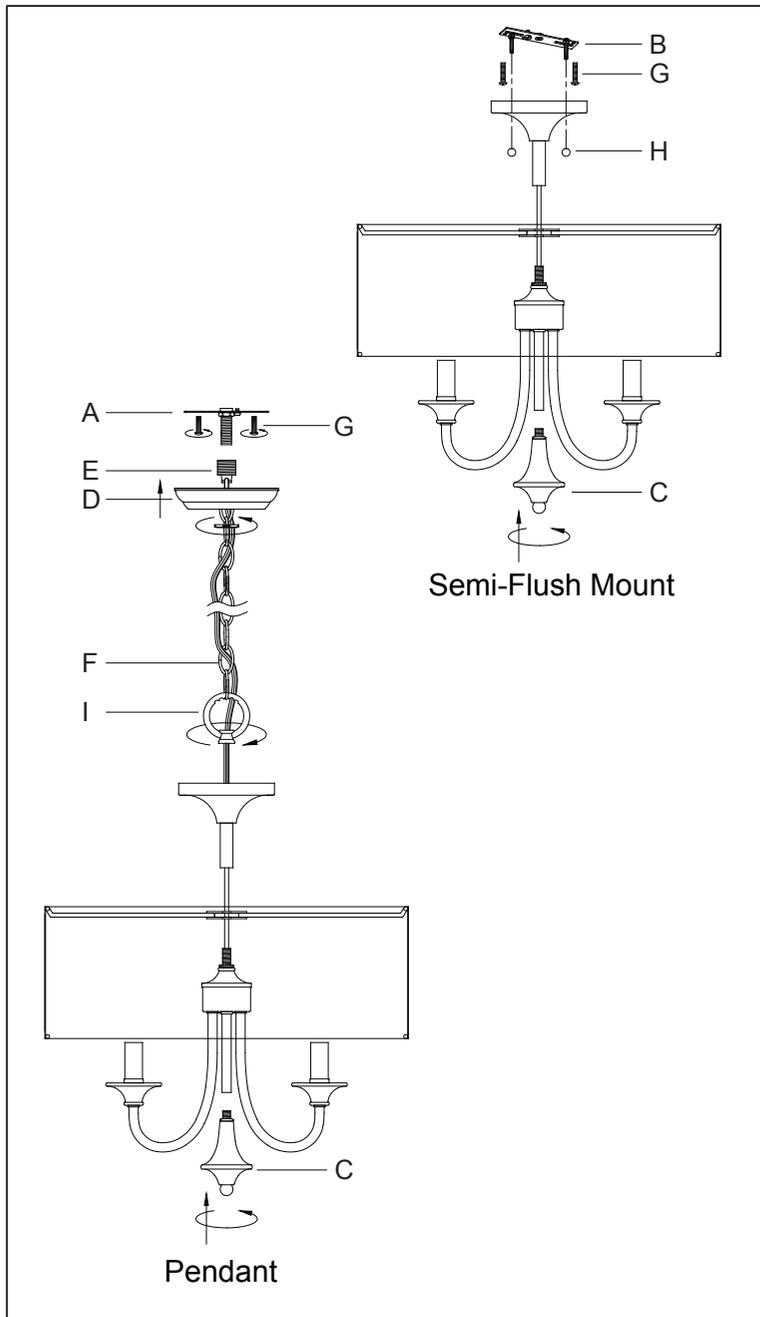

Step1: Remove mounting bracket from fixture and install to electrical box.

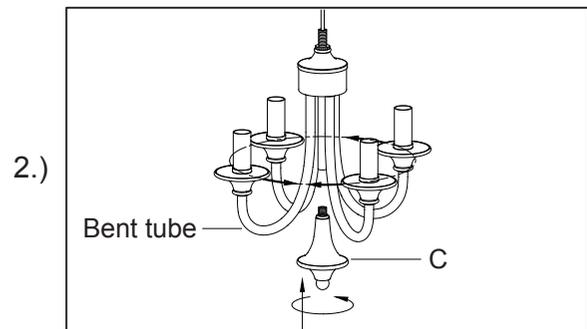

Step2: Rotate the bent tube to the suitable position. Screw the Decorating part (C) into the tube.


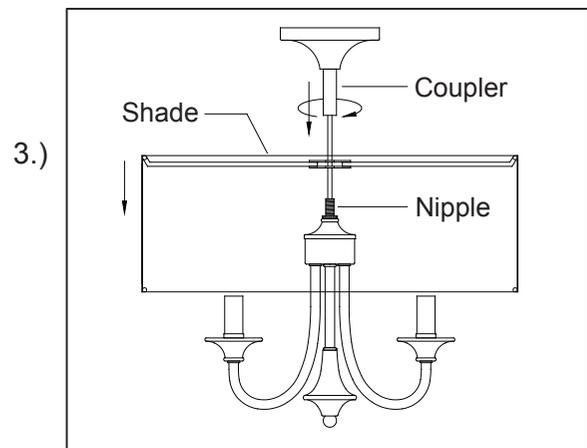


Step3: Place shade on the Nipple and tighten with the Coupler.


Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

Locate all hardware & components before discarding packaging

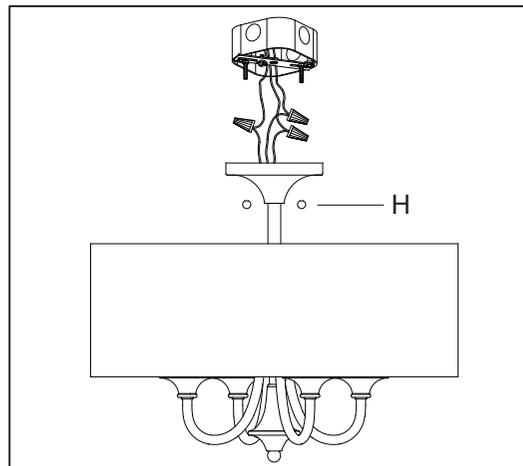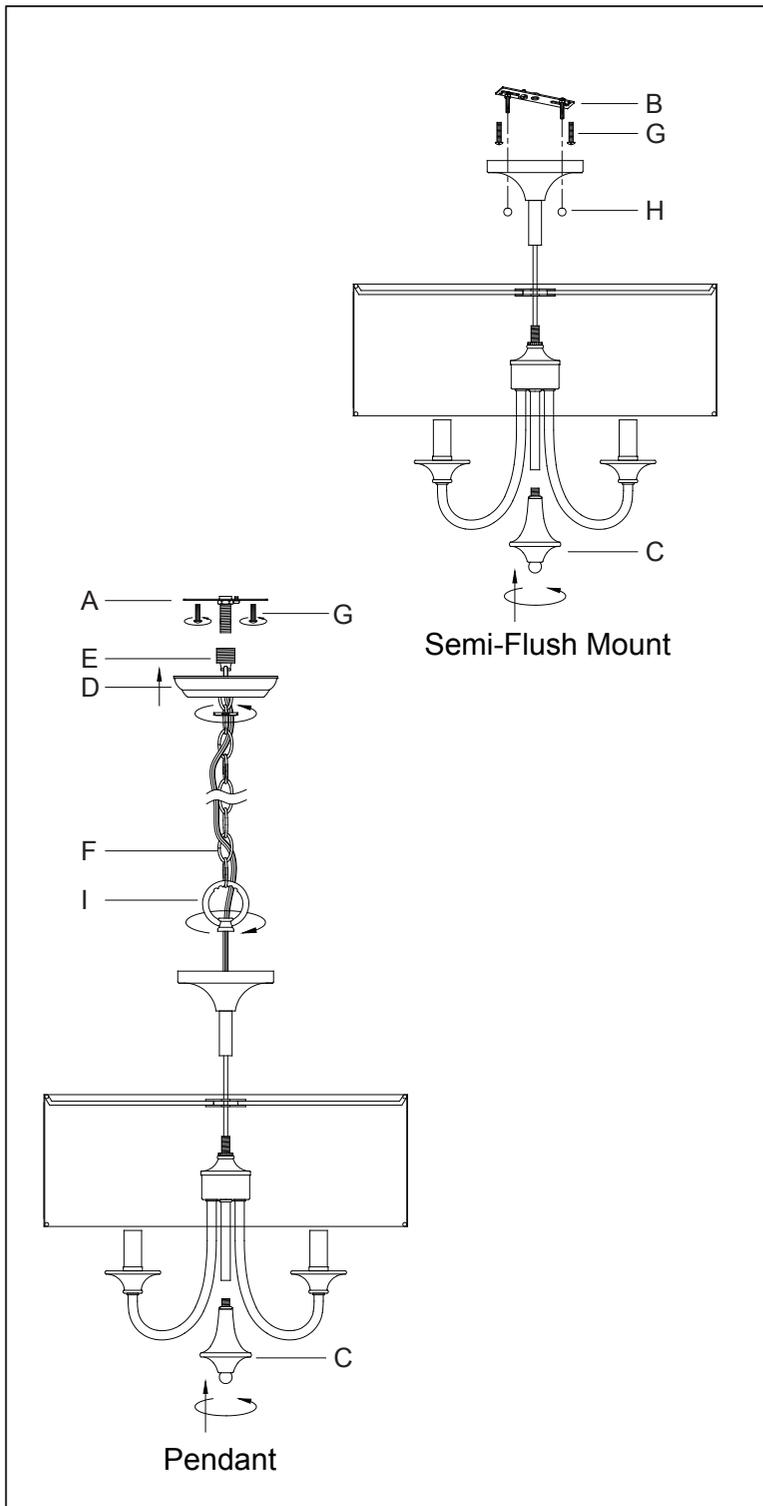

Step4.1: Wire fixture to wires in outlet box. Copper wire is for Ground. Attach canopy to mounting bracket and tighten with ball nuts.

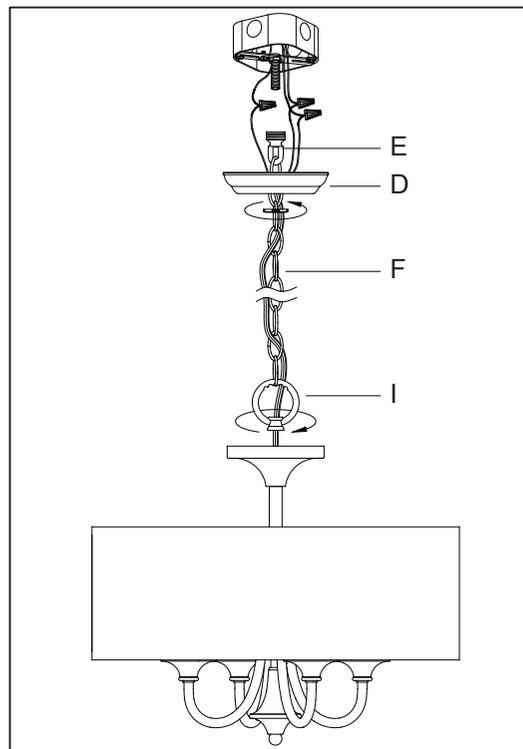

Step4.2: Install top loop to center stem and attach appropriate amount of chain to loop to achieve desired mounting height. Thread wire through every 3rd loop of chain. Remove ring from loop and slide down chain. Place canopy onto chain and let slide to top of fixture. Install nipple and cross bar into top of chain loop. Wire fixture to wires in outlet box. Copper wire is for Ground. Pull canopy through screw ring up chain to ceiling and tighten securely.

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.