 


ASSEMBLY INSTRUCTIONS

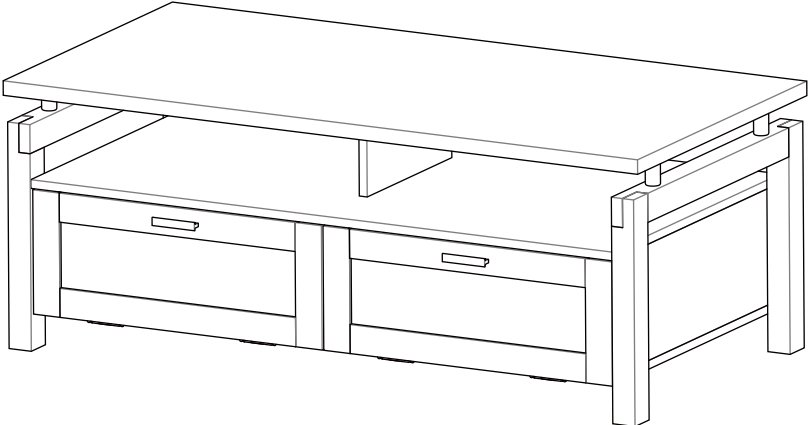

TOOLS REQUIRED



**Phillips
Screwdriver**

(Not Included)



Hammer

(Not Included)



**2 - Persons
Recommended**

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish.



CHECK BEFORE STARTING

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

Check out our Quick Tips!


We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

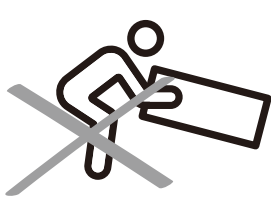

Teamwork

 ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

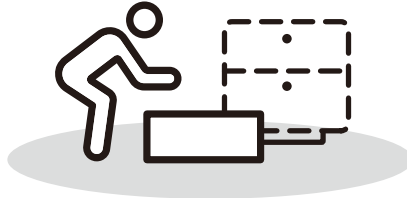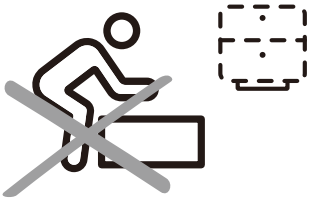

Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

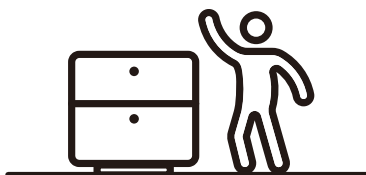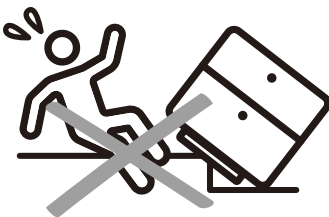

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

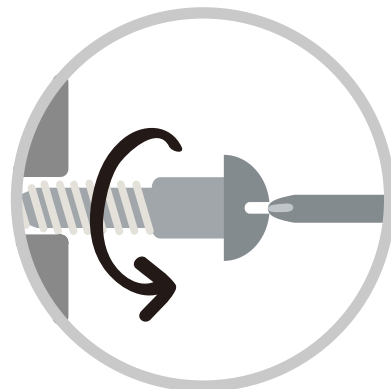


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



Save the instructions and store
any supplied tools for later
maintenance.

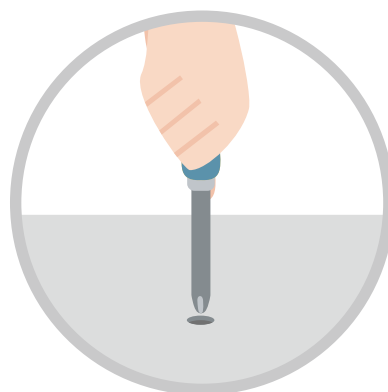


After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note :

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.

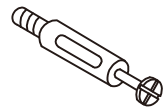

cam bolt



cam lock



screwdriver



1

Screw the cam bolt into panel.



2

Insert the cam bolt into the bolt hole of joint panel.



3

 
Align the cam lock with its side opening (or arrow) pointing to cam bolt.




4

Turn the cam lock clockwise gently until it will not turn any more.

COFFEE TABLE

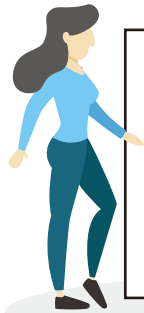


 - Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

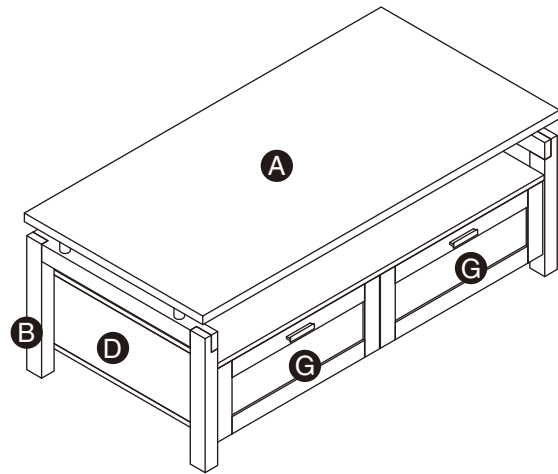


PARTS

 
A 1PC

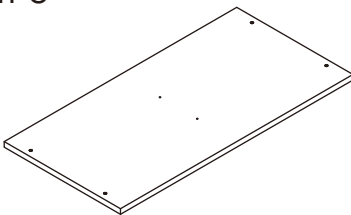


D 1PC

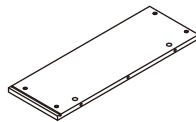 


H 1PC

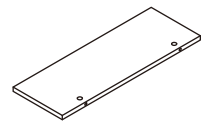 


B 2PCS

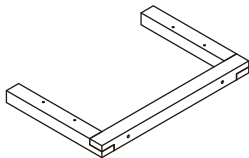 


E 1PC

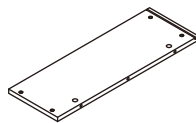 


I 1PC

 


C 1PC

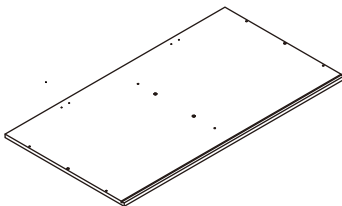 


F 1PC

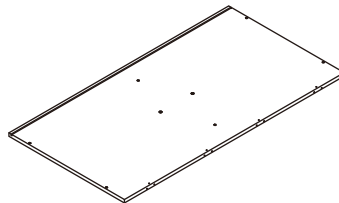 


J 1PC

 




 

  

 


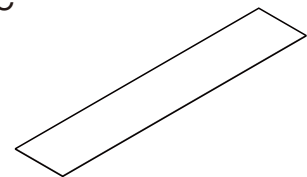



G 2PCS

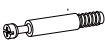





 

 K 1PC



HARDWARE

- | | | | | |
|--|--|--|---|---|
| ① 8PCS
 | ② 8PCS
 | ③ 2PCS
 | ④ 18PCS
1.97"
 | ⑤ 2PCS
 |
| ⑥ 4PCS
0.67"
 | ⑦ 2PCS
 | ⑧ 2PCS
0.39"
 | ⑨ 4PCS
 | ⑩ 24PCS
0.47"
 |
| ⑪ 4PCS
 | ⑫ 4PCS
4.01"
 | ⑬ 4PCS
 | ⑭ 4PCS
0.75"
 | |


ACCESSORIES

- | | | | |
|--|---|--|---|
| A1 2PCS
 | A2 4PCS
0.87"
 | A3 6PCS
 | A4 1PC
 |
| A5 4PCS
 | A6 1PC
 | | |


GET READY

Please group boards as below.

 
B 2PCS

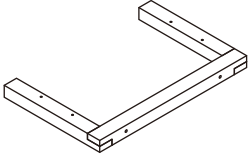


D 1PC

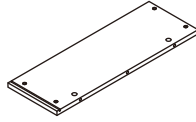 


E 1PC

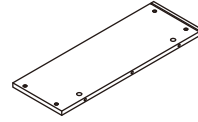 


F 1PC

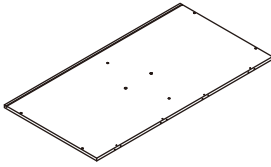 


H 1PC

 


J 1PC

 


A 1PC

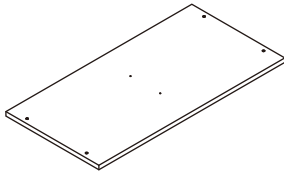 


C 1PC

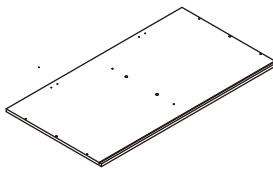 

I 1PC

 


K 1PC

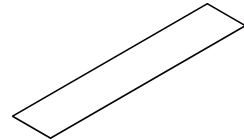 

Body

 G 2PCS







Door

ASSEMBLY INSTRUCTIONS

1

    - Hardware ① x8PCS
- Hardware ③ x2PCS
- Hardware ⑤ x2PCS
- Hardware ⑥ x4PCS

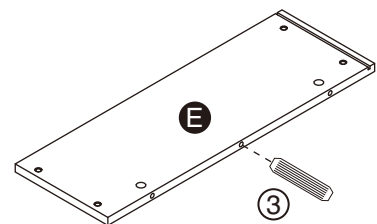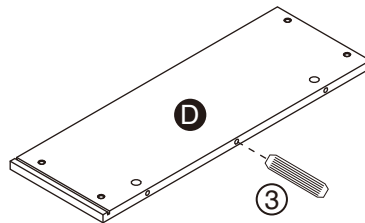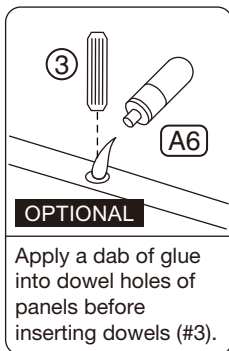
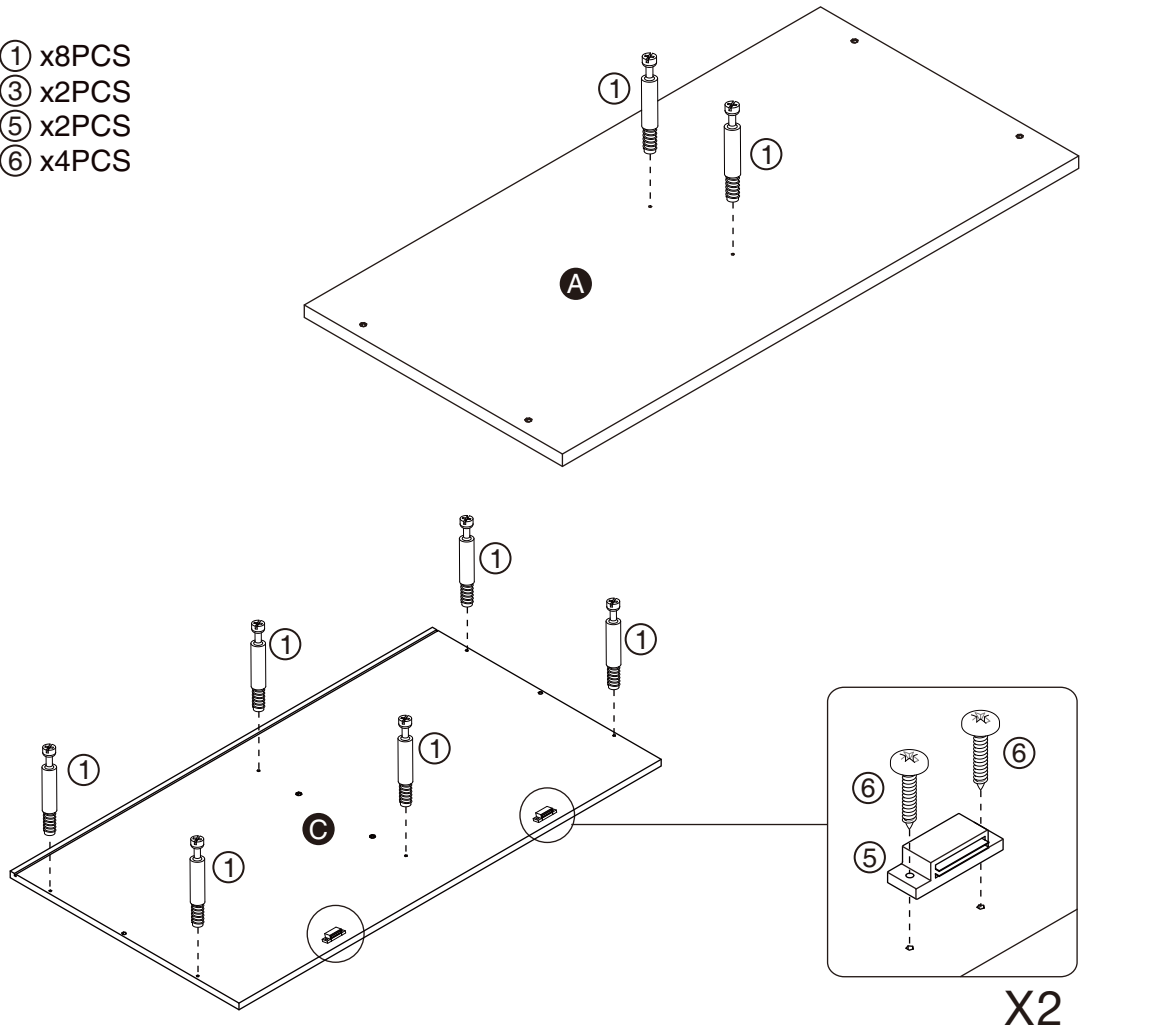


ASSEMBLY INSTRUCTIONS

2

- Hardware ⑦ x2PCS
- Hardware ⑧ x2PCS
- Hardware ⑨ x4PCS
- Hardware ⑩ x12PCS

  - Accessory A1 x2PCS
- Accessory A2 x4PCS

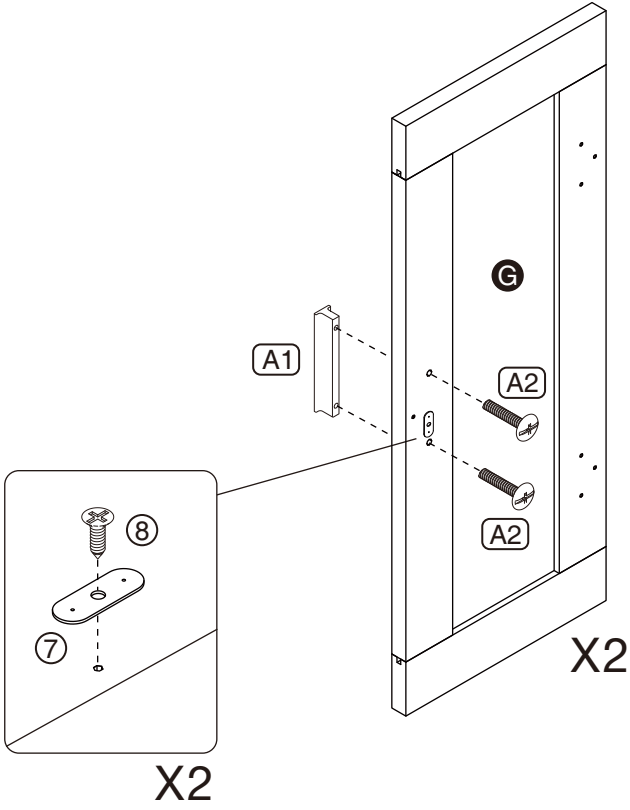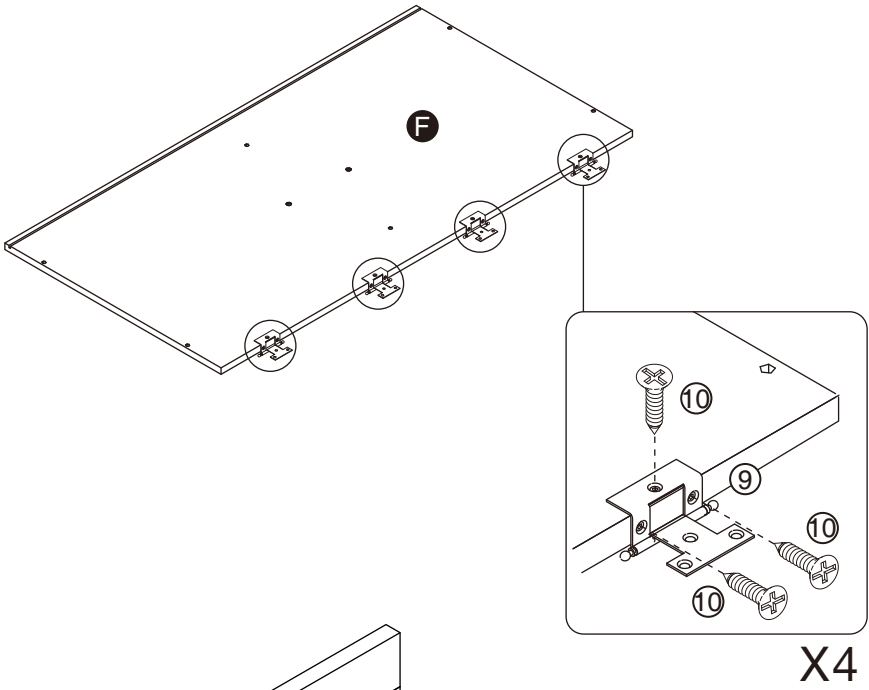

ASSEMBLY INSTRUCTIONS

3

 
Part **B** x2PCS

Part **D** x1PC

Part **E** x1PC

Hardware **④** x8PCS

Accessory **A4** x1PC

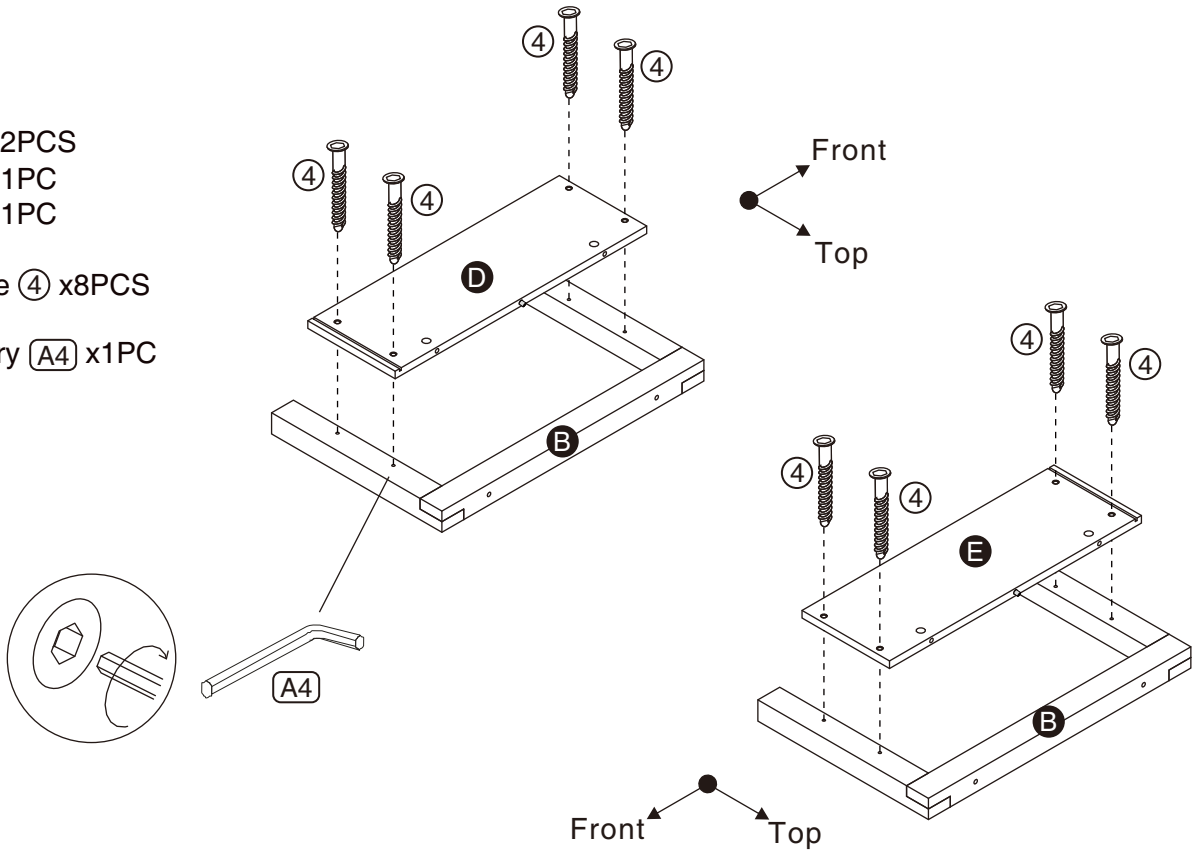

4

 
Part **F** x1PC

Part **H** x1PC

Part **J** x1PC

Hardware **④** x4PCS

Accessory **A4** x1PC

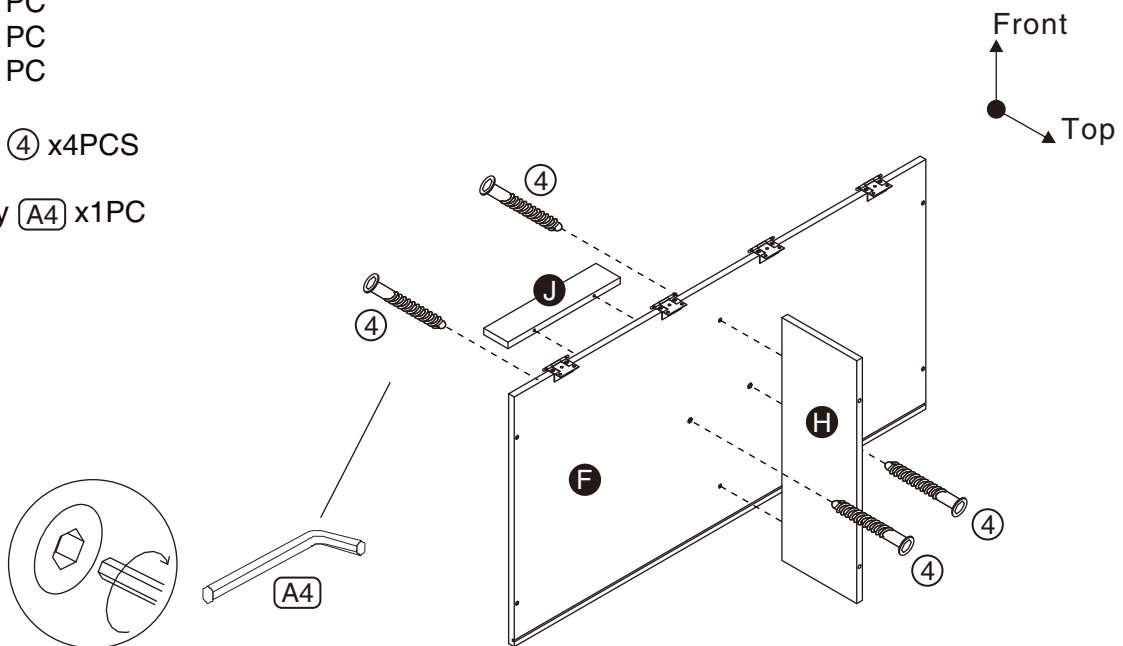


ASSEMBLY INSTRUCTIONS

5

Hardware ④ x4PCS

Accessory A3 x6PCS

 Accessory A4 x1PC

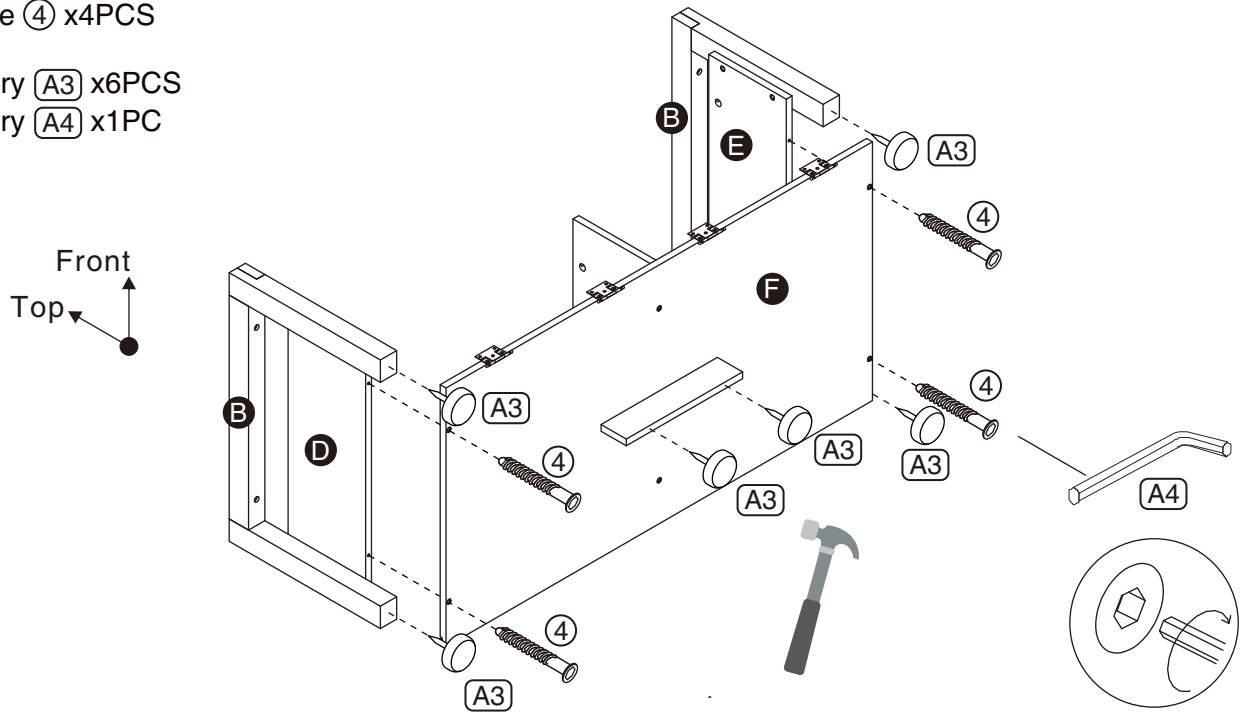


6

Part C x1PC

Part I x1PC

Hardware ④ x2PCS

 Accessory A4 x1PC


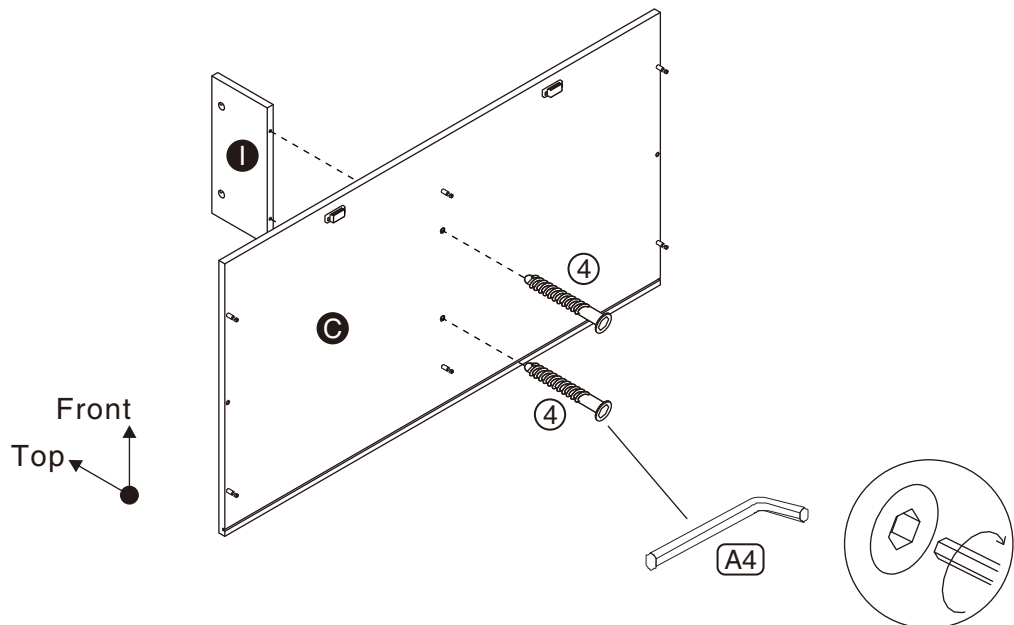


ASSEMBLY INSTRUCTIONS

7

Part **K** x1PC

  Hardware **2** x6PCS

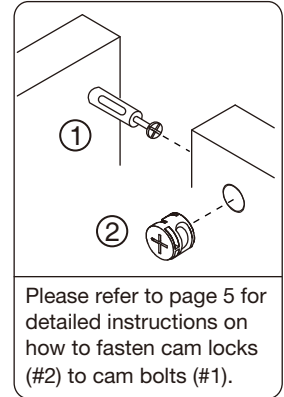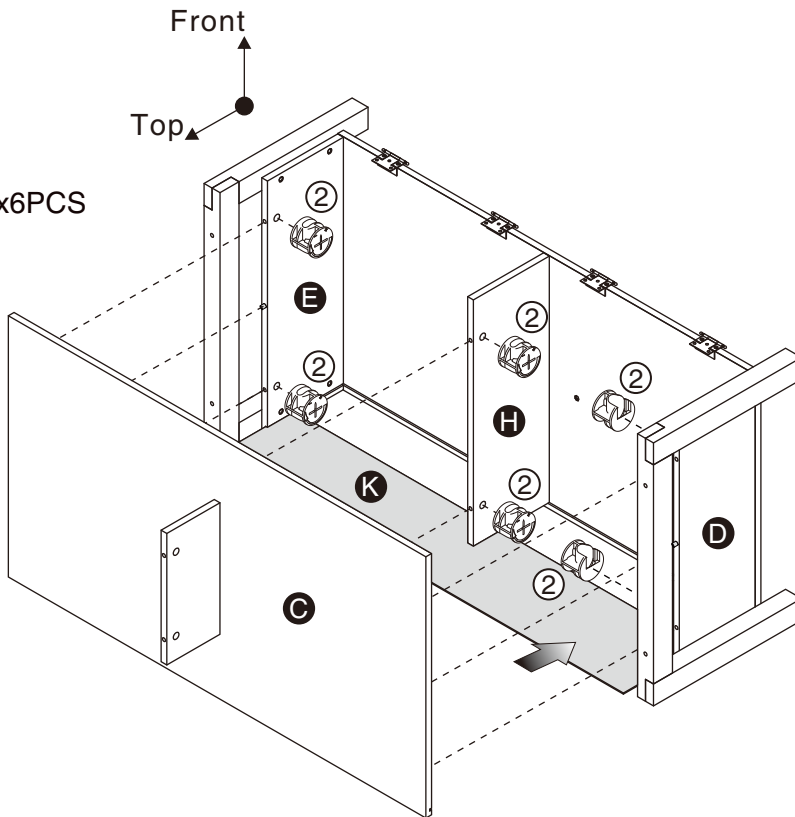

8

Part **A** x1PC

Hardware **2** x2PCS

 
Hardware **11** x4PCS

Hardware **12** x4PCS


Accessory **A4** x1PC

Accessory **A5** x4PCS

Top
Front

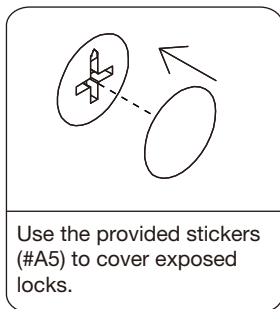

X4

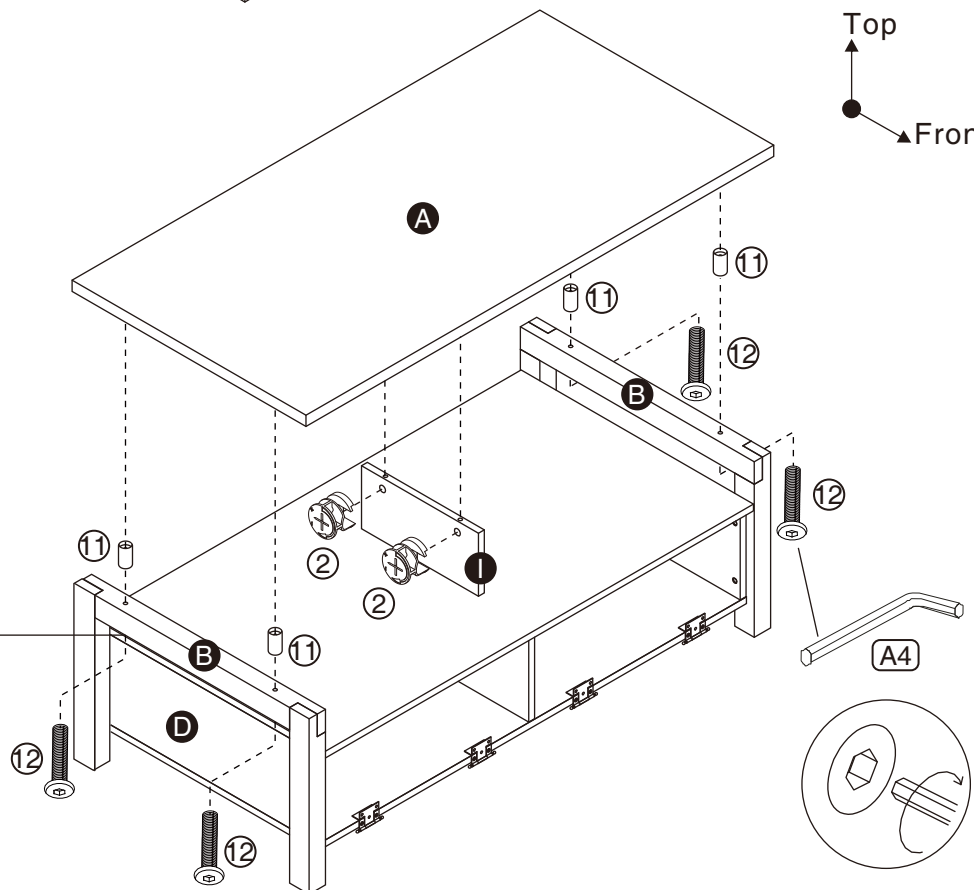 


ASSEMBLY INSTRUCTIONS

9

Part **G** x2PCS

 
Hardware **10** x12PCS

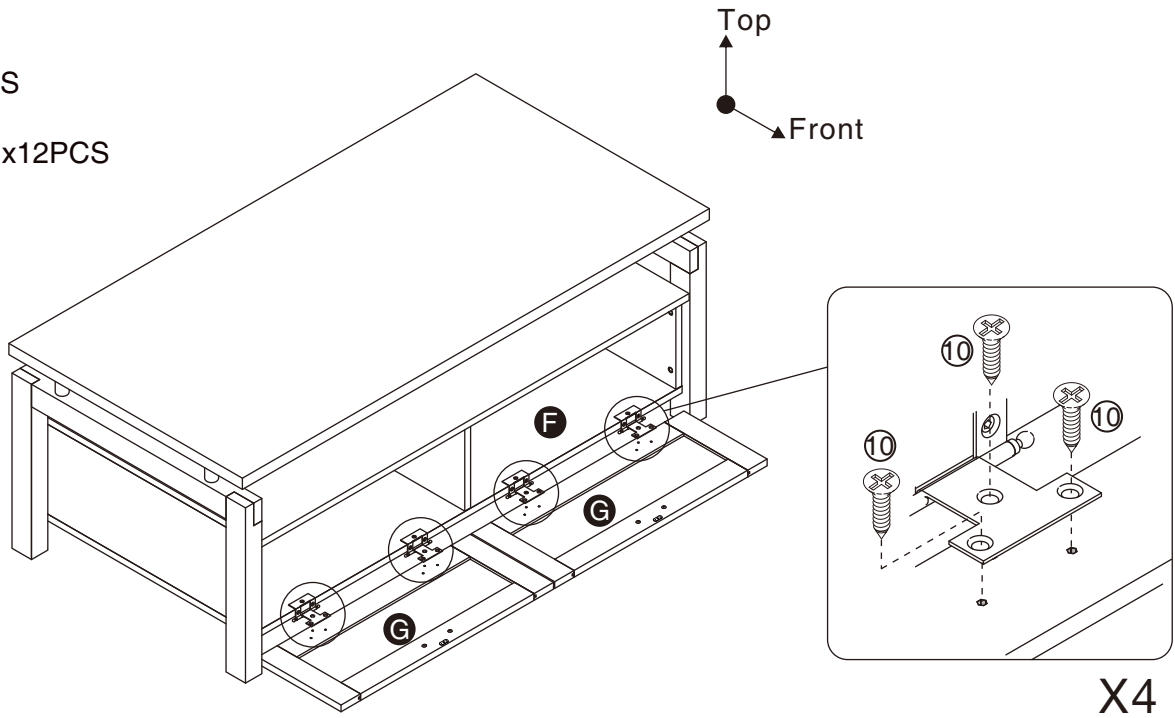

10

Hardware **13** x4PCS

 Hardware **14** x4PCS

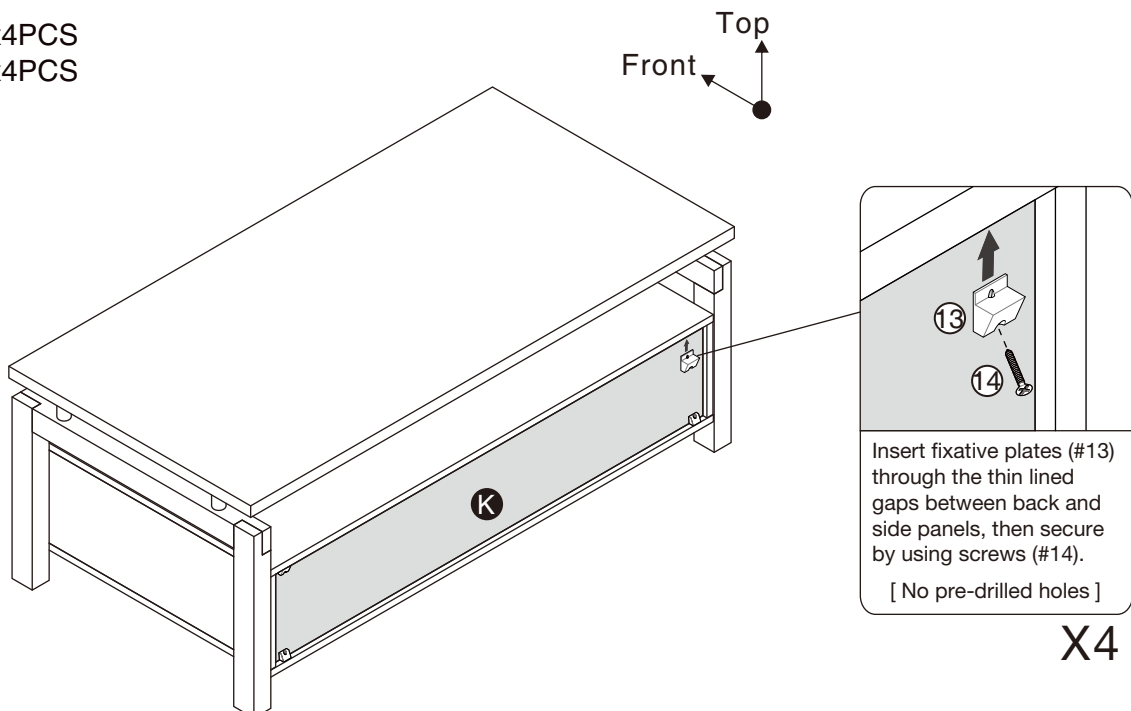


ASSEMBLY INSTRUCTIONS

11

ASSEMBLY COMPLETED



 Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

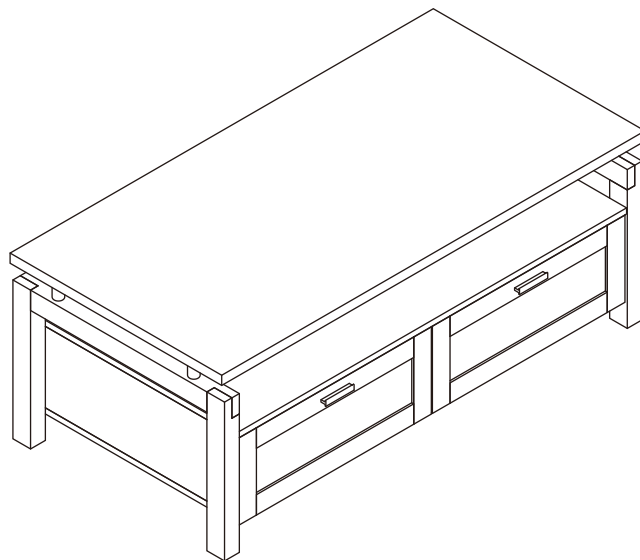

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.