

Office Chair



Parts list

PARTS

A x1



 
B x5




C x5




D x1



E x1

 

F x1

 

G x1



H x1



Hardware

I



Screw : x10
M6*14MM

J



Screw : x2
M6*20MM

K



Screw : x2
M6*25MM

L



Screw : x8
M8*30 MM

M




Caps: x8

N




Allen key : x1


Installation steps

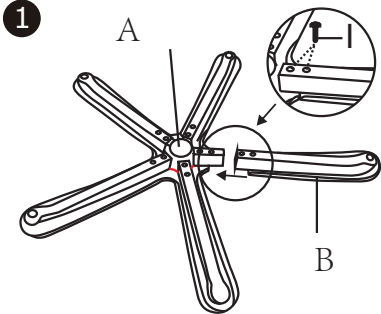


Insert part B into part A and secure with screw I

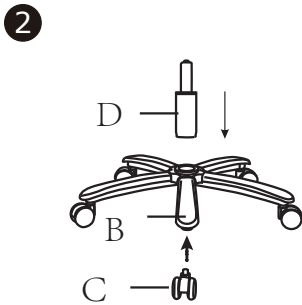

Insert Part C into Part B, then install Part D

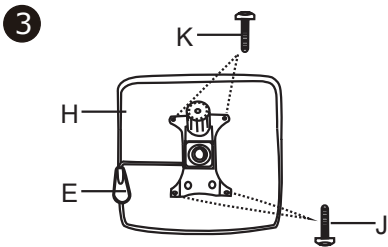


Use screw J and screw K to fix Part E to Part H
Please pay attention to the screw holes with spacers, please install screw K

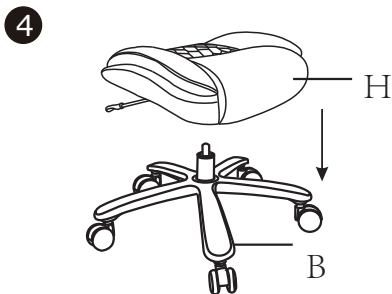

Install Part H on Part D

Installation steps

5

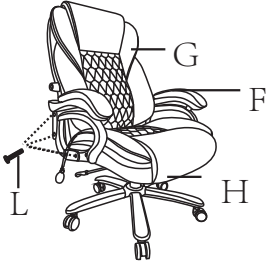

Attach the armrest to the seat cushion and backrest using screws L. During the installation process, please do not tighten all the screws, otherwise the backrest will not be installed. After installing the backrest, tighten all the screws.

6



End all installation after installing part M.


7



Installation is complete

HEIGHT ADJUSTMENT


Seat Height adjustment (Adjusting
Lever on the right)

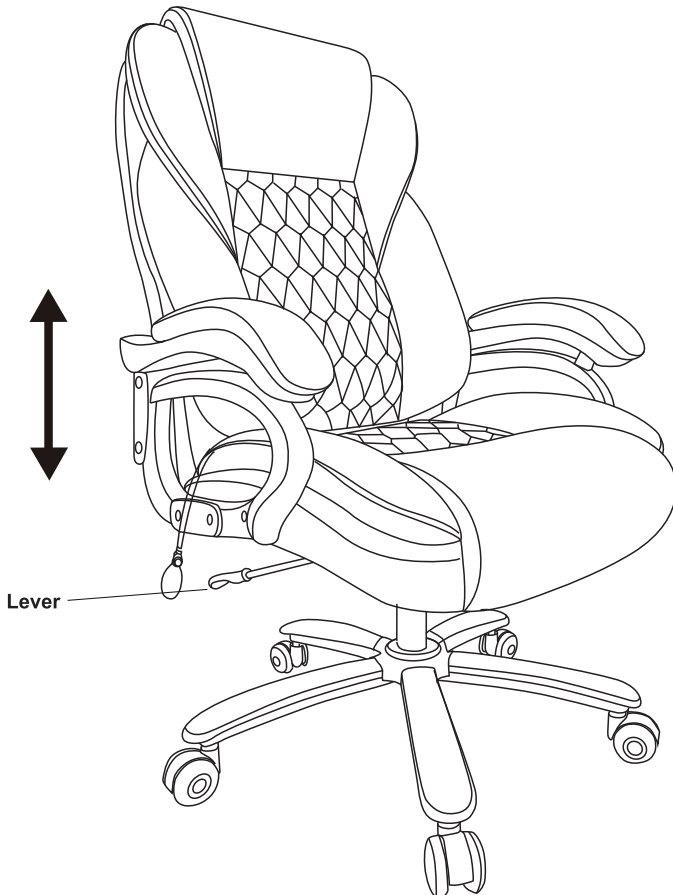

TO OPERATE TILT LOCKOUT


While seated, reach under the left side of the chair to find the lever.

Push down the lever and lean back to allow the chair to tilt backwards. To lock the chair in the upright or vertical position, sit upright and pull the left lever to the level position.

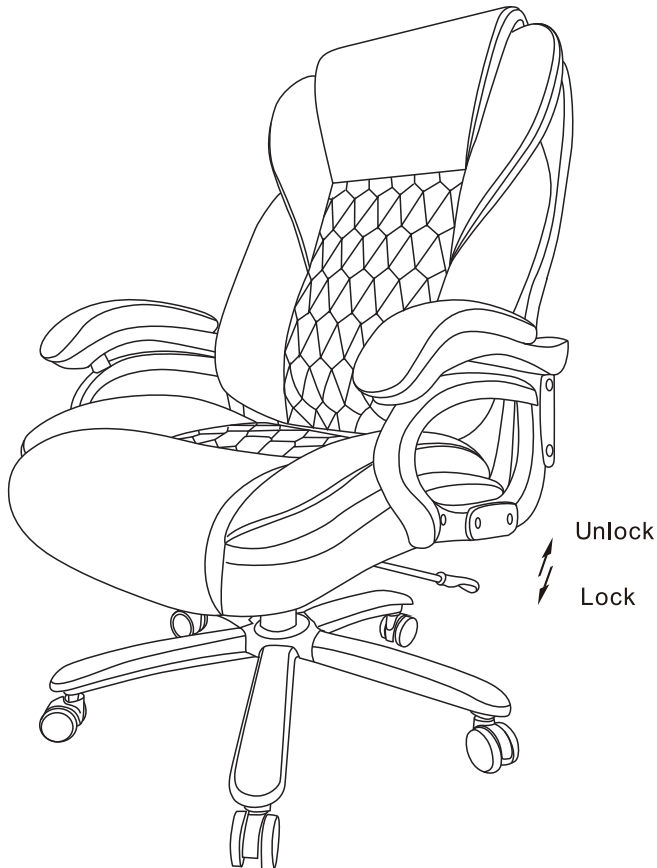

ROCKING ADJUSTMENT FUNCTION

The tighter the knob is turned, the less shaking it is, and vice versa.

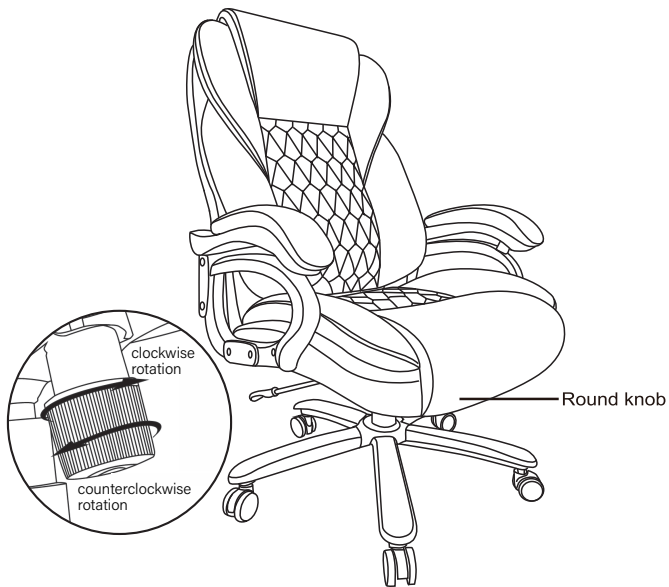

ADJUSTABLE LUMBAR SUPPORT

The lumbar support can be adjusted by
Press the air bag

