



- 2** Attach Chair Seat Deck (H) to Chair Backrest (G) using Chair Bolt/Washer (J). Tighten using provided Allen Key (F).

Then, attach Chair Arms (I) to Chair Backrest (G) and Chair Seat Deck (H) using Chair Bolt/Washer (K) and Nut (L). Tighten using provided Open Spanner (M).

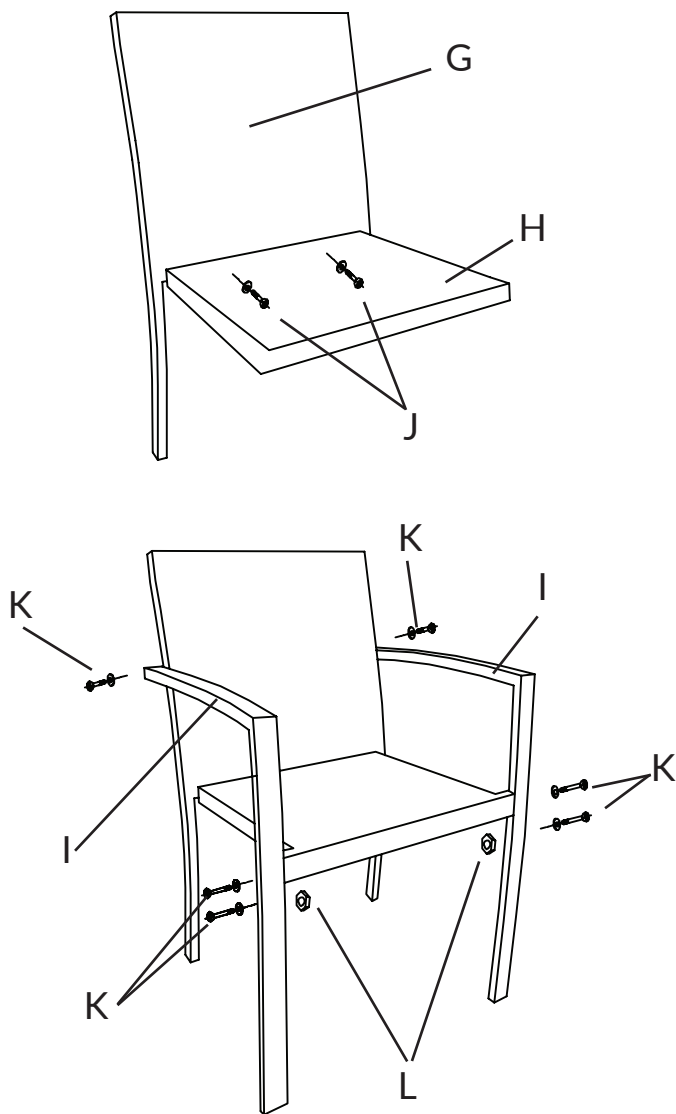

Model: \_\_\_\_\_  
Lot No: \_\_\_\_\_  
Date of Purchase: \_\_\_\_\_

## 5 PC DINING SET

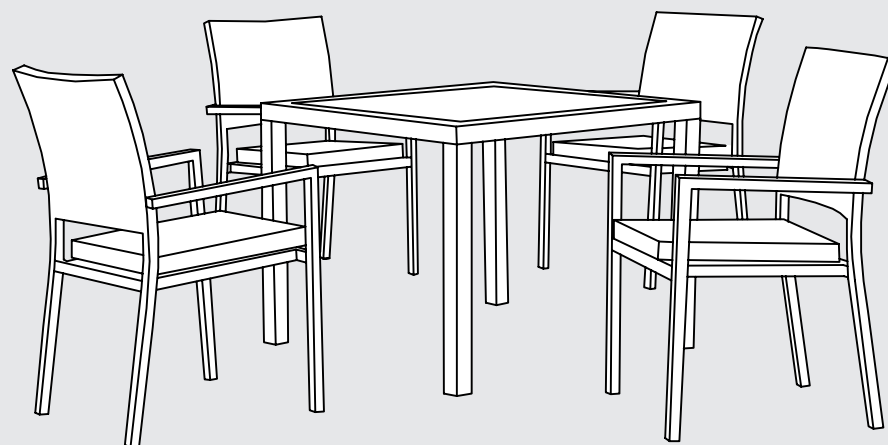

### ADULT ASSEMBLY REQUIRED

 
If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.



**WARNING:** This product may contain small components, please ensure they are kept away from small children.

## PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A. Table Top  
1x



 B. Table Legs  
4x



 
C. Table Bolt  
16x




D. Washer  
16x



F. Allen Key  
1x

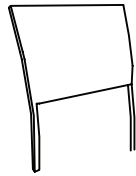

 G. Chair Backrest  
4x



H. Chair Seat Deck  
4x



I. Chair Arm  
8x



 
J. Chair Bolt M6x40  
8x



K. Chair Bolt M6x50  
24x



L. Nut  
8x



M. Open Spanner  
1x

## ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Attach Table Legs (B) to Table Top (A) using Table Bolt (C) and Washer (D). Tighten using provided Allen Key (F).

