








# ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION HIGH / LOW DINNING TABLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Parts key			
No	Code	Q'ty	Description
1	A	4 Pcs	Leg Extensions
1A	B	4 Pcs	Leg
2	C	2 Pcs	Extension Mechanism
3	D	4 Pcs	Extension Locks
4	E	4 Pcs	Apron Spacer
5	F	1 Pc	Upper Shelf
6	G	2 Pcs	Lower Shelves
7	H	4 Pcs	Floor Glide
8	I	1 Pc	Table Top
9	K	12 Pcs	Corner Block

Hardware Kit			
No	Description		Q'ty
A		Bolt Ø7.8 x 60mm	12 pcs
B		Hexa Nut Ø8.5	4 pcs
C		Lock washer Ø8.5	24 pcs
D		Flat washer Ø8.5	24 pcs
E		Allen key	1 pc
F		Key Wrench	1 pc
G		Bolt Ø7.8 x 180mm	8 pcs

- Carefully lay the Shelves and legs on a smooth flat surface to prevent scratches. Note: top shelf is different from the bottom shelves.
- Attach each Shelf to the Legs as shown in illustration.
- Insert a Bolt (A) with Flat washer (D), Lock washer (C) through holes in wood corner of Storage Box. See detail A. Do not fully tighten until all shelves are attached.
- Carefully turn the shelf pedestal upright to attach the table top.

**PLEASE NOTE:**  
Leg extensions are used for the Counter Height Table.  
This table requires two people to setup.

