 




Display Cabinet



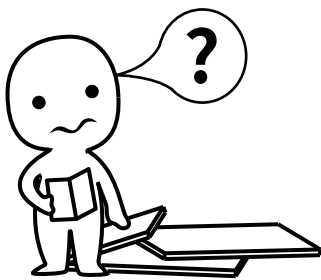


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

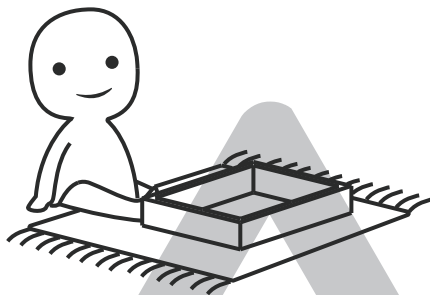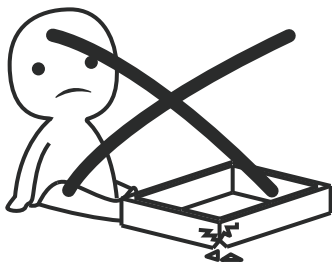



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

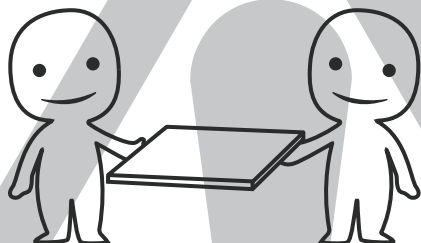

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

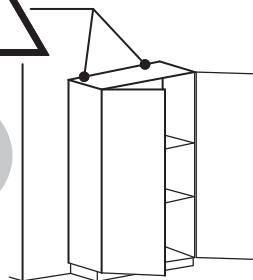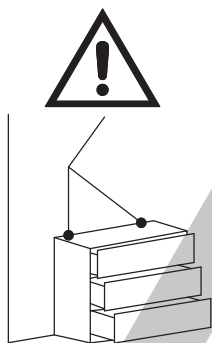

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

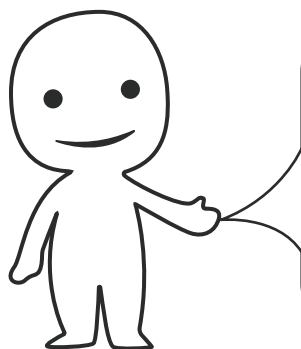


Please prepare the following tools

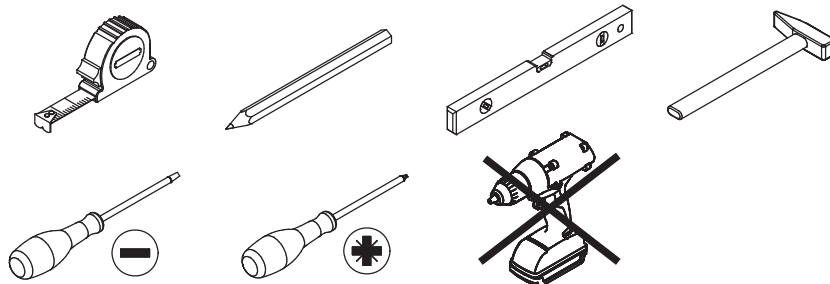 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 28</p> <p>Ø 7 x 35 mm</p>	<p>B x 28</p> <p>Ø 15 x 9 mm</p>	<p>C x 25</p> <p>Ø 4 x 35 mm</p>	<p>D x 4</p>	<p>E x 8</p> <p>Ø 4 x 16 mm</p>
<p>F x 32</p> <p>Ø 3.5 x 12 mm</p>	<p>DL x 4</p>	<p>DR x 4</p>	<p>CR x 4</p>	<p>CL x 4</p>
<p>K x 20</p> <p>Ø 4 x 14 mm</p>	<p>L x 4</p>	<p>M x 12</p> <p>Ø 6 x 30 mm</p>	<p>N x 16</p> <p>Ø 2.5 x 14 mm</p>	<p>P x 1</p> <p>Ø 6 x 30 mm</p>
<p>Q x 1</p>	<p>R x 2</p> <p>Ø 12 x 4 mm</p>	<p>S x 1</p> <p>Ø 3.5 x 14 mm</p>		

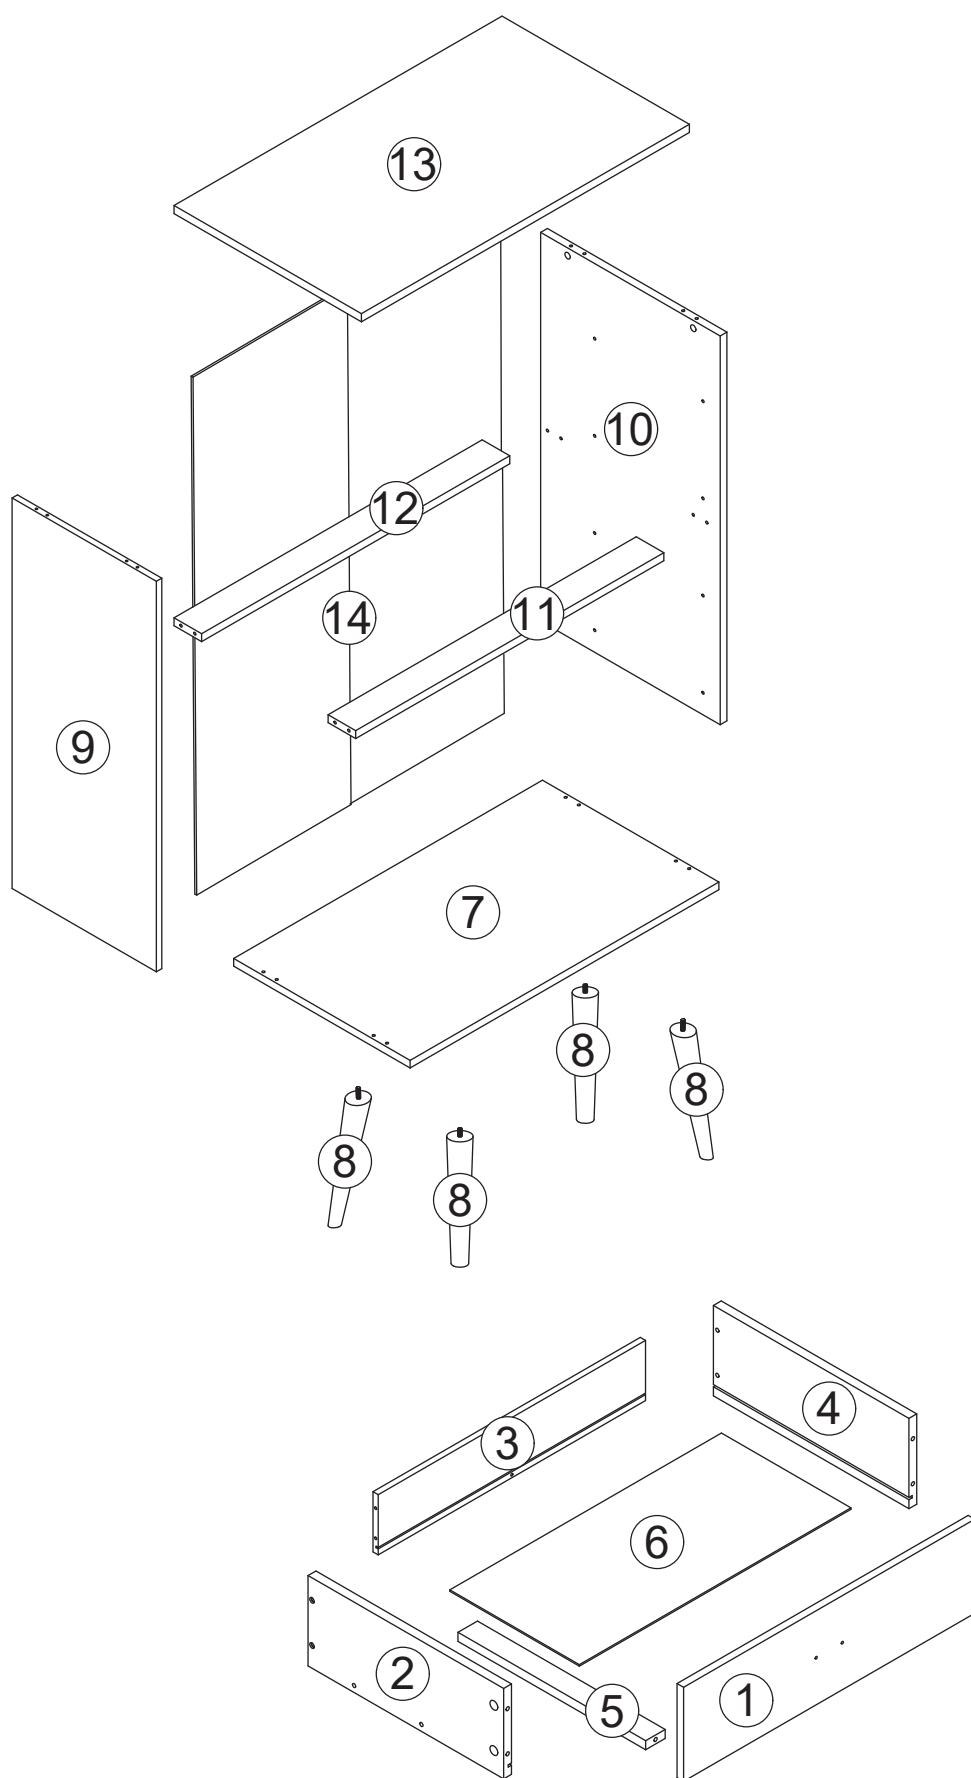 


x4

1


A x 20



 D x 4






E x 8

 

Attach handle (D) to panel 1 using screws (E), as shown.

Insert quickfit screws (A) to panel 1, as shown.

   
Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack

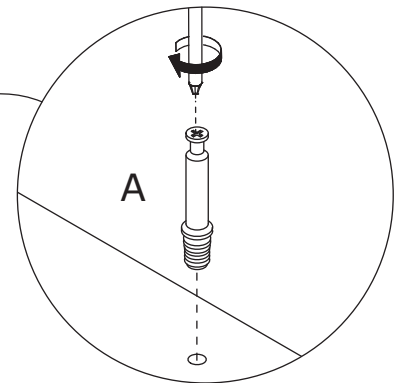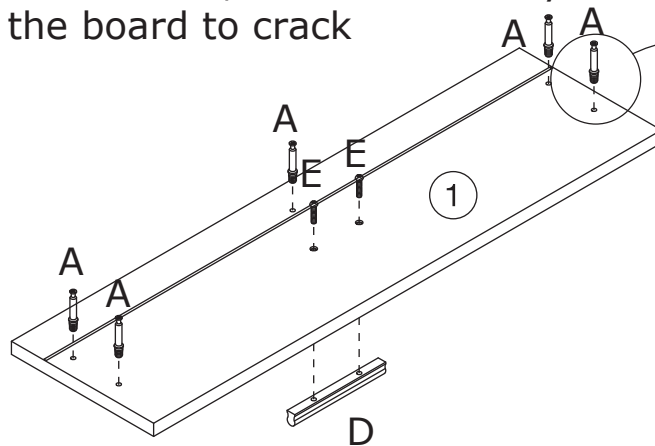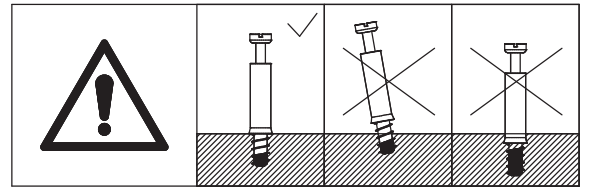


x4

2

 
C x 20



 Fix part 2, 4 and 5 to part 3 using screws (C), as shown.

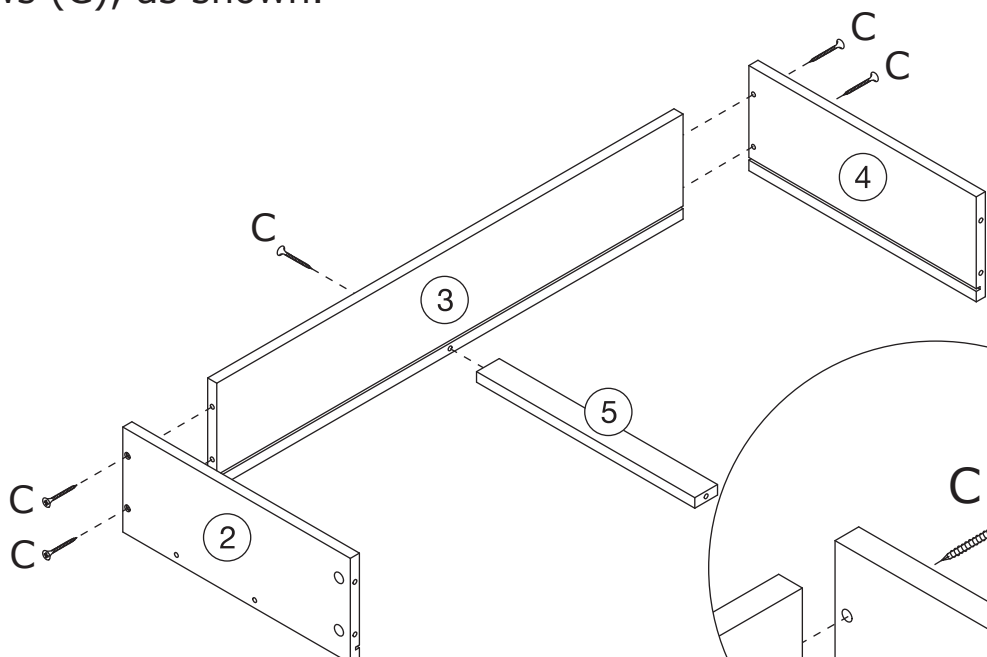


x4

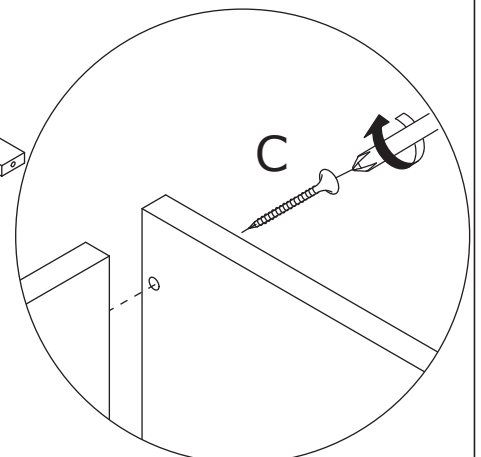 


3

 Slide part 6 between the slots of assembled unit, as shown.

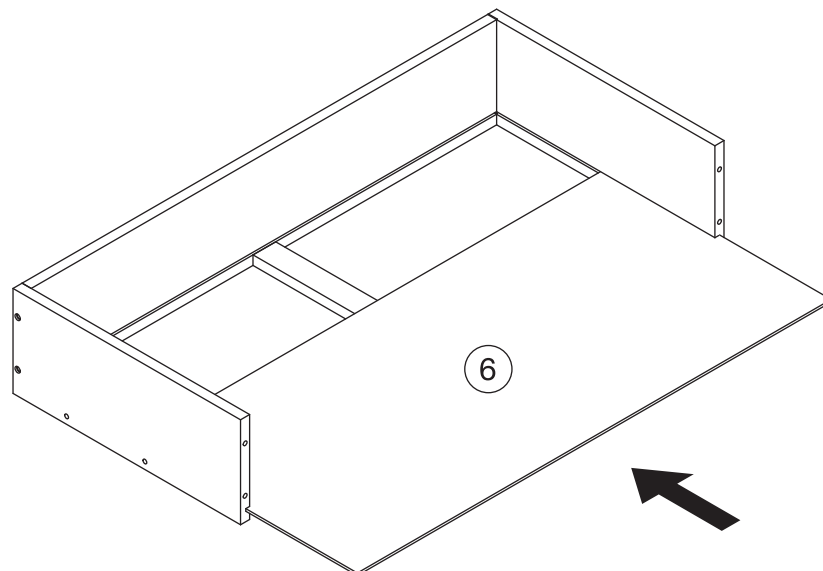



x4

4


B x 20

   Ø 15 x 9 mm

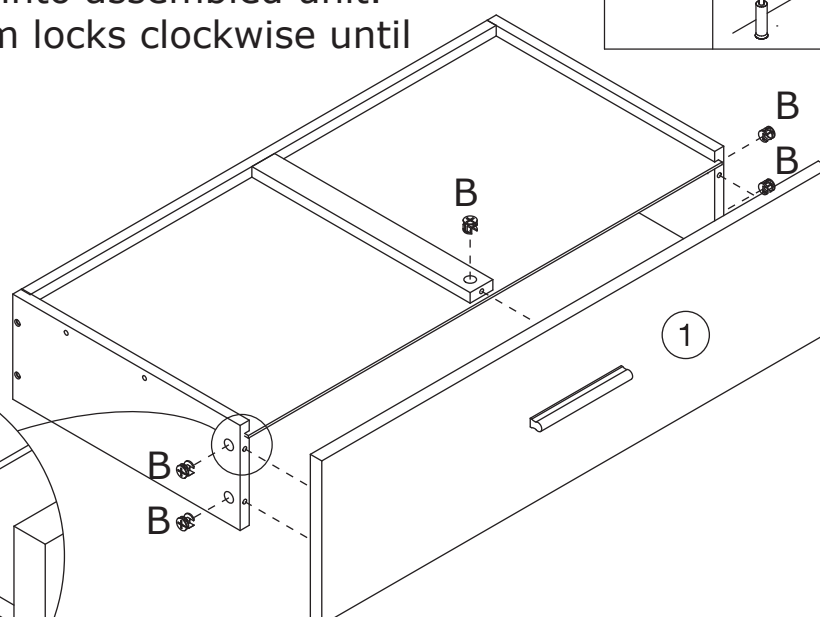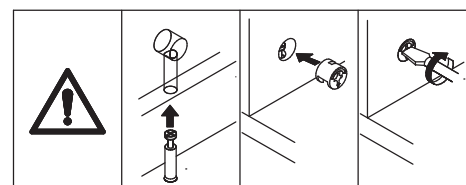

 Insert cam locks (B) to assembled unit, as shown.
 Insert part 1 into assembled unit.
 Rotate all cam locks clockwise until tight.

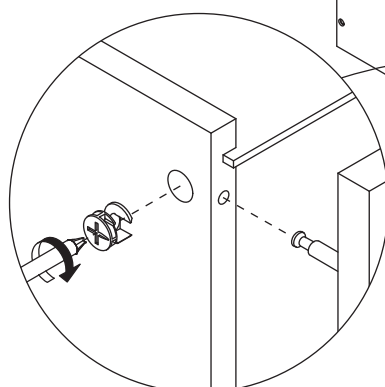

x4



 
5

F x 16





Ø 3.5 x 12 mm


DL x 4



DR x 4

  


 Fix drawer runners (DR) and (DL) to assembled unit using screws (F), as shown.

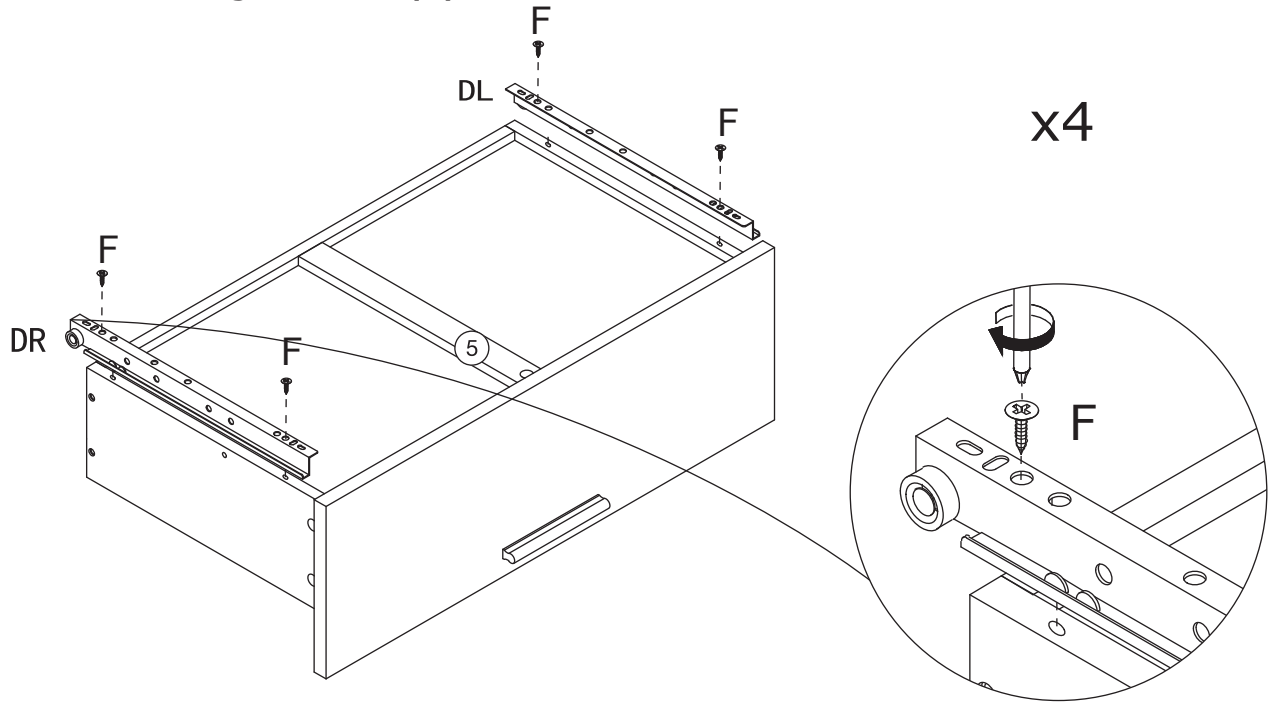

6

 A x 4




Ø 7 x 35 mm

F x 16





Ø 3.5 x 12 mm

 
CR x 4




CL x 4

  

 
Fix drawer slides (CD) and (CR) to part 9 and 10 using screws (F), as shown.
Insert quickfit screws (A) into part 9 and 10.

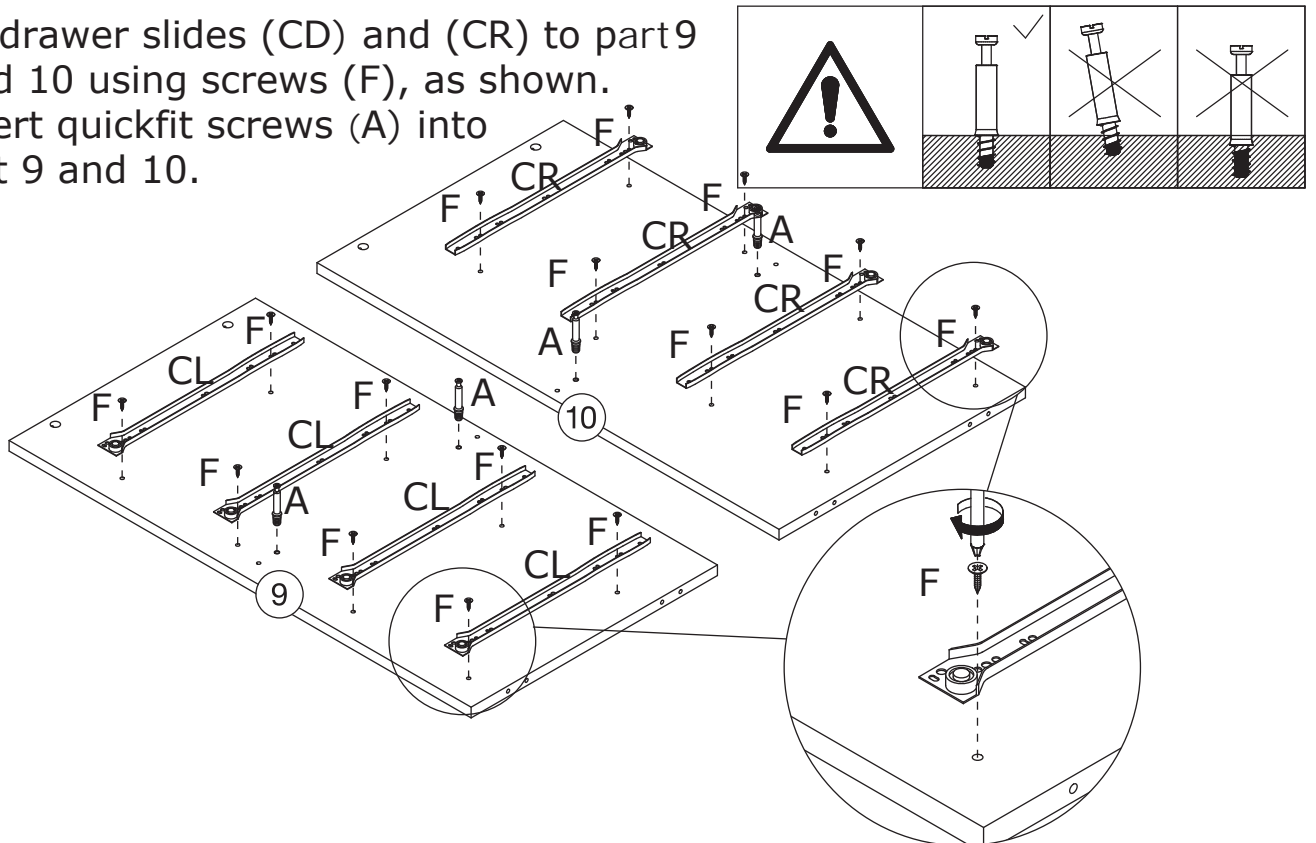

7

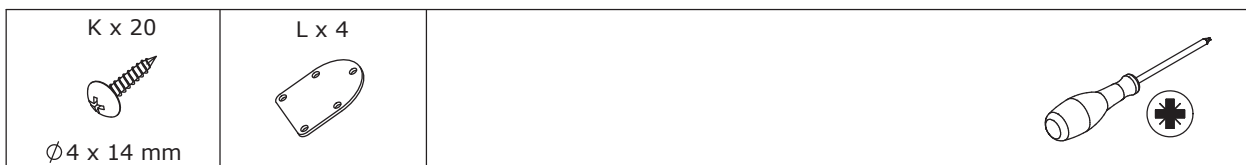 


 Fix leg support (L) to part 7 using screws (K), as shown.

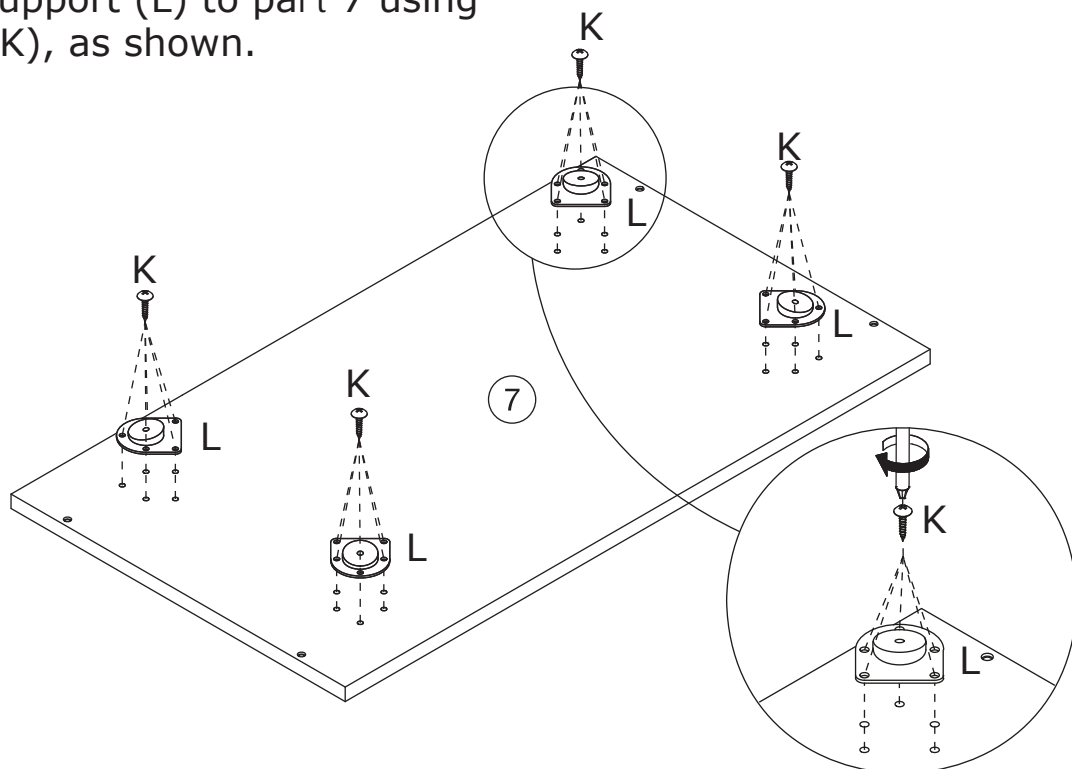

8

 Turn legs 8 clockwise into leg support, as shown.

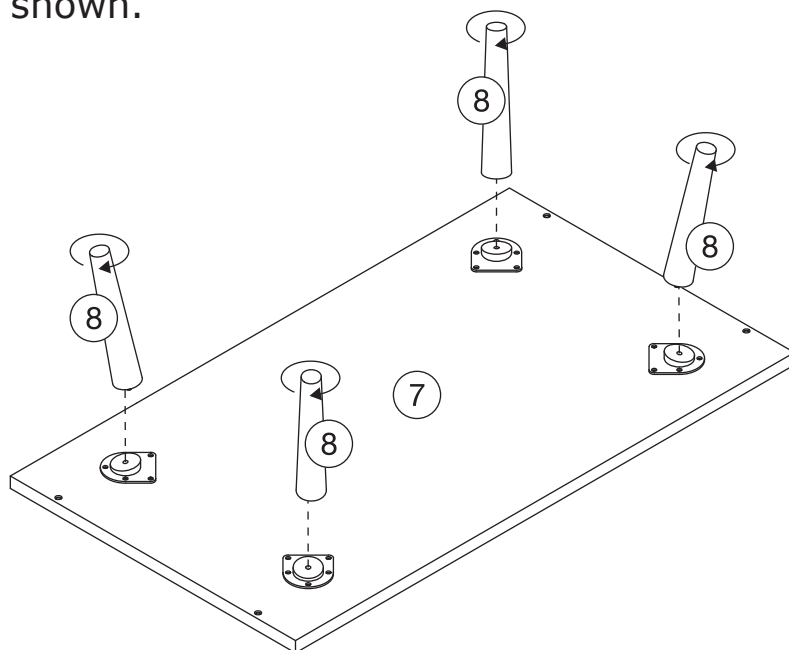


9

B x 4




Ø15 x 9 mm

 M x 4



Ø6 x 30 mm



 


Insert wooden dowels (M) to part 9 and 10, as shown.

Insert cam locks (B) to part 11 and 12 as shown.


Attach part 9 and 10 into part 11 and 12

   Turn cam locks clockwise to tighten.

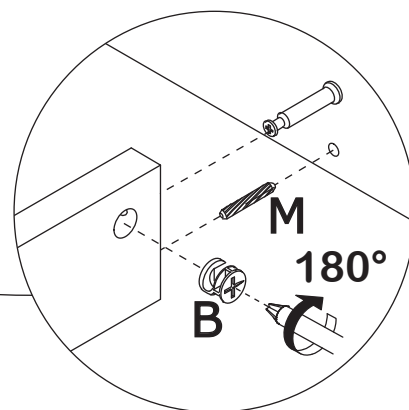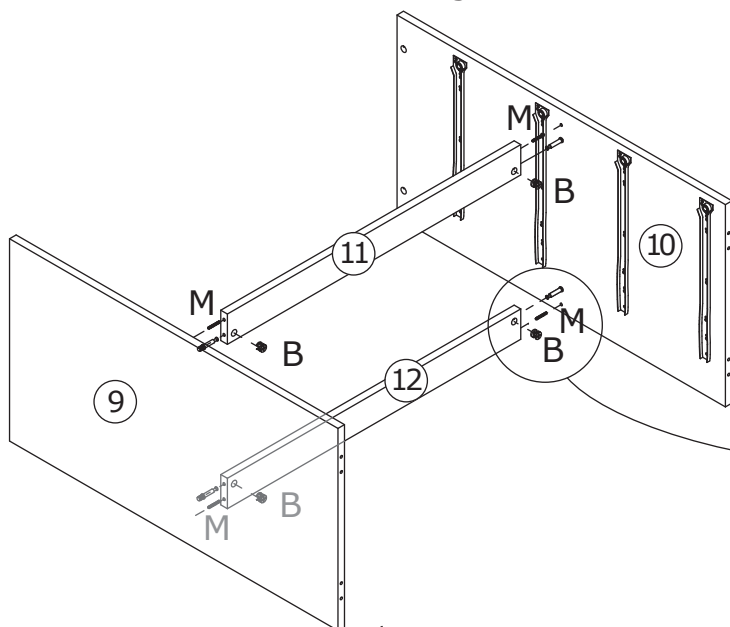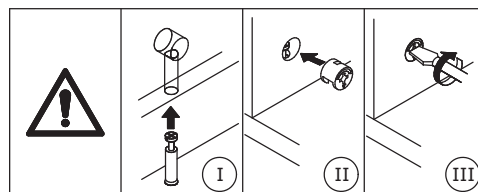


10

 C x 4



Ø4 x 35 mm

 M x 4






Ø6 x 30 mm





Insert wooden dowels (M) into part 9 and 10.

  
 
Fix part 7 to the bottom part 9 and 10 of side panel using screws (C), as shown.

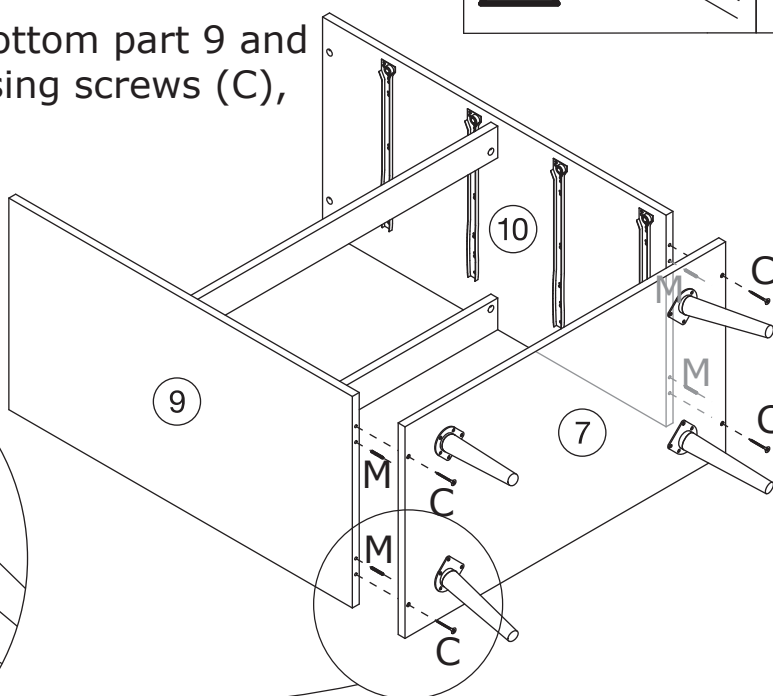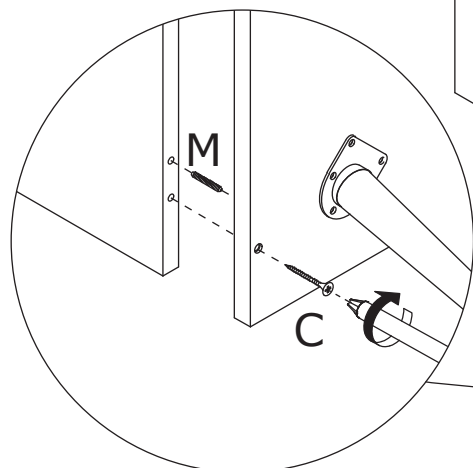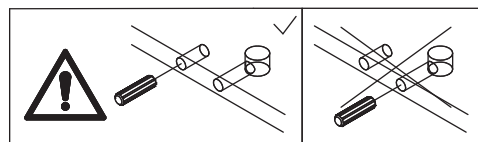




11

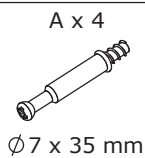  



Insert quickfit screws A into part 11.

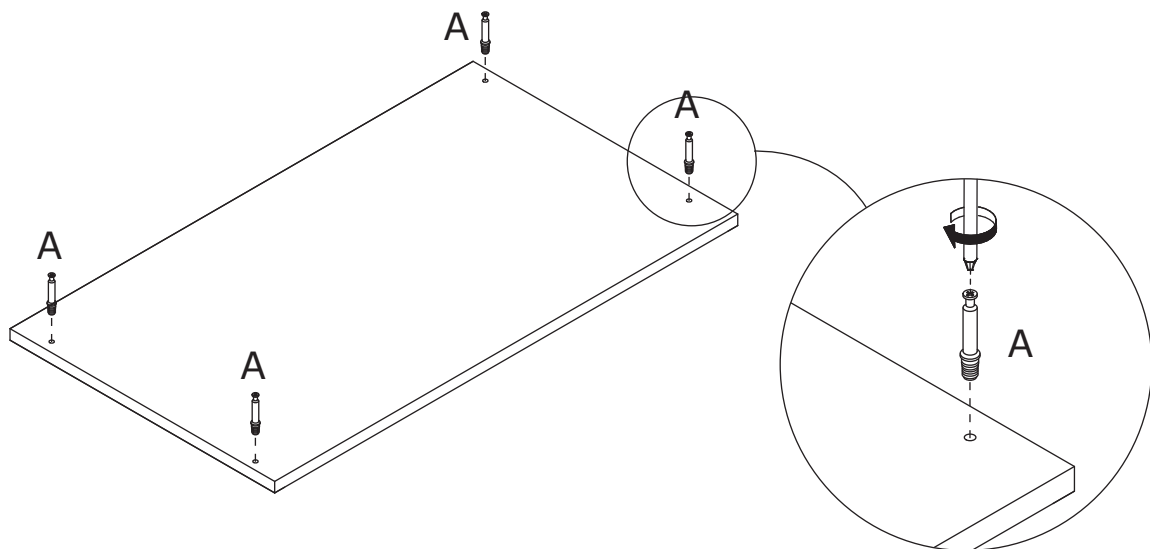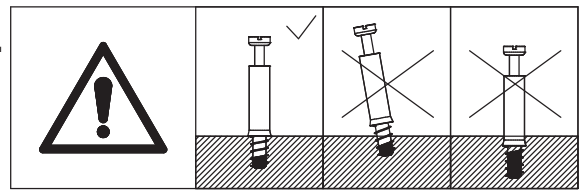  

12

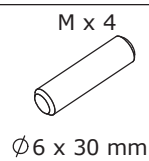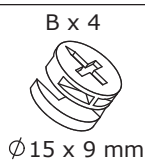   

  Insert wooden dowels (M) to part 13, as shown.
 Insert cam locks (B) to part 9 and 10,
 as shown.
 Attach part 13 into part 9 and 10.
 Turn cam locks clockwise
 to tighten.

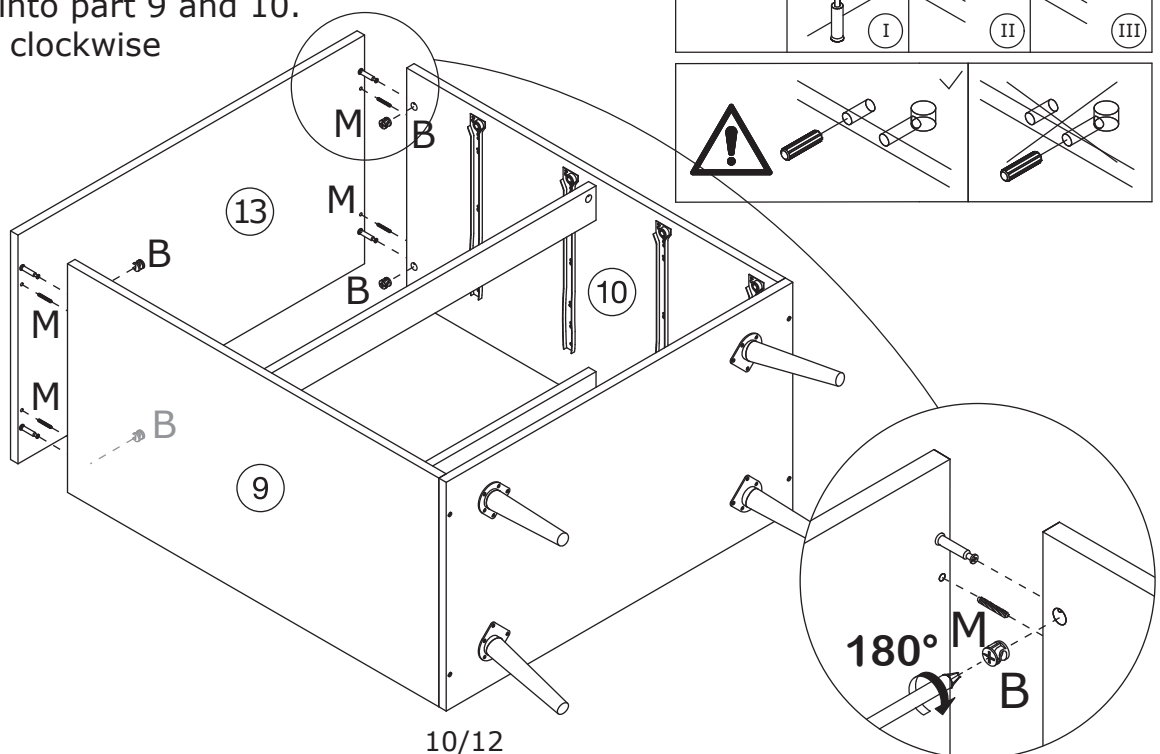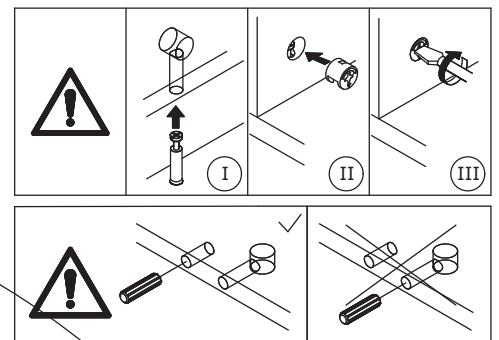


13


N x 16



 Ø 2.4 x 14 mm




  Fix part 14 to assembled unit using nails (N)

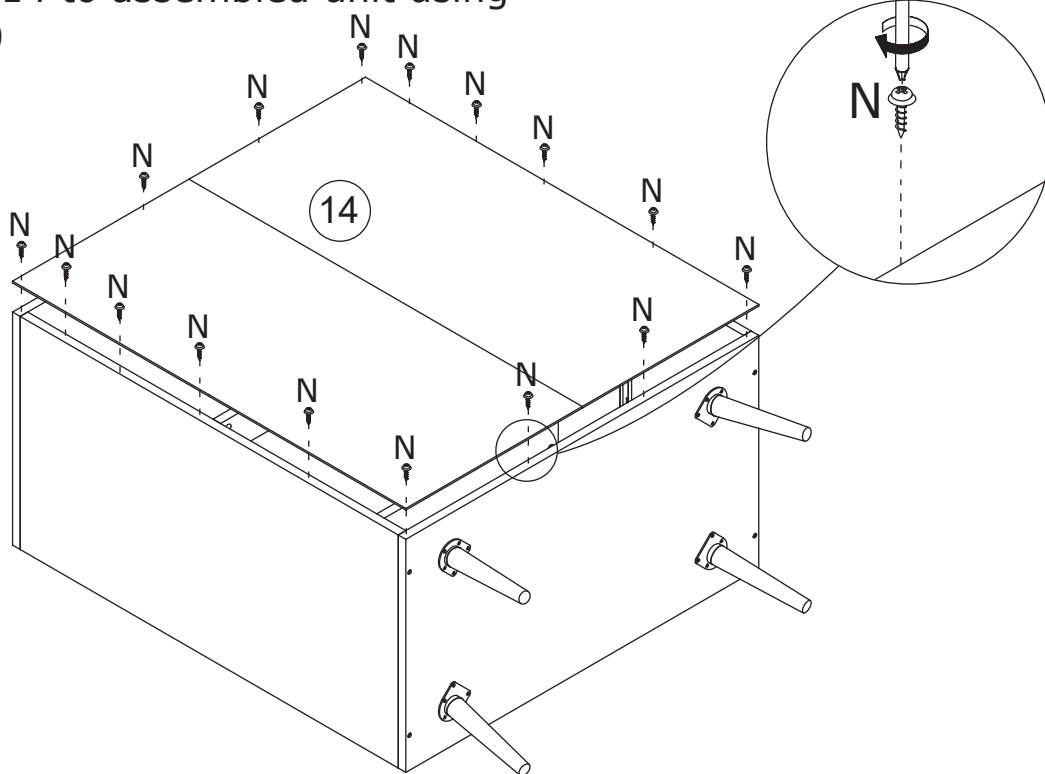







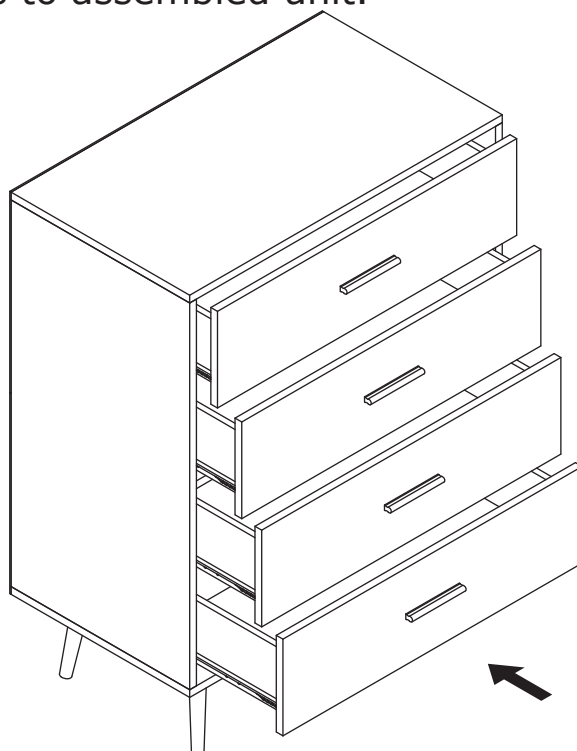

14

    Fit drawers to assembled unit.








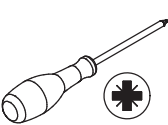15

<p>C x 1</p>  <p>Ø 4 x 35 mm</p>	<p>P x 1</p> 	<p>Q x 1</p> 	  
<p>R x 1</p>  <p>Ø 12 x 4 mm</p>	<p>S x 1</p>  <p>Ø 3.5 x 14 mm</p>		

For extra stability, it is recommended that you fix the drawers to a wall using additional hardware (C, P, Q, R and S), as shown.

     Should you choose to not affix the product to the wall, serious injury may be caused if the product tips over.

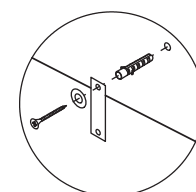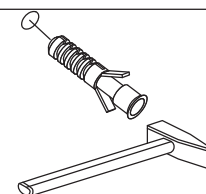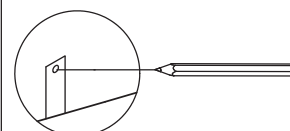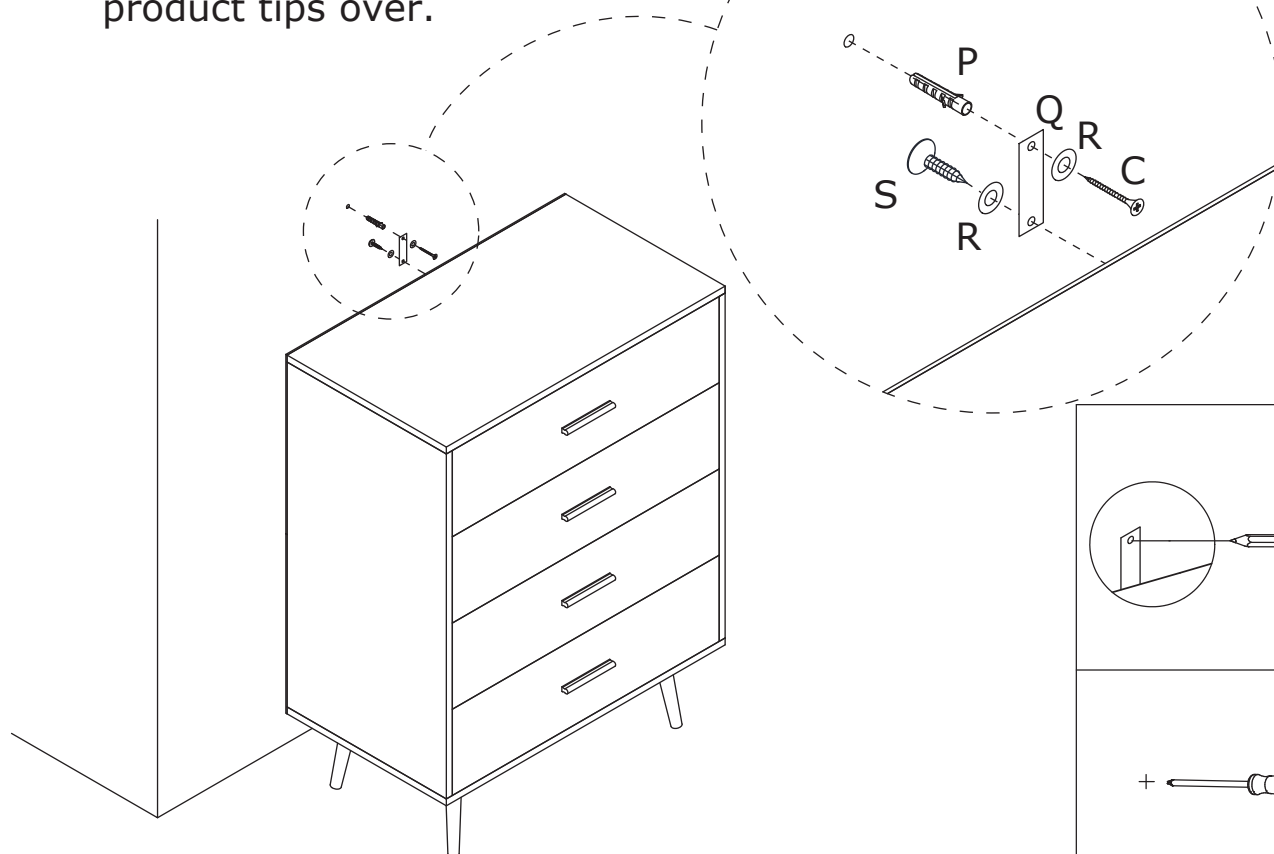

Your chest of 4 drawers is ready for use.
Maximum recommended weight limit is 5 kg per drawer.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply visit **feedbackstation@163.com** for further information. Our dedicated After-sale Team will endeavour to answer all messages within 48 hours. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at feedbackstation@163.com as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.