 


# *The Twister*

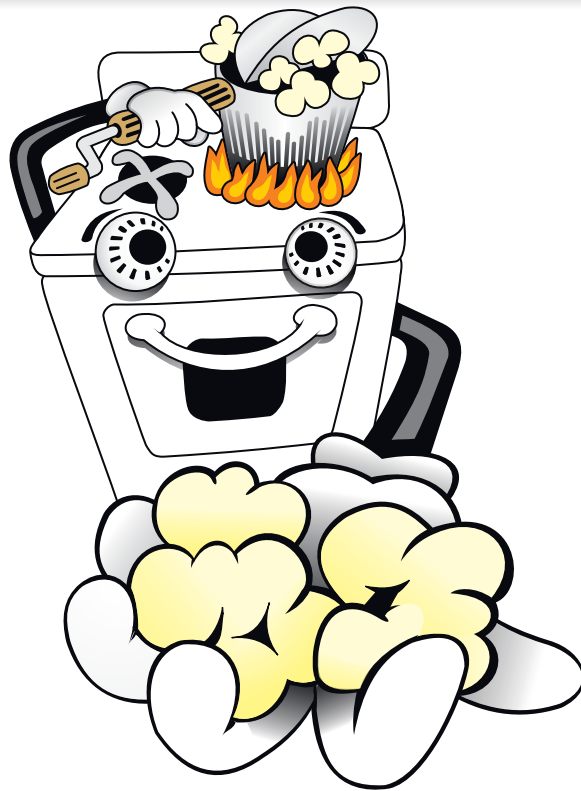

## **6<sup>1/2</sup> QUART STAINLESS STEEL STOVETOP POPPER**

**MODEL: 6251 SS STOVE TOP POPPER 83-DT5677**

### **ASSEMBLY & INSTRUCTIONS**



# TWISTER STOVETOP POPPER

## IMPORTANT SAFETY & STORAGE TIPS

**CAUTION!** Be sure to follow all safety Do's and Don'ts carefully to avoid personal injury or damage to property. **NEVER LEAVE THE POPPER UNATTENDED WHEN IN USE! KEEP OUT OF REACH OF CHILDREN! SAVE THESE INSTRUCTIONS.**

### Do...

- Follow all warnings, instructions and recommendations
- Check to be sure that the handle is securely fastened to the popper before popping
- Check that the lid is securely fastened to the kettle before popping
- Always use caution when the popper is hot
- Wash your popper in mild soapy water before and after popping to keep popper clean and ready to go; wash thoroughly before the first use and make sure popper is **THOROUGHLY DRY**
- Close lid before popping; Remove from heat when popping slows or stops
- For household use only, do not use this popper for anything other than its intended use

### Don't...

- Don't put face or hands near popper lid when freshly popped to avoid steam burns
- Don't put in microwave or oven
- Don't put in dishwasher; to ensure your popper's long life, wash by hand
- Don't pop in a dry popper (without oil); do not use butter or olive oil spray or vegetable spray to pop popcorn; do not shake popper
- Don't set hot popper on plastic, glass or place on or near flammable materials
- Don't let children use the popper and always watch children while the popper is hot
- Don't use the popper when water is in kettle because water will cause oil to pop and potentially injure you or others
- Don't use sugar or cheese as these may stick, burn or explode when hot
- Don't leave popper unsupervised when popping or hot
- Don't allow children to operate popper
- Don't set an empty popper on a heated range or heat source as this can damage your popper
- Don't **EVER** use water to attempt to put out an oil fire; use a fire extinguisher or baking soda instead

### Storing Your Twister Stovetop Popper

1. You should wash your Twister after every use with warm soapy water to remove oil and food particles and to ensure it's ready for use the next time you get a craving for awesome popcorn.
2. Make sure to thoroughly dry your popper and avoid storing near or on burners, as heating the pan without oil can damage or pit your product.

 
# TWISTER STOVETOP POPPER ASSEMBLY

## Assembling Your Twister

The top of your popper is fully assembled and simply needs to be secured to the top of the kettle before use.

Once all parts of your new popper have been washed and completely dried, follow these instructions to assemble before popping:

1. Slide the popper top's latch pin, located on the opposite of the lid from the handle, into the hole in the kettle.
2. Now line up the clamp below the handle so that it is between the two alignment marks on the kettle edge. Once in place, press down on the main handle (not the crank) and snap the lid into place.
3. Finally, press down on the wooden knob to snap and lock the lid clamp into place. Your popper is now ready for use.

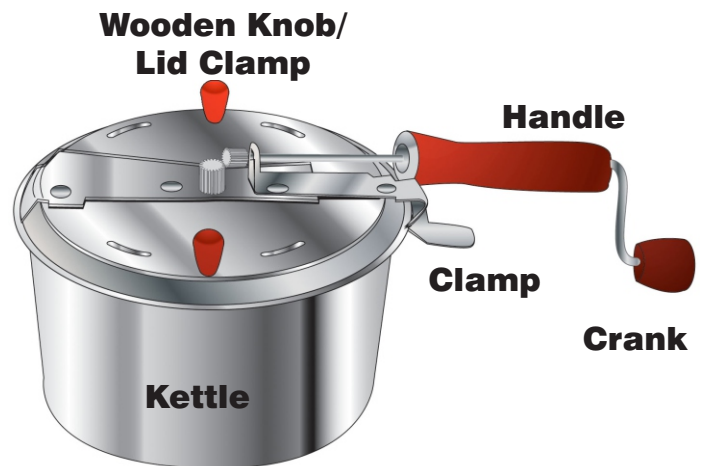

**Remember: Wash your popper before first use with mild soap and warm water and dry thoroughly! Residual water in the pot can cause popping and potential burns when heated with oil. Avoid putting any part of the popper in the dishwasher. Your popper is made of durable stainless steel that will last for years, so for longest life, wash carefully and by hand.**

## Stuff Your Popper With the Best Quality Popcorn Anywhere!

Be sure to check out our **Gourmet All-N-One Tri-Paks** for theater flavor popcorn taste anytime, anywhere! Using fresh popcorn is one of the most important keys to successful popping. Our U.S.A. grown premium popcorn is available in pre-measured portion packs complete with coconut oil and seasoning salt. Great convenience, taste and portability. No mixing, no mess and the best tasting popcorn anywhere...get some for your kitchen today!

Also try our selection of gourmet and organic kernels in bigger bags. Find a full line of poppers and popping supplies at [www.greatnorthernpopcorn.com](http://www.greatnorthernpopcorn.com).



# TWISTER STOVETOP POPPER

## USING YOUR STOVETOP POPPER

### Using Your Twister

Once the popper meets the heat your popping time should be around 3 minutes, though depending on the heat source, popping time may vary. As you become more familiar with your popper you will be able to adjust your heat source to approximate a 3 minute total popping time. Here are some general guidelines depending upon your stovetop:

- Flat top ranges are generally hotter than other heat sources, so set your flat top to medium-low/medium.
- Set your electric stovetop to medium/medium high.
- Set your gas stovetop burner to medium.
- The Twister is for household use only. To cook over a campfire or open flame, use our Pit Popper.

1. Add ingredients to the popper before placing on your stove, flat top or electric burner. Use about 2T. of oil to 1/2c. corn, though you may want less or more oil depending on your tastes.
2. Turn the Twister's handle steadily until the popping slows or stops or it becomes very resistant to turning.
3. Use the wooden knob on the left, or unlocked side, of the popper to pour popcorn into a bowl...season and serve immediately. **CAUTION!** Popcorn will be hot. We recommend using hot pads to avoid steam burns. Use caution when unloading your kettle.



### WARNING

Popper is extremely hot during and after use! Take care to keep hot popper away from children. **DO NOT TOUCH HOT POPPER. REMOVE TO A SAFE PLACE UNTIL COOL.**



**CAUTION:** Pot, oil and popcorn are extremely hot. Escaping steam can cause severe scalding. Children and many adults are naturally attracted to the excitement of the popping event. Keep children and others well back out of harm's way.