




### PARTS & ACCESSORIES

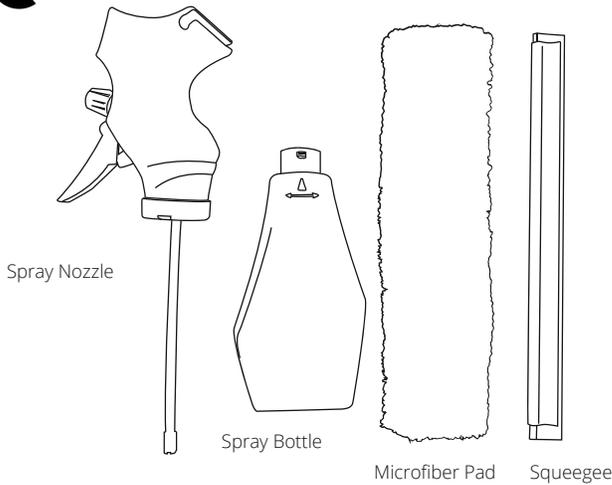


### IMPORTANT SAFEGUARDS & INSTRUCTIONS

- Carefully read all instructions before operating for the first time.
- This product is not intended for use by children or persons with limited physical, mental or sensory capabilities, or lack of experience and knowledge without the supervision or instruction concerning the use of the product by a person responsible for their safety.
- For use on hard sealed surfaces only. Do not spray cleaning solution on people or pets.
- Ensure the window cleaner with squeegee is properly assembled before use.
- Only use attachments or accessories provided and specified in this instruction manual.
- Store the product indoors in a cool, dry place.
- Do not fill the water tank with hot water. Distilled or filtered water is strongly recommended.
- Wipe clean with damp cloth.
- Microfiber pad is washable & reusable, hand wash recommended.




### ASSEMBLY & USE INSTRUCTIONS

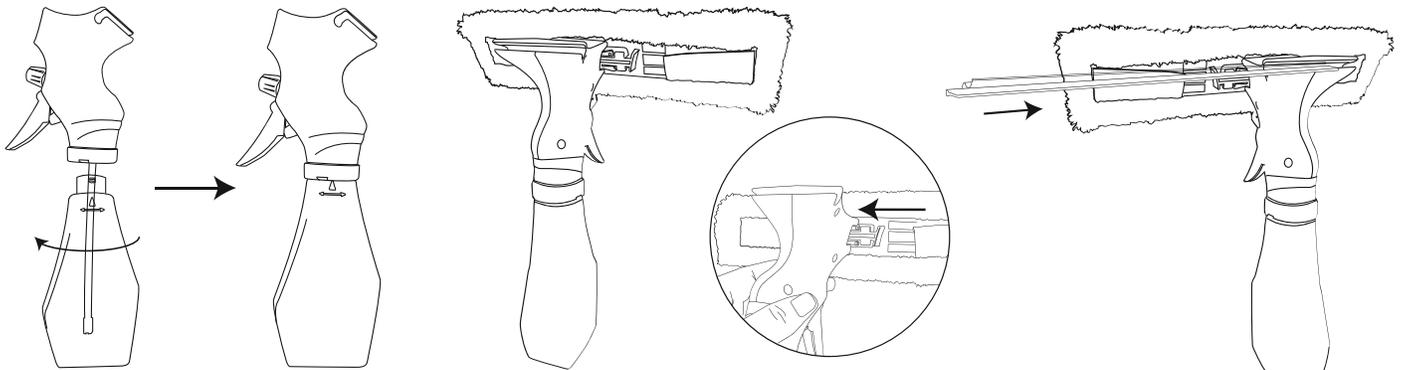

1. Open the bottle by turning the spray nozzle counterclockwise. Add your own cleaning solution. Close and seal the bottle by turning the spray nozzle clockwise.


2. Insert the microfiber pad attachment latch into the matching latch opening above the sprayer.

3. Insert the squeegee by sliding the aluminum squeegee holder into the corresponding slot of the nozzle. The curved aluminum edge should be facing up.

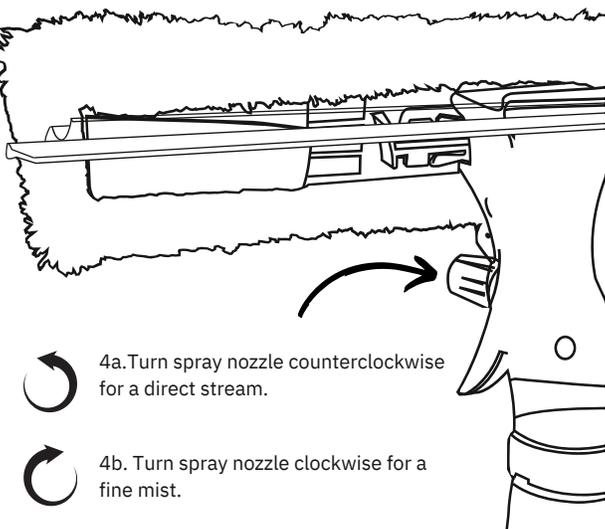

4a. Turn spray nozzle counterclockwise for a direct stream.

4b. Turn spray nozzle clockwise for a fine mist.

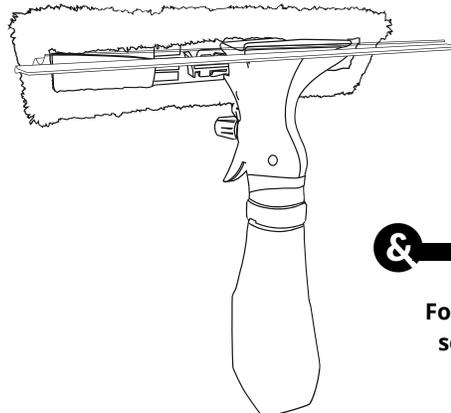

5. Now it's ready to use!



CONNECT WITH US

For cleaning tips, FAQ, customer service and replacement parts

[www.trueandtidy.com](http://www.trueandtidy.com)

1-888-293-3492