

Purchased your product online?

We would really appreciate it if you can share your experience with others by reviewing our product on the website from which you purchased.

Owner's Manual


Radiant Jeweled Colorful Metal Blade Windmill Spinner Garden Stake



CONTENTS

Contents	1
What's Included.....	2
Features.....	3
Specifications.....	3
Assembling & Using Your Product.....	4
Warranty.....	7


WHAT'S INCLUDED

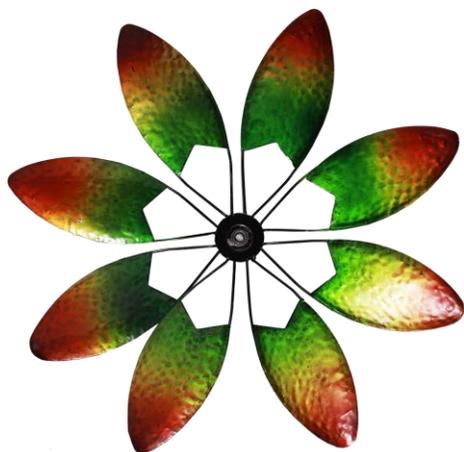

Rear Spinner
x1



Front Spinner
x1

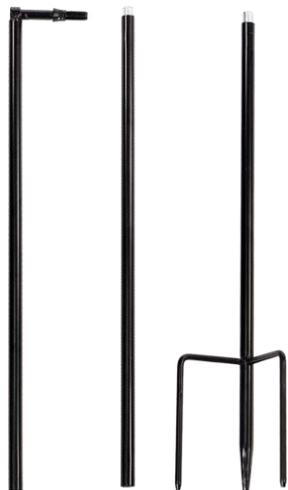

Stake
x3



Connector
x1



Jewel Nut
x1

LIMITED WARRANTY INFORMATION

We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

- Water Damage**
 We are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage, is considered negligence, and will not be covered under this warranty. The use of "hard water," and/or caustic cleaners, can affect the painted or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility to us.
- Paint & Color (Retention and/or Loss)**
 The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading, within the first year from date of purchase, with the above exclusion.
- Procedure/Service**
 Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that is not an option, you can contact us. When contacting us, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. **Item is covered under one year limited warranty from the date of purchase. When requesting replacement parts due to a warranty claim after 30 days of purchase, credit card information will be requested for shipping charges.**
- Not Covered Under Warranty**
 The limited warranty will NOT cover cases of damages due to:
 - Damages caused in Transit
 - Inadequate care and/or neglect
 - Environmental and/or natural elements
 - Immersion in water, unless specified
 - Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with

ASSEMBLING & USING YOUR PRODUCT

Unpack all components carefully. Please check to ensure all parts have been removed from the packaging.

1. Connect the 3 stakes together with the “L” shaped stake on the top “straight” piece in the middle and the 3 pronged stake at the bottom. These will screw together.



2. Now slide the Rear Spinner over the threaded top piece of the stake. Followed by the Connector. Tighten the Connector very tight.



3. Finally add the Front Spinner over the threaded Connector followed by the Jeweled Nut. Make sure to turn the threaded Connector toward the Front Spinner to tightly secure the components together. *NOTE: After a certain amount of time, connectors may need to be re-tightened, as the frequent spinning may cause them to become loose.*



4. Congratulations, your Spinner garden Stake is now complete. Secure into the ground and enjoy.


NOTE: *If blades hit each other when spinning, they may have been moved in shipping. Lightly bend each blade outward to resolve.*



AVAILABLE

- Americana UV Acrylic Sealer
Provides protective clear coating for all painted surfaces.

FEATURES

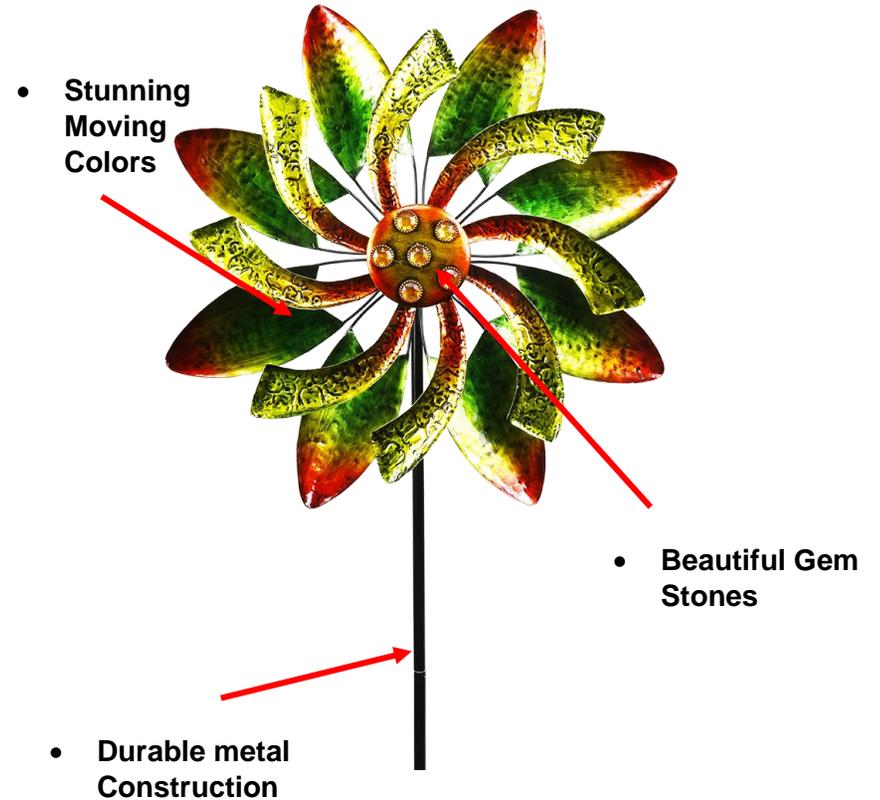

SPECIFICATIONS

Dimensions.....22”L x6”W x64”H