
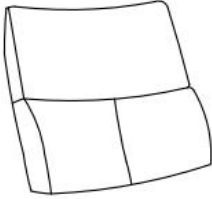
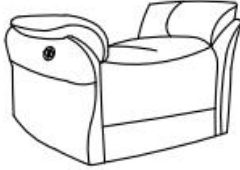


# Assembly Instructions


Your recliner comes packaged in one box. Carefully remove all of components from the packaging and set aside for assembly.

**CAUTION:**  
**DO NOT** use any sharp objects to open plastic wrapped components as damage to product or components may result.

## Package Contents

|   |   |  |
|---|---|--|
|  |  |  |
| A 2*Studded Border  | B 1*Seat Back   | C 1* Seat  |


### Step 1

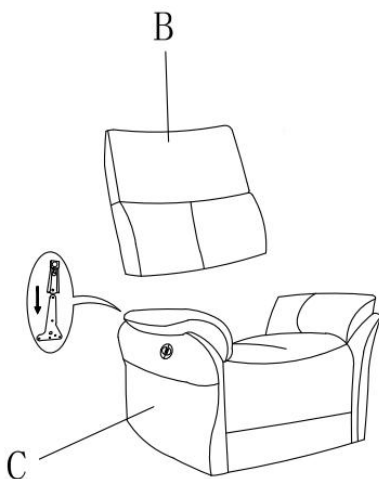

#### ATTENTION!!

Ensure the Seat Back slides down to the bottom of the Chair Seat's metal grooves. Or the seat back will be tilting.

### Step 2

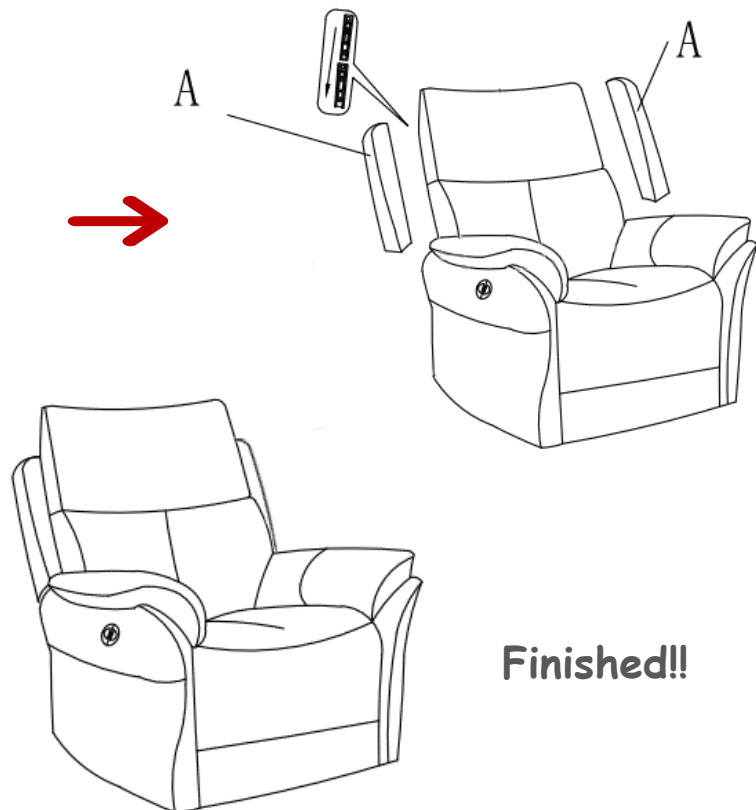

**Finished!!**

## Warnings

1. Please check if the components of the chair are all included and can be used normally.
2. Please DO NOT sit on the armrests and footrest to eliminate the risk of tipping over.
3. Never sit on the footrest when it is open, even a child.
4. If the sofa is damaged or doesn't match the website product, please send clear pictures of the product and label of the carton to our service team, and we'll help you to solve the problem.
5. When you pull the switch open, but the footrest does not open, please check if the buckle line at the bottom of the sofa is loose.
  - ① Lay down the recliner chair. Find the buckle line which connects with the switch.
  - ② Put the buckle cable into the inner hole of the iron piece.
  - ③ Turn back the iron piece.
6. If the chair still doesn't work, please feed the information back to the customer service in time. We will help solve the problem for you as soon as possible.
7. If you have any questions with the product, please contact us.

