



Vertical Gauge
Read lower portion of gauge. Reads OK or ADD for propane levels when positioned vertically.



Horizontal Gauge
Read upper portion of gauge. Reads Empty to Full when positioned horizontally.



Demo shows both propane tanks with no liquid propane

Note: Horizontal gauge will not read correctly when tank is positioned vertically and vertical gauge will not read correctly when tank is positioned horizontally.