

 
DY176说明书2025.4.24

材质：普通书纸

印刷：黑白双面印 材料：80G铜版纸尺寸：105mm*148mm





Cautions

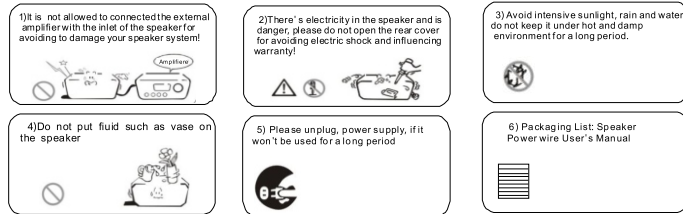

Please charge the machine before use if it is not used for over 1 month

Trouble Shooting

  - **No electricity**
First check that the power switch is on (switch is in a state of "ON" to open)
If the above situation, Please turn off the power on Connect the power cord to the machine after charging, or plugged in, let the machine work while charging
- **No sound when playing music**
A, please check whether the RCA audio line right connected to the machine and the sound source.
B, please check whether the volume was kept to a minimum.
C, whether it is right choice signal source.
D, please check your audio source if there is a fault.
- **Memory card input can not read the mobile disk**
A, please check your mobile plate is connected with the machine.
B, please check your mobile disk for digital music
C, please check your mobile disk if there is a fault
D. remove the U disk inserted again.
E. first insert U disk boot after normal again.
- **Noise of speaker**
Speaker has the property of low noise, sometimes the background noise of the music player and computer sound card is several times higher than that of speaker, therefore, please unplug the audio wire of the speaker when check, and the noise of the speaker shall not hear at 0.5m away.
- **Antimagnetic of speaker**
The speaker adapts strong magnetic speaker, it is possible to cause magnetic field interrupt or magnetization if put the speaker close to the monitor. Then you should

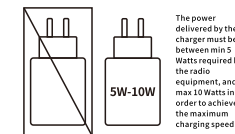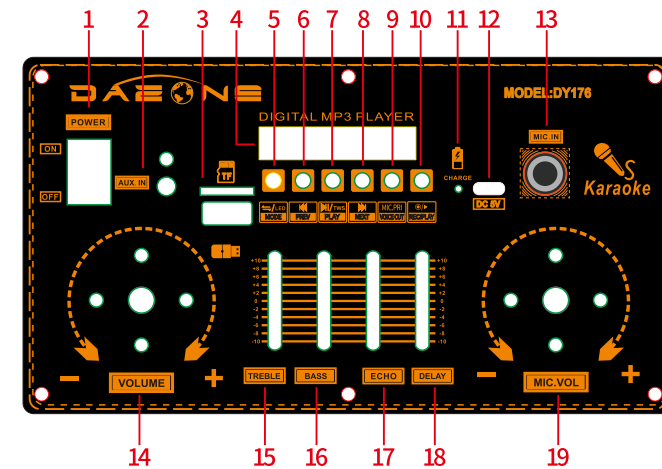

TWS OPERATION

You can connect these two machines through TWS function when you have two machines with same model.

1. Connect one machine to the other machine via BT, the current machine will be set as the host.
2. Turn on the other machine switch to BT mode, press and hold the "TWS" button on the screen and then the two machines will be connected automatically will show that the connection is complete.
3. Play, pause, next track and previous track control can be carried out by two units. Turn the volume knob on each unit to adjust the volume individually.
4. When to exit the TWS function, press and hold the TWS button on the second unit to disconnect.

- | | |
|-----------------------|-------------|
| 1. POWER | 11. CHARGE |
| 2. AUX.IN | 12. DC 5V |
| 3. TF/USB | 13. MIC.IN |
| 4. DIGITAL MP3 PLAYER | 14. VOLUME |
| 5. MODE/LED | 15. TREBLE |
| 6. PREV | 16. BASS |
| 7. PLAY/TWS | 17. ECHO |
| 8. NEXT | 18. DELAY |
| 9. MIC.PRI/VOICE OUT | 19. MIC.VOL |
| 10. REC/PLAY | |

In radio mode:

- * Long press  button to scan the previous radio station automatically
- * Short press  button to fine tune the current radio station forward
- * Long press  button to scan the next radio station automatically
- * Short press  button to fine tune the current radio station backward
- * Long press  buttons to scan and store the whole band radio automatically
- * Press  buttons continuously to switch and select each radio station

Charging indicator:

- Please plug in the power cable to charge the speaker and the charge indicator is on at the same time.
- Please power off the speaker while it's charging.
- Charge time is about 4 hours.
- 5mAh charging current to protect the battery
- Please plug in the power cable to power on the speaker if the battery is damaged.