

INSTALLATION

Product Manual



 
IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.





AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

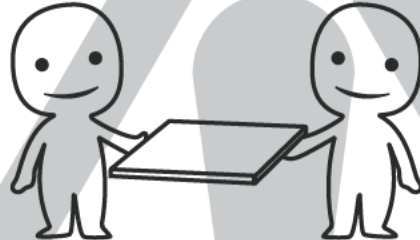

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

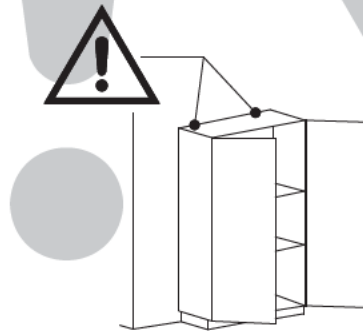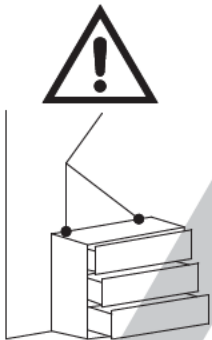

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

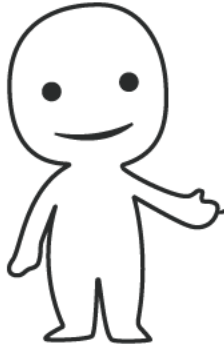

Please prepare the following tools

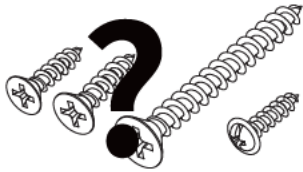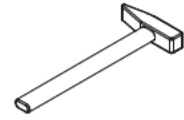   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Ax6



CRA0635A

Bx6



CRB1595A

Cx22



CRF0630A

Dx20




CRC0540A

Ex24



CRD3514A

 Fx4



DGA861A

Gx2

G-1



G-2



Hx8



Ix8



CRE0312A

Jx2

J-1



J-2



J-3



Kx2

K-1



K-2



K-3



Lx2



Mx24




Nx16



 Ox5



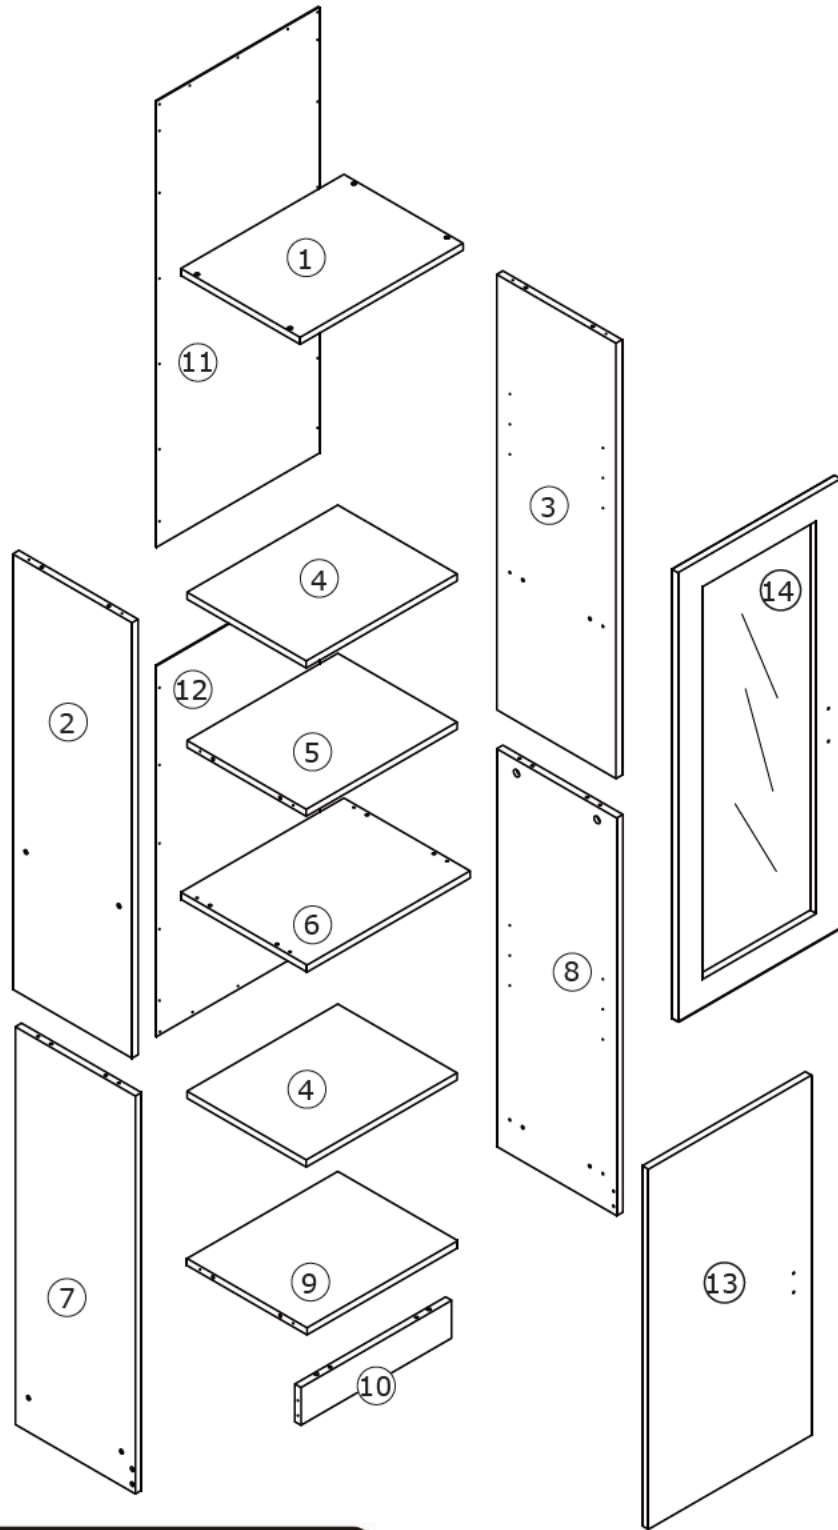

⚠ WARNING

 


Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.





*This is a permanent label.
Do not remove!*

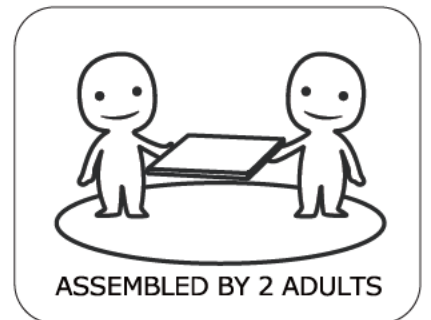


1

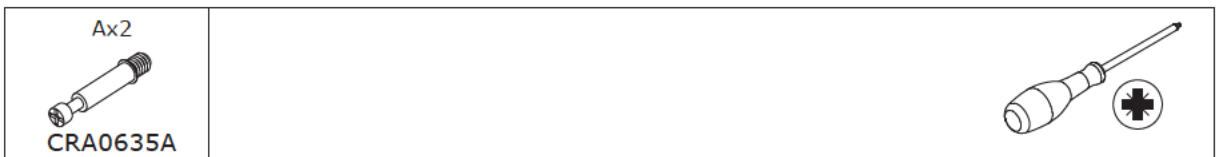 

 
 
Insert quickfit screw(A) into corresponding holes in No.9 plate with a screwdriver as shown.

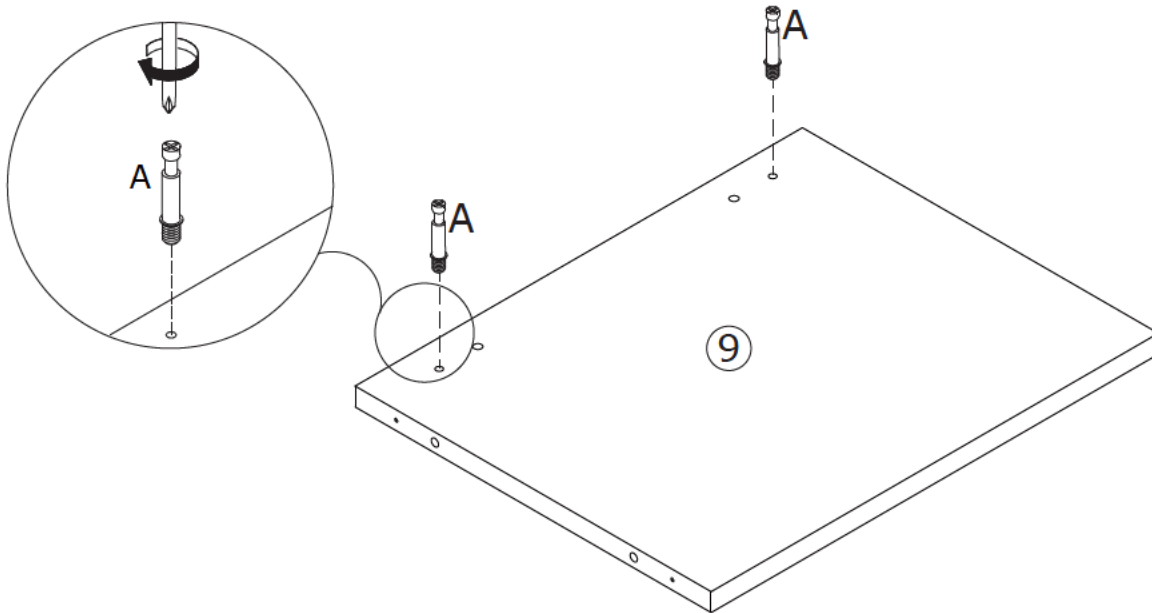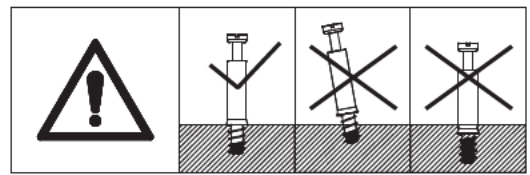


2

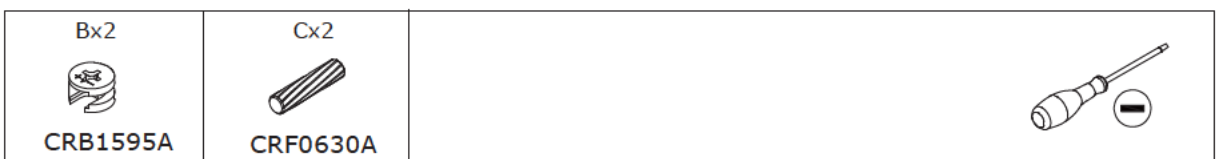 

  
Connect No.10 with No.9 plate using wooden dowel(C) and turn cam lock(B) clockwise to tighten as shown.

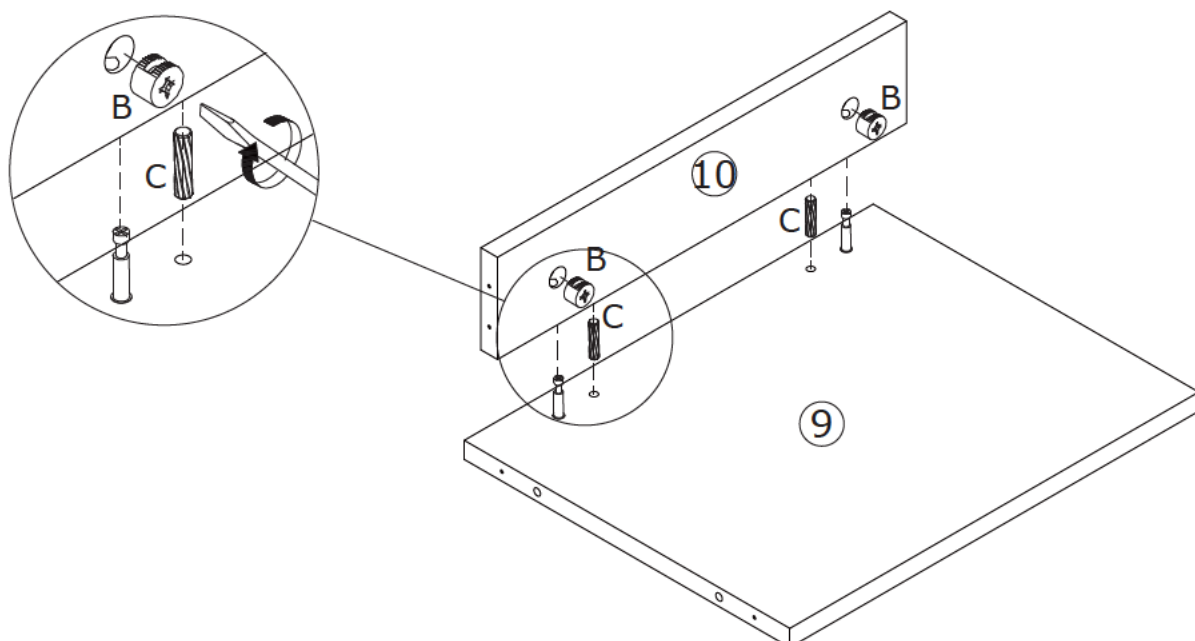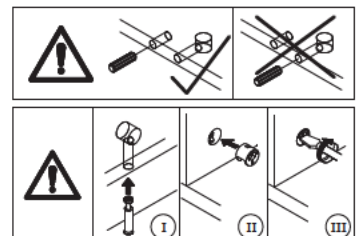


3

 Cx2 CRF0630A	Dx4 CRC0540A	Nx4	
-----------------	-----------------	-----	---

 
Connect the component with No.8 plate using wooden dowel(C), and fix with screw(D) as shown. Use sticker(N) to cover screws.

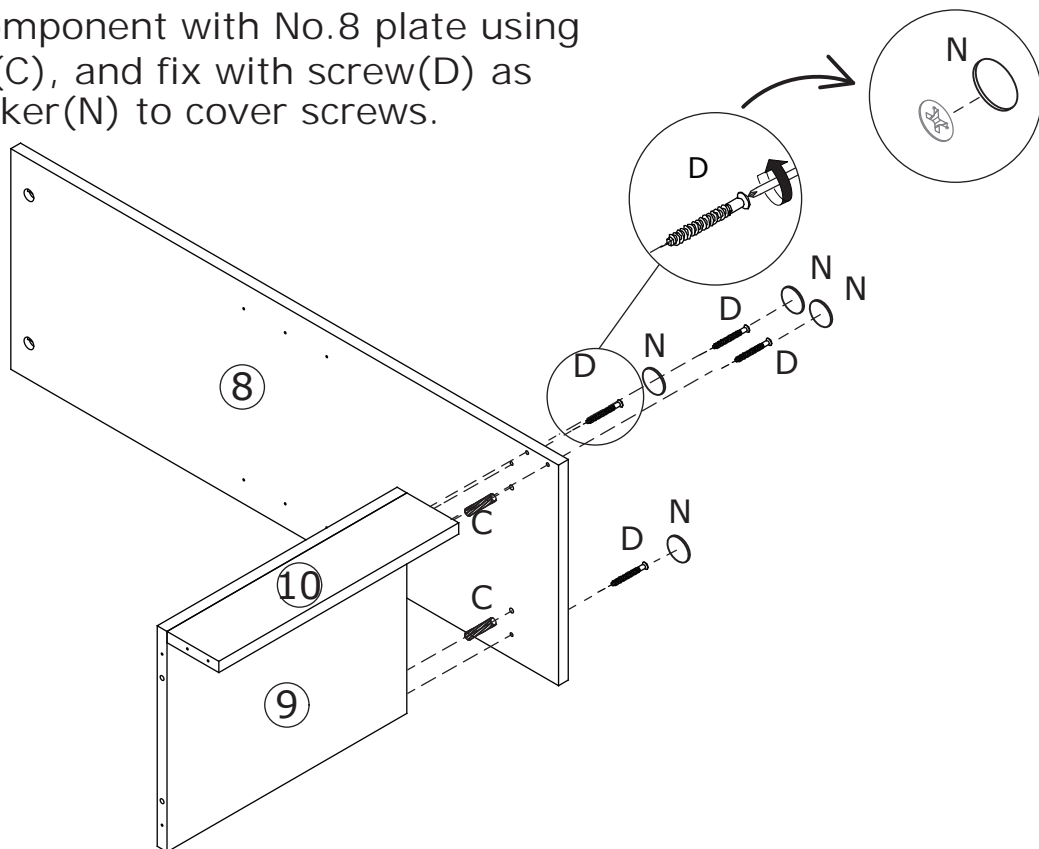

4

 Cx2 CRF0630A	Dx4 CRC0540A	Nx4	
-----------------	-----------------	-----	---

 
Connect No.7 plate with the component using wooden dowel(C), and fix with screw(D) as shown. Use sticker(N) to cover screws.

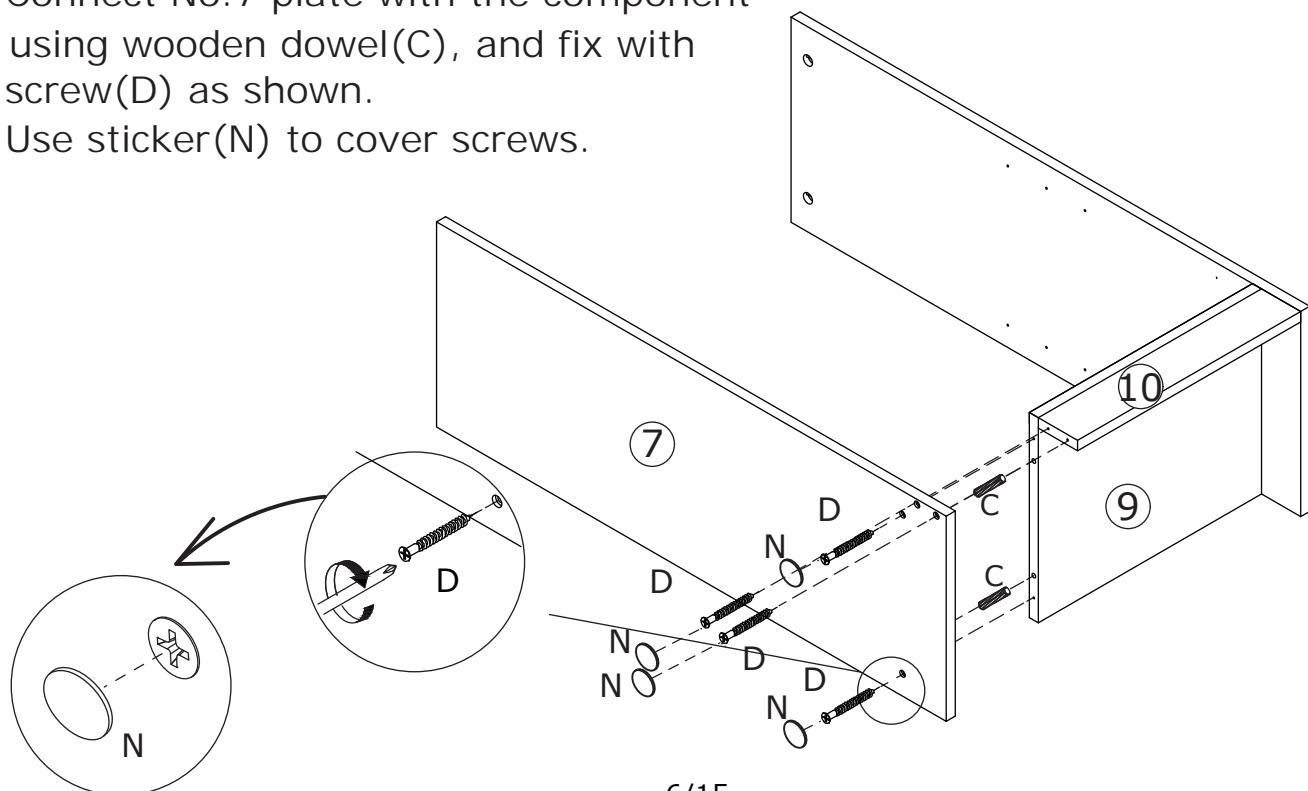


5



 
Knock foot peg(O) into the bottom as shown.

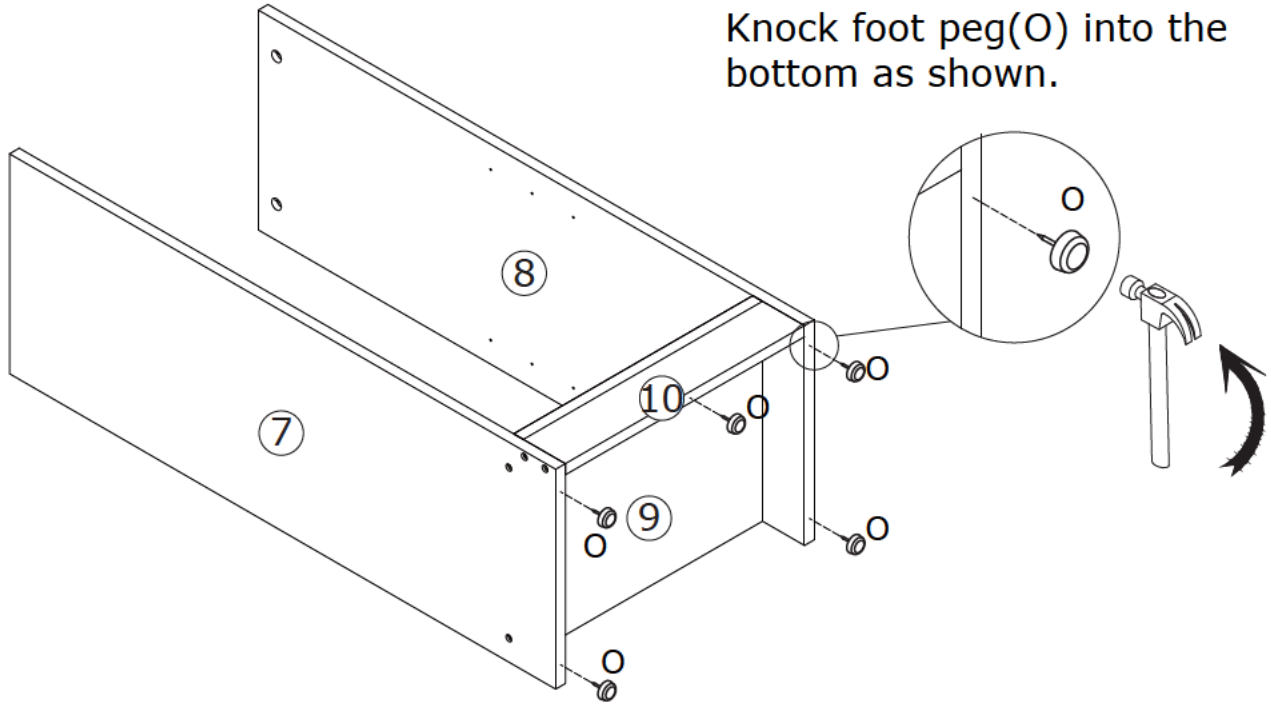


6

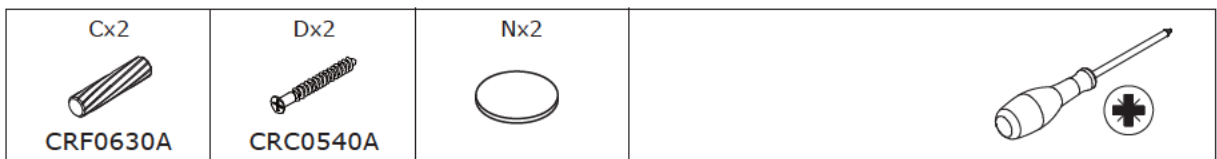 

 
Connect No.5 plate with No.2 using wooden dowel(C), and fix with screw(D) as shown. Use sticker(N) to cover screws.

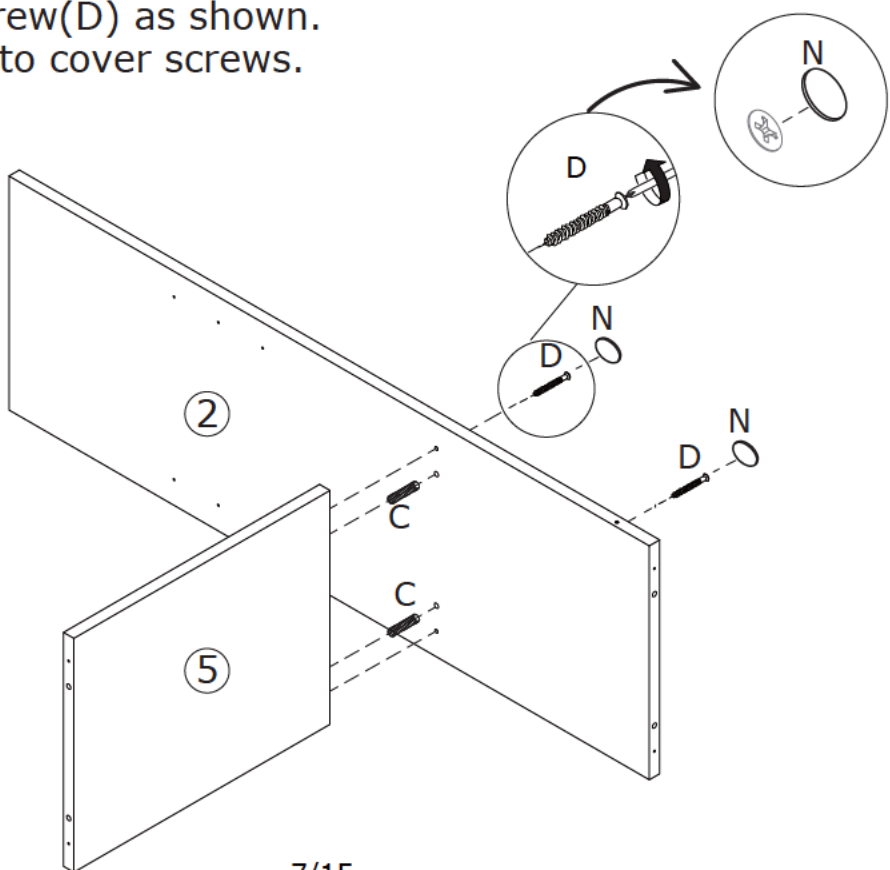

7

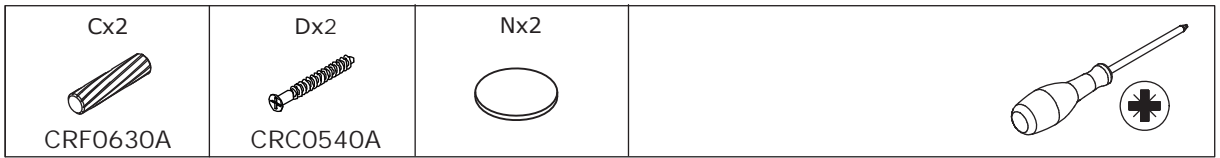 


 
Connect No.3 plate with No.5 using wooden dowel(C), and fix with screw(D) as shown. Use sticker(N) to cover screws.

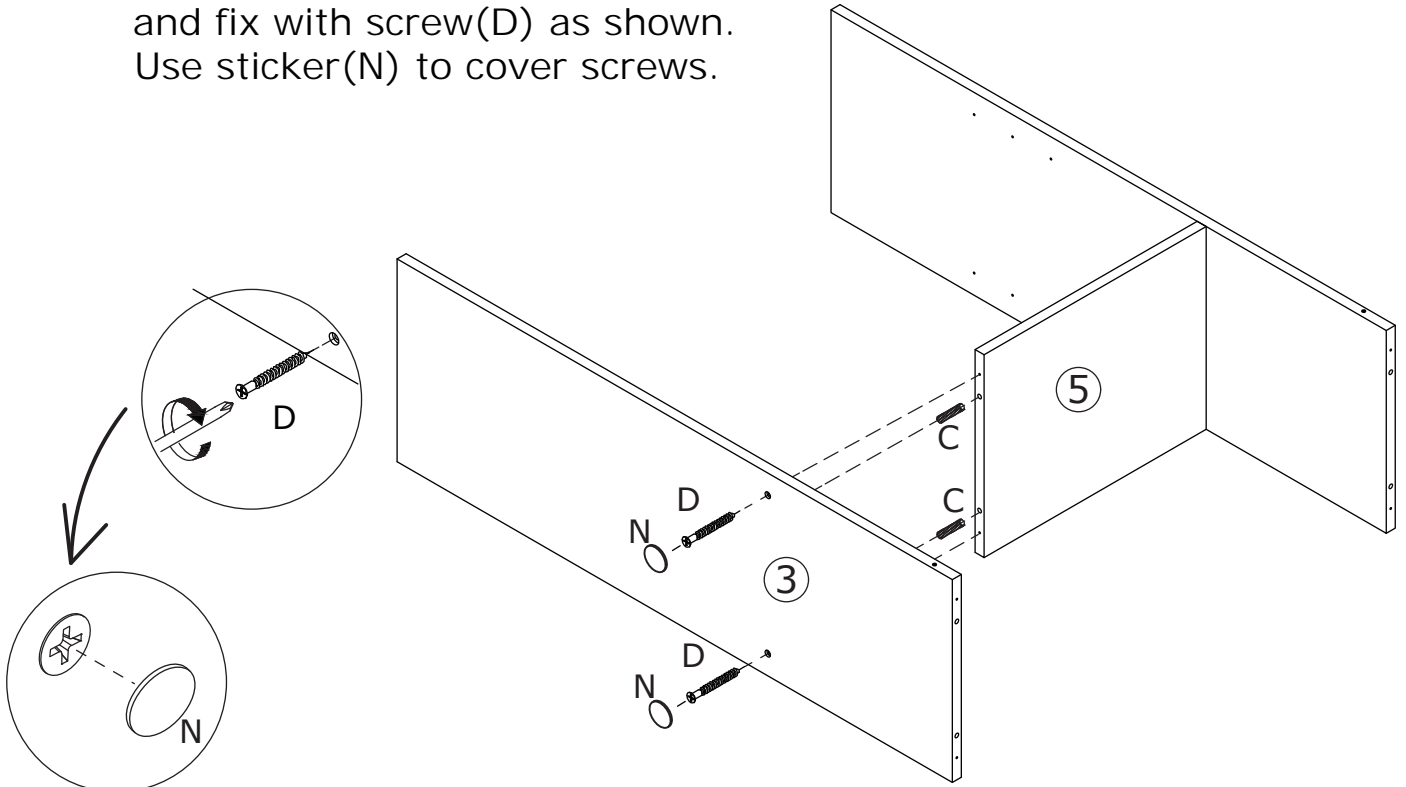

8



  
Insert quickfit screw(A) into corresponding holes in No.6 plate with a screwdriver as shown.

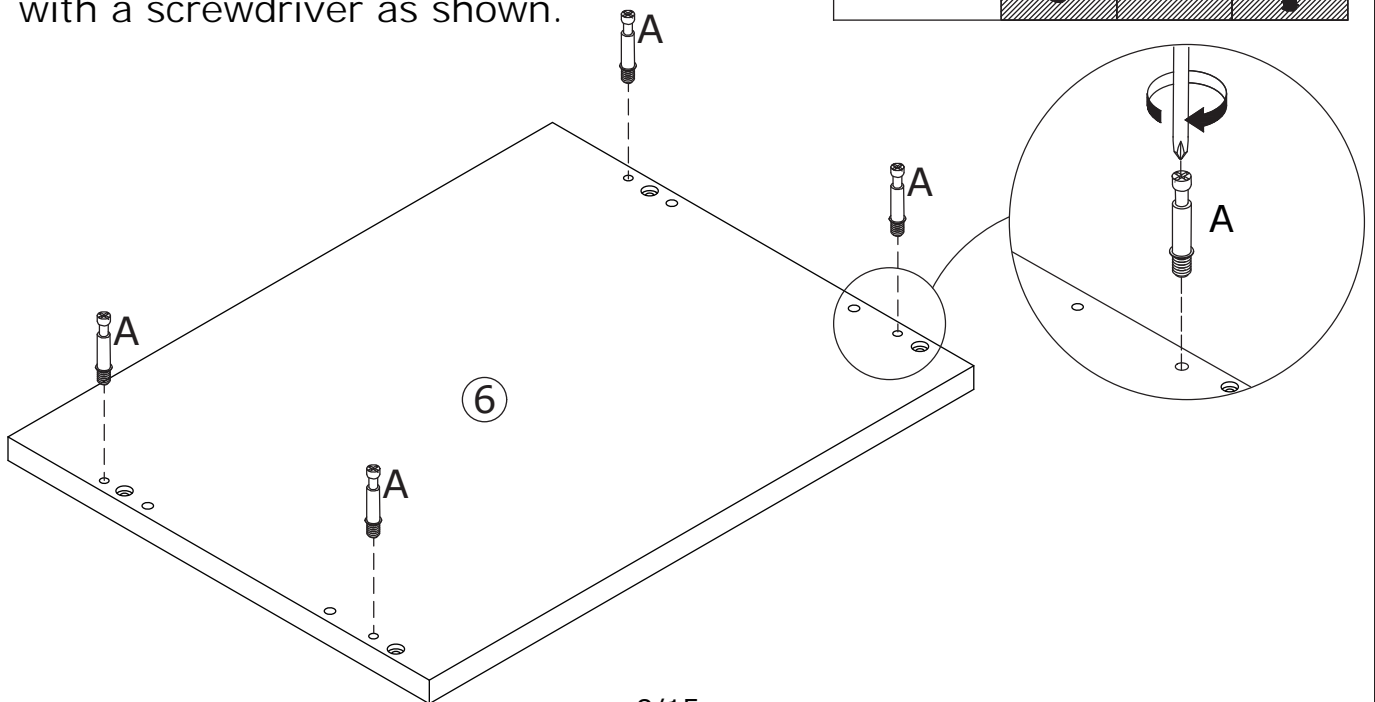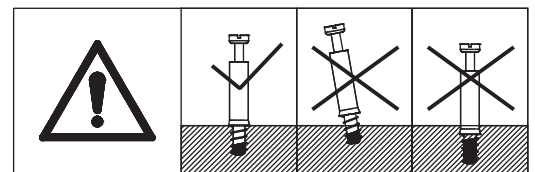


9



 
Attach No.6 to No.2 and No.3 plate using wooden dowel(C) and fix with screw(D) as shown.

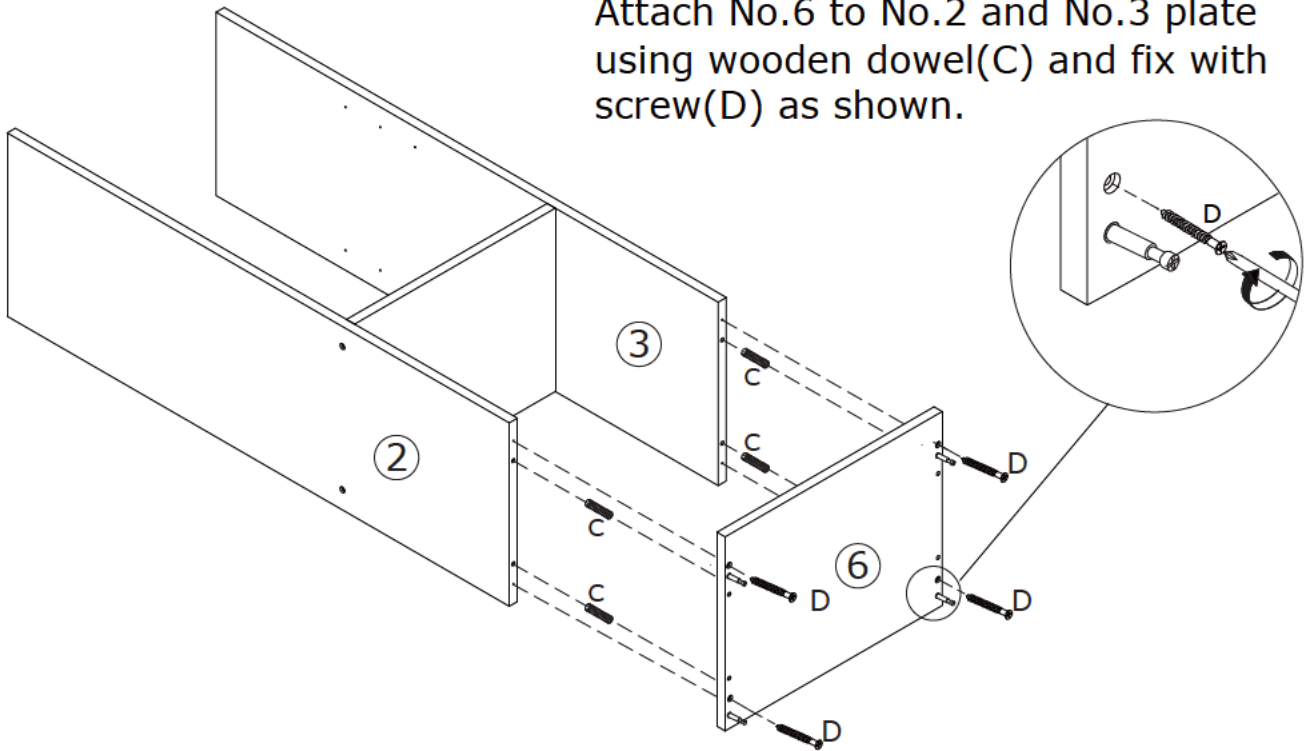

10

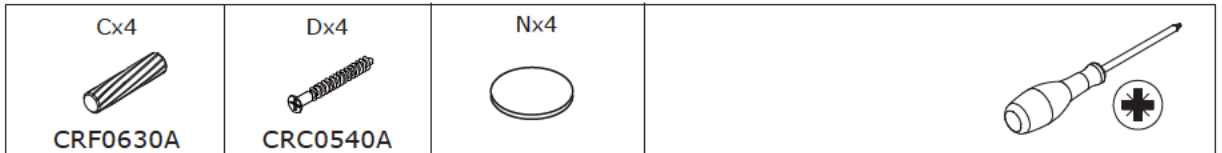 



 
Cover No.1 to No.2 and No.3 plate using wooden dowel(C) and fix with screw(D) as shown. Use sticker(N) to cover screws.

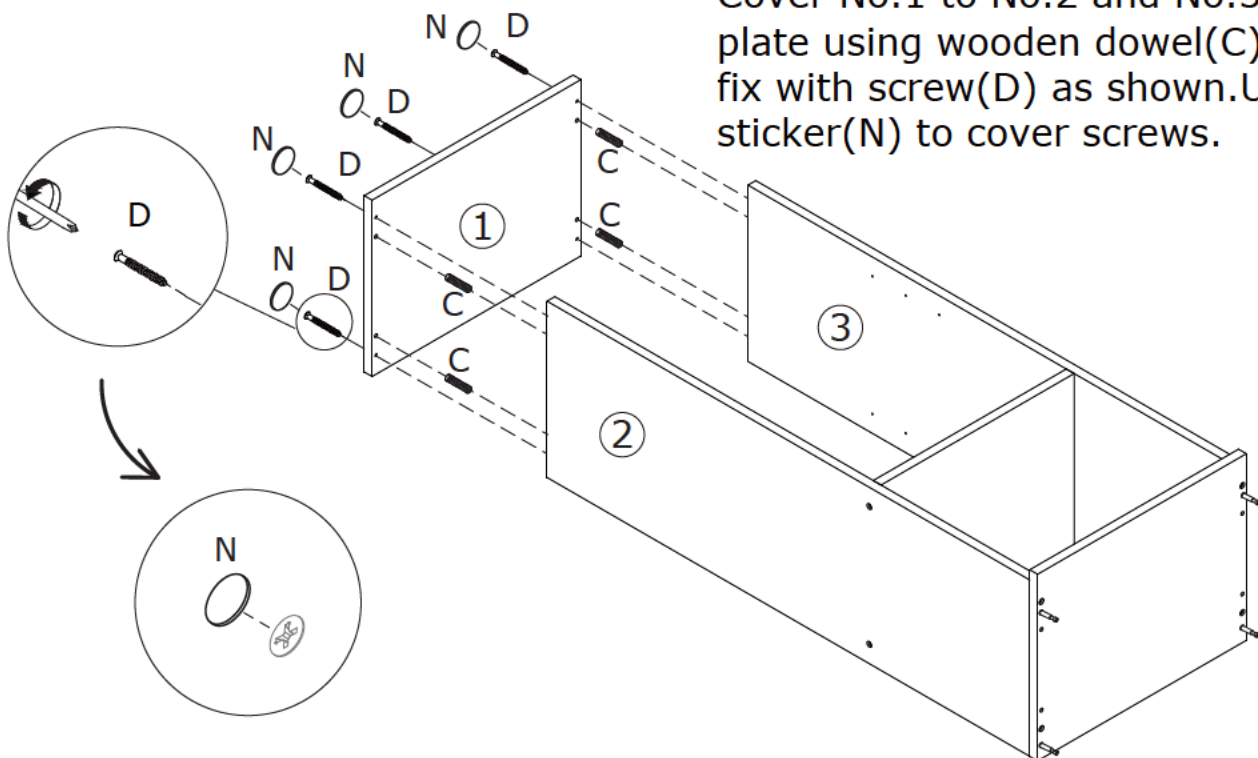


11

Bx4  CRB1595A	Cx4  CRF0630A	
--	--	---



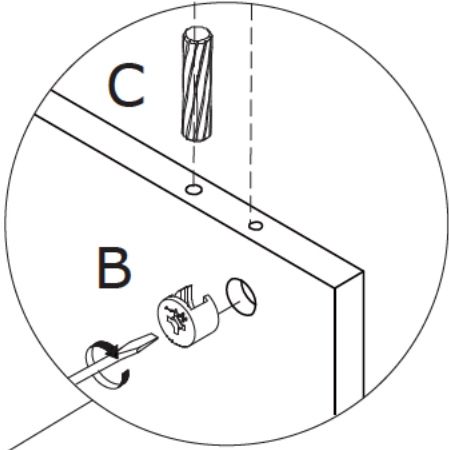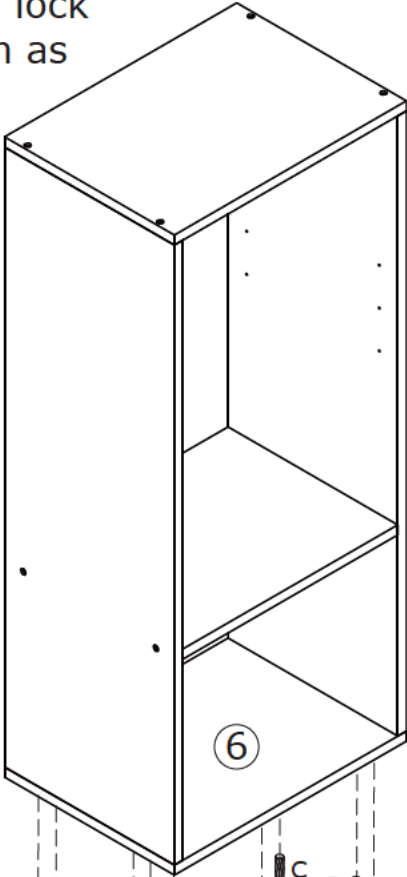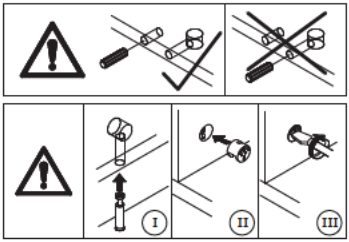   


  
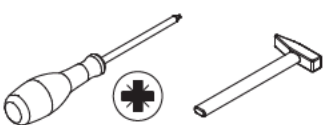 
Connect the two assembled components with wooden dowel(C) and turn cam lock (B) clockwise to tighten as shown.

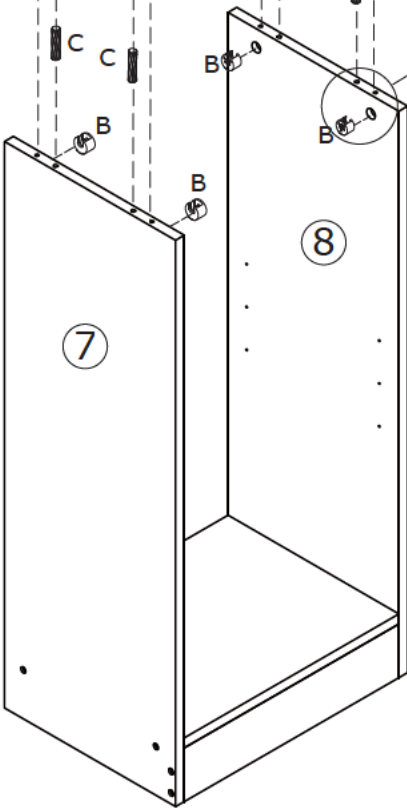


Recommend more than 2 people to assemble!



12

<p>Ix8</p>  <p>CRE0312A</p>	<p>Kx2</p> <p>K-1  K-2  K-3 </p>	<p>Lx2</p> 	<p>Mx24</p> 	
--	---	--	--	---

 Fix No.11 and No.12 back plate with screw(I) and nail(M) as shown. Fix part(K-1) to No.11 plate with washer(K-2) and screw (K-3) .

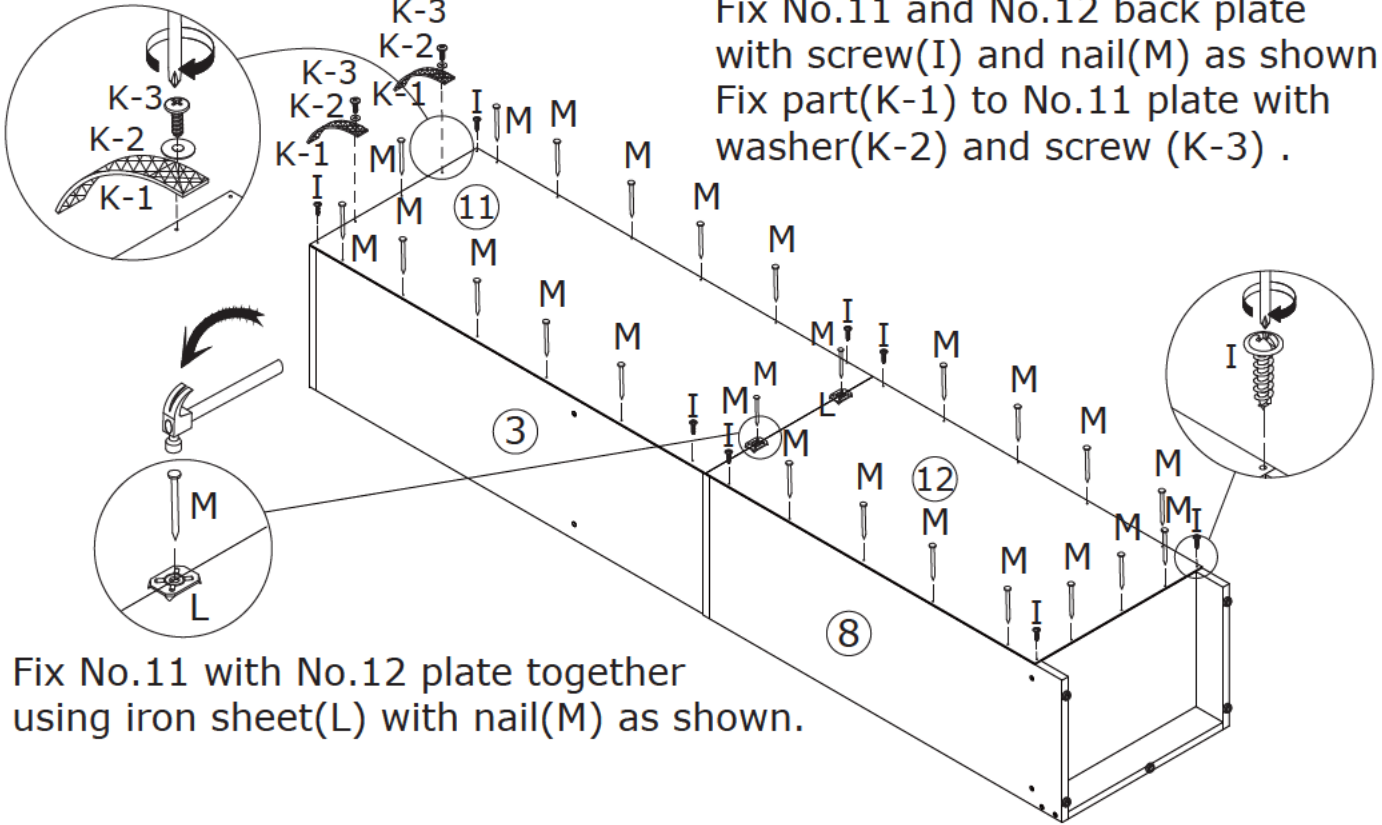


 Fix No.11 with No.12 plate together using iron sheet(L) with nail(M) as shown.






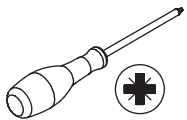 
13
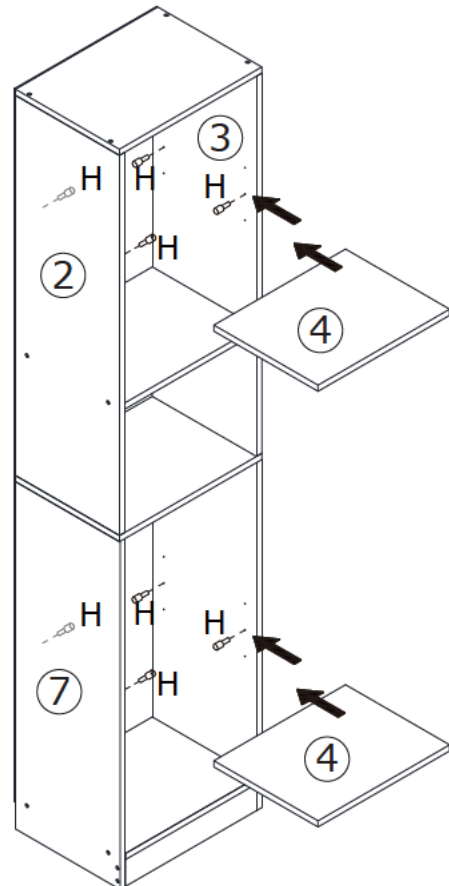
<p>Hx8</p> 	
--	--

 
Insert part(H) into No.2, No.3, No.7 and No.8 plates. Put No.4 shelf in.








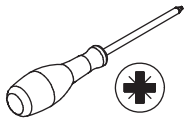 
14

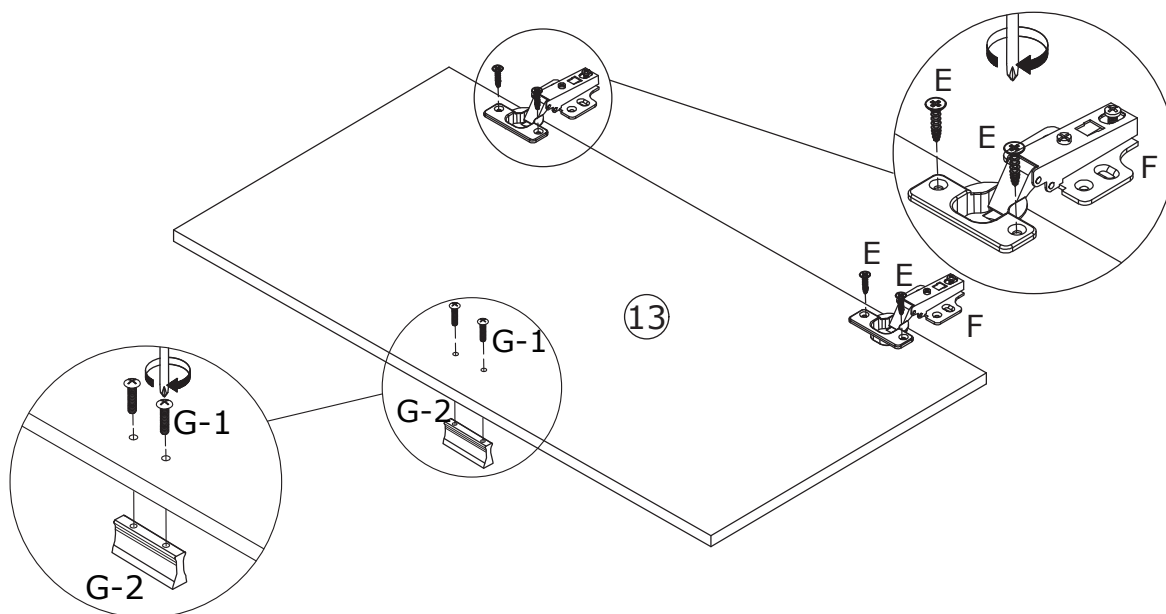Ex4  CRD3514A	Fx2  DGA861A	Gx1 G-1  	G-2 	
--	---	--	--	---


Fix hinge(F) to No.13 plate with screw(E) as shown. Fix handle(G-2) with screw(G-1).



15

Ex4  CRD3514A	Fx2  DGA861A	Gx1 G-1  	G-2 	
--	---	--	--	---

 Fix hinge(F) to No.14 plate with screw(E) as shown. Fix handle(G-2) with screw(G-1).

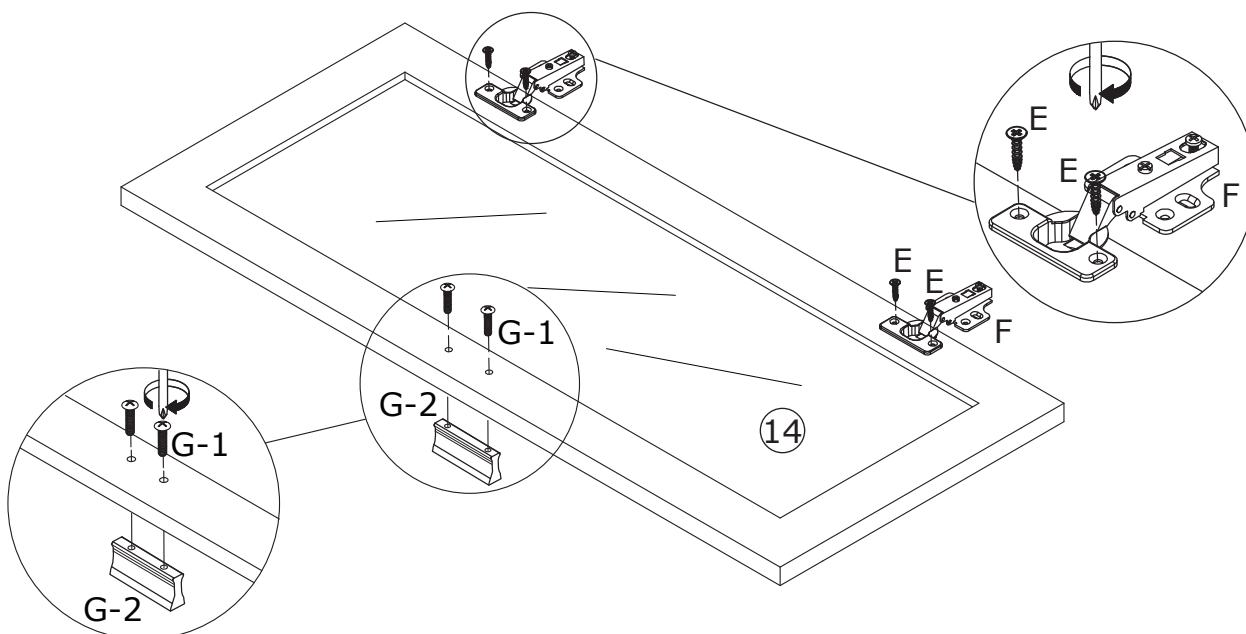


16


Ex16





 CRD3514A

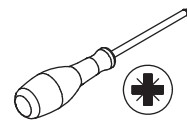

   Attach No.13 plate to No.7; No.14 plate to No.2 by fixing hinge with screw(E) as shown.

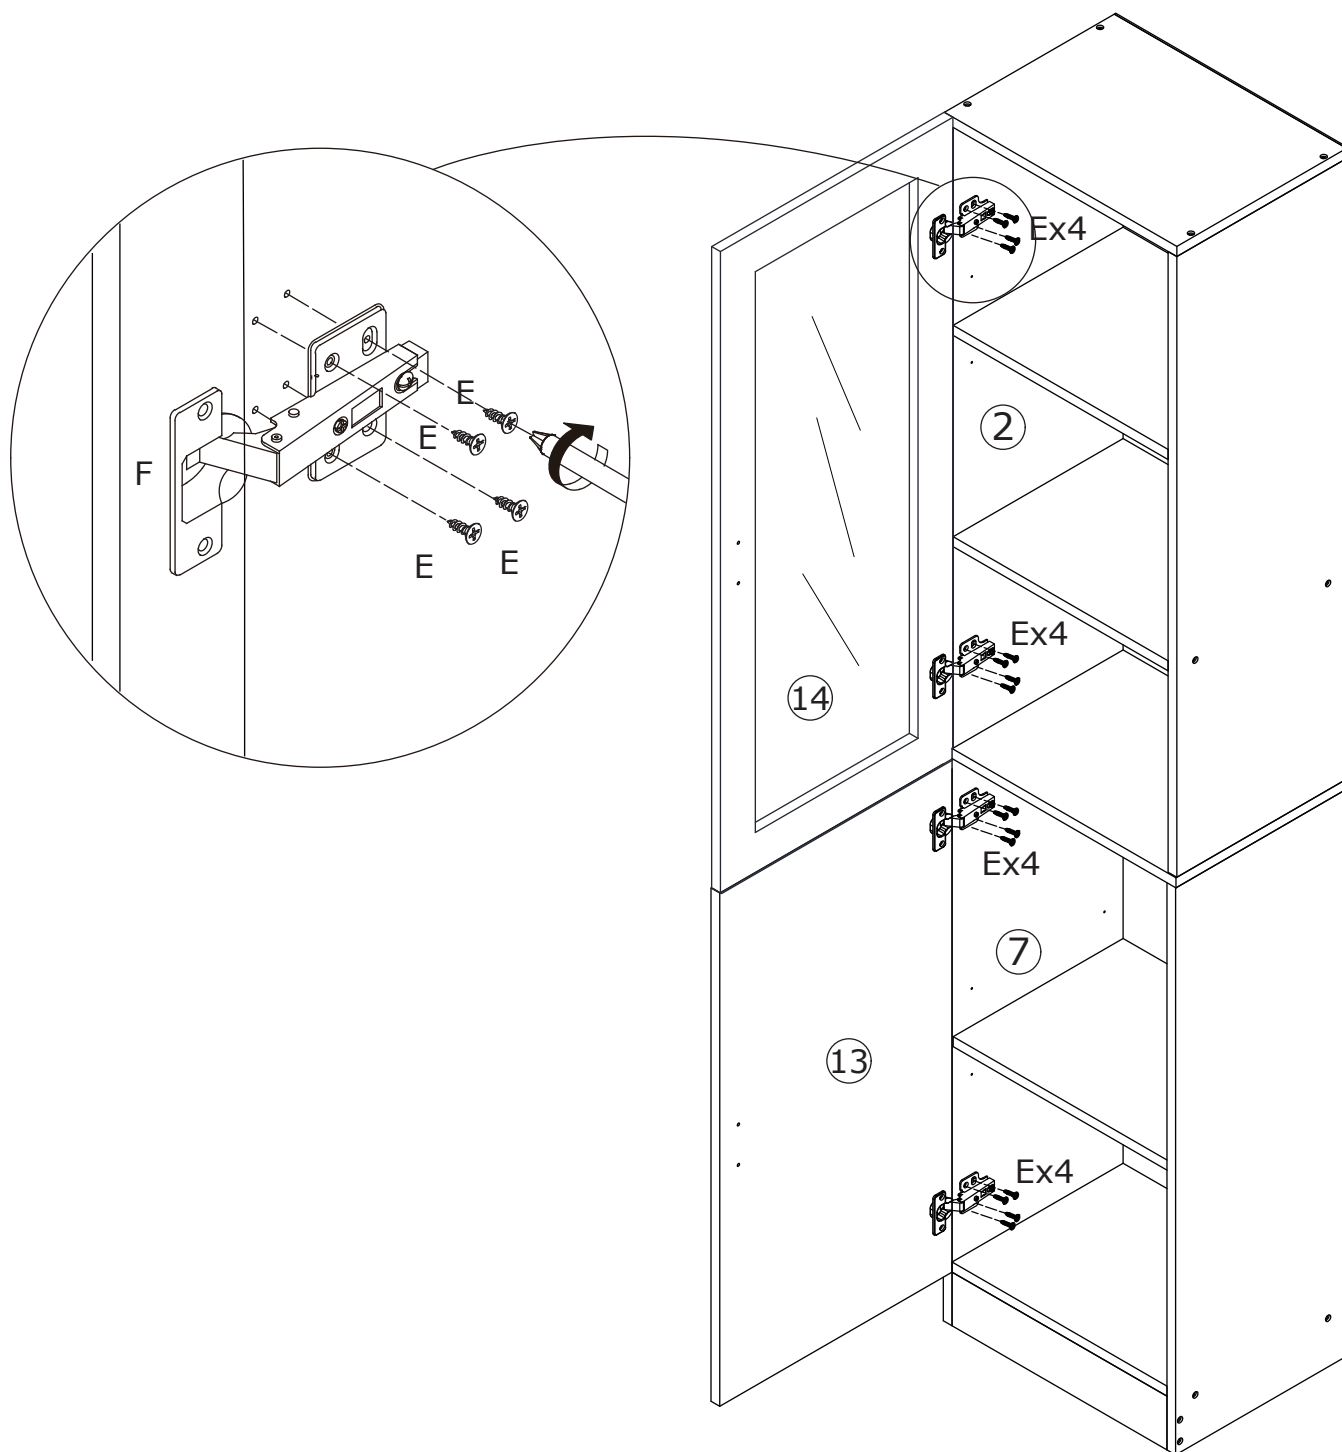


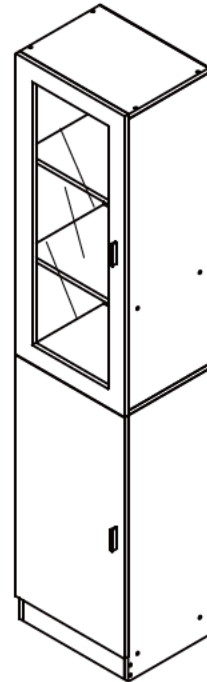


If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>

 If there is misalignment after you install, adjust the screw to the best condition

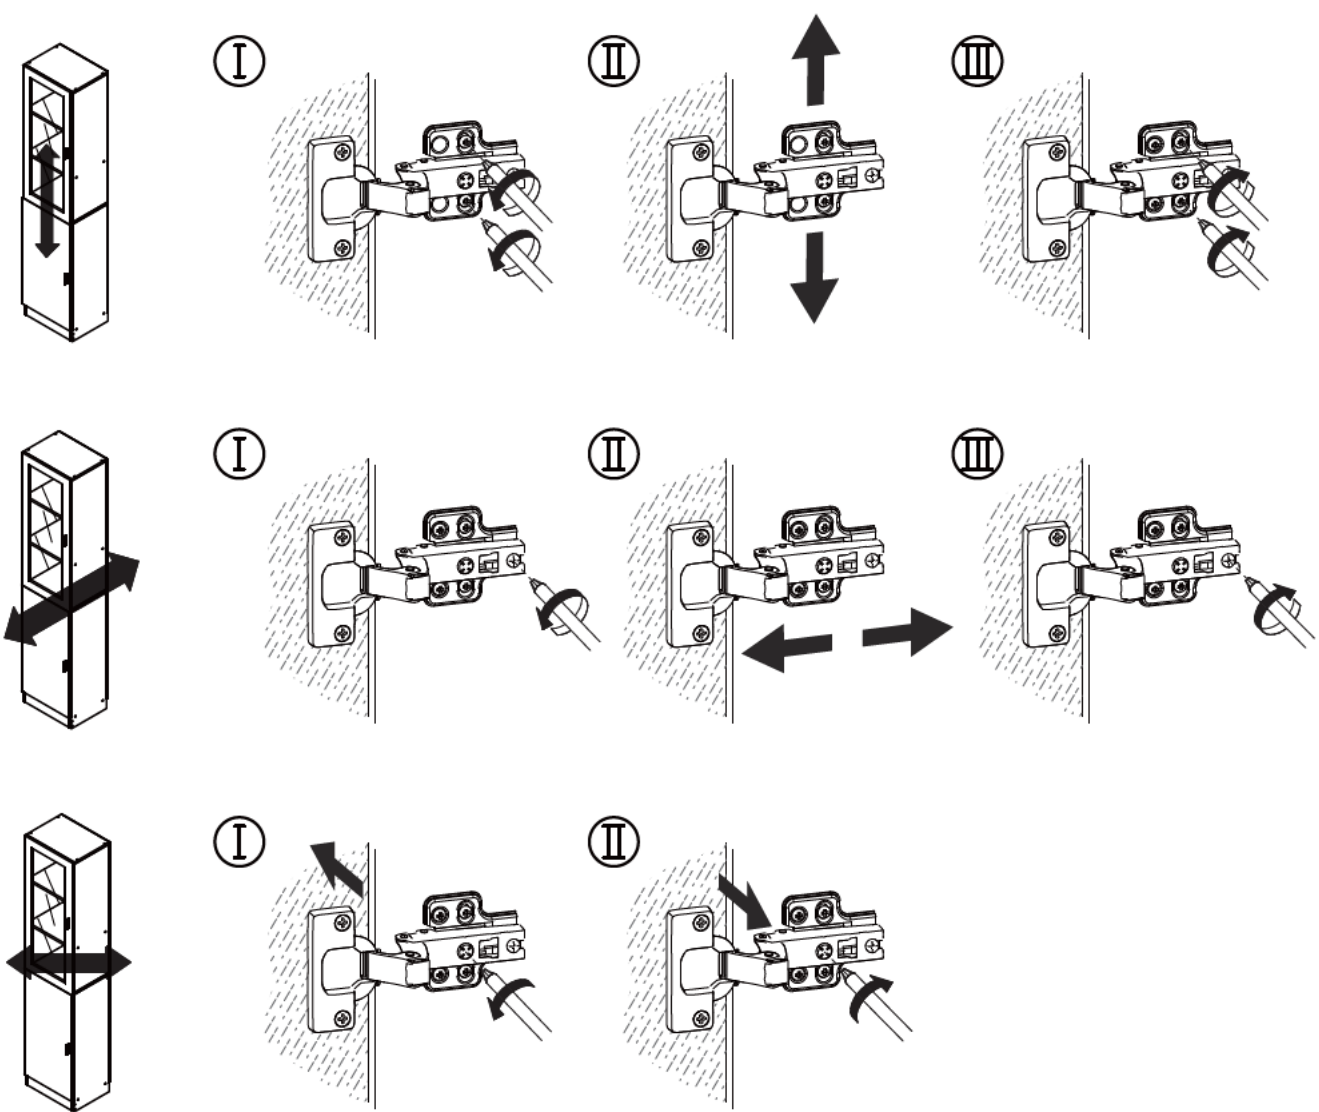

18

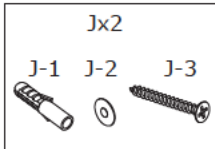 

WALL

I x2

WALL +

 
drilling hole
Ø6x30mm

II x2

WALL

J-1

III x2

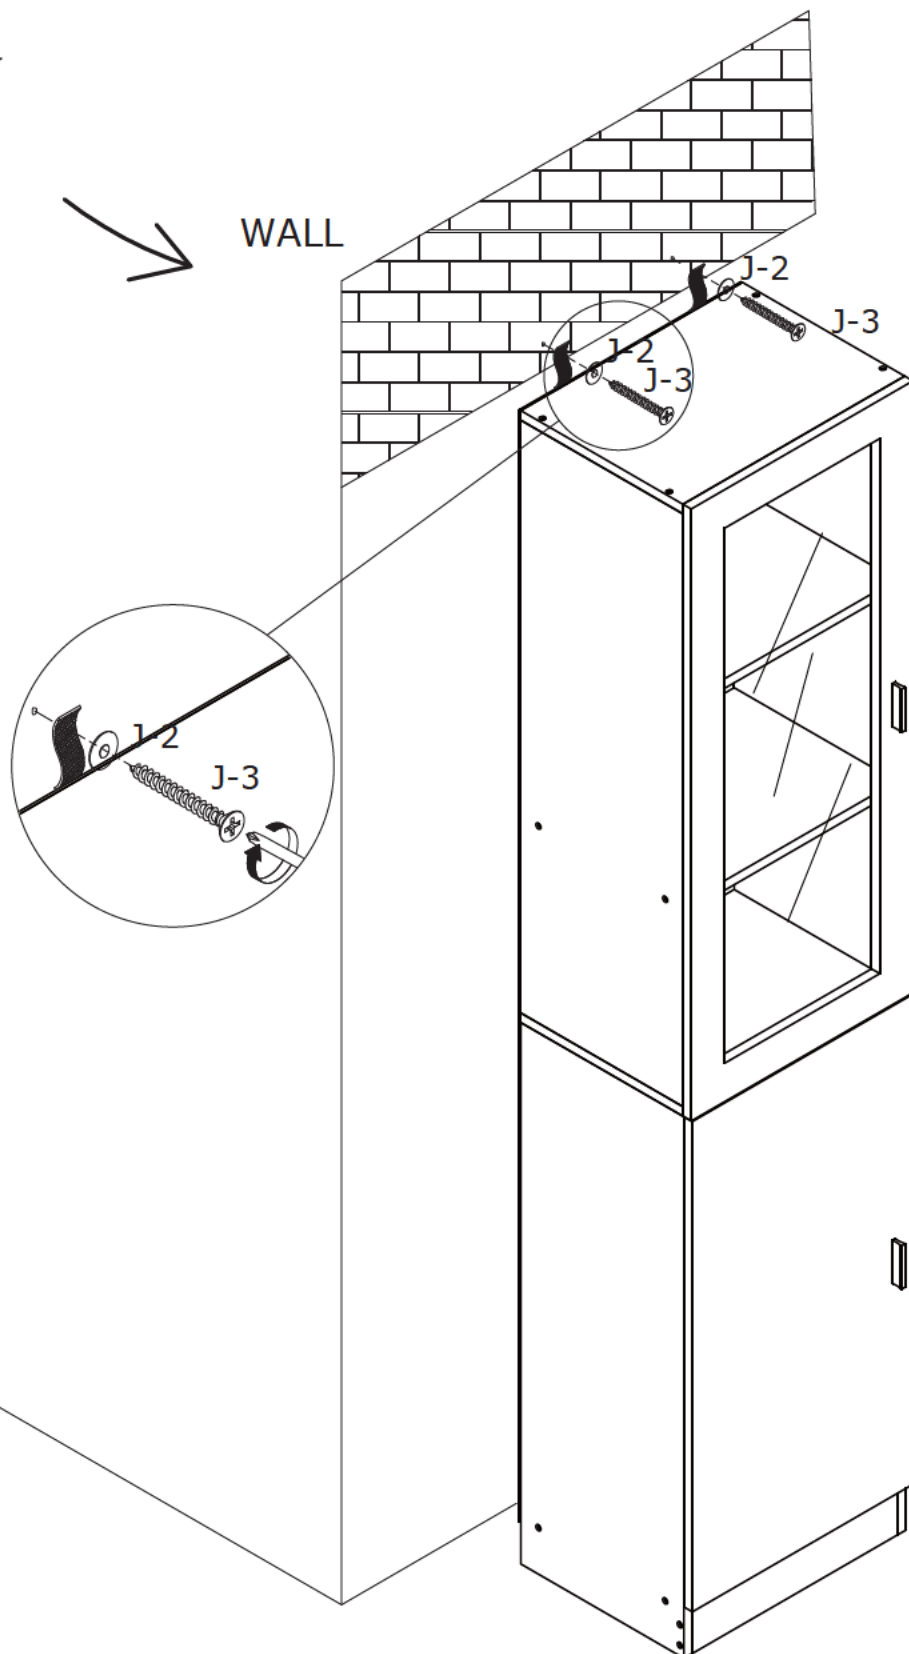

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.