 


ASSEMBLY INSTRUCTIONS

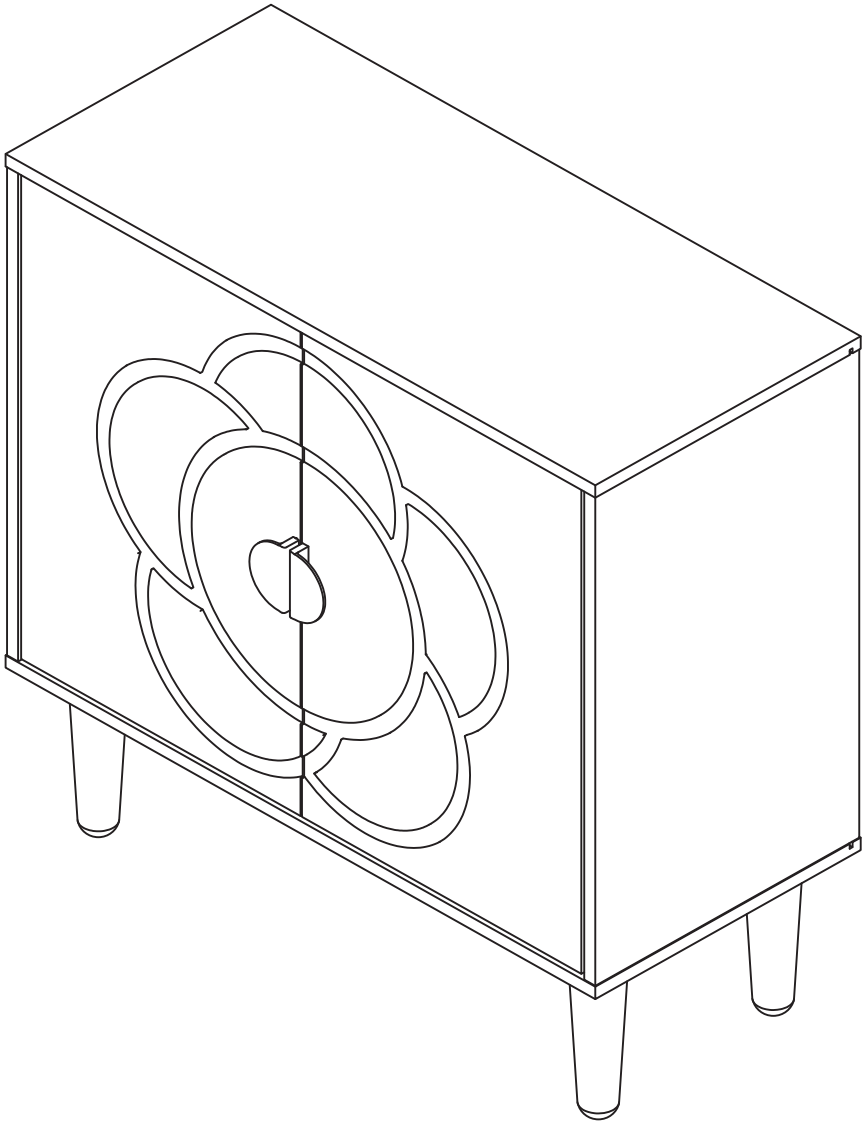

2 persons



tools require



1 hour need

Read this instruction carefully. Refer hardware and furniture parts list for guidance. Be sure all parts are complete before assembling. Place all wooden furniture part on a clean and flat soft surface to prevent scratches. Refer steps provided as assembling guide.

Before You Start



- ✓ Read through each step carefully and follow the proper order
 - ✓ Separate and count all parts and hardware
 - ✓ Give yourself enough room for the assembly process
 - ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ⊠ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.

- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an R (right) and L (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure the unit is complete and sturdy.



 
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.









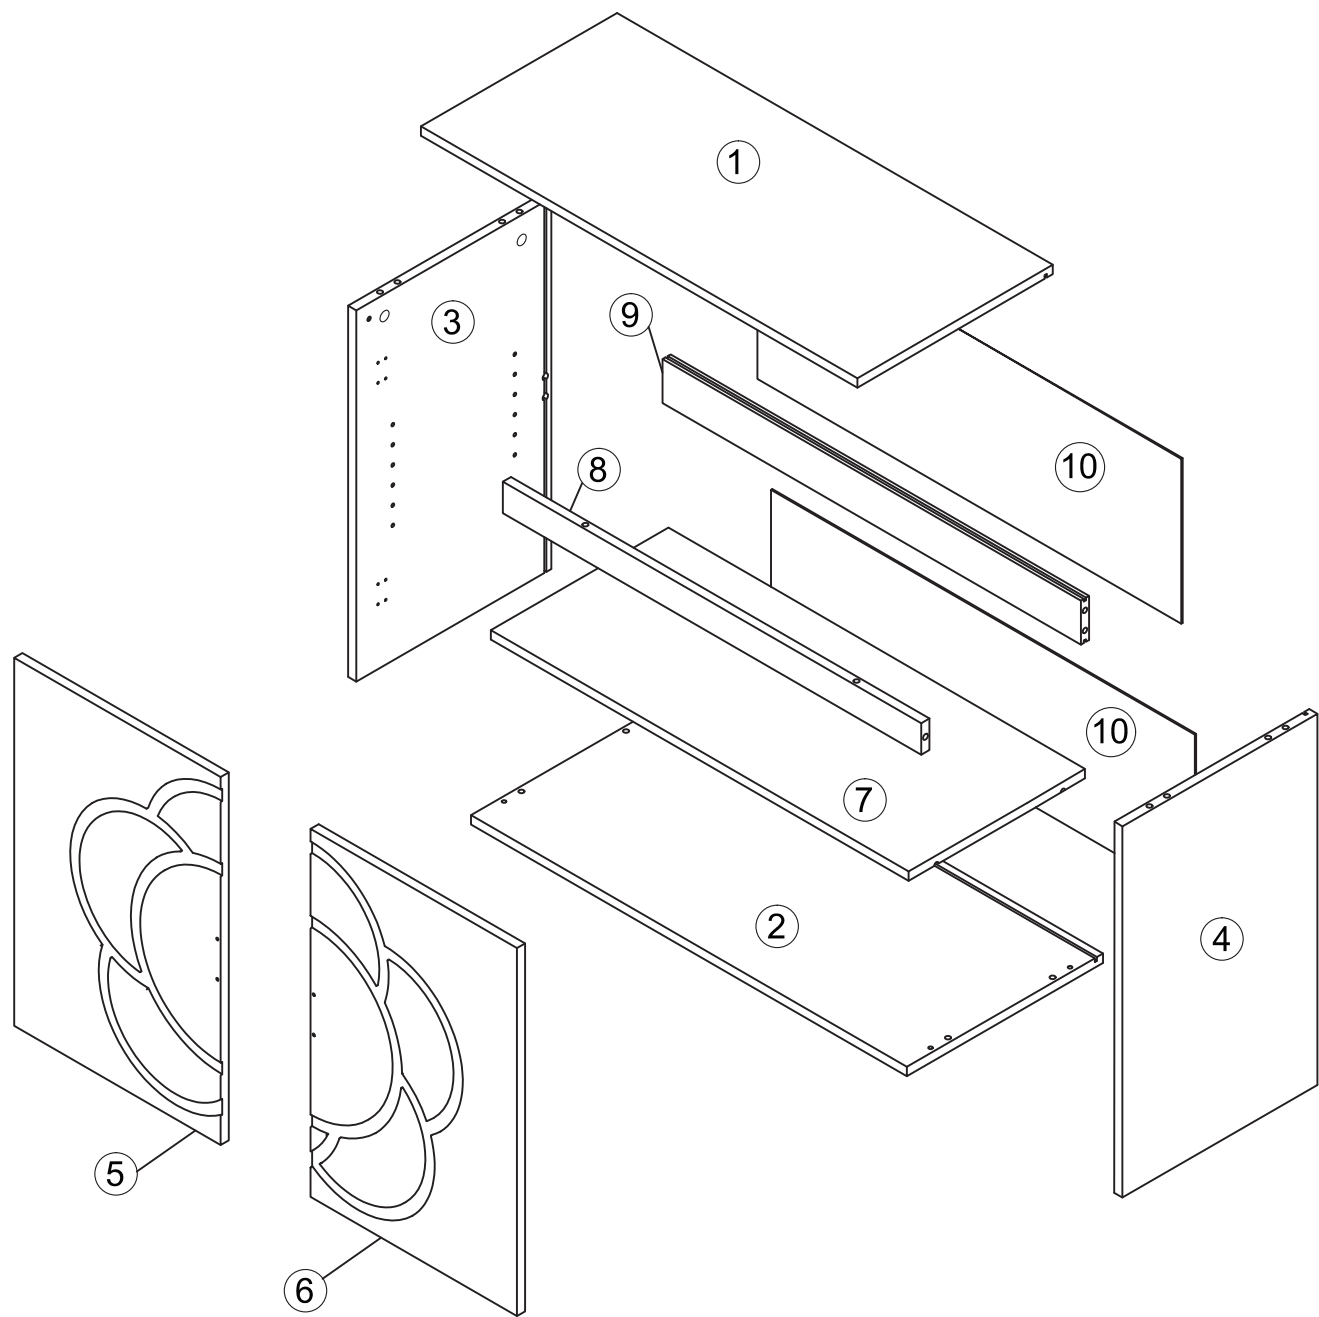







- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

PARTS LIST

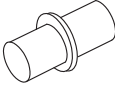




PARTS:

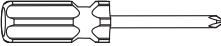  <div>A X12₊₃</div>	 <div>B X12₊₃</div>	 <div>C X8₊₂</div>
 <div>D X4₊₁ M5x50</div>	 <div>E X4</div>	 <div>F X16₊₃ M4x14</div>
 <div>G X4</div>	 <div>H X32₊₄ M4x14</div>	 <div>I X4₊₁</div>
 <div>J X2 J1 J2₊₁</div>	 <div>K X8₊₂</div>	 <div>L X1</div>
 <div>M X8₊₂</div>	 <div>N X2 N1 N2 N3 N4</div>	

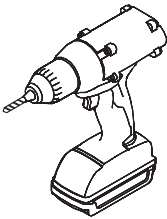 

REMARK:

   MINIFIX POSITION

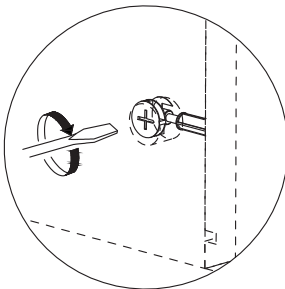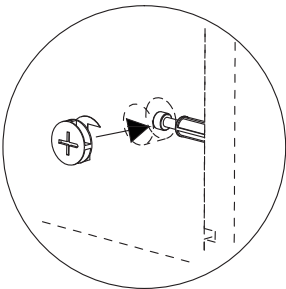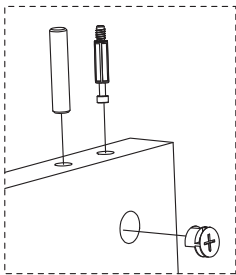

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

✓

CORRECT

✗

WRONG

CAM-LOCK

Quickfit head needs to be in centre

QUICKFIT
Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)

Panel

Panel

Shoulder

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

1

2

 
 
3

The opening must point toward the edge of the board



4




1.

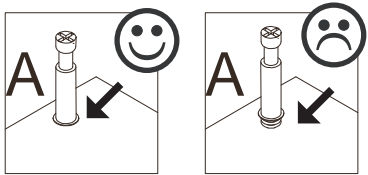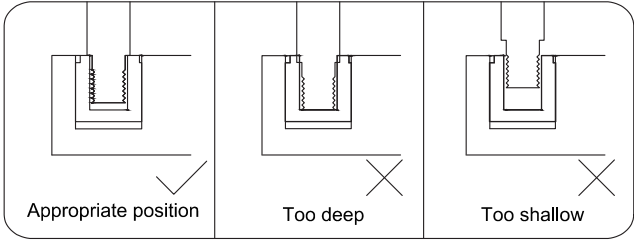REMARK:
Please do not screw **A** too deep or too shallow.




REMARK :
Put a blanket under the board to avoid scratch or damage.


	A	X12
	C	X8

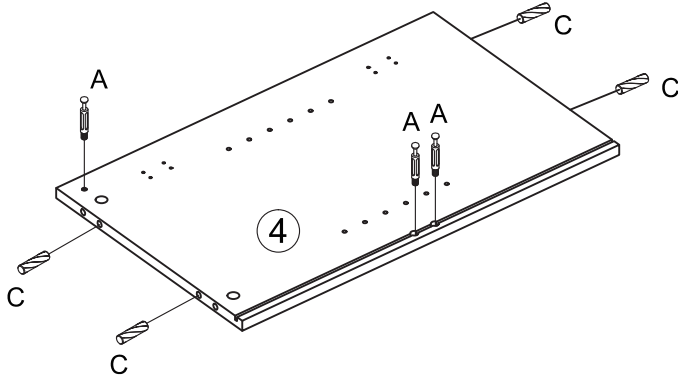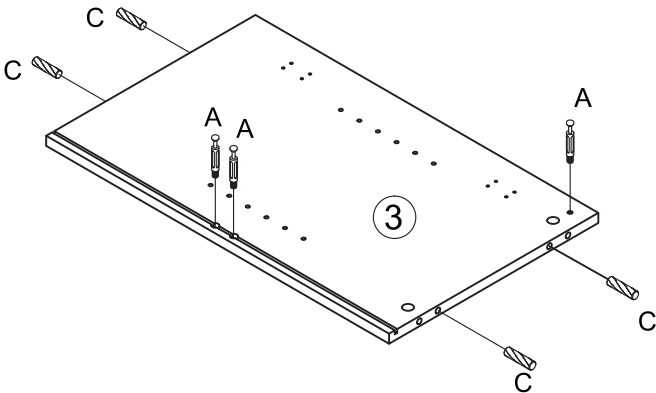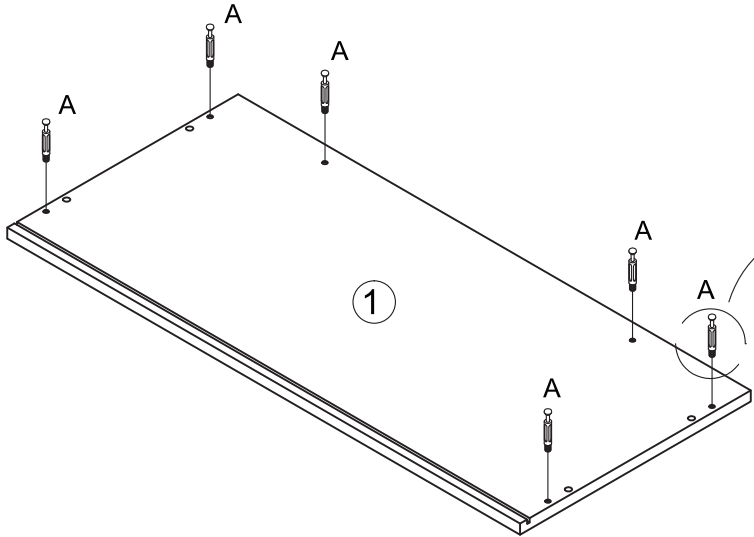   

 
2.

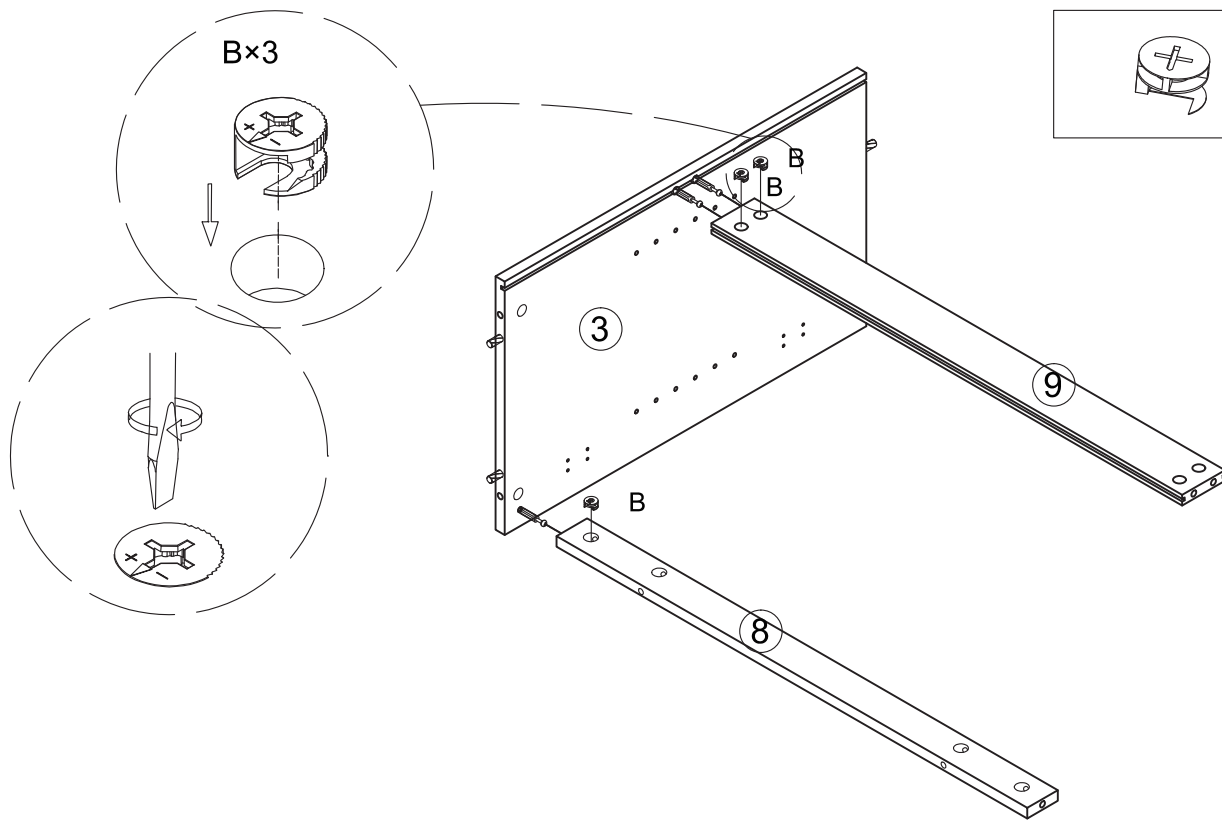

 3.

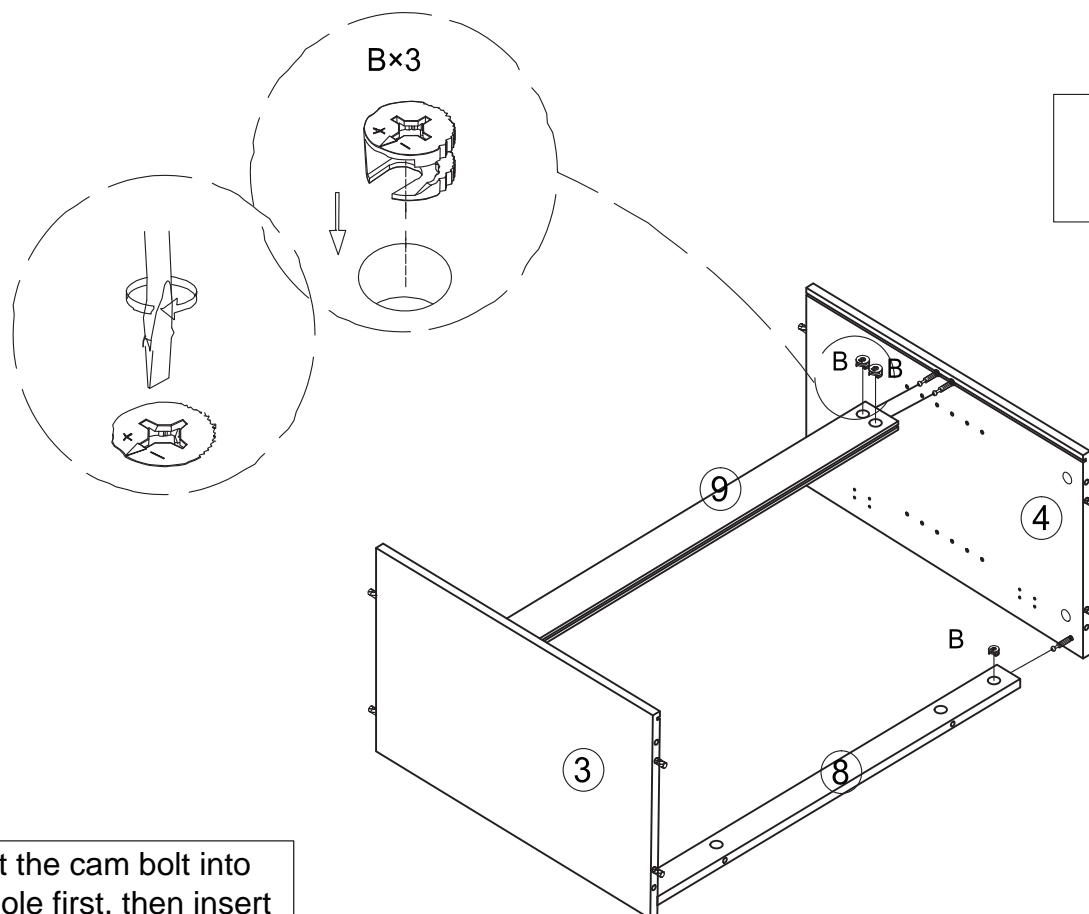


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.



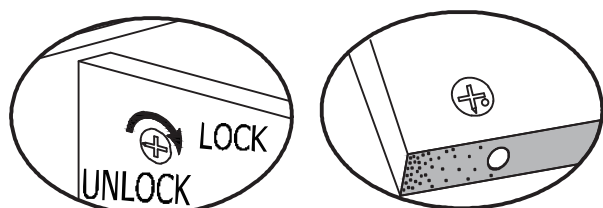


Proper orientation of CAM LOCK

 
4.

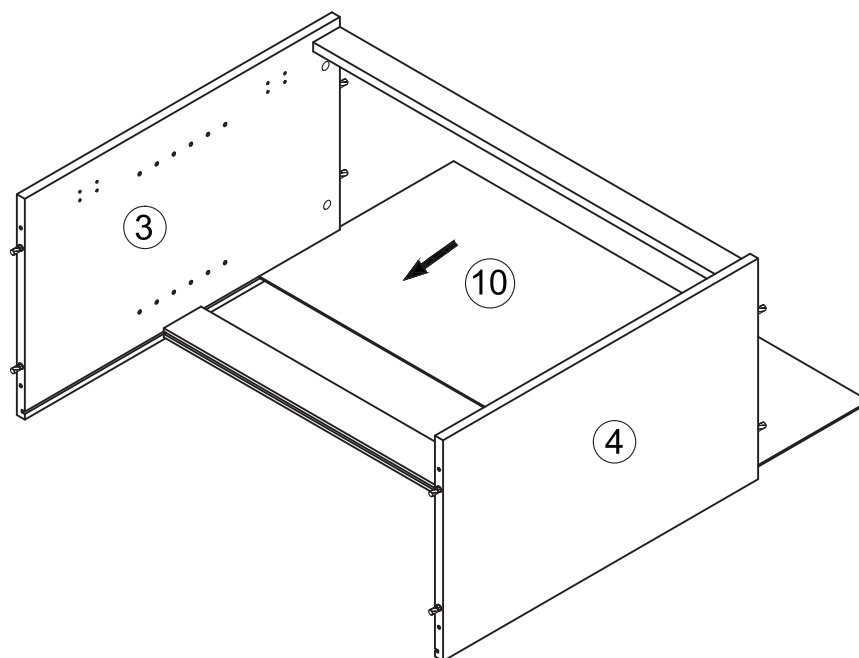

   5.

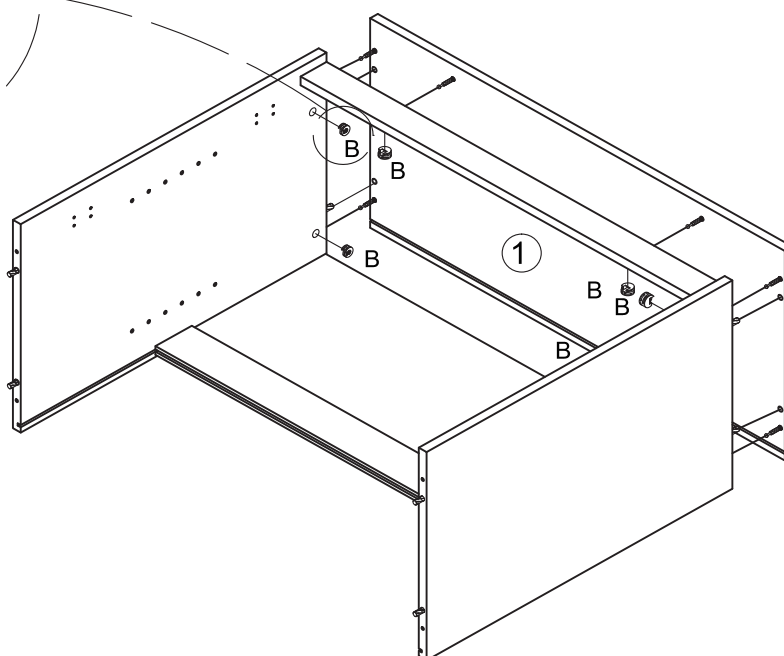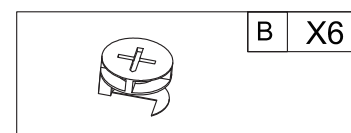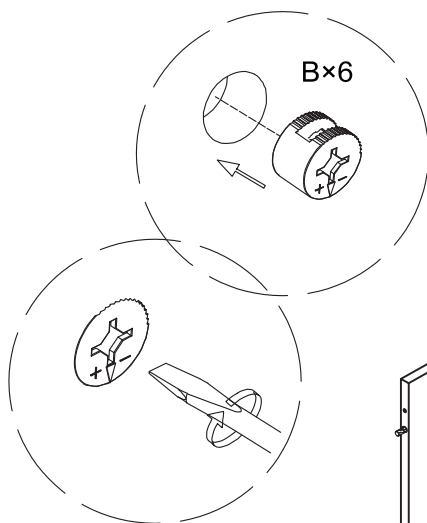

 
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

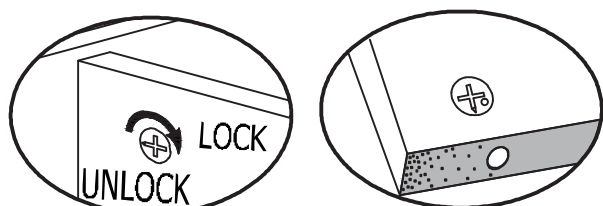

Proper orientation of CAM LOCK


	M	X4
--	---	----

 6.


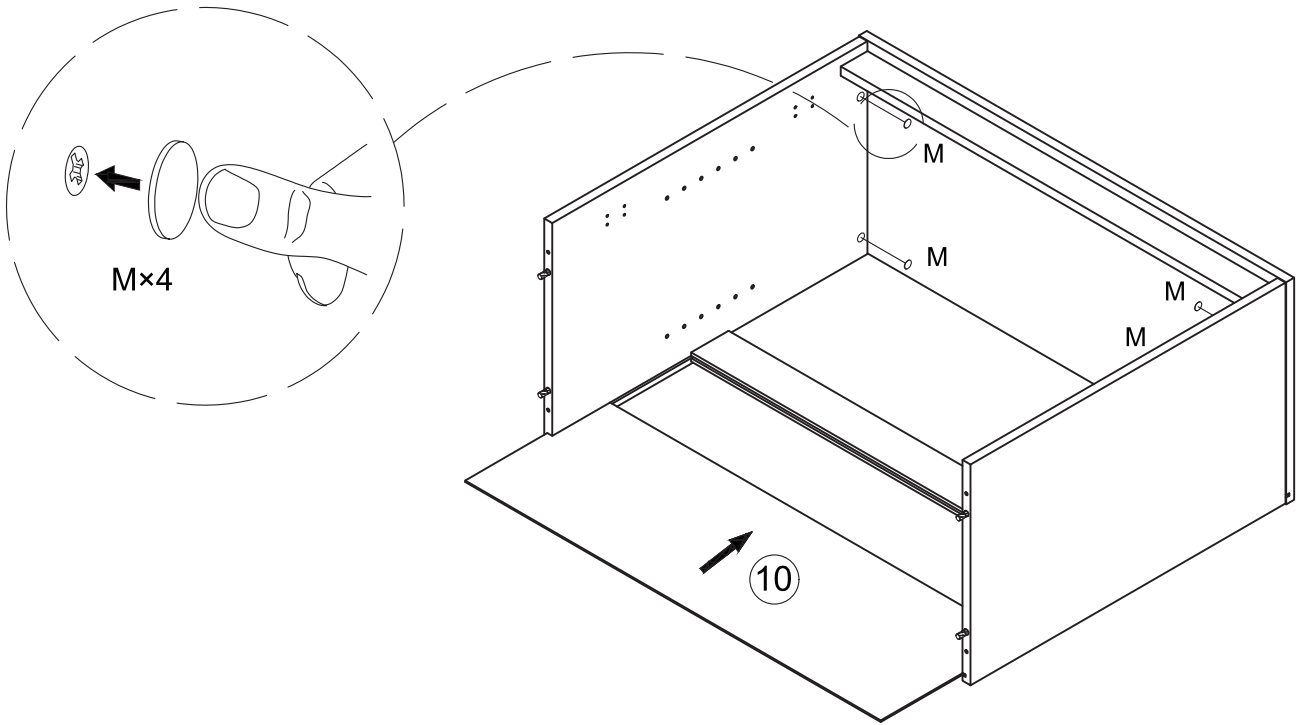


7.




	D	X4
--	---	----

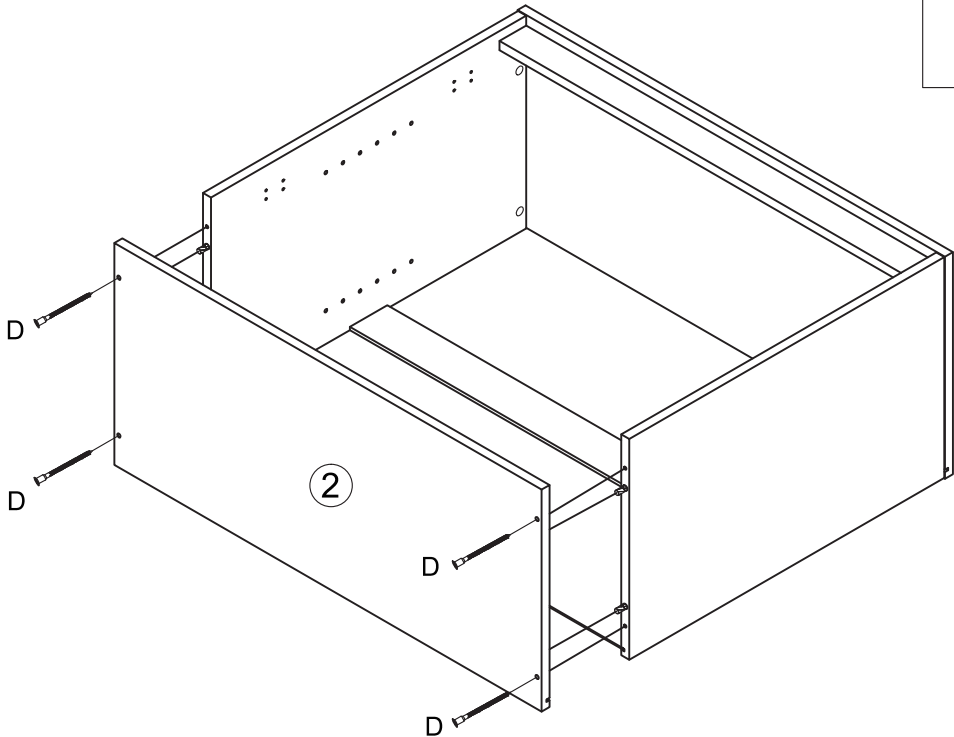 

  
8.

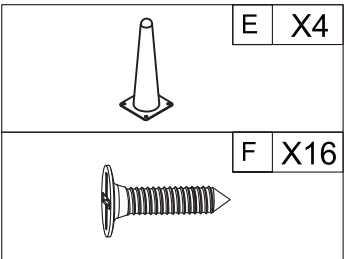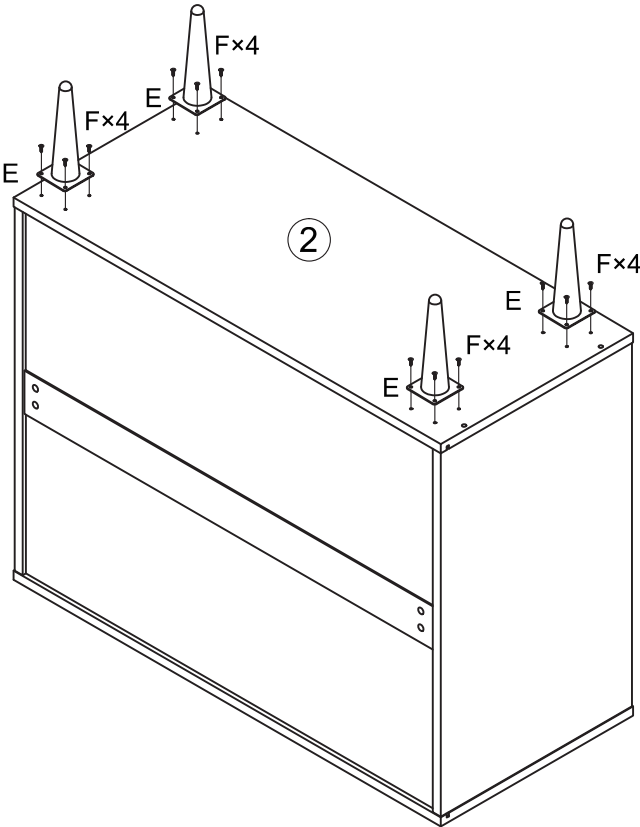

   9.

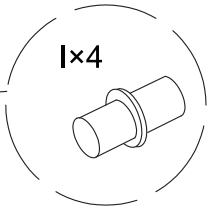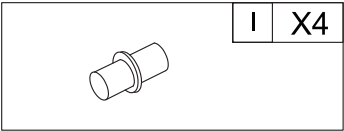
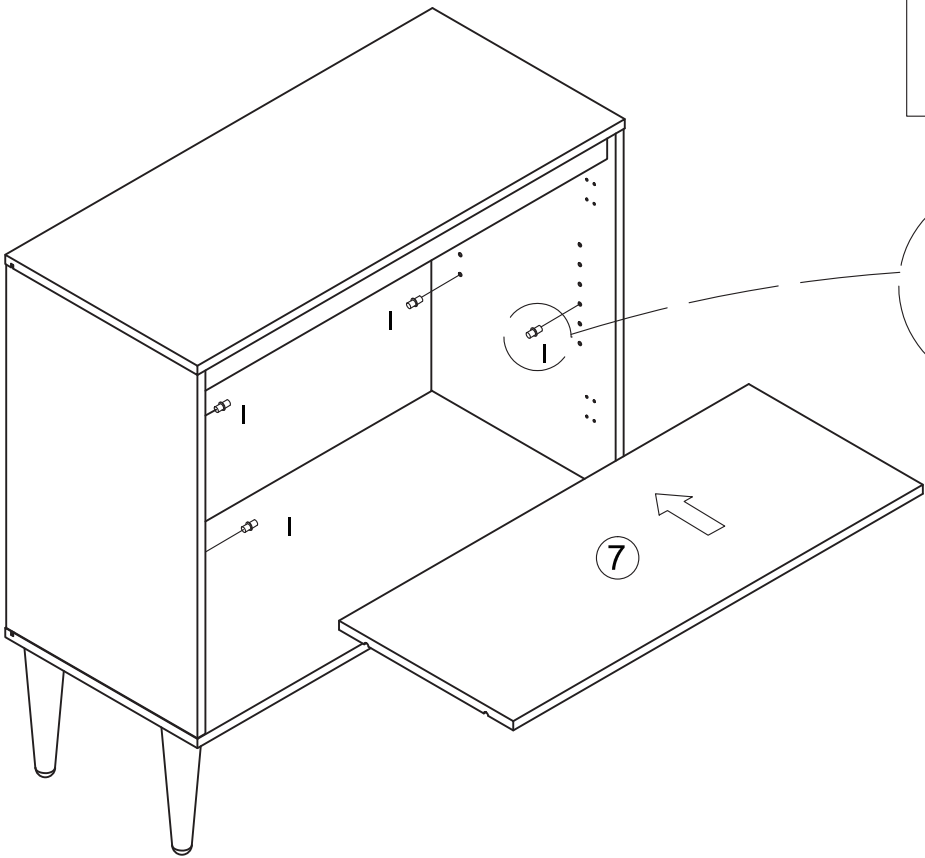


 10.



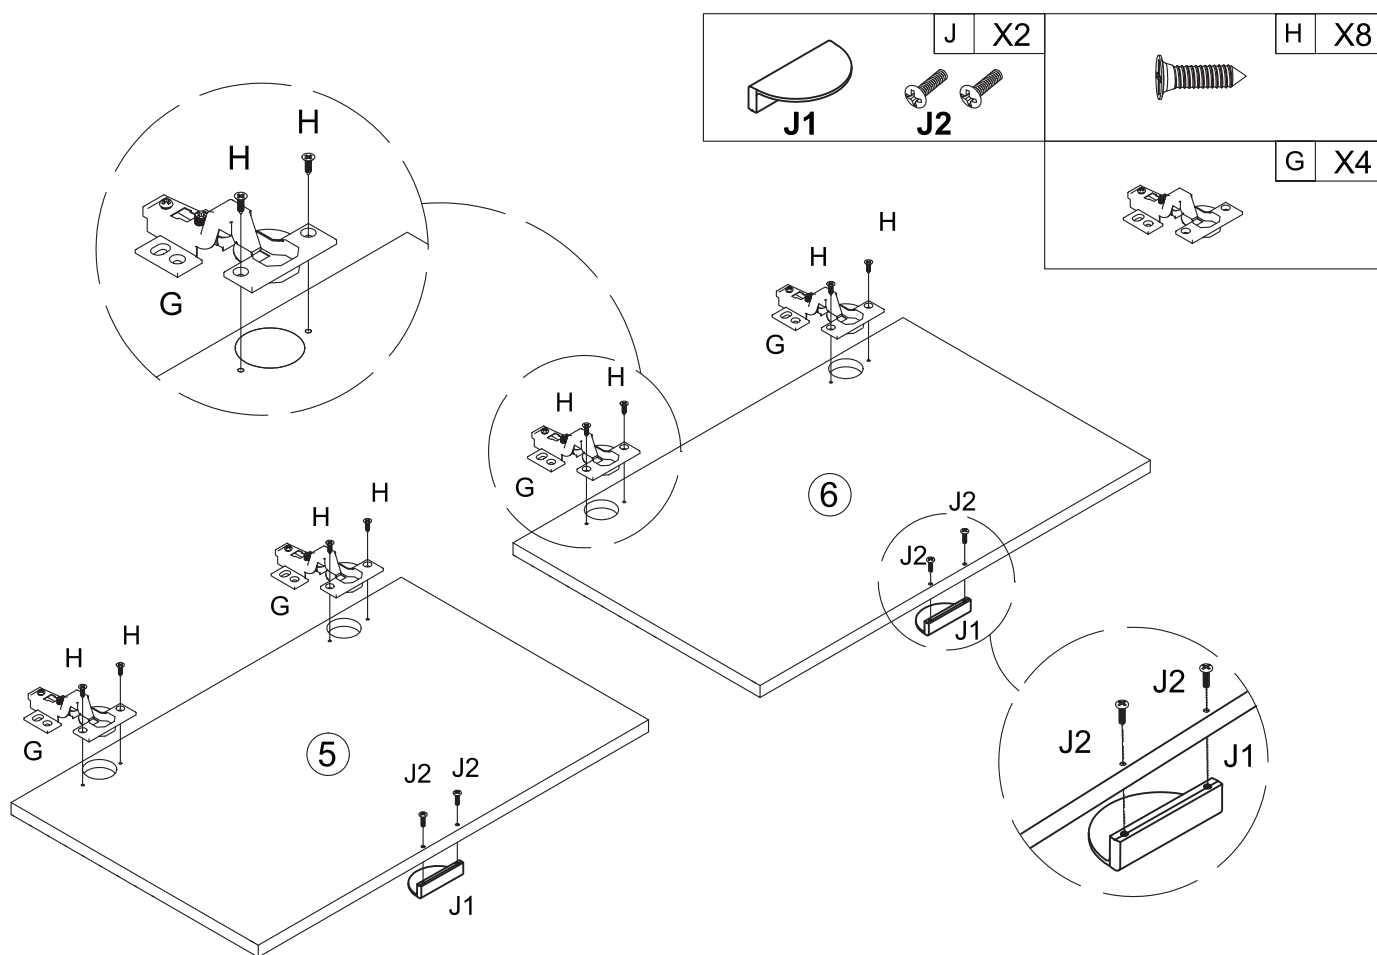


11.

 
 
If the door can't close, please adjust the hinges

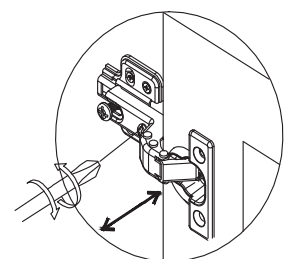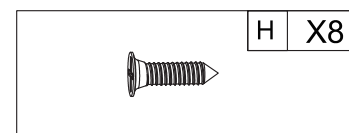

   
This is used to adjust the door panel in the up and down direction.

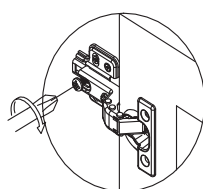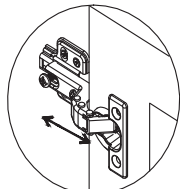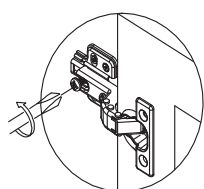

  
This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.

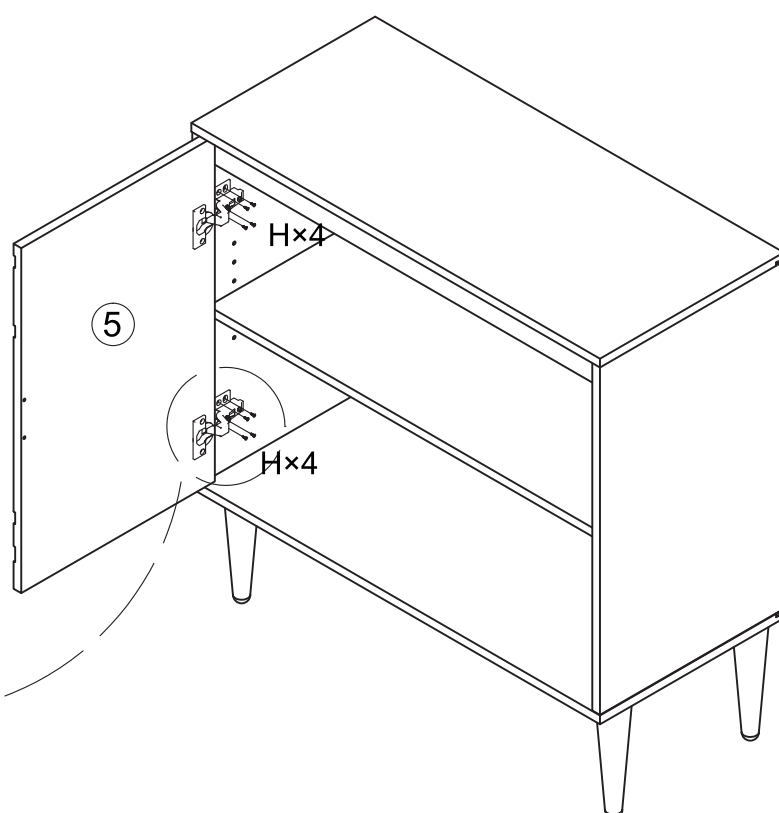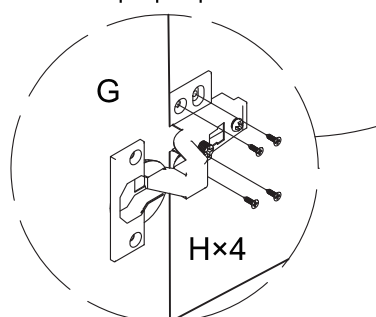


 12.



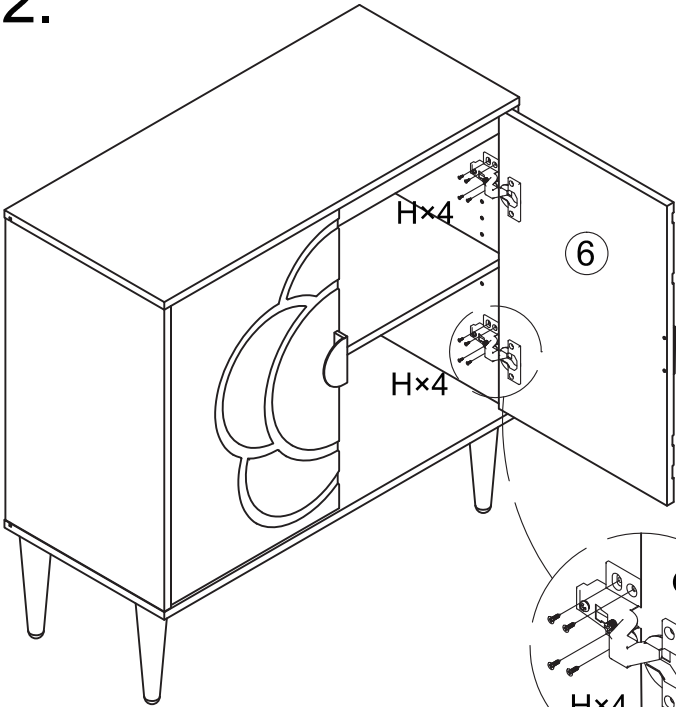


	H	X8
-------------------------------------------------------------------------------------	---	----

    If the door can't close, please adjust the hinges.

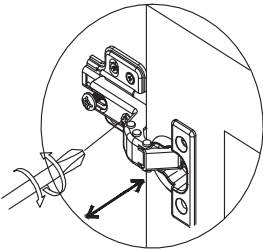


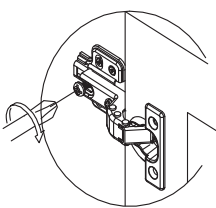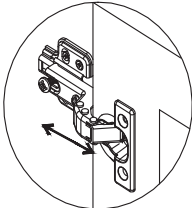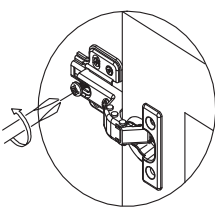


  This is used to adjust the door panel in the up and down direction.





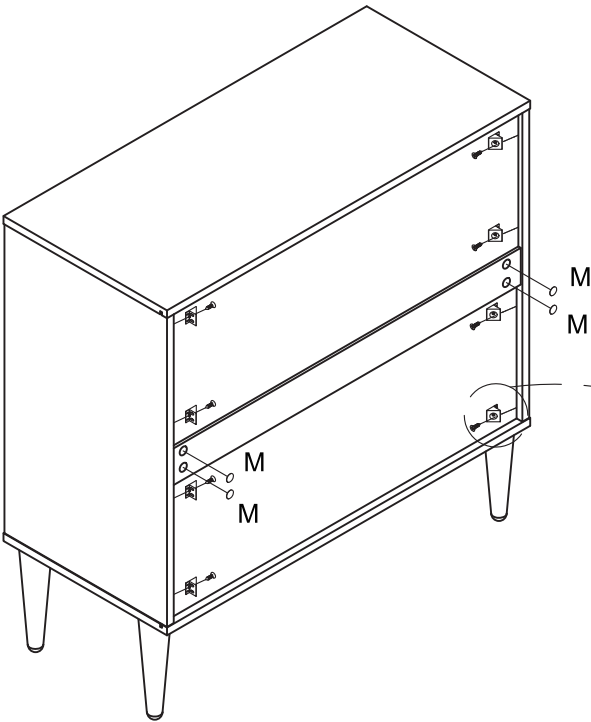

This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.




13.




	M	X4
	K	X8
	H	X8

14.

N		X2	
			
N1	N2	N3	N4

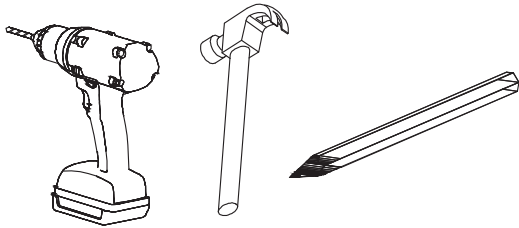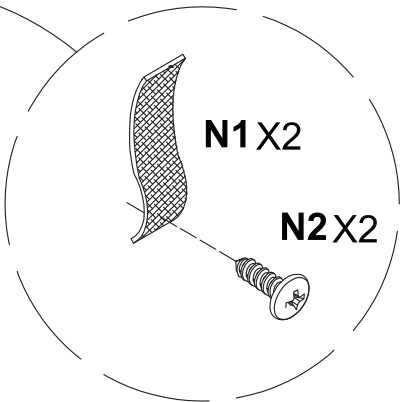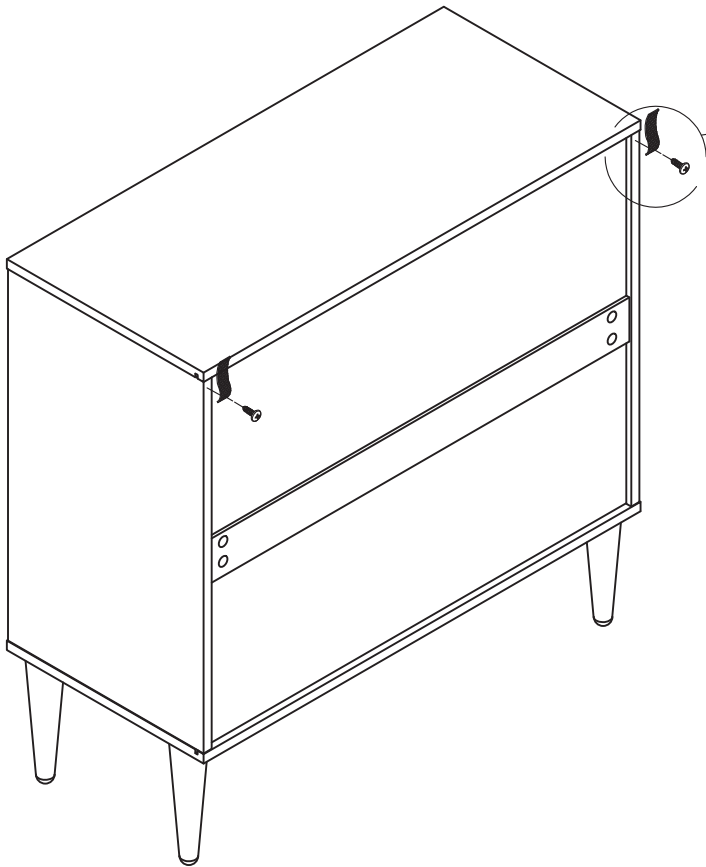   


WALL

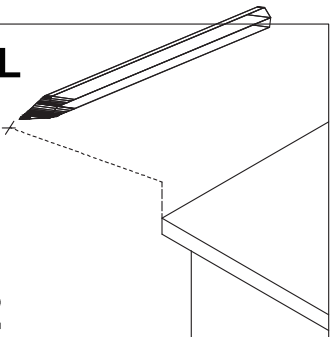


I x2

WALL +
drilling hole
Ø6x30mm

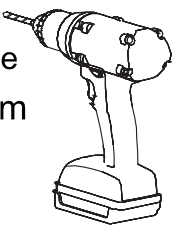

II x2

WALL

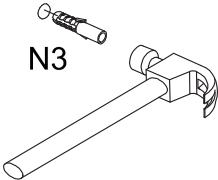

III x2

